



# **Install and setup**

## **Install and maintain**

NetApp  
February 13, 2026

# Table of Contents

- Install and setup ..... 1
  - Start here: Choose your installation and setup experience ..... 1
  - Quick guide - AFF A320 ..... 1
  - Video steps - AFF A320 ..... 1
  - Detailed guide - AFF A320 ..... 1
    - Prepare for installation ..... 1
    - Install the hardware ..... 3
    - Cable controllers to your network ..... 4
    - Cable controllers to drive shelves ..... 10
    - Complete system setup and configuration ..... 14

# Install and setup

## Start here: Choose your installation and setup experience

For most configurations, you can choose from different content formats.

- [Quick steps](#)

A printable PDF of step-by-step instructions with live links to additional content.

- [Video steps](#)

Video step-by-step instructions.

- [Detailed steps](#)

Online step-by-step instructions with live links to additional content.

If your system is in a MetroCluster IP configuration, see the [Install MetroCluster IP Configuration](#) instructions.

## Quick guide - AFF A320

This guide gives graphic instructions for a typical installation of your system from racking and cabling, through initial system bring-up. Use this guide if you are familiar with installing NetApp systems.

Access the *Installation and Setup Instructions* PDF poster:

[AFF A320 Installation and Setup Instructions](#)

## Video steps - AFF A320

The following video shows how to install and cable your new system.

 | [https://img.youtube.com/vi/rQ-za\\_bli0Y?/maxresdefault.jpg](https://img.youtube.com/vi/rQ-za_bli0Y?/maxresdefault.jpg)

## Detailed guide - AFF A320

This guide gives detailed step-by-step instructions for installing a typical NetApp system. Use this guide if you want more detailed installation instructions.

### Prepare for installation

To install your AFF A320 system, you need to create an account, register the system, and get license keys. You also need to inventory the appropriate number and type of cables for your system and collect specific network information.

You need to have access to the Hardware Universe for information about site requirements as well as additional information on your configured system. You might also want to have access to the Release Notes for

your version of ONTAP for more information about this system.

[NetApp Hardware Universe](#)

[Find the Release Notes for your version of ONTAP 9](#)

You need to provide the following at your site:

- Rack space for the storage system
- Phillips #2 screwdriver
- Additional networking cables to connect your system to your network switch and laptop or console with a Web browser
- A laptop or console with an RJ-45 connection and access to a Web browser
  1. Unpack the contents of all boxes.
  2. Record the system serial number from the controllers.



3. Set up your account:
  - a. Log in to your existing account or create an account.
  - b. Register your system.

[NetApp Product Registration](#)

4. Inventory and make a note of the number and types of cables you received.

The following table identifies the types of cables you might receive. If you receive a cable not listed in the table, see the Hardware Universe to locate the cable and identify its use.

[NetApp Hardware Universe](#)

| Type of cable...       | Part number and length  | Connector type   | For...  |
|------------------------|---|--|---|
| 100 GbE cable (QSFP28) | X66211A-05 (112-00595), 0.5m<br>X66211A-1 (112-00573), 1m<br>X66211A-2 (112-00574), 2m<br>X66211A-5 (112-00574), 5m |  | Storage, cluster interconnect/HA, and Ethernet data (order-dependent) |
| 40 GbE cable           | X66211A-1 (112-00573), 1m;<br>X66211A-3 (112-00543), 3m;<br>X66211A-5 (112-00576), 5m                               |  | Storage, cluster interconnect/HA, and Ethernet data (order-dependent) |

| Type of cable...        | Part number and length   | Connector type   | For...   |
|-------------------------|--|--|--|
| Ethernet cable - MPO    | X66200-2 (112-00326), 2m<br>X66250-5 (112-00328), 5m<br>X66250-30 (112-00331), 30m   |    | Ethernet cable (order dependent)   |
| Optical cables          | SR:<br>X6553-R6 (112-00188), 2m<br>X6554-R6 (112-00189), 15m<br>X6537-R6 (112-00091), 30m<br>LR:<br>X66250-3 (112-00342), 2m<br>X66260-5 (112-00344), 5m<br>X66260-30 (112-00354), 30m |    | FC configurations (order-dependent)  |
| RJ-45 (order dependent) | X6585-R6 (112-00291), 3m<br>X6562-R6 (112-00196), 5m   |    | Management network   |
| Micro-USB console cable | Not applicable   |  | Console connection used during software setup if laptop or console does not support network discovery. |
| Power cables            | Not applicable   |  | Powering up the system   |

5. Download and complete the *Cluster configuration worksheet*.

[Cluster Configuration Worksheet](#)


## Install the hardware

You need to install your system in a 4-post rack or NetApp system cabinet, as applicable.


1. Install the rail kits, as needed.
2. Install and secure your system using the instructions included with the rail kit.



You need to be aware of the safety concerns associated with the weight of the system.

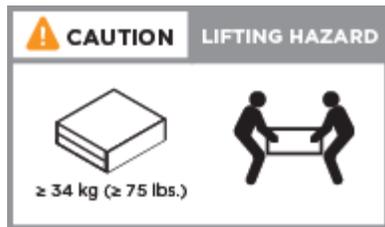

3. Attach cable management devices (as shown).

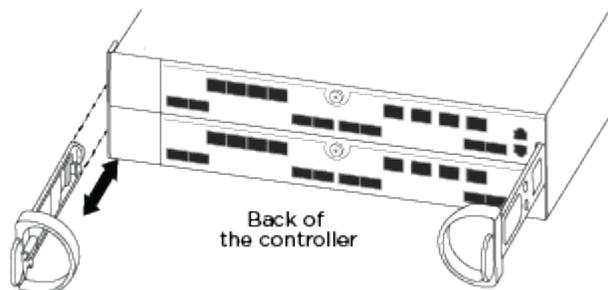

4. Place the bezel on the front of the system.

## Cable controllers to your network


You can cable the controllers to your network by using the two-node switchless cluster method or by using the cluster interconnect network.

### Option 1: Cable a two-node switchless cluster

The optional data ports, optional NIC cards, and management ports on the controller modules are connected to switches. The cluster interconnect/HA ports are cabled on both controller modules.


You must have contacted your network administrator for information about connecting the system to the switches.


Be sure to check the illustration arrow for the proper cable connector pull-tab orientation.

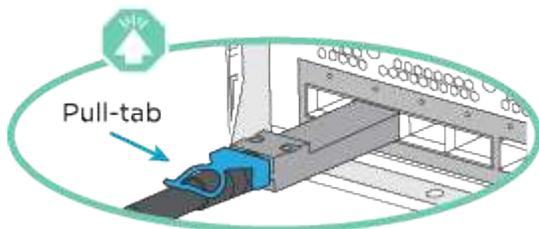

As you insert the connector, you should feel it click into place; if you do not feel it click, remove it, turn it around and try again.

1. You can use the illustration or the step-by-step instructions to complete the cabling between the controllers and to the switches:

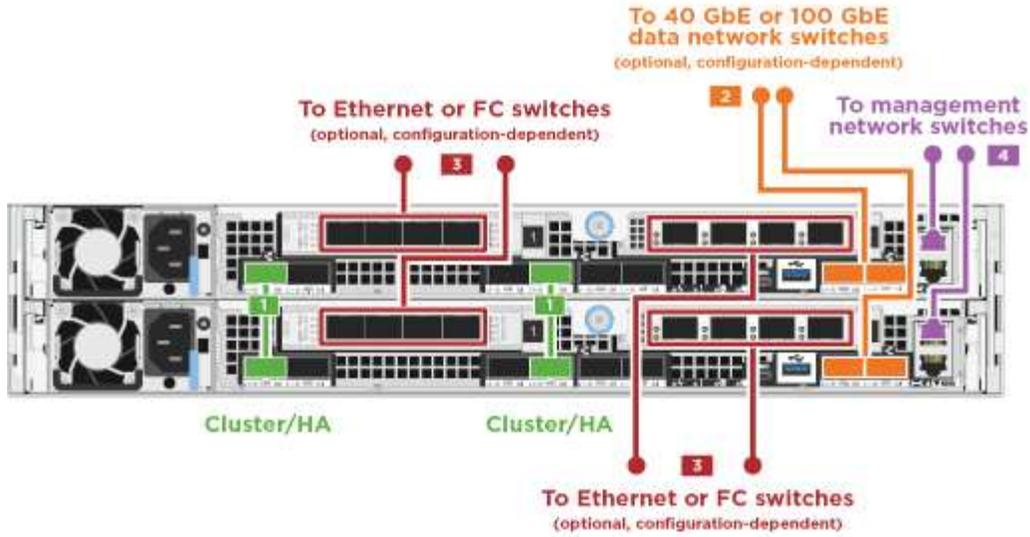
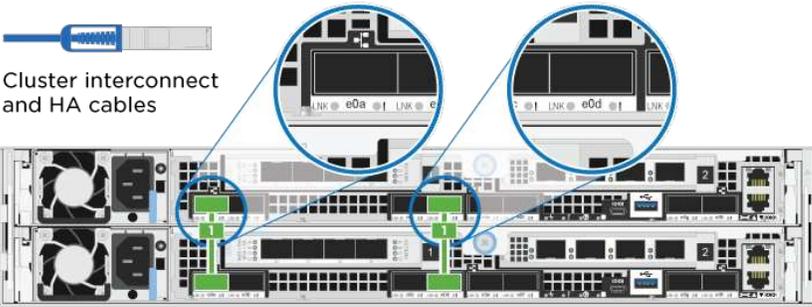
| Step            | Perform on each controller module  |
|-----------------|--|
| <p><b>1</b></p> | <p>Cable the cluster/HA ports to each other with the 100 GbE (QSFP28) cable:</p> <ul style="list-style-type: none"> <li>• e0a to e0a</li> <li>• e0d to e0d</li> </ul> <p></p> <p>Cluster interconnect and HA cables</p>  <p>The diagram shows two controller modules with their Cluster/HA ports highlighted. Two blue circles provide a magnified view of the ports, showing the connection of the QSFP28 cables between the e0a and e0d ports of the two modules.</p> |

**Step**

**Perform on each controller module**

**2**

If you are using your onboard ports for a data network connection, connect the 100GbE or 40GbE cables to the appropriate data network switches:

- e0g and e0h




100 GbE cables



40 GbE cables

To 40 GbE or 100 GbE data network switches (optional, configuration-dependent)

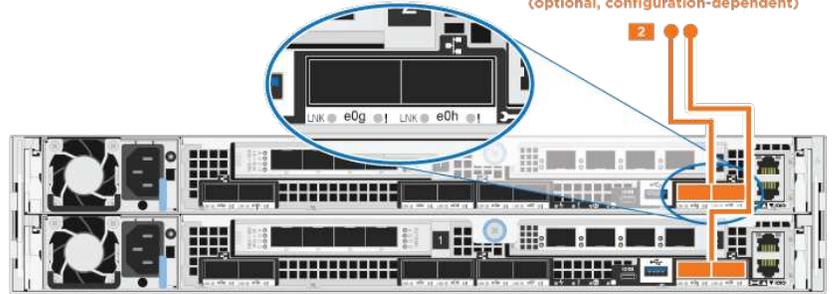

**3**

If you are using your NIC cards for Ethernet or FC connections, connect the NIC card(s) to the appropriate switches:



100 GbE cables




40 GbE cables




FC cables

To Ethernet or FC switches (optional, configuration-dependent)

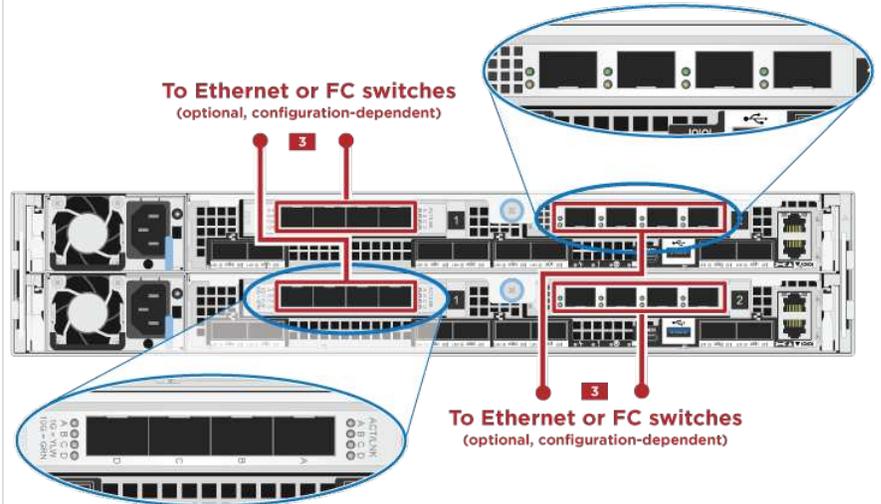

To Ethernet or FC switches (optional, configuration-dependent)
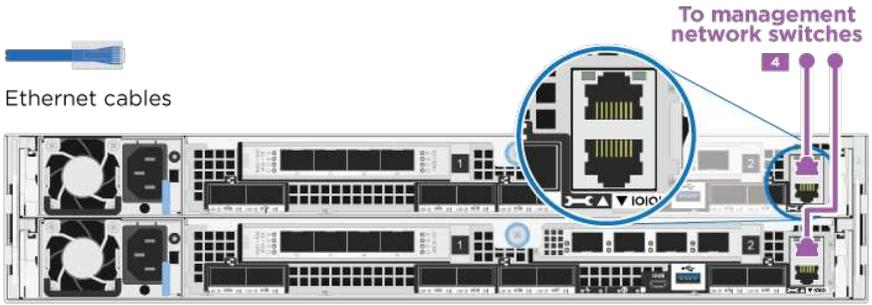
| Step  | Perform on each controller module   |
|---|---|
| <div data-bbox="181 163 256 214" style="background-color: red; color: white; padding: 5px; display: inline-block; font-weight: bold;">4</div> | <p data-bbox="620 157 1492 226">Cable the e0M ports to the management network switches with the RJ45 cables.</p> <div data-bbox="620 283 1492 588">  </div> |
| <div data-bbox="181 661 256 732" style="background-color: red; color: white; padding: 5px; display: inline-block; font-weight: bold;">!</div> | <p data-bbox="620 655 1492 693">DO NOT plug in the power cords at this point.</p>   |


2. Cable your storage: [Cable controllers to drive shelves](#)

### Option 2: Cabling a switched cluster

The optional data ports, optional NIC cards, and management ports on the controller modules are connected to switches. The cluster interconnect/HA ports are cabled on to the cluster/HA switch.


You must have contacted your network administrator for information about connecting the system to the switches.

Be sure to check the illustration arrow for the proper cable connector pull-tab orientation.

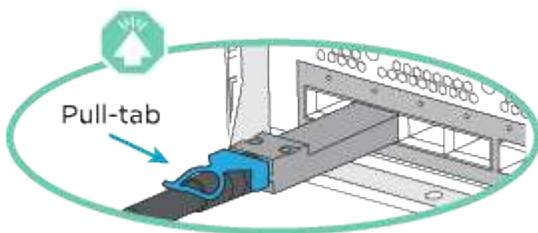

As you insert the connector, you should feel it click into place; if you do not feel it click, remove it, turn it around and try again.

1. You can use the illustration or the step-by-step instructions to complete the cabling between the controllers and to the switches:

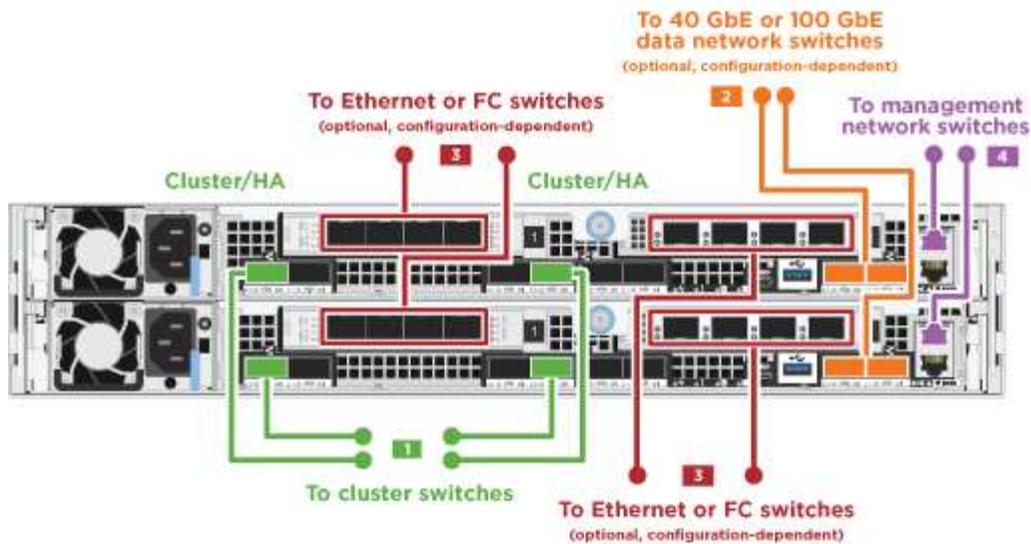

| Step  | Perform on each controller module  |
|---|--|
| <p data-bbox="183 751 256 804"><b>1</b></p> | <p data-bbox="513 751 1357 821">Cable the cluster/HA ports to the cluster/HA switch with the 100 GbE (QSFP28) cable:</p> <ul data-bbox="537 852 1143 932" style="list-style-type: none"> <li>• e0a on both controllers to the cluster/HA switch</li> <li>• e0d on both controllers to the cluster/HA switch</li> </ul> <div data-bbox="561 961 1489 1409"> <p data-bbox="561 978 802 1010">Cluster interconnect and HA cables</p> <p data-bbox="613 1318 753 1350">Cluster/HA</p> <p data-bbox="1114 1318 1253 1350">Cluster/HA</p> <p data-bbox="834 1381 1032 1413">To cluster switches</p> </div> |

**Step**

**Perform on each controller module**

**2**

If you are using your onboard ports for a data network connection, connect the 100GbE or 40GbE cables to the appropriate data network switches:


- e0g and e0h



100 GbE cables



40 GbE cables

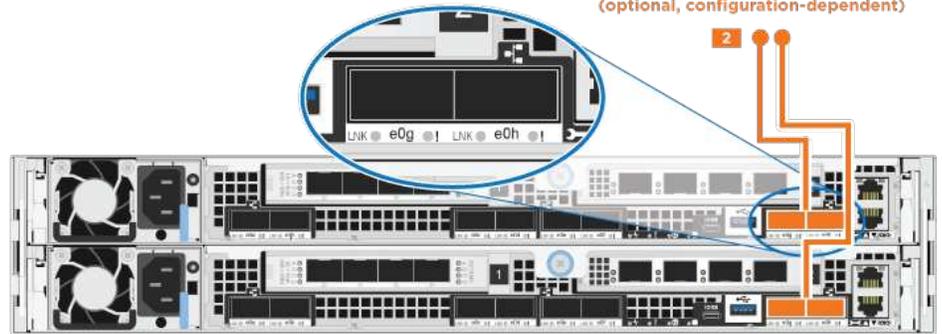

**3**

If you are using your NIC cards for Ethernet or FC connections, connect the NIC card(s) to the appropriate switches:




100 GbE cables




40 GbE cables



FC cables

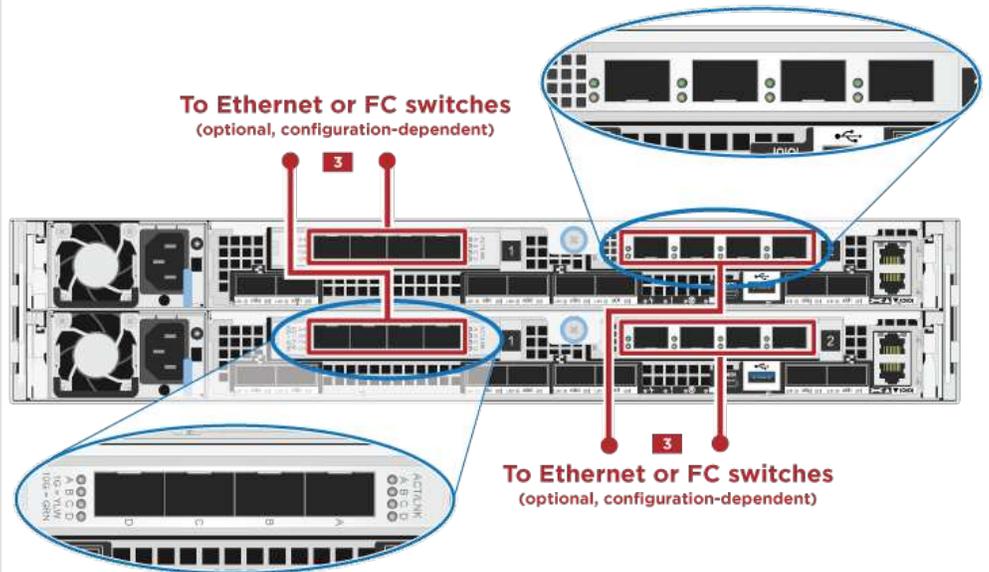
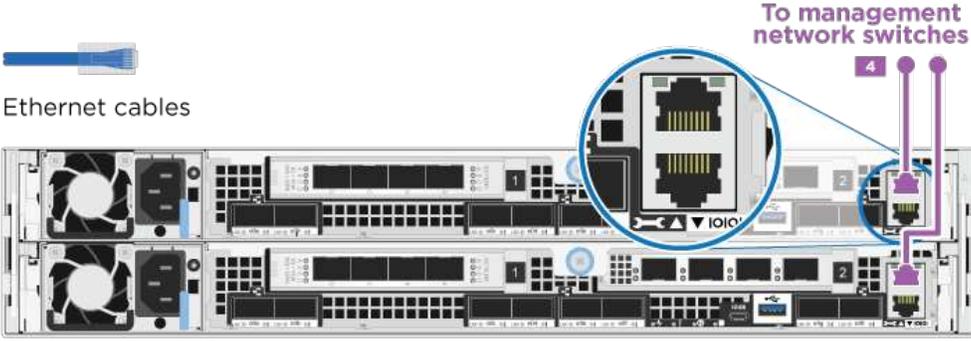
| Step  | Perform on each controller module   |
|---|---|
| <p><b>4</b></p>   | <p>Cable the e0M ports to the management network switches with the RJ45 cables.</p>  <p>Ethernet cables</p> |
|  | <p>DO NOT plug in the power cords at this point.</p>  |

2. Cable your storage: [Cable controllers to drive shelves](#)


## Cable controllers to drive shelves

You must cable the controllers to your shelves using the onboard storage ports.

### Option 1: Cable the controllers to a single drive shelf


You must cable each controller to the NSM modules on the NS224 drive shelf.

Be sure to check the illustration arrow for the proper cable connector pull-tab orientation.

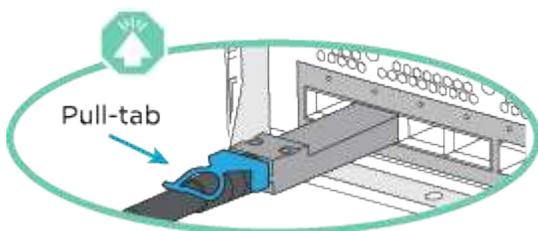


As you insert the connector, you should feel it click into place; if you do not feel it click, remove it, turn it around and try again.

1. You can use the illustration or the step-by-step instructions to cable your controllers to a single shelf.

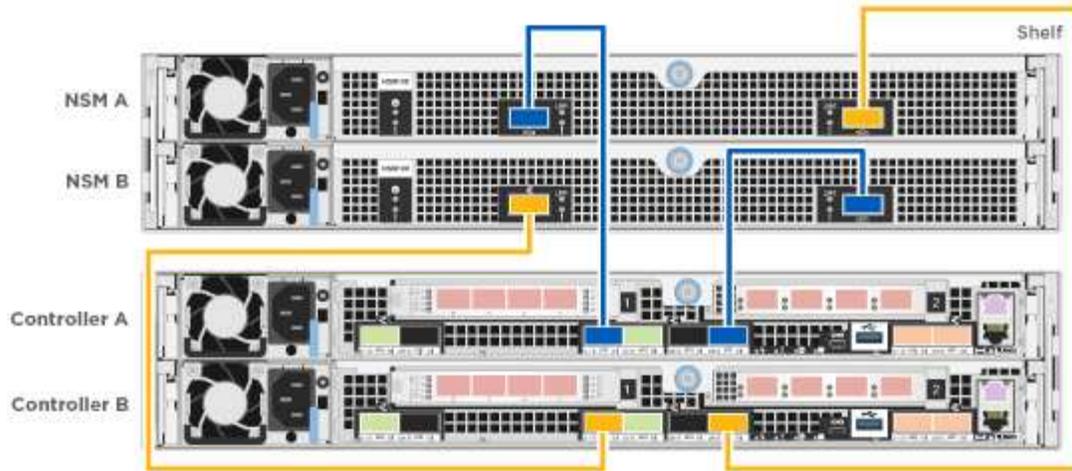

| Step            | Perform on each controller module   |
|-----------------|---|
| <p><b>1</b></p> | <p>Cable controller A to the shelf</p> <p>100 GbE cables</p> <p>Diagram illustrating the connection of 100 GbE cables from Controller A to the Shelf. The diagram shows the physical layout of the shelf with four rows: NSM A, NSM B, Controller A, and Controller B. Blue lines indicate connections between the NSM and Controller rows. Yellow lines outline the entire shelf structure. Callouts show the LNK and e0a/e0b ports on the shelf and Controller A.</p> |

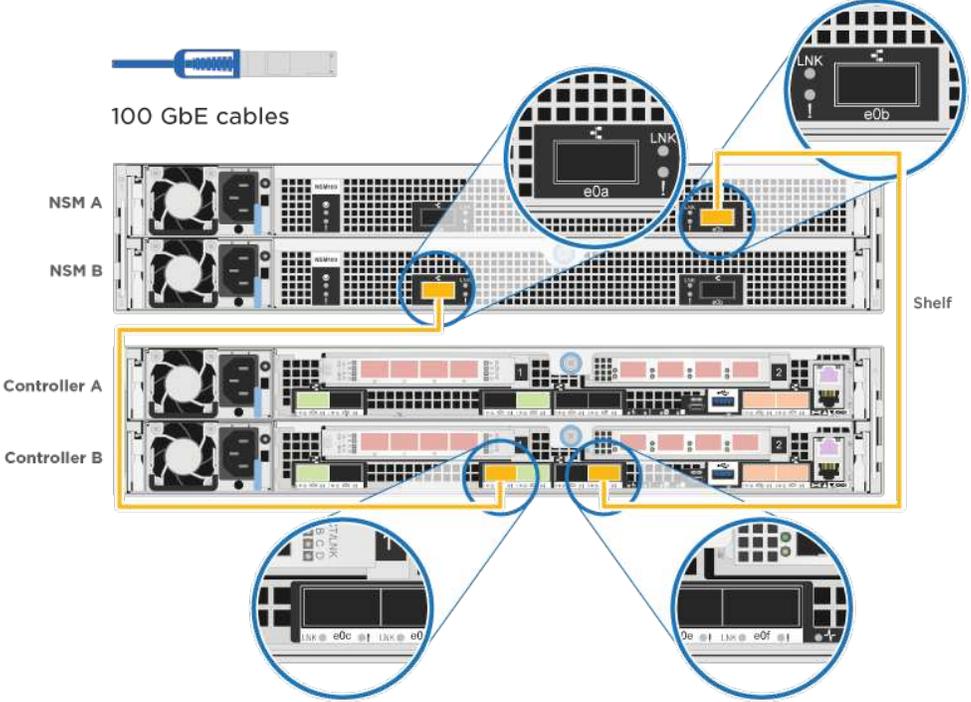
| Step  | Perform on each controller module   |
|---|---|
| <p data-bbox="181 163 256 214"><b>2</b></p> | <p data-bbox="513 163 889 193">Cable controller B to the shelf:</p>  <p data-bbox="620 331 808 361">100 GbE cables</p> <p data-bbox="558 424 620 445">NSM A</p> <p data-bbox="558 487 620 508">NSM B</p> <p data-bbox="513 604 620 625">Controller A</p> <p data-bbox="513 667 620 688">Controller B</p> <p data-bbox="1425 520 1468 541">Shelf</p> |

2. To complete setting up your system, see [Complete system setup and configuration](#)

### Option 2: Cable the controllers to two drive shelves


You must cable each controller to the NSM modules on both NS224 drive shelves.

Be sure to check the illustration arrow for the proper cable connector pull-tab orientation.

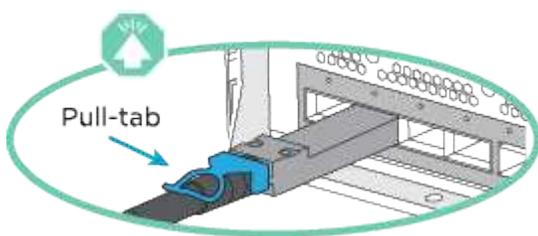


As you insert the connector, you should feel it click into place; if you do not feel it click, remove it, turn it around and try again.

1. You can use the following illustration or the written steps to cable your controllers to two drive shelves.

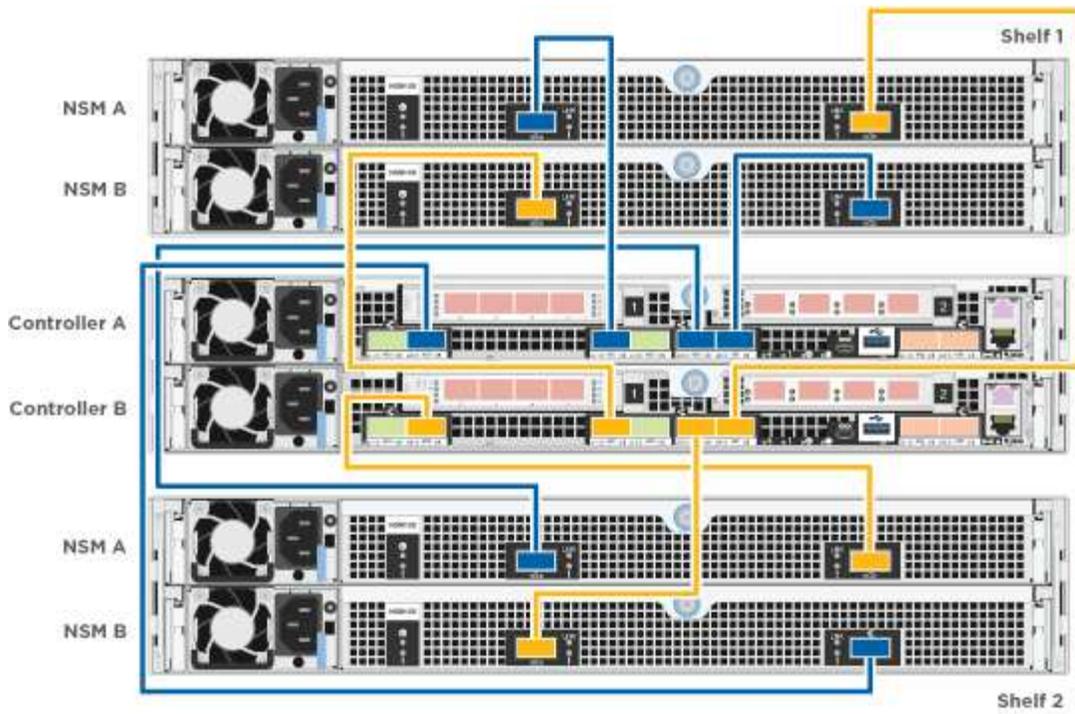

| Step            | Perform on each controller module         |
|-----------------|---|
| <p><b>1</b></p> | <p>Cable controller A to the shelves:</p> |
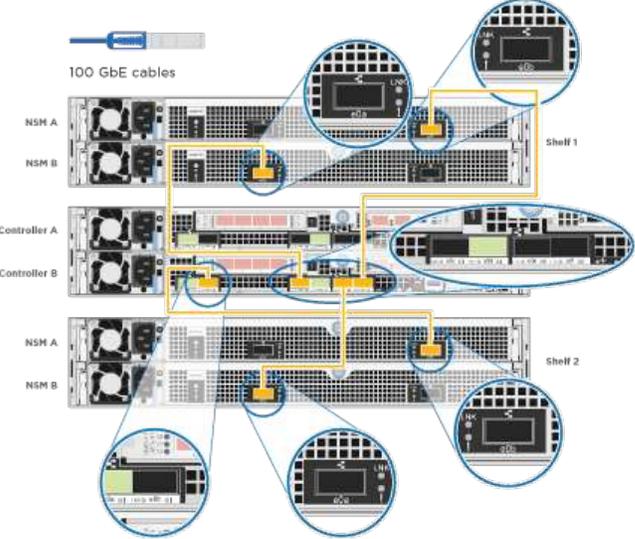
| Step                                 | Perform on each controller module   |
|--------------------------------------|---|
| <p data-bbox="183 163 256 212">2</p> | <p data-bbox="841 163 1252 191">Cable controller B to the shelves:</p>  |

2. To complete setting up your system, see [Complete system setup and configuration](#)

## Complete system setup and configuration

You can complete the system setup and configuration using cluster discovery with only a connection to the switch and laptop, or by connecting directly to a controller in the system and then connecting to the management switch.

### Option 1: Completing system setup and configuration if network discovery is enabled

If you have network discovery enabled on your laptop, you can complete system setup and configuration using automatic cluster discovery.

1. Plug the power cords into the controller power supplies, and then connect them to power sources on different circuits.

The system begins to boot. Initial booting may take up to eight minutes


2. Make sure that your laptop has network discovery enabled.

See your laptop's online help for more information.

3. Use the following animation to connect your laptop to the Management switch.

[Animation - Connect your laptop to the Management switch](#)

4. Select an ONTAP icon listed to discover:

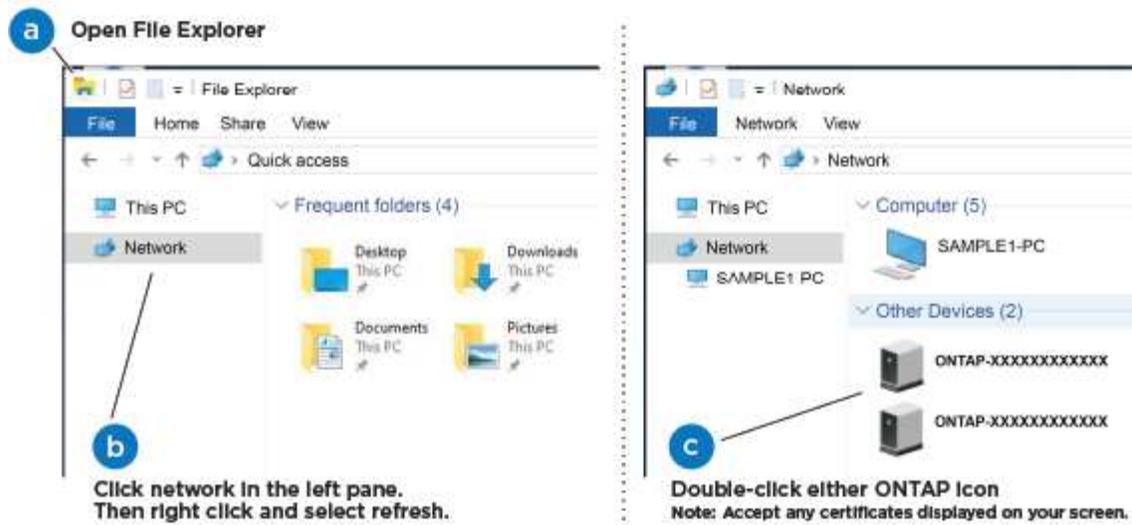

- a. Open File Explorer.
- b. Click **Network** in the left pane and right-click and select **refresh**.
- c. Double-click either ONTAP icon and accept any certificates displayed on your screen.



XXXXXX is the system serial number for the target node.

System Manager opens.

5. Use System Manager guided setup to configure your system using the data you collected in the *NetApp ONTAP Configuration Guide*.

[ONTAP Configuration Guide](#)

6. Verify the health of your system by running Config Advisor.
7. After you have completed the initial configuration, go to [ONTAP 9 documentation](#) for information about configuring additional features in ONTAP.

## Option 2: Completing system setup and configuration if network discovery is not enabled


If network discovery is not enabled on your laptop, you must complete the configuration and setup using this task.

1. Cable and configure your laptop or console:
  - a. Set the console port on the laptop or console to 115,200 baud with N-8-1.



See your laptop or console's online help for how to configure the console port.

- b. Connect the console cable to the laptop or console using the console cable that came with your system, and then connect the laptop to the management switch on the management subnet.

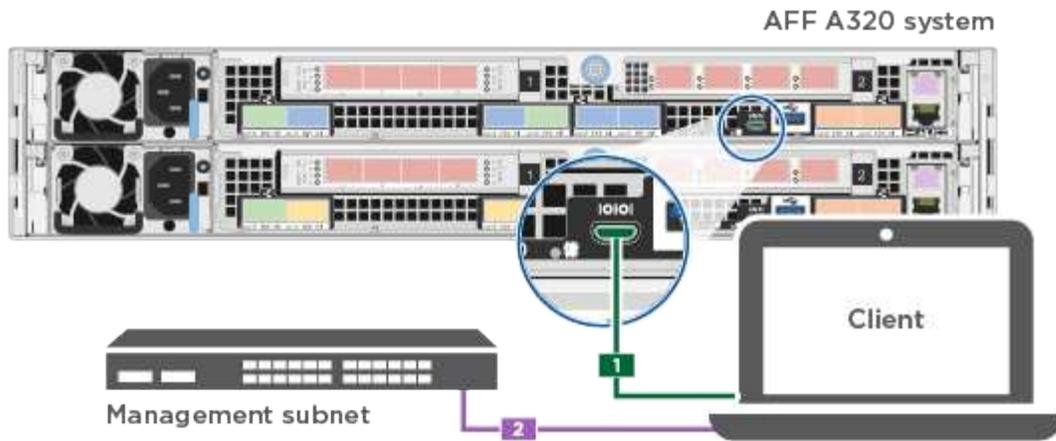

- c. Assign a TCP/IP address to the laptop or console, using one that is on the management subnet.
2. Use the following animation to set one or more drive shelf IDs:

[Animation - Set drive shelf IDs](#)

3. Plug the power cords into the controller power supplies, and then connect them to power sources on different circuits.

The system begins to boot. Initial booting may take up to eight minutes

4. Assign an initial node management IP address to one of the nodes.

| If the management network has DHCP... | Then...   |
|---------------------------------------|---|
| Configured                            | Record the IP address assigned to the new controllers.  |
| Not configured                        | <ol style="list-style-type: none"> <li>a. Open a console session using PuTTY, a terminal server, or the equivalent for your environment.</li> </ol> <div style="display: flex; align-items: center; margin: 10px 0;"> <div style="text-align: center; margin-right: 10px;">  </div> <div> <p>Check your laptop or console's online help if you do not know how to configure PuTTY.</p> </div> </div> <ol style="list-style-type: none"> <li>b. Enter the management IP address when prompted by the script.</li> </ol> |

5. Using System Manager on your laptop or console, configure your cluster:
  - a. Point your browser to the node management IP address.

 The format for the address is https://x.x.x.x.

- b. Configure the system using the data you collected in the *NetApp ONTAP Configuration guide*.

[ONTAP Configuration Guide](#)

6. Verify the health of your system by running Config Advisor.

7. After you have completed the initial configuration, go to [ONTAP 9 documentation](#) for information about configuring additional features in ONTAP.

## Copyright information

Copyright © 2026 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

## Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.