



Prepare for installation | Stage 1

o●● Pre-setup

1. Unpack all boxes and inventory contents. For more cable information and part numbers, see the Hardware Universe.

2. Go to the <u>AFF and FAS System Documentation Center</u> and click AFF C190 systems, and then Installation and Setup:
 Review the <u>NetApp ONTAP Configuration Guide</u>.

- Watch the videos listed under <u>Setup videos</u>.



In the box





You provide



Rack space 2U per chassis



Screwdriver Phillips



Additional network cables For connecting your storage system to your network switch and laptop or console



Laptop With a USB/serial connection and access to a Web browser to configure your storage system

3

Install hardware | Stage 2



Install system in a rack or cabinet

- Install the rail or telco tray kits, as needed, and then install and secure your system using the instructions included with the kit.
- Attach cable management devices to the back of each controller (as shown).
- Place the bezel on the front of the system.





Cable controller for switchless or switched cluster

See your network administrator for help connecting to your switches.

Attention: Be sure to check the illustration arrow for the proper cable connector pull-tab orientation. Note: To unplug a cable, gently pull the tab to release the locking mechanism.



Note: The illustrations below show the Unified configuration system. The cluster and management network cabling remain the same for an Ethernet configuration system. You will be using cables with RJ-45 connectors instead to connect to 10GbE switches.



the optical Ethernet or FC switches.

Switchless cluster





Connect both power cords

Power cables

Connect the power cables to both power supplies.

• Use the retaining clips.

(not shown)

• Connect power cables to different power sources.



Complete system setup and configuration | Stage 3



Turn on the power switches to both nodes.





Complete initial cluster setup:

- 1. Make sure that your laptop has network discovery enabled*. See your laptop's help for network discovery settings.
- 2. Connect your laptop to the Management switch.
- 3. Access the network computers and devices:
 - Open File Explorer
 - Click network in the left pane
 - Right click and select refresh.
- 4. Double-click either ONTAP icon

Note: Accept any certificates displayed on your screen.

*If your laptop does not support network discovery, see the Installation and setup guide for your model for how to complete initial cluster setup.



🚅 🔄 🚽 Network		
File Network View		
$\leftarrow \rightarrow \checkmark \uparrow 2 $ Network		
💻 This PC	V Computer (5)	
💣 Network	SAMPLE1-PC	
SAMPLE1-PC		
	✓ Other Devices (2)	



Use System Manager Guided Setup to configure your cluster

ONTAP System Manager	۹	• 1 0
ONTAP 9.7		
Health → All Systems Healthy	Initialize Storage System storage system name	
	You will see this name when managing the storage system. ADMINISTRATIVE PASSWORD Enter password	
	Reenter password	_
	Management Network cluster ip address Network Mask Gateway (optional)	
	IP address IP address IP address	
	IP address Use Domain Name System (DNS)	
	Use time services (NTP)	
		-

• Completing setup

- 1. Click...
 - a) mysupport.netapp.com
 - b) Create/log in to your account
 - c) Download and install Active IQ Config Advisor
 - d) Register your system
- 2. Verify the health of your system by running Config Advisor.
- 3. After you have completed the initial configuration, go to the <u>NetApp ONTAP Resources</u> page for information about configuring additional features in ONTAP.

Note: The default port configuration for Unified configuration systems is CNA mode; if connecting to an FC host network, you have to modify the ports for FC mode.