



NetApp®

Specifications for the X1133A-R6 4-Port 16-Gb FC Target-Only Adapter


The X1133A-R6 card is a 4-port, 16-Gb, target-only FC adapter consisting of two 2-port pairs, for use with supported fiber-optic and copper SFP+ cables. You should see the *Hardware Universe* at for specific platform information.

General specifications

Media type	Ports	PCI slot type	Connector type	Version of software supported
Twinaxial copper/fiber-optic	Four ports	PCIe	SFP+ copper, LC optical	Data ONTAP® 8.3

Location of LEDs and ports

You must connect to the X1133A-R6 ports using supported copper SFP+ cables. You can monitor the activity on the ports through the LEDs on the bezel.

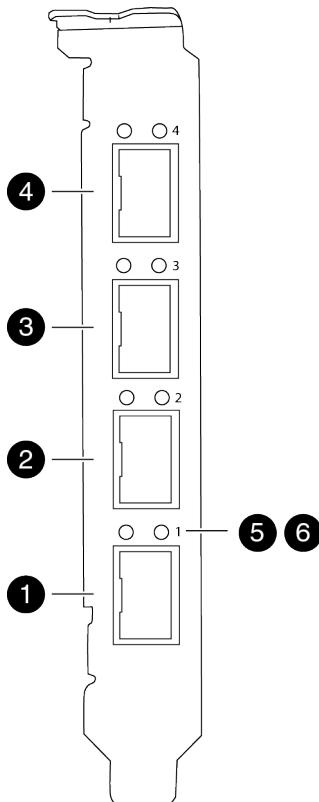

1 2 3 4	Ports a, b, c, and d, respectively
5 6	LEDs 0 and 1, respectively; one set of amber and green for each port



The ports in the illustration are labeled a, b, c, and d because Data ONTAP identifies ports alphabetically. The physical ports are labeled 1 for Port a, 2 for Port b, 3 for Port c, and 4 for Port d.

What the LEDs mean

The LEDs on the X1133A-R6 provide you with information about traffic to the ports as well as information about their status and their connections. The LED color and activity varies, depending on the current operation of the ports.

Green LED	Amber LED	State
Off	Off	Boot failure
Off	On	POST failure
Off	Slow blink	Boot failure after POST
Off	Fast blink	Not defined
Off	Flashing	POST processing in progress
On	Off	Failure in Common Code Module
On	On	Failure in Common Code Module
On	Two fast blinks	Normal (link up at 4 GFC)
On	Three fast blinks	Normal (link up at 8 GFC)
On	Four fast blinks	Normal (link up at 16 GFC)
On	Flashing	Not defined
Slow blink	Off	Normal, link down

Installation and configuration of the X1133A-R6

You can find the most up-to-date installation, cabling, and configuration information about the X1133A-R6 card and your platform online.

For supported platform models and slot assignment, see the *Hardware Universe* at hwu.netapp.com. Specific information about installing this card in your platform can be found in the PCIe replacement flyer for your platform at mysupport.netapp.com/documentation/productsat0z/index.html.

Configuration resources

You can refer to the following documentation, available at mysupport.netapp.com, when configuring the X1133A-R6 card for your specific release of Data ONTAP:

- *Clustered Data ONTAP Network Management Guide*
- *Clustered Data ONTAP SAN Administration Guide*
- *Clustered Data ONTAP SAN Configuration Guide*

If you cannot access mysupport.netapp.com, contact technical support at +1 (888) 463-8277 (North America), +00 800 44 638 277 (Europe), or +800 800-80-800 (Asia/Pacific) for help.