



Migrate storage VMs

ASA r2

NetApp
January 13, 2026

Table of Contents

Migrate storage VMs	1
Migrate a storage VM from an ASA cluster to an ASA r2 cluster	1
Step 1: Verify the status of the ASA storage VM	1
Step 2: Create a cluster peer relationship between your ASA and ASA r2 clusters	2
Step 3: Prepare for storage VM migration from an ASA to an ASA r2 cluster	4
Step 4: Migrate an ASA storage VM to an ASA r2 cluster	4
Cutover clients and clean up source storage VM after migration to an ASA r2 system	5
Manually cut over clients to an ASA r2 system after a storage VM migration	5
Manually remove an ASA storage VM after migration to an ASA r2 cluster	6

Migrate storage VMs

Migrate a storage VM from an ASA cluster to an ASA r2 cluster

Beginning with ONTAP 9.18.1, you can non-disruptively migrate a storage virtual machine (VM) from any ASA cluster to any ASA r2 cluster. Migrating from an ASA cluster to an ASA r2 cluster allows you to adopt the simplified and streamlined architecture of ASA r2 systems for SAN-only environments.

Storage VM migration between ASA and ASA r2 storage systems is supported as follows:

From any of the following ASA systems:	To any of the following ASA r2 systems:
<ul style="list-style-type: none">• ASA C800• ASA C400• ASA C250• ASA A900• ASA A800• ASA A400• ASA A250• ASA A150• ASA AFF A800• ASA AFF A700• ASA AFF A400• ASA AFF A250• ASA AFF A220	<ul style="list-style-type: none">• ASA A1K• ASA C30• ASA A90• ASA A70• ASA A50• ASA A30• ASA A20



For the most current list of ASA and ASA r2 systems, see [NetApp Hardware Universe](#). ASA r2 systems are listed in NetApp Hardware Universe as "ASA A-Series/C-Series (New)".

You can migrate a storage VM to an ASA r2 cluster from an ASA cluster only. Migration from any other type of ONTAP system is not supported.

Before you begin

All nodes in the ASA r2 cluster and the ASA cluster must be running ONTAP 9.18.1 or later. The ONTAP 9.18.1 patch versions on the cluster nodes can vary.

Step 1: Verify the status of the ASA storage VM

Before you migrate a storage VM from an ASA system, there should be no NVMe namespaces or vVols present and each volume in the storage VM should contain only one LUN. Migration of NVMe namespaces and vVols is not supported. The architecture of ASA r2 systems requires that volumes contain a single LUN.

Steps

1. Verify that no NVMe namespaces are present in the storage VM:

```
vserver nvme namespace show -vserver <storage_VM>
```

If entries are displayed, the NVMe objects must be [converted](#) to LUNs or removed. See the `vserver nvme namespace delete` and the `vserver nvme subsystem delete` commands in the [ONTAP command reference](#) for more information.

2. Verify that there are no vVols present in the storage VM:

```
lun show -vserver <storage_VM> -class protocol-endpoint,vvol
```

If any vVols are present, they should be copied to another storage VM and then deleted from the storage VM to be migrated. See the `lun copy` and `lun delete` commands in the [ONTAP command reference](#) for more information.

3. Verify that each volume in the storage VM contains a single LUN:

```
lun show -vserver <storage_VM>
```

If a volume contains more than one LUN, use the `volume create` and `lun move` commands to create a 1:1 volume-to-LUN ratio. See the [ONTAP command reference](#) for more information.

What's next?

You are ready to create a cluster peer relationship between your ASA and ASA r2 clusters.

Step 2: Create a cluster peer relationship between your ASA and ASA r2 clusters

Before you can migrate a storage VM from an ASA cluster to an ASA r2 cluster, you need to create a peer relationship. A peer relationship defines network connections that enable ONTAP clusters and storage VMs to exchange data securely.

Before you begin

You must have created intercluster LIFs on every node in the clusters being peered using one of the following methods.

- [Configure intercluster LIFs on shared data ports](#)
- [Configure intercluster LIFs on dedicated data ports](#)
- [Configure intercluster LIFs in custom IPspaces](#)

Steps

1. On the ASA r2 cluster, create a peer relationship with the ASA cluster and generate a passphrase:

```
cluster peer create -peer-addrs <ASA_cluster_LIF_IPs> -generate  
-passphrase
```

The following example creates a cluster peer relationship between cluster 1 and cluster 2 and creates a system-generated passphrase:

```
cluster1::> cluster peer create -peer-addrs 10.98.191.193 -generate  
-passphrase  
Passphrase: UCa+6lRVICXeL/gq1WrK7ShR  
Peer Cluster Name: cluster2  
Initial Allowed Vserver Peers: -  
Expiration Time: 6/7/2017 09:16:10 +5:30  
Intercluster LIF IP: 10.140.106.185  
Warning: make a note of the passphrase - it cannot be displayed again.
```

2. Copy the generated passphrase.
3. On the ASA cluster, create a peer relationship with the ASA r2 cluster:

```
cluster peer create -peer-addrs <ASA_r2_LIF_IPs>
```

4. Enter the passphrase generated on the ASA r2 cluster.
5. Verify that the cluster peer relationship is created:

```
cluster peer show
```

The following example displays the expected output for successfully peered clusters.

```
cluster1::> cluster peer show
```

Peer Cluster Name	Cluster Serial Number	Availability	
Authentication			
-----	-----	-----	-----

cluster2	1-80-123456	Available	ok

Result

The ASA and ASA r2 clusters are peered and storage VM data can be securely transferred.

What's next?

You are ready to prepare your ASA storage VM for migration.

Step 3: Prepare for storage VM migration from an ASA to an ASA r2 cluster

Before you migrate a storage virtual machine (VM) from an ASA cluster to an ASA r2 cluster, you must run a migration pre-check and fix any required issues. You cannot perform the migration until the pre-check passes successfully.

Step

1. From your ASA r2 cluster, execute the migration pre-check:

```
vserver migrate start -vserver <storage_VM> -source-cluster  
<asa_cluster> -check-only true
```

If you need to fix any issues to prepare your ASA cluster for migration, the issue and the corrective action is displayed. Fix the issue and repeat the pre-check until it completes successfully.

What's next?

You are ready to migrate your storage VM from your ASA cluster to an ASA r2 cluster.

Step 4: Migrate an ASA storage VM to an ASA r2 cluster

After you have prepared your ASA cluster and created the necessary cluster peer relationship with the ASA r2 cluster, you can begin the storage VM migration.

When performing a storage VM migration, it is a best practice to leave 30% CPU headroom on both the ASA cluster and the ASA r2 cluster to enable the CPU workload to execute.

About this task

After the storage VM migration, clients are automatically cut over to the ASA r2 cluster and the storage VM on the ASA cluster is automatically removed. Automatic cutover and automatic storage VM removal are enabled by default. You can optionally disable them both and perform the cutover and the storage VM removal manually.

Before you begin

- The ASA r2 cluster must have enough free space to hold the migrated storage VM.
- If the ASA storage VM contains encrypted volumes, the onboard key manager or the external key manager on the ASA r2 system must be configured at the cluster level.
- The following operations cannot be running on the source ASA cluster:
 - Failover operations
 - WAFLIRON
 - Fingerprint
 - Volume move, rehost, clone, create, convert or analytics

Steps

1. From the ASA r2 cluster, start the storage VM migration:

```
vserver migrate start -vserver <storage_VM_name> -source-cluster  
<ASA_cluster>
```

To disable automatic cutover, use the `-auto-cutover false` parameter. To disable the automatic removal of the ASA storage VM, use the `-auto-source-cleanup false` parameter.

2. Monitor the status of the migration

```
vserver migrate show -vserver <storage_VM_name>
```

When the migration is complete, the **status** displays as **migration-complete**.



If you need to pause or cancel the migration before automatic cutover begins, use the `vserver migrate pause` and the `vserver migrate abort` commands. You must pause the migration before cancelling it. You cannot cancel the migration after cutover starts.

Result

The storage VM is migrated from the ASA cluster to the ASA r2 cluster. The storage VM's name and UUID, the data LIF name, IP address, and object names, such as the volume name, remain unchanged. The UUID of the migrated objects in the storage VM are updated.

What's next?

If you disabled automatic cutover and automatic storage VM removal, [manually cut over your ASA clients to your ASA r2 cluster and remove the storage VM from the ASA cluster](#).

Cutover clients and clean up source storage VM after migration to an ASA r2 system

After a storage virtual machine (VM) is migrated from an ASA cluster to an ASA r2 cluster, by default, clients are automatically cut over to the ASA r2 cluster and the storage VM on the ASA cluster is automatically removed. If you chose to disable automatic cutover and removal of the ASA storage VM during the migration, you need to perform these steps manually after the migration is complete.

Manually cut over clients to an ASA r2 system after a storage VM migration

If you disable automatic client cutover during the migration of a storage VM from an ASA cluster to an ASA r2 cluster, after the migration is successfully complete, perform the cutover manually so the ASA r2 storage VM can serve data to clients.

Steps

1. On the ASA r2 cluster, manually execute client cutover:

```
vserver migrate cutover -vserver <storage_VM_name>
```

2. Verify that the cutover operation is complete:

```
vserver migrate show
```

Result

Data is being served to your clients from the storage VM on your ASA r2 cluster.

What's next?

You are now ready to remove the storage VM from the source ASA cluster.

Manually remove an ASA storage VM after migration to an ASA r2 cluster

If you disable automatic source cleanup during the migration of a storage VM from an ASA cluster to an ASA r2 cluster, after the migration is complete, remove the storage VM from the ASA cluster to free the storage space.

Before you begin

Your clients should be serving data from the ASA r2 cluster.

Steps

1. From the ASA cluster, verify that the status of the ASA storage VM is **Ready for source cleanup**:

```
vserver migrate show
```

2. Remove the ASA storage VM:

```
vserver migrate source-cleanup -vserver <storage_VM_name>
```

Result

The storage VM on your ASA cluster is removed.

Copyright information

Copyright © 2026 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—with prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.