



View iSCSI sessions

Element Software

NetApp
June 11, 2021

Table of Contents

- View iSCSI sessions 1
- Find more information 1
- iSCSI session details 1

View iSCSI sessions

You can view the iSCSI sessions that are connected to the cluster. You can filter the information to include only the desired sessions.

1. In the Element UI, select **Reporting > iSCSI Sessions**.
2. To see the filter criteria fields, click **Filter**.

Find more information

[iSCSI session details](#)

iSCSI session details

You can view information about the iSCSI sessions that are connected to the cluster.

The following list describes the information that you can find about the iSCSI sessions:

- **Node**

The node hosting the primary metadata partition for the volume.

- **Account**

The name of the account that owns the volume. If value is blank, a dash (-) is displayed.

- **Volume**

The volume name identified on the node.

- **Volume ID**

ID of the volume associated with the Target IQN.

- **Initiator ID**

A system-generated ID for the initiator.

- **Initiator Alias**

An optional name for the initiator that makes finding the initiator easier when in a long list.

- **Initiator IP**

The IP address of the endpoint that initiates the session.

- **Initiator IQN**

The IQN of the endpoint that initiates the session.

- **Target IP**

The IP address of the node hosting the volume.

- **Target IQN**

The IQN of the volume.

- **Created On**

Date the session was established.

Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.