



system switch commands

ONTAP 9.8 commands

NetApp
September 27, 2022

Table of Contents

- system switch commands 1
 - system switch ethernet configure-health-monitor 1
 - system switch ethernet create 1
 - system switch ethernet delete 3
 - system switch ethernet modify 4
 - system switch ethernet show-all 5
 - system switch ethernet show 6
 - system switch ethernet log collect 9
 - system switch ethernet log disable-collection 10
 - system switch ethernet log enable-collection 10
 - system switch ethernet log modify 11
 - system switch ethernet log setup-password 11
 - system switch ethernet log show 12
 - system switch ethernet polling-interval modify 13
 - system switch ethernet polling-interval show 13
 - system switch ethernet threshold show 14
 - system switch fibre-channel add 14
 - system switch fibre-channel modify 16
 - system switch fibre-channel refresh 18
 - system switch fibre-channel remove 18
 - system switch fibre-channel show 20

system switch commands

system switch ethernet configure-health-monitor

Ethernet switch health monitor configuration file setup.

Availability: This command is available to *cluster* administrators at the *advanced* privilege level.

Description

The `system switch ethernet configure-health-monitor` command downloads an Ethernet switch's health monitor configuration file in the ZIP format, which contains the XML file and a signed version file. After download, ONTAP will check the signed file. If valid, the Ethernet switch health monitor restarts to use the new Ethernet switch health monitor configuration file.

Parameters

-node {<nodename>|local} - Node

This specifies the node or nodes on which the Ethernet switch health monitor configuration file is to be updated.

-package-url <text> - Package URL

This parameter specifies the URL that provides the location of the package to be downloaded. Standard URL schemes, including HTTP, HTTPS, FTP and FILE, are accepted.

Examples

The following example downloads Ethernet switch health monitor configuration file to node1 from a web server and enables Ethernet switch health monitor to process it:

```
cluster1::*> system switch ethernet configure-health-monitor -node node1
-package-url
http://example.com/hm_config.zip
```

system switch ethernet create

Add information about an Ethernet switch (cluster, management or storage).

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch ethernet create` command adds information about an Ethernet switch (cluster, management or storage). The Ethernet switch health monitor uses this information to monitor the health of the switch.

Use this command if ONTAP cannot automatically discover a cluster, management or storage switch. ONTAP relies on the Cisco Discovery Protocol (CDP) to discover the switches. CDP is always enabled on all cluster

ports of a node by default, disabled on all non-cluster ports of a node. If the CDP is also enabled on your Ethernet switches, they will be automatically discovered.

If you want ONTAP to discover and monitor management switches, the CDP must be enabled on non-cluster ports. To verify whether the CDP is enabled or disabled, use the command `system node run -node [HTML_REMOVED]node_name[HTML_REMOVED]-command`options cdpd.enable``.

Use the `system switch ethernet show` command to identify switches that the Ethernet switch health monitor is monitoring.

Parameters

-device <text> - Device Name

Specifies the device name of the switch that you want to monitor. ONTAP uses the device name of the switch to identify the SNMP agent with which it wants to communicate.

-address <IP Address> - IP Address

Specifies the IP address of switch's management interface.

-snmp-version {SNMPv1|SNMPv2c|SNMPv3} - SNMP Version

Specifies the SNMP version that ONTAP uses to communicate with the switch. The default is SNMPv2c.

{ -community <text> - DEPRECATED-Community String or SNMPv3 Username



This parameter is deprecated and may be removed in a future release of ONTAP. Use `-community-or-username` instead.

Specifies the community string for SNMPv2 authentication or SNMPv3 user name for SNMPv3 security. The default community string for SNMPv2 authentication is `cshm1!`.

| -community-or-username <text> - Community String or SNMPv3 Username }

Specifies the community string for SNMPv2 authentication or SNMPv3 user name for SNMPv3 security. The default community string for SNMPv2 authentication is `cshm1!`.

-model

{NX5010|NX5020|CAT2960|OTHER|NX5596|CN1610|CN1601|NX3132|NX5548|NX3132V|OT9332|NX3132XL|NX3232C} - Model Number

This parameter specifies the model number of the switch. Use "OTHER" model when adding a switch that requires a switch health monitor XML configuration file, for example: BES-53248 and N9K-C92300YC switches. ONTAP also sets the model to OTHER when it automatically discovers a switch that does not support health monitoring.

-type {cluster-network|management-network|storage-network} - Switch Network

Specifies the switch type.

[-is-monitoring-enabled-admin {true|false}] - Enable Switch Monitoring

Specifies the switch admin monitoring status.

Examples

```
cluster1::> system switch ethernet create -device SwitchA -address 1.2.3.4
-snmpp-version SNMPv2c -community-or-username cshml! -model NX55596 -type
cluster-network
```

Creates a new switch configuration for a switch named SwitchA.

```
cluster2::> system switch ethernet create -device SwitchB -address 5.6.7.8
-snmpp-version SNMPv3 -community-or-username snmpv3u1 -model CN1601 -type
management-network
```

Creates a new switch configuration for a switch named SwitchB.

Related Links

- [system node run](#)
- [system switch ethernet show](#)

system switch ethernet delete

Delete information about an Ethernet switch (cluster, management or storage).

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch ethernet delete` command disables switch health monitoring for an Ethernet switch (cluster, management or storage).

Parameters

-device <text> - Device Name

Specifies the name of the switch.

[-force <>true>] - Force Delete

Specifies if the delete operation is forced.

Examples

```
cluster1::> system switch ethernet delete -device SwitchA
```

Disables monitoring for the switch named SwitchA.

```
cluster1::> system switch ethernet delete -device SwitchA -force
```

Forcefully disables monitoring for the switch named SwitchA. (privilege: advanced)

system switch ethernet modify

Modify information about an Ethernet switch's configuration

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch ethernet modify` command modifies information about an Ethernet switch (cluster, management or storage). The Ethernet switch health monitor uses this information to monitor the switch.

Parameters

-device <text> - Device Name

Specifies the device name of switch that you want to monitor.

[-address <IP Address>] - IP Address

Specifies the IP address of the switch's management interface.

[-snmp-version {SNMPv1|SNMPv2c|SNMPv3}] - SNMP Version

Specifies the SNMP version that ONTAP uses to communicate with the switch. The default is SNMPv2c.

{ [-community <text>] - DEPRECATED-Community String or SNMPv3 Username



This parameter is deprecated and may be removed in a future release of ONTAP. Use `-community-or-username` instead.

Specifies the community string for SNMPv2 authentication or SNMPv3 username for SNMPv3 security.

[-community-or-username <text>] - Community String or SNMPv3 Username }

Specifies the community string for SNMPv2 authentication or SNMPv3 username for SNMPv3 security.

[-type {cluster-network|management-network|storage-network}] - Switch Network

Specifies the switch type.

[-is-monitoring-enabled-admin {true|false}] - Enable Switch Monitoring

Specifies the switch admin monitoring status.

Examples

```
cluster1::> system switch ethernet modify -device SwitchA -address 2.3.4.5
```

Modifies the IP address for the switch named SwitchA.

```
cluster1::> system switch ethernet modify -device SwitchB -snmp-version
SNMPv3 -community-or-username snmpv3u1
```

Modifies the SNMP parameters for the switch named SwitchB.

system switch ethernet show-all

Displays the list of switches that were added and deleted

Availability: This command is available to *cluster* administrators at the *advanced* privilege level.

Description

The `system switch ethernet show-all` command displays configuration details for discovered monitored Ethernet switches (cluster, management and storage), including switches that are user-deleted. From the list of deleted switches, you can delete a switch permanently from the database to re-enable automatic discovery of that switch.

Parameters

{ [-fields <fieldname>,...]

Selects the fields that have the specified name.

| [-instance] }

Selects detailed information for all the switches.

[-device <text>] - Device Name

Selects the switches that match the specified device name.

[-address <IP Address>] - IP Address

Selects the switches that match the specified IP address.

[-snmp-version {SNMPv1|SNMPv2c|SNMPv3}] - SNMP Version

Selects the switches that match the specified SNMP version.

[-community <text>] - DEPRECATED-Community String or SNMPv3 Username



This parameter is deprecated and may be removed in a future release of ONTAP. Use `-community-or-username` instead.

Selects the switches that match the specified community string or SNMPv3 username.

[-community-or-username <text>] - Community String or SNMPv3 Username

Selects the switches that match the specified community string or SNMPv3 username.

[-discovered {true|false}] - Is Discovered

Selects the switches that match the specified discovery setting.

[`-type` {`cluster-network`|`management-network`|`storage-network`}] - Switch Network

Selects the switches that match the specified switch type.

[`-sw-version` <text>] - Software Version

Selects the switches that match the specified software version.

[`-is-monitoring-enabled-operational` {`true`|`false`}] - Switch Monitoring Status

Selects the switches that match the specified operational monitoring status.

[`-reason` <text>] - Reason For Not Monitoring

Selects the switches that match the specified reason.

[`-version-source` <text>] - Source Of Switch Version

Selects the switches that match the specified version source (for example, from SNMP, CDP or ISDP).

[`-serial-number` <text>] - Serial Number of the Device

Selects the switches that match the specified serial number.

[`-model` <text>] - Model to display

Selects the switches that match the specified model number.

Examples

```
cluster1::> system switch ethernet show-all
Switch                               Type                               Address                               Model
-----                               -
SwitchA                               cluster                            1.2.3.4
Nexus5010

      Is Monitored: yes
          Reason:
Software Version: Cisco IOS 4.1N1
Version Source: CDP
```

The example above displays the configuration of all Ethernet switches (cluster, management and storage).

system switch ethernet show

Display the configuration for Ethernet switches (cluster, management and storage).

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch ethernet show` command displays configuration details for the monitored Ethernet switches (cluster, management and storage).

Parameters

{ [-fields <fieldname>,...]

Selects the fields that have the specified name.

| [-snmp-config]

Displays the following information about a switch:

- Device Name
- SNMPv2c Community String or SNMPv3 Username
- SNMP Version

| [-status]

Displays the following status information about a switch:

- Is Discovered
- SNMPv2c Community String or SNMPv3 Username
- Model Number
- Switch Network
- Software Version
- Reason For Not Monitoring
- Source Of Switch Version
- Is Monitored ?

| [-instance] }

Selects detailed information for all the switches.

[-device <text>] - Device Name

Selects the switches that match the specified device name.

[-address <IP Address>] - IP Address

Selects the switches that match the specified IP address.

[-snmp-version {SNMPv1|SNMPv2c|SNMPv3}] - SNMP Version

Selects the switches that match the specified SNMP version.

[-is-discovered {true|false}] - Is Discovered

Selects the switches that match the specified discovery setting.

[-community <text>] - DEPRECATED-Community String or SNMPv3 Username



This parameter is deprecated and may be removed in a future release of ONTAP. Use `-community-or-username` instead.

Selects the switches that match the specified SNMPv2c community string or SNMPv3 username.

[-community-or-username <text>] - Community String or SNMPv3 Username

Selects the switches that match the specified SNMPv2c community string or SNMPv3 username.

[-model

{NX5010|NX5020|CAT2960|OTHER|NX5596|CN1610|CN1601|NX3132|NX5548|NX3132V|OT9332|NX3132XL|NX3232C}] - Model Number

Selects the switches that match the specified model number.

[-type {cluster-network|management-network|storage-network}] - Switch Network

Selects the switches that match the specified switch type.

[-sw-version <text>] - Software Version

Selects the switches that match the specified software version.

[-reason <text>] - Reason For Not Monitoring

Selects the switches that match the specified reason.

[-version-source <text>] - Source Of Switch Version

Selects the switches that match the specified version source (for example, from SNMP, CDP or ISDP).

[-is-monitoring-enabled-operational {true|false}] - Is Monitored ?

Selects the switches that match the specified operational monitoring status.

[-serial-number <text>] - Serial Number of the Device

Selects the switches that match the specified serial number.

Examples

```

cluster1::> system switch ethernet show
Switch                               Type                               Address                               Model
-----                               -
cn1610-143--234                      cluster-network                    10.238.143.234                      CN1610
  Serial Number: 20211200007
  Is Monitored: true
  Reason:
  Software Version: 1.1.0.1
  Version Source: ISDP
cn1601--143-230                      management-network                 10.238.143.230                      CN1601
  Serial Number: 20210200019
  Is Monitored: false
  Reason: Monitoring Disabled by Default
  Software Version: 1.1.0.1
  Version Source: ISDP
cn1601--143-232                      management-network                 10.238.143.232                      CN1601
  Serial Number: 20210200017
  Is Monitored: false
  Reason: Monitoring Disabled by Default
  Software Version: 1.1.0.1
  Version Source: ISDP
cn1610-143--231                      cluster-network                    10.238.143.231                      CN1610
  Serial Number: 20211200002
  Is Monitored: true
  Reason:
  Software Version: 1.1.0.1
  Version Source: ISDP

```

The example above displays the configuration of all Ethernet switches (cluster, management and storage).

```

cluster1::> system switch ethernet show -snmp-config
                SNMPv2c Community
Switch          or SNMPv3 Username    SNMP Version
-----
SwitchA        public                               SNMPv2c

```

The example above displays the SNMPv2c community string or SNMPv3 username and SNMP version for all Ethernet switches (cluster, management and storage).

system switch ethernet log collect

Collect Ethernet switch log via openSSH.

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch ethernet log collect` command initiates the collection of an Ethernet switch log for the specified Ethernet switch via OpenSSH.

Parameters

-device <text> - Switch Name

Specifies the Ethernet switch device for which the log collection is being made.

Examples

```
cluster1::> system switch ethernet log collect -device cluster-sw1
```

system switch ethernet log disable-collection

Disable Ethernet switch log collection via openSSH.

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch ethernet log disable-collection` command disables the collection of Ethernet switch logs via OpenSSH.

Examples

```
cluster1::> system switch ethernet log disable-collection
```

system switch ethernet log enable-collection

Enable Ethernet switch log collection via openSSH.

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch ethernet log enable-collection` command enables the collection of Ethernet switch logs via OpenSSH.

Examples

```
cluster1::> system switch ethernet log enable-collection
```

system switch ethernet log modify

Modify the Ethernet switch log request.

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch ethernet log modify` command modifies the log request of the specified Ethernet switch.

Parameters

`-device <text>` - Switch Name

Specifies the Ethernet switch device for which the log request is being made. Note: the device must be one of the devices listed as an Ethernet switch from the [system switch ethernet show](#) command. The full device name from the [system switch ethernet show](#) command must be used.

`[-log-request {true|false}]` - Requested Log

Specifies the initiation of a switch log retrieval for the specified Ethernet switch if set to true.

Examples

```
cluster1::> system switch ethernet log modify -device switch-  
name01(Switch---SN) -log-request true
```

Modifies the log request for the specified Ethernet switch. Setting the log-request to true initiates an Ethernet switch log retrieval for the specified switch.

Related Links

- [system switch ethernet show](#)

system switch ethernet log setup-password

Obtain Ethernet switch admin passwords.

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch ethernet log setup-password` command allows the administrator to set up Ethernet switch health monitor access to certain Ethernet switches, so that switch logs can be collected.

Examples

```
cluster1::> system switch ethernet log setup-password
      Enter the switch name: (use full name from system switch
ethernet show)
      Enter the password: (Enter admin password of switch)
      Enter the password again: (Enter admin password of switch)
cluster1::>
```

Enables setup of switch log collection for the specified Ethernet switch.

system switch ethernet log show

Display Ethernet switch log information.

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch ethernet log show` command displays the status and requests for Ethernet switch logs.

Parameters

{ [-fields <fieldname>,...]

If you specify the `-fields <fieldname>, ...` parameter, the command output also includes the specified field or fields. You can use `'-fields ?'` to display the fields to specify.

| [-instance] }

Specifies an instance of the Ethernet switch devices log status.

[-device <text>] - Switch Name

Specifies the name of the Ethernet switch device to display log status on.

[-log-request {true|false}] - Requested Log

Specifies the state of the log request for an Ethernet switch device. Values: true, false.

[-log-status <text>] - Log Status

Specifies the status of the log request for an Ethernet switch device.

[-log-timestamp <MM/DD/YYYY HH:MM:SS>] - Log Timestamp

Specifies the completion timestamp of the log request for an Ethernet switch device.

[-idx <integer>] - Index

Specifies the index of the Ethernet switch device.

[-filename <text>] - Filename

Specifies the full filename of the Ethernet switch log.

[-filenode <text>] - File Node

Specifies the name of the controller on which the Ethernet switch log resides.

Examples

```
cluster1::> system switch ethernet log show
Log Collection Enabled: true
Index Switch                               Log Timestamp           Status
-----
-----
1 switch-name01 (Switch---SN)             -                         -
2 switch-name02 (Switch---SN)             -                         -
```

Displays the Ethernet switches, their last log timestamp, and the status of the last log request.

system switch ethernet polling-interval modify

Modify the polling interval for Ethernet switch health

Availability: This command is available to *cluster* administrators at the *advanced* privilege level.

Description

The `system switch ethernet polling-interval modify` command modifies the interval in which the Ethernet switch health monitor polls cluster, management and storage switches.

Parameters

[-polling-interval <integer>] - Polling Interval

Specifies the interval in which the health monitor polls switches. The interval is in minutes. The default value is 5. The allowed range of values is 2 to 120.

Examples

```
cluster1::> system switch ethernet polling-interval modify -polling
-interval 41
```

Modifies the polling interval of the switches.

system switch ethernet polling-interval show

Display the polling interval for monitoring Ethernet switch health

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch ethernet polling-interval show` command displays the polling interval used by the Ethernet switch health monitor.

Examples

```
cluster1::> system switch ethernet polling-interval show
Polling Interval (in minutes): 40
```

The example above displays the polling interval period for the switches.

system switch ethernet threshold show

Display the Ethernet switch health monitor alert thresholds

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch ethernet threshold show` command displays thresholds used by health monitor alerts.

Examples

```
cluster1::> system switch ethernet threshold show
Per 0.10% values: 1 = 0.10%, 5 = 0.50%
Entity-alert Threshold is the count needed to raise entity warning
alert
In Errors Threshold (%) Out Errors Threshold (%) Entity-alert Threshold
-----
                                1                                1                                2
```

Displays the inbound and outbound switch interface packet error thresholds are set at 0.1%. Also, displays threshold value for entity warning alerts. The node platform health monitor also shares the same thresholds in monitoring packet errors of cluster ports on the node.

system switch fibre-channel add

Add a back-end fibre-channel switch for monitoring

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch fibre-channel add` command enables you to add fibre-channel (FC) switches for SNMP monitoring in a MetroCluster configuration. Front end switches should not be added for monitoring and will result in a Monitor Status Error condition.

Parameters

-address <IP Address> - FC Switch Management IP Address

This parameter specifies the IP address of the back-end FC switch that is added for monitoring.

[-snmp-version {SNMPv1|SNMPv2c|SNMPv3}] - Supported SNMP Version

This parameter specifies the SNMP version that ONTAP uses to communicate with the back-end FC switch that is added for monitoring. The default SNMP version is SNMPv2c.

{ [-snmp-community <text>] - (DEPRECATED)-SNMPv2c Community or SNMPv3 Username



This parameter is deprecated and may be removed in a future release of ONTAP. Use `-snmp-community-or-username` instead.

This parameter specifies the SNMPv2c community set or SNMPv3 username on the FC switch that is added for monitoring.

[-snmp-community-or-username <text>] - SNMPv2c Community or SNMPv3 Username }

This parameter specifies the SNMPv2c community set or SNMPv3 username on the switch that is added for monitoring.

[-veto-backend-fabric-check {true|false}] - Veto Back-end Fabric Check?

If specified, the `system switch fibre-channel add` command will not check if the switch is present in the MetroCluster's back-end fabric. By default, it does not let you add switches that are not present.

[-blades <integer>,...] - Cisco Director Class Switch Blades to Monitor

This parameter specifies the blades to monitor on the back-end switch that is added for monitoring. It is only applicable to director-class switches.

Examples

The following command adds a back-end switch with IP Address 10.226.197.34 for monitoring:

```

cluster1::> system switch fibre-channel add -address 10.226.197.34 -snmp
-community-or-username public
cluster1::> system switch fibre-channel show

```

Monitor	Symbolic	Is				
Switch	Name	Vendor	Model	Switch WWN	Monitored	Status
Cisco_10.226.197.34	mcc-cisco-8Gb-fab-4	Cisco	DS-C9148-16P-K9	2000547fee78f088	true	ok
mcc-cisco-8Gb-fab-1	mcc-cisco-8Gb-fab-1	Cisco	-	-	false	-
mcc-cisco-8Gb-fab-2	mcc-cisco-8Gb-fab-2	Cisco	-	-	false	-
mcc-cisco-8Gb-fab-3	mcc-cisco-8Gb-fab-3	Cisco	-	-	false	-

```

4 entries were displayed.
cluster1::>

```

The following command adds a Cisco Director Class switch for monitoring. ONTAP uses SNMPv3 and 'snmpuser1' username to communicate with this switch.

```

cluster1::> system switch fibre-channel add -address 10.228.56.208 -snmp
-version SNMPv3 -snmp-community-or-username snmpuser1 -blades 3,4

```

system switch fibre-channel modify

Modify information about a back-end fibre-channel switch's configuration

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch fibre-channel modify` command enables you to modify certain parameters for identifying and accessing the back-end fibre-channel (FC) end switches added for monitoring in a MetroCluster configuration.

Parameters

-switch-name <text> - FC Switch Name

This parameter specifies the name of the switch.

[-snmp-version {SNMPv1|SNMPv2c|SNMPv3}] - SNMP Version

This parameter specifies the SNMP version that ONTAP uses to communicate with the switch.

[-switch-ipaddress <IP Address>] - Switch IP Address

This parameter specifies the IP address of the switch.

{ [-snmp-community <text>] - (DEPRECATED)-SNMPv2c Community or SNMPv3 Username



This parameter is deprecated and may be removed in a future release of ONTAP. Use `-snmp-community-or-username` instead.

This parameter specifies the SNMPv2c community set or SNMPv3 username on the switch.

[-snmp-community-or-username <text>] - SNMPv2c Community or SNMPv3 Username }

This parameter specifies the SNMPv2c community set or SNMPv3 username on the switch.

[-blades <integer>,...] - Director-Class Switch Blades to Monitor

This parameter specifies the blades to monitor on the switch. It is only applicable to director-class switches.

Examples

The following command modifies Cisco_10.226.197.34 switch SNMP community to 'public':

```
cluster1::> system switch fibre-channel modify -switch-name
Cisco_10.226.197.34 -switch-ipaddress 10.226.197.34 -snmp-community-or
-username public
cluster1::>
```

The following command modifies the blades monitored on a director-class switch:

```
cluster1::> system switch fibre-channel modify -switch-name
Cisco_10.228.56.208 -blades 3,4
cluster1::>
```

The following command modifies Brocade 6505 switch SNMP version to SNMPv3 and SNMPv3 username to 'snmpuser1':

```
cluster1::> system switch fibre-channel modify -switch-name Brocade6505
-switch-ipaddress 10.226.197.34 -snmp-version SNMPv3 -snmp-community-or
-username snmpuser1
cluster1::>
```

system switch fibre-channel refresh

Refresh back-end fibre-channel switch info

Availability: This command is available to *cluster* administrators at the *advanced* privilege level.

Description

The `system switch fibre-channel refresh` command triggers a refresh of the SNMP data for the MetroCluster fibre-channel (FC) switches and FC-to-SAS bridges. It does not do anything if the refresh is already going on. The FC switches and FC-to-SAS bridges must have been previously added for monitoring by using the [system switch fibre-channel add](#) and [system bridge add](#) commands, respectively.

Examples

The following command triggers a refresh for the FC switch and FC-to-SAS bridge data:

```
cluster1::*> system switch fibre-channel refresh
cluster1::*>
```

Related Links

- [system switch fibre-channel add](#)
- [system bridge add](#)

system switch fibre-channel remove

Remove a back-end fibre-channel switch from monitoring

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch fibre-channel remove` command enables you to remove back-end fibre-channel (FC) switches that were previously added for SNMP monitoring.

Parameters

-switch-name <text> - FC Switch Name

This parameter specifies the name of the back-end FC switch added for monitoring.

Examples

The following command removes 'Cisco_10.226.197.34' switch from monitoring:

```

cluster1::> system switch fibre-channel show
      Symbolic                               Is
Monitor
  Switch      Name      Vendor  Model      Switch WWN      Monitored
Status
-----
-----
Cisco_10.226.197.34
      mcc-cisco-8Gb-fab-4
      Cisco      DS-C9148-16P-K9
      2000547fee78f088 true      ok
mcc-cisco-8Gb-fab-1
      mcc-cisco-8Gb-fab-1
      Cisco      -          -          false      -
mcc-cisco-8Gb-fab-2
      mcc-cisco-8Gb-fab-2
      Cisco      -          -          false      -
mcc-cisco-8Gb-fab-3
      mcc-cisco-8Gb-fab-3
      Cisco      -          -          false      -
4 entries were displayed.
cluster1::> system switch fibre-channel remove -switch-name
Cisco_10.226.197.34
cluster1::> system switch fibre-channel show
      Symbolic                               Is
Monitor
  Switch      Name      Vendor  Model      Switch WWN      Monitored
Status
-----
-----
mcc-cisco-8Gb-fab-4
      mcc-cisco-8Gb-fab-4
      Cisco
      -          -          false      -
mcc-cisco-8Gb-fab-1
      mcc-cisco-8Gb-fab-1
      Cisco      -          -          false      -
mcc-cisco-8Gb-fab-2
      mcc-cisco-8Gb-fab-2
      Cisco      -          -          false      -
mcc-cisco-8Gb-fab-3
      mcc-cisco-8Gb-fab-3
      Cisco      -          -          false      -
4 entries were displayed
cluster1::>

```

system switch fibre-channel show

Display back-end fibre-channel switch information

Availability: This command is available to *cluster* administrators at the *admin* privilege level.

Description

The `system switch fibre-channel show` command displays information about all the back-end fibre-channel (FC) switches in the MetroCluster configuration. The back-end switches must have been previously added for monitoring using the `system switch fibre-channel add` command. If no parameters are specified, the default command displays the following information about the back-end FC switches:

- Switch
- Symbolic Name
- Vendor
- Model
- Switch WWN
- Is Monitored
- Monitor Status

To display detailed profile information about a single back-end FC switch, use the `-switch-name` parameter.

Parameters

{ [-fields <fieldname>,...]

Displays the specified fields for all the back-end FC switches, in column-style output.

| [-connectivity]

Displays the following details about the connectivity from the back-end FC switch to connected entities:

- Port name
- Port operating mode
- Port world wide name
- Peer port world wide name
- Peer type
- Additional information about peer

Displays the following details about the connectivity from the node to the back-end FC switch:

- Node name
- Adapter name
- Switch port name
- Switch port speed
- Adapter type

| [**-cooling**]

Displays the following details about the fans and temperature sensors on the back-end FC switch:

- Fan name
- Fan speed in rotations per minute (RPM)
- Fan operational status
- Temperature sensor name
- Temperature sensor reading in Celsius °C
- Temperature sensor status

| [**-error**]

Displays the errors related to the back-end FC switch.

| [**-port**]

Displays the following details about the back-end FC switch ports:

- Port name
- Port world wide name
- Port administrative status
- Port operational status
- Port operating mode
- Whether SFP is present in the port
- Port speed in gigabits per second (Gbps)
- Port BB credit
- Peer port world wide name

| [**-power**]

Displays the following details about the back-end FC switch power supplies:

- Power supply name
- Power supply serial number
- Power supply operational status

| [**-san-config**]

Displays the following details about the Virtual Storage Area Networks (VSAN) and Zones of the back-end FC switch:

- VSAN identifier
- VSAN name
- VSAN operational status
- Type of load balancing configured for the VSAN
- Whether in-order-delivery set for the VSAN
- Whether the auto power reset of the PSU is enabled

- VAN member switch name and port
- Zone name
- VSAN ID of the zone
- Zone member switch name and port
- Zone member port id
- Zone member port world wide name

| [-sfp]

Displays the following details about the back-end FC switch ports small form-factor pluggable (SFP):

- Port name
- Type of SFP
- SFP transmitter type
- SFP vendor
- SFP part number
- SFP serial number

| [-stats]

Displays the following details about the back-end FC switch ports:

- Port name
- Frames received through the port (Rx Frames)
- Frames transmitted through the port (Tx Frames)
- Octets received through the port (Rx Octets)
- Octets transmitted through the port (Tx Octets)
- Port error frames

| [-instance] }

Displays expanded information about all the back-end FC switches in the system. If a back-end FC switch is specified, then this parameter displays the same detailed information for the back-end FC switch you specify as does the -switch-name parameter.

[-switch-name <text>] - FC Switch Name

Displays information only about the back-end FC switches that match the name you specify.

[-switch-wwn <text>] - Switch World Wide Name

Displays information only about the back-end FC switches that match the switch wwn you specify.

[-switch-symbolic-name <text>] - Switch Symbolic Name

Displays information only about the back-end FC switches that match the switch symbolic name you specify.

[-switch-fabric-name <text>] - Fabric Name

Displays information only about the back-end FC switches that match the switch fabric you specify.

[-domain-id <integer>] - Switch Domain ID

Displays information only about the back-end FC switches that match the switch domain id you specify.

[-switch-role {unknown|primary|subordinate}] - Switch Role in Fabric

Displays information only about the back-end FC switches that match the switch role you specify.

[-snmp-version {SNMPv1|SNMPv2c|SNMPv3}] - SNMP Version

Displays information only about the back-end FC switches that match the switch SNMP version you specify.

[-switch-model <text>] - Switch Model

Displays information only about the back-end FC switches that match the switch model you specify.

[-switch-vendor {unknown|Brocade|Cisco}] - Switch Vendor

Displays information only about the back-end FC switches that match the switch vendor you specify.

[-fw-version <text>] - Switch Firmware Version

Displays information only about the back-end FC switches that match the switch firmware version you specify.

[-serial-number <text>] - Switch Serial Number

Displays information only about the back-end FC switches that match the switch serial number you specify.

[-switch-ipaddress <IP Address>] - Switch IP Address

Displays information only about the back-end FC switches that match the switch IP address you specify.

[-switch-status {unknown|ok|error}] - Switch Status

Displays information only about the back-end FC switches that match the switch status you specify.

[-snmp-community <text>] - (DEPRECATED)-SNMPv2c Community or SNMPv3 Username



This parameter is deprecated and may be removed in a future release of Data ONTAP. Use `-snmp-community-or-username` instead.

Displays information only about the back-end FC switches that match the switch SNMPv2c community or SNMPv3 username you specify.

[-snmp-community-or-username <text>] - SNMPv2c Community or SNMPv3 Username

Displays information only about the back-end FC switches that match the switch SNMPv2c community or SNMPv3 username you specify.

[-profile-data-last-successful-refresh-timestamp {MM/DD/YYYY HH:MM:SS [{+|-}hh:mm]}] - Switch Profile Data Last Successful Refresh Timestamp

Displays information only about the back-end FC switches that match the profile data last successful refresh timestamp you specify.

[-is-monitoring-enabled {true|false}] - Is Monitoring Enabled for Switch

Displays information only about the back-end FC switches that match the switch monitoring value you specify.

[-blades <integer>,...] - Director-Class Switch Blades to Monitor

Displays information only about the back-end FC switches that match the blade value you specify.

[-engine-id <Hex String>] - Engine ID of SNMPv3 Capable Switch

Displays information only about the back-end FC switches that match the SNMPv3 engine-id you specify.

[-psu-name-list <text>,...] - Switch Power Supply Name List

Displays information only about the back-end FC switches that have the power supply units with the names you specify.

[-psu-serial-number-list <text>,...] - Switch Power Supply Serial Number List

Displays information only about the back-end FC switches that have the power supply units with the serial numbers you specify.

[-psu-status-list {unknown|normal|warning|faulty|not-present}] - Switch Power Supply Status List

Displays information only about the back-end FC switches that have the power supply units with the statuses you specify.

[-psu-data-last-successful-refresh-timestamp {MM/DD/YYYY HH:MM:SS [{+|-}hh:mm]}] - Switch Power Supply Data Last Successful Refresh Timestamp

Displays information only about the back-end FC switches that match the power supply unit data last successful refresh timestamp you specify.

[-temp-sensor-name-list <text>,...] - Switch Temperature Sensor Name List

Displays information only about the back-end FC switches that have the temperature sensors with the names you specify.

[-temp-sensor-reading-list <integer>,...] - Switch Temperature Sensor Reading © List

Displays information only about the back-end FC switches that have the temperature sensors with the readings you specify.

[-temp-sensor-status-list {unknown|normal|warning|critical}] - Switch Temperature Sensor Status List

Displays information only about the back-end FC switches that have the temperature sensors with the statuses you specify.

[-temp-data-last-successful-refresh-timestamp {MM/DD/YYYY HH:MM:SS [{+|-}hh:mm]}] - Switch Temperature Sensor Data Last Successful Refresh Timestamp

Displays information only about the back-end FC switches that match the temperature sensor data last successful refresh timestamp you specify.

[-fan-name-list <text>,...] - Switch Fan Name List

Displays information only about the back-end FC switches that match the fans with the names you specify.

[-fan-rpm-list <integer>,...] - Switch Fan Speed (RPM) List

Displays information only about the back-end FC switches that match the fans with the RPM speeds you specify.

[-fan-status-list {unknown|operational|failed|not-operational|not-present}] - Switch Fan Operational Status List

Displays information only about the back-end FC switches that match the fans with the statuses you specify.

[-fan-data-last-successful-refresh-timestamp {MM/DD/YYYY HH:MM:SS [{+|-}hh:mm]}] - Switch Fan Data Last Successful Refresh Timestamp

Displays information only about the back-end FC switches that match the fan data last successful refresh timestamp you specify.

[-vsan-index-list <integer>,...] - Switch VSAN Index List

Displays information only about the back-end FC switches that have the VSANs with the indexes you specify.

[-vsan-name-list <text>,...] - Switch VSAN Name List

Displays information only about the back-end FC switches that have the VSANs with the names you specify.

[-vsan-oper-status-list {up|down}] - Switch VSAN Operational Status List

Displays information only about the back-end FC switches that have the VSANs with the operational statuses you specify.

[-vsan-load-balancing-type-list {src-id-dest-id|src-id-dest-id-ox-id}] - Switch VSAN Load balancing Type List

Displays information only about the back-end FC switches that have the VSANs with the load balancing types you specify.

[-is-vsan-iod-list {true|false}] - Is In-order Delivery Set for VSAN List

Displays information only about the back-end FC switches that have the VSANs with the IOD setting you specify.

[-vsan-data-last-successful-refresh-timestamp {MM/DD/YYYY HH:MM:SS [{+|-}hh:mm]}] - Switch VSAN Data Last Successful Refresh Timestamp

Displays information only about the back-end FC switches that match the VSAN data last successful refresh timestamp you specify.

[-member-switch-name-list <text>,...] - Member Switch List

Displays information only about the back-end FC switches that have the VSANs with the member switch names you specify.

[-member-switch-port-name-list <text>,...] - Member Switch Port Name List

Displays information only about the back-end FC switches that have the VSANs with the member switch port names you specify.

[-vsan-id-list <integer>,...] - Zone VSAN ID List

Displays information only about the back-end FC switches that have the VSANs with the IDs you specify.

[-zone-name-list <text>,...] - Switch Zone Name List

Displays information only about the back-end FC switches that have the zones with the names you specify.

[-zone-member-sw-domain-id-list <integer>,...] - Zone Member Switch Port Domain ID List

Displays information only about the back-end FC switches that have the zones with the member switch domain ids you specify.

[-zone-member-port-name-list <text>,...] - Zone Member Port List

Displays information only about the back-end FC switches that have the zones with the port names you specify.

[-zone-member-port-wwn-list <text>,...] - Zone Member WWPN List

Displays information only about the back-end FC switches that have the zones with the port WWNs you specify.

[-zone-member-port-switch-name-list <text>,...] - Zone Member Switch WWN List

Displays information only about the back-end FC switches that have the zones with the member port hosting switch names you specify.

[-zone-data-last-successful-refresh-timestamp {MM/DD/YYYY HH:MM:SS [{+|-}hh:mm]}]

- Switch Zone Data Last Successful Refresh Timestamp

Displays information only about the back-end FC switches that match the zone data last successful refresh timestamp you specify.

[-zone-member-wwn-list <text>,...] - Zone Member WWN List

Displays information only about the back-end FC switches that have the zones with the member WWNs you specify.

[-zone-member-port-id-list <text>,...] - Zone Member Port ID List

Displays information only about the back-end FC switches that have the zones with the member port ids you specify.

[-port-wwn-list <text>,...] - Switch Port World Wide Name (WWPN) List

Displays information only about the back-end FC switches that have the ports with the WWNs you specify.

[-port-name-list <text>,...] - Switch Port Name List

Displays information only about the back-end FC switches that have the ports with the names you specify.

[-port-admin-status-list {unknown|enabled|disabled}] - Switch Port Admin Status List

Displays information only about the back-end FC switches that have the ports with administrative statuses you specify.

[-port-oper-status-list {unknown|online|offline}] - Switch Port Operational Status List

Displays information only about the back-end FC switches that have the ports with operational statuses you specify.

[-port-mode-list {unknown|auto|F-port|FL-port|E-port|TE-port|U-port|G-port|other|EX-port|D-port|SIM-port|VE-port|AE-port|AF-port}] - Switch Port Mode List

Displays information only about the back-end FC switches that have the ports with the operating modes you specify.

[-port-oper-speed-list <integer>,...] - Switch Port Current Speed (in Gbits/sec) List

Displays information only about the back-end FC switches that have the ports with the operational speeds

you specify.

[-port-bb-credit-list <integer>,...] - Switch Port BB Credit List

Displays information only about the back-end FC switches that have the ports with the BB credits you specify.

[-port-sfp-present-list {true|false}] - Switch Port Is SFP Present List

Displays information only about the back-end FC switches that have the ports with the SFP present values you specify.

[-port-peer-wwpn-list <text>,...] - Switch Port Peer WWPN List

Displays information only about the back-end FC switches that have the ports with the peer port WWPNs you specify.

[-port-data-last-successful-refresh-timestamp {MM/DD/YYYY HH:MM:SS [{+|-}hh:mm]}] - Switch Port Data Last Successful Refresh Timestamp

Displays information only about the back-end FC switches that match the port data last successful refresh timestamp you specify.

[-port-stat-name-list <text>,...] - Switch Port Name List

Displays information only about the back-end FC switches that have the ports with the names you specify.

[-port-tx-frames-list <integer>,...] - Switch Port Transmitted Frame Count List

Displays information only about the back-end FC switches that have the ports with the transmitted frames values you specify.

[-port-rx-frames-list <integer>,...] - Switch Port Received Frame Count List

Displays information only about the back-end FC switches that have the ports with the received frames values you specify.

[-port-tx-octets-list <integer>,...] - Switch Port Total Transmitted Octets List

Displays information only about the back-end FC switches that have the ports with the transmitted octets values you specify.

[-port-rx-octets-list <integer>,...] - Switch Port Total Received Octets List

Displays information only about the back-end FC switches that have the ports with the received octets values you specify.

[-port-frame-error-list <integer>,...] - Switch Port Frame Error Count List

Displays information only about the back-end FC switches that have the ports with the error frame values you specify.

[-port-stat-data-last-successful-refresh-timestamp {MM/DD/YYYY HH:MM:SS [{+|-}hh:mm]}] - Switch Port Stat Data Last Update Timestamp

Displays information only about the back-end FC switches that match the port statistics data last successful refresh timestamp you specify.

[-sfp-port-name-list <text>,...] - Switch Port Name List

Displays information only about the back-end FC switches that have the ports with the names you specify.

[-sfp-type-list {unknown|other|gbic|embedded|glm|gbic-with-serial-id|gbic-without-serial-id|sfp-with-serial-id|sfp-without-serial-id|xfp|x2-short|x2-medium|x2-tall|xpak-short|xpak-medium|xpak-tall|xenpak|sfp-dw-dm|qsfp|x2-dw-dm|gbic-not-installed|small-form-factor}] - Switch Port SFP Type List

Displays information only about the back-end FC switches that have the ports with the SFP types you specify.

[-sfp-tx-type-list {unknown|long-wave-laser|short-wave-laser|long-wave-laser-cost-reduced|electrical|ten-gig-base-sr|ten-gig-base-lr|ten-gig-base-er|ten-gig-base-lx4|ten-gig-base-sw|ten-gig-base-lw|ten-gig-base-ew}] - Switch Port SFP Transmitter Type List

Displays information only about the back-end FC switches that have the ports with the SFP transmitter types you specify.

[-sfp-vendor-list <text>,...] - Switch Port SFP Vendor List

Displays information only about the back-end FC switches that have the ports with the SFP vendors you specify.

[-sfp-part-number-list <text>,...] - Switch Port SFP Part Number List

Displays information only about the back-end FC switches that have the ports with the SFP part numbers you specify.

[-sfp-serial-number-list <text>,...] - Switch Port SFP Serial Number List

Displays information only about the back-end FC switches that have the ports with the SFP serial numbers you specify.

[-sfp-data-last-successful-refresh-timestamp {MM/DD/YYYY HH:MM:SS [{+|-}hh:mm]}] - Switch Port SFP Data Last Successful Refresh Timestamp

Displays information only about the back-end FC switches that match the port SFP data last successful refresh timestamp you specify.

[-switch-error-text-list <text>,...] - Switch Error Text List

Displays information only about the back-end FC switches that have the errors you specify.

[-conn-switch-port-name-list <text>,...] - Switch Port Name List

Displays information only about the back-end FC switches that have the ports with the names you specify.

[-conn-switch-port-mode-list {unknown|auto|F-port|FL-port|E-port|TE-port|U-port|G-port|other|EX-port|D-port|SIM-port|VE-port|AE-port|AF-port}] - Switch Port Operating Mode List

Displays information only about the back-end FC switches that have the ports with the operating modes you specify.

[-conn-switch-port-wwn-list <text>,...] - Switch Port WWN List

Displays information only about the back-end FC switches that have the ports with the WWNs you specify.

[-conn-switch-port-peer-port-wwn-list <text>,...] - Switch Port Peer Port WWN List

Displays information only about the back-end FC switches that have the ports with the peer port WWNs you specify.

[-conn-switch-port-peer-info-list <text>,...] - Switch Port Peer Host & Port Name List

Displays information only about the back-end FC switches that have the ports with the peer information values you specify.

[-conn-data-last-successful-refresh-timestamp {MM/DD/YYYY HH:MM:SS [{+|-}hh:mm]}]

- Switch Connectivity Data Last Successful Refresh Timestamp

Displays information only about the back-end FC switches that match the switch connectivity data last successful refresh timestamp you specify.

[-conn-switch-port-peer-type-list {unknown|bridge|switch|fcp-adapter|fcvi-adapter}] - Switch Port Peer Type List

Displays information only about the back-end FC switches that have the ports connected to the peer types you specify.

[-switch-port-name-list <text>,...] - Switch Port Name List

Displays information only about the back-end FC switches that have the ports with the names you specify.

[-switch-port-speed-list <integer>,...] - Switch Port Speed (in Gbps) List

Displays information only about the back-end FC switches that have the ports with the speeds you specify.

[-node-name-list <nodename>,...] - Node Name List

Displays information only about the back-end FC switches that are connected to the nodes you specify.

[-adapter-name-list <text>,...] - Node Adapter Name List

Displays information only about the back-end FC switches that are connected to the adapters you specify.

[-adapter-port-name-list <text>,...] - Node Adapter Port Name List

Displays information only about the back-end FC switches that are connected to the adapter ports you specify.

[-adapter-type-list {unknown|FCP-Initiator|FC-VI|FCP-Target}] - Node Adapter Type List

Displays information only about the back-end FC switches that are connected to the types of adapters you specify.

[-path-data-last-successful-refresh-timestamp {MM/DD/YYYY HH:MM:SS [{+|-}hh:mm]}]

- Switch Path Data Last Successful Refresh Timestamp

Displays information only about the back-end FC switches that match the node to switch path data last successful refresh timestamp you specify.

[-name-list <text>,...] - Switch Name List

Displays information only about the back-end FC switches that match the names you specify.

[-domain-id-list <integer>,...] - Switch Domain ID List

Displays information only about the back-end FC switches that match the domain ids you specify.

[-wwn-list <text>,...] - Switch WWN List

Displays information only about the back-end FC switches that match the switch WWNs you specify.

[`-role-list {unknown|primary|subordinate}`] - Switch Role in Fabric List

Displays information only about the back-end FC switches that match the switch roles you specify.

[`-address-list <IP Address>,...`] - Switch IP Address List

Displays information only about the back-end FC switches that match the switch IP addresses you specify.

Examples

The following example displays information about all back-end FC switches:

```
cluster::> system switch fibre-channel show
          Symbolic                               Is
Monitor
Switch   Name      Vendor  Model      Switch WWN      Monitored
Status
-----
Cisco_10.226.197.34
          mcc-cisco-8Gb-fab-4
          Cisco    DS-C9148-16P-K9
          2000547fee78f088 true          ok
Cisco_10.226.197.35
          mcc-cisco-8Gb-fab-3
          Cisco    DS-C9148-16P-K9
          2000547fee78f0f0 true          ok
Cisco_10.226.197.36
          mcc-cisco-8Gb-fab-2
          Cisco    DS-C9148-16P-K9
          2000547fee78efb0 true          ok
Cisco_10.226.197.37
          mcc-cisco-8Gb-fab-1
          Cisco    DS-C9148-16P-K9
          2000547fee78f0d8 true          ok

4 entries were displayed.
cluster::>
```

The following example displays connectivity (switch to peer and node to switch) information about all back-end FC switches:

```
cluster::> system switch fibre-channel show -connectivity
Switch Name: Cisco_10.226.197.36
Switch WWN: 2000547fee78efb0
Fabric WWN: 2001547fee78efb1
Vendor: Cisco
Model: DS-C9148-16P-K9
```


Errors: -

Last Update Time: 7/31/2014 14:16:42 -04:00

Connectivity:

Port Info	Name	Port Mode	Port WWN	Peer Port WWN	Peer Type	Peer
-----------	------	-----------	----------	---------------	-----------	------

fc1/1	F-port	2001547fee78efb0	2100001086607d34	unknown		
fc1/3	F-port	2003547fee78efb0	21000024ff3dd9cb	unknown		
fc1/4	F-port	2004547fee78efb0	21000024ff3dda8d	unknown		
fc1/5	F-port	2005547fee78efb0	500a0980009af880	unknown		
fc1/6	F-port	2006547fee78efb0	500a0981009af370	unknown		
fc1/11	TE-port	200b547fee78efb0	200b547fee78f088	switch		
fc1/12	TE-port	200c547fee78efb0	200c547fee78f088	switch		
fc1/13	F-port	200d547fee78efb0	2100001086609e22	unknown		
fc1/15	F-port	200f547fee78efb0	21000024ff3dd91b	unknown		
fc1/16	F-port	2010547fee78efb0	21000024ff3dbef5	unknown		
fc1/17	F-port	2011547fee78efb0	500a0981009afda0	unknown		
fc1/18	F-port	2012547fee78efb0	500a0981009a9160	unknown		
fc1/25	F-port	2019547fee78efb0	21000010866037e8	bridge		
fc1/27	F-port	201b547fee78efb0	21000024ff3dd9d3	fcvi-adapter		
fc1/28	F-port	201c547fee78efb0	21000024ff3dbe3d	fcvi-adapter		
fc1/29	F-port	201d547fee78efb0	500a0980009ae0a0	fcp-adapter		
fc1/30	F-port	201e547fee78efb0	500a0981009aef40	fcp-adapter		

Last Update Time: 7/31/2014 14:26:48 -04:00

Path:

Node	Adapter	Switch Port	Speed Adapter Type
------	---------	-------------	--------------------

```

-----
dpg-mcc-3240-15-a1    0d          fc1/30      4Gbps FCP-Initiator
dpg-mcc-3240-15-a1    fcvi_device_1 fc1/27      8Gbps FC-VI
dpg-mcc-3240-15-a2    0c          fc1/29      4Gbps FCP-Initiator
dpg-mcc-3240-15-a2    fcvi_device_1 fc1/28      8Gbps FC-VI

```

The following command displays cooling (temperature sensors and fans) information about all back-end FC switches:

```

cluster::> system switch fibre-channel show -cooling
Switch Name: Cisco_10.226.197.34
      Switch WWN: 2000547fee78f088
      Fabric WWN: 2001547fee78efb1
      Vendor: Cisco
      Model: DS-C9148-16P-K9
      Errors: -
      Last Update Time: 7/31/2014 14:26:58 -04:00
Fans:
  Fan          RPM Status
  -----
  Fan Module-1    - operational
  Fan Module-2    operational
  Fan Module-3    operational
  Fan Module-4    operational
Last Update Time: 7/31/2014 14:27:10 -04:00
Temperature Sensors:
Sensor          Temp (C) Status
-----
module-1 Outlet    27 normal
module-1 Outlet    29 normal
module-1 Intake    26 normal
module-1 Intake    28 normal

```

The following command displays the error information about all back-end FC switches:

```
cluster::> system switch fibre-channel show -error
```

```
Switch Name: Cisco_10.226.197.34
```

```
Switch WWN: 2000547fee78f088
```

```
-----  
-----  
Cisco_10.226.197.34(2000547fee78f088): Switch is Unreachable over  
Management Network.
```

```
Switch Name: Cisco_10.226.197.35
```

```
Switch WWN: 2000547fee78f0f0
```

```
-----  
-----  
Cisco_10.226.197.35(2000547fee78f0f0): Switch is Unreachable over  
Management Network.
```

```
Switch Name: Cisco_10.226.197.36
```

```
Switch WWN: 2000547fee78efb0
```

```
-----  
-----  
Cisco_10.226.197.36(2000547fee78efb0): Switch is Unreachable over  
Management Network.
```

```
Switch Name: Cisco_10.226.197.37
```

```
Switch WWN: 2000547fee78f0d8
```

```
-----  
-----  
Cisco_10.226.197.37(2000547fee78f0d8): Switch is Unreachable over  
Management Network.
```

```
4 entries were displayed.
```

The following command displays the detailed information about all the back-end FC switches:

```

cluster::> system switch fibre-channel show -instance
Switch Name: Cisco_10.226.197.34
  Switch Domain: -
  Switch Role: -
  Switch WWN: 2000547fee78f088
  Fabric WWN: 2001547fee78efb1
  Vendor: Cisco
  Model: DS-C9148-16P-K9
  Firmware Version: 6.2(1)
  Management IP: 10.226.197.34
  Errors: Cisco_10.226.197.34(2000547fee78f088): Switch is
Unreachable over Management Network.
  Last Update Time: 7/31/2014 14:41:28 -04:00
Fabric:
Switch Name                Domain WWN                Role                IP Address
-----
Cisco_10.226.197.34        0 2000547fee78f088      unknown
10.226.197.34
Cisco_10.226.197.36        0 2000547fee78efb0      unknown
10.226.197.36

```

The following command displays port information about all back-end FC switches:

```

cluster::> system switch fibre-channel show -port
Switch Name: Cisco_10.226.197.34
  Switch WWN: 2000547fee78f088
  Fabric WWN: 2001547fee78efb1
  Vendor: Cisco
  Model: DS-C9148-16P-K9
  Errors: -
  Last Update Time: 7/31/2014 14:26:58 -04:00
Ports:
          Admin      Oper          SFP      Speed      BB
  Port Name Port WWN Status      Status  Port Mode Present (Gbps) Credit
PeerPortWWN
-----
fc1/1      2001547fee78f088
          enabled  online  F-port   true       8       1
2100001086608b76
fc1/2      2002547fee78f088
          enabled  offline auto    true       0       1
fc1/3      2003547fee78f088
          enabled  online  F-port   true       8       1

```

```

21000024ff48edd9
  fc1/4      2004547fee78f088
                enabled online F-port true      8      1
21000024ff3dd981
  fc1/5      2005547fee78f088
                enabled online F-port true      4      1
500a098001057f98
  fc1/6      2006547fee78f088
                enabled online F-port true      4      1
500a098101069778
  fc1/7      2007547fee78f088
                enabled offline auto true      0      1
  fc1/8      2008547fee78f088
                enabled offline auto true      0      1
  fc1/9      2009547fee78f088
                enabled offline auto true      0      1
  fc1/10     200a547fee78f088
                enabled offline auto true      0     32
  fc1/11     200b547fee78f088
                enabled offline TE-port true     8     32
200b547fee78efb0
  fc1/12     200c547fee78f088
                enabled offline TE-port true     8     32
200c547fee78efb0
  fc1/13     200d547fee78f088
                enabled online F-port true      8     32
2100001086609c2e
  fc1/14     200e547fee78f088
                enabled offline auto true      0     32
  fc1/15     200f547fee78f088
                enabled offline auto true      0     32
  fc1/16     2010547fee78f088
                enabled offline auto true      0     32
  fc1/17     2011547fee78f088
                enabled offline auto true      0     32
  fc1/18     2012547fee78f088
                enabled offline auto true      0     32
  fc1/19     2013547fee78f088
                enabled offline auto true      0     32
  fc1/20     2014547fee78f088
                enabled offline auto true      0      1
  fc1/21     2015547fee78f088
                enabled offline auto true      0      1
  fc1/22     2016547fee78f088
                enabled offline auto true      0     32
  fc1/23     2017547fee78f088

```

		enabled	offline	auto	true	0	32
fc1/24	2018547fee78f088						
		enabled	offline	auto	true	0	32
fc1/25	2019547fee78f088						
		enabled	online	F-port	true	8	32
2100001086609c06							
fc1/26	201a547fee78f088						
		enabled	offline	auto	true	0	32
fc1/27	201b547fee78f088						
		enabled	online	F-port	true	8	32
21000024ff48ea93							
fc1/28	201c547fee78f088						
		enabled	online	F-port	true	8	32
21000024ff48eacf							
fc1/29	201d547fee78f088						
		enabled	online	F-port	true	4	32
500a098101484340							
fc1/30	201e547fee78f088						
		enabled	online	F-port	true	4	32
500a09810147e700							
fc1/31	201f547fee78f088						
		enabled	offline	auto	true	0	32
fc1/32	2020547fee78f088						
		enabled	offline	auto	true	0	1
fc1/33	2021547fee78f088						
		enabled	offline	auto	true	0	1
fc1/34	2022547fee78f088						
		enabled	offline	auto	true	0	32
fc1/35	2023547fee78f088						
		enabled	offline	auto	true	0	32
fc1/36	2024547fee78f088						
		enabled	offline	auto	true	0	32
fc1/37	2025547fee78f088						
		enabled	offline	auto	true	0	32
fc1/38	2026547fee78f088						
		enabled	offline	auto	true	0	32
fc1/39	2027547fee78f088						
		enabled	offline	auto	true	0	32
fc1/40	2028547fee78f088						
		enabled	offline	auto	true	0	32
fc1/41	2029547fee78f088						
		enabled	offline	auto	true	0	32
fc1/42	202a547fee78f088						
		enabled	offline	auto	true	0	32
fc1/43	202b547fee78f088						
		enabled	offline	auto	true	0	32

```

fc1/44      202c547fee78f088
             enabled  offline auto    true           0           32
fc1/45      202d547fee78f088
             enabled  offline auto    true           0           32
fc1/46      202e547fee78f088
             enabled  offline auto    true           0           32
fc1/47      202f547fee78f088
             enabled  offline auto    true           0           32
fc1/48      2030547fee78f088
             enabled  offline auto    true           0           0
port-channel 1
             2401547fee78f088
             enabled  offline auto    true           0           0
port-channel 2
             2402547fee78f088
             enabled  offline auto    true           0           0
port-channel 3
             2403547fee78f088
             enabled  offline auto    true           0           0
port-channel 4
             2404547fee78f088
             enabled  offline auto    true           0           0
port-channel 5
             2405547fee78f088
             enabled  offline auto    true           0           0
port-channel 6
             2406547fee78f088
             enabled  offline auto    true           0           0
port-channel 7
             2407547fee78f088
             enabled  offline auto    true           0           0
port-channel 8
             2408547fee78f088
             enabled  offline auto    true           0           0
port-channel 9
             2409547fee78f088
             enabled  offline auto    true           0           0
port-channel 10
             240a547fee78f088
             enabled  offline auto    true           0           0
port-channel 11
             240b547fee78f088
             enabled  offline auto    true           0           0
port-channel 12
             240c547fee78f088
             enabled  offline auto    true           0           0

```

```
sup-fc0          enabled online unknown true      1      0
```

The following command displays power supply unit information about all back-end FC switches:

```
cluster::> system switch fibre-channel show -power
Switch Name: Cisco_10.226.197.34
      Switch WWN: 2000547fee78f088
      Fabric WWN: 2001547fee78efb1
      Vendor: Cisco
      Model: DS-C9148-16P-K9
      Errors: -
      Last Update Time: 7/31/2014 14:41:49 -04:00
Power Supplies:
Power Supply      Serial Number Status
-----
300.00W 110v AC PAC15494TBZ  normal
300.00W 110v AC PAC15494T4D  normal
```

The following command displays san configuration (VSANs and Zones) information about all back-end FC switches:

```
cluster::> system switch fibre-channel show -san-config
Switch Name: Cisco_10.226.197.34
      Switch WWN: 2000547fee78f088
      Fabric WWN: 2001547fee78efb1
      Vendor: Cisco
      Model: DS-C9148-16P-K9
      Errors: -
      Last Update Time: 7/31/2014 14:41:49 -04:00
VSAN Configuration:
Oper
VSAN ID Vsan Name                Status Load Balancing  isIOD
-----
   1 VSAN0001                    up      src-id-dest-id  true
   2 dpg_13_storage              up      src-id-dest-id-ox-id
                                     true
   3 dpg_13_fcvi                down    src-id-dest-id-ox-id
                                     true
  10 dpg_mcc_13_fab1_fcvi        up      src-id-dest-id  true
  20 dpg_mcc_13_fab1_storage     up      src-id-dest-id-ox-id
                                     true
  30 dpg_mcc_13_fab2_fcvi        up      src-id-dest-id  true
  40 VSAN0040                    up      src-id-dest-id  true
  70 dpg_mcc_14_fcvi            up      src-id-dest-id  true
  80 dpg_mcc_14_storage          up      src-id-dest-id-ox-id
```



```

true
110 dpg_mcc_15_fcvi      up      src-id-dest-id-ox-id
true
120 dpg_mcc_15_storage  up      src-id-dest-id-ox-id
true
4094 isolated_vsan      down    src-id-dest-id-ox-id
true

```

VSAN Membership:

```

VSAN ID Switch Name          Switch Port Name
-----
1 Cisco_10.226.197.34 fc1/2
1 Cisco_10.226.197.34 fc1/7
1 Cisco_10.226.197.34 fc1/8
1 Cisco_10.226.197.34 fc1/9
1 Cisco_10.226.197.34 fc1/10
1 Cisco_10.226.197.34 fc1/11
1 Cisco_10.226.197.34 fc1/12
1 Cisco_10.226.197.34 fc1/14
1 Cisco_10.226.197.34 fc1/19
1 Cisco_10.226.197.34 fc1/20
1 Cisco_10.226.197.34 fc1/21
1 Cisco_10.226.197.34 fc1/22
1 Cisco_10.226.197.34 fc1/23
1 Cisco_10.226.197.34 fc1/24
1 Cisco_10.226.197.34 fc1/31
1 Cisco_10.226.197.34 fc1/32
1 Cisco_10.226.197.34 fc1/33
1 Cisco_10.226.197.34 fc1/34
1 Cisco_10.226.197.34 fc1/35
1 Cisco_10.226.197.34 fc1/36
1 Cisco_10.226.197.34 fc1/37
1 Cisco_10.226.197.34 fc1/38
1 Cisco_10.226.197.34 fc1/39
1 Cisco_10.226.197.34 fc1/40
1 Cisco_10.226.197.34 fc1/41
1 Cisco_10.226.197.34 fc1/42
1 Cisco_10.226.197.34 fc1/43
1 Cisco_10.226.197.34 fc1/44
1 Cisco_10.226.197.34 fc1/45
1 Cisco_10.226.197.34 fc1/46
1 Cisco_10.226.197.34 fc1/47
1 Cisco_10.226.197.34 fc1/48
1 Cisco_10.226.197.34 port-channel 1
1 Cisco_10.226.197.34 port-channel 2
1 Cisco_10.226.197.34 port-channel 3
1 Cisco_10.226.197.34 port-channel 4

```

```
1 Cisco_10.226.197.34 port-channel 5
1 Cisco_10.226.197.34 port-channel 6
1 Cisco_10.226.197.34 port-channel 7
1 Cisco_10.226.197.34 port-channel 8
1 Cisco_10.226.197.34 port-channel 9
1 Cisco_10.226.197.34 port-channel 10
1 Cisco_10.226.197.34 port-channel 11
1 Cisco_10.226.197.34 port-channel 12
1 Cisco_10.226.197.36 fc1/2
1 Cisco_10.226.197.36 fc1/7
1 Cisco_10.226.197.36 fc1/8
1 Cisco_10.226.197.36 fc1/9
1 Cisco_10.226.197.36 fc1/10
1 Cisco_10.226.197.36 fc1/11
1 Cisco_10.226.197.36 fc1/12
1 Cisco_10.226.197.36 fc1/14
1 Cisco_10.226.197.36 fc1/19
1 Cisco_10.226.197.36 fc1/20
1 Cisco_10.226.197.36 fc1/21
1 Cisco_10.226.197.36 fc1/22
1 Cisco_10.226.197.36 fc1/23
1 Cisco_10.226.197.36 fc1/24
1 Cisco_10.226.197.36 fc1/26
1 Cisco_10.226.197.36 fc1/31
1 Cisco_10.226.197.36 fc1/32
1 Cisco_10.226.197.36 fc1/33
1 Cisco_10.226.197.36 fc1/34
1 Cisco_10.226.197.36 fc1/35
1 Cisco_10.226.197.36 fc1/36
1 Cisco_10.226.197.36 fc1/37
1 Cisco_10.226.197.36 fc1/38
1 Cisco_10.226.197.36 fc1/39
1 Cisco_10.226.197.36 fc1/40
1 Cisco_10.226.197.36 fc1/41
1 Cisco_10.226.197.36 fc1/42
1 Cisco_10.226.197.36 fc1/43
1 Cisco_10.226.197.36 fc1/44
1 Cisco_10.226.197.36 fc1/45
1 Cisco_10.226.197.36 fc1/46
1 Cisco_10.226.197.36 fc1/47
1 Cisco_10.226.197.36 fc1/48
30 Cisco_10.226.197.34 fc1/3
30 Cisco_10.226.197.34 fc1/4
30 Cisco_10.226.197.36 fc1/3
30 Cisco_10.226.197.36 fc1/4
40 Cisco_10.226.197.34 fc1/1
```

```

40 Cisco_10.226.197.34 fc1/5
40 Cisco_10.226.197.34 fc1/6
40 Cisco_10.226.197.36 fc1/1
40 Cisco_10.226.197.36 fc1/5
40 Cisco_10.226.197.36 fc1/6
70 Cisco_10.226.197.34 fc1/15
70 Cisco_10.226.197.34 fc1/16
70 Cisco_10.226.197.36 fc1/15
70 Cisco_10.226.197.36 fc1/16
80 Cisco_10.226.197.34 fc1/13
80 Cisco_10.226.197.34 fc1/17
80 Cisco_10.226.197.34 fc1/18
80 Cisco_10.226.197.36 fc1/13
80 Cisco_10.226.197.36 fc1/17
80 Cisco_10.226.197.36 fc1/18
110 Cisco_10.226.197.34 fc1/26
110 Cisco_10.226.197.34 fc1/27
110 Cisco_10.226.197.34 fc1/28
120 Cisco_10.226.197.34 fc1/25
120 Cisco_10.226.197.34 fc1/29
120 Cisco_10.226.197.34 fc1/30
120 Cisco_10.226.197.36 fc1/25
120 Cisco_10.226.197.36 fc1/29
120 Cisco_10.226.197.36 fc1/30

```

Last Update Time: 7/31/2014 14:45:40 -04:00

Zone Configuration:

Member	Member	Member				
Zone Name	VSAN ID	Switch Name	Port Name	Port ID	Member	WWN
dpg_mcc_fcvi	30	Cisco_10.226.197.36	fc1/3	-		
\$default_zone\$	30	Cisco_10.226.197.36	fc1/4			
dpg_mcc_storage	40	Cisco_10.226.197.36	fc1/1			
\$default_zone\$	40	Cisco_10.226.197.36	fc1/5			
dpg_mcc_14_fcvi	70	Cisco_10.226.197.36	fc1/15			
\$default_zone\$	70	Cisco_10.226.197.36	fc1/16			
dpg_mcc_14_storage	80	Cisco_10.226.197.34	fc1/13			

```

$default_zone$ 80 Cisco_10.226.197.34
                  fc1/17

dpg_mcc_15_fcvi
                  110 Cisco_10.226.197.36
                  fc1/27

$default_zone$
                  110 Cisco_10.226.197.36
                  fc1/28

dpg_mcc_15_storage
                  120 Cisco_10.226.197.34
                  fc1/25

$default_zone$
                  120 Cisco_10.226.197.34
                  fc1/29

```

The following command displays port SFP information about all back-end FC switches:

```

cluster::> system switch fibre-channel show -sfp
Switch Name: Cisco_10.226.197.34
          Switch WWN: 2000547fee78f088
          Fabric WWN: 2001547fee78efb1
          Vendor: Cisco
          Model: DS-C9148-16P-K9
          Errors: -
          Last Update Time: 7/31/2014 14:41:49 -04:00
SFP:
Port Name Type          Tx Type          Vendor          Part Number Serial
Number
-----
fc1/1      sfp-with-serial-id
          short-wave-laser CISCO-FINISAR
          FTLF8528P2BCV-CS
FNS160629J9
fc1/2      unknown          unknown
fc1/3      sfp-with-serial-id
          short-wave-laser CISCO-FINISAR
          FTLF8528P2BCV-CS
FNS160629H3
fc1/4      sfp-with-serial-id
          short-wave-laser CISCO-FINISAR
          FTLF8528P2BCV-CS

```

```

FNS160629QH
  fc1/5      sfp-with-serial-id
              short-wave-laser CISCO-FINISAR
                                      FTLF8528P2BCV-CS

FNS160628EA
  fc1/6      sfp-with-serial-id
              short-wave-laser CISCO-FINISAR
                                      FTLF8528P2BCV-CS

FNS160629QT
  fc1/7      unknown      unknown
  fc1/8      unknown      unknown
  fc1/9      unknown      unknown
  fc1/10     unknown      unknown
  fc1/11     sfp-with-serial-id
              short-wave-laser CISCO-FINISAR
                                      FTLF8528P2BCV-CS

FNS160629GP
  fc1/12     sfp-with-serial-id
              short-wave-laser CISCO-FINISAR
                                      FTLF8528P2BCV-CS

FNS16061X71
  fc1/13     sfp-with-serial-id
              short-wave-laser CISCO-FINISAR
                                      FTLF8528P2BCV-CS

FNS160629P8
  fc1/14     unknown      unknown
  fc1/15     sfp-with-serial-id
              short-wave-laser CISCO-FINISAR
                                      FTLF8528P2BCV-CS

FNS160629JP
  fc1/16     sfp-with-serial-id
              short-wave-laser CISCO-FINISAR
                                      FTLF8528P2BCV-CS

FNS160628D2
  fc1/17     sfp-with-serial-id
              short-wave-laser CISCO-FINISAR
                                      FTLF8528P2BCV-CS

FNS160629NG

```

fc1/18	sfp-with-serial-id		
		short-wave-laser	CISCO-FINISAR
			FTLF8528P2BCV-CS
FNS160629R1			
fc1/19	unknown	unknown	
fc1/20	unknown	unknown	
fc1/21	unknown	unknown	
fc1/22	unknown	unknown	
fc1/23	sfp-with-serial-id		
		short-wave-laser	CISCO-FINISAR
			FTLF8528P2BCV-CS
FNS160629NC			
fc1/24	sfp-with-serial-id		
		short-wave-laser	CISCO-FINISAR
			FTLF8528P2BCV-CS
FNS160628CX			
fc1/25	sfp-with-serial-id		
		short-wave-laser	CISCO-FINISAR
			FTLF8528P2BCV-CS
FNS160629NZ			
fc1/26	unknown	unknown	
fc1/27	sfp-with-serial-id		
		short-wave-laser	CISCO-FINISAR
			FTLF8528P2BCV-CS
FNS16061XB0			
fc1/28	sfp-with-serial-id		
		short-wave-laser	CISCO-FINISAR
			FTLF8528P2BCV-CS
FNS16061XA6			
fc1/29	sfp-with-serial-id		
		short-wave-laser	CISCO-FINISAR
			FTLF8528P2BCV-CS
FNS16061XA0			
fc1/30	sfp-with-serial-id		
		short-wave-laser	CISCO-FINISAR
			FTLF8528P2BCV-CS
FNS16061X9S			
fc1/31	unknown	unknown	

fc1/32	unknown	unknown	
fc1/33	sfp-with-serial-id		
		short-wave-laser	CISCO-FINISAR
			FTLF8528P2BCV-CS
FNS16061NL7			
fc1/34	unknown	unknown	
fc1/35	sfp-with-serial-id		
		short-wave-laser	CISCO-FINISAR
			FTLF8528P2BCV-CS
FNS160629M8			
fc1/36	sfp-with-serial-id		
		short-wave-laser	CISCO-FINISAR
			FTLF8528P2BCV-CS
FNS160629KH			
fc1/37	unknown	unknown	
fc1/38	unknown	unknown	
fc1/39	unknown	unknown	
fc1/40	unknown	unknown	
fc1/41	unknown	unknown	
fc1/42	unknown	unknown	
fc1/43	unknown	unknown	
fc1/44	unknown	unknown	
fc1/45	unknown	unknown	
fc1/46	unknown	unknown	
fc1/47	unknown	unknown	
fc1/48	unknown	unknown	
port-channel 1			
	unknown	unknown	
port-channel 2			
	unknown	unknown	
port-channel 3			
	unknown	unknown	
port-channel 4			
	unknown	unknown	
port-channel 5			
	unknown	unknown	
port-channel 6			
	unknown	unknown	
port-channel 7			
	unknown	unknown	
port-channel 8			
	unknown	unknown	
port-channel 9			

```

                unknown      unknown
port-channel 10
                unknown      unknown
port-channel 11
                unknown      unknown
port-channel 12
                unknown      unknown
sup-fc0

```

The following command displays port statistics information about all back-end FC switches:

```

cluster::> system switch fibre-channel show -stats
Switch Name: Cisco_10.226.197.34
          Switch WWN: 2000547fee78f088
          Fabric WWN: 2001547fee78efb1
          Vendor: Cisco
          Model: DS-C9148-16P-K9
          Errors: -
          Last Update Time: 7/31/2014 14:41:49 -04:00
Port Statistics:

```

Error	Port Name	Rx Frames	Rx Octets	Tx Frames	Tx Octets
0	fc1/1	2116207233	3710682580	3906335374	859905888
0	fc1/2	1	208	1	208
0	fc1/3	3238899002	903116292	3079548736	4014304952
0	fc1/4	1888758418	1643379900	2434821325	2997002344
0	fc1/5	3719731908	1808138824	1878240211	3421335100
0	fc1/6	26444430347	1042009564	249190625	2003353056
0	fc1/7	1	228	1	228
0	fc1/8	1	156	1	156
0	fc1/9	1	148	1	148
0	fc1/10	1	224	1	224

0					
	fc1/11	3617142898	4129927136	39089396	2595464620
0					
	fc1/12	473603889	1560909460	2797562521	2833496016
0					
	fc1/13	1852255936	1091902804	180309704	1769859928
0					
	fc1/14	1	140	1	140
0					
	fc1/15	4997082	3519688264	4283938	3370856432
0					
	fc1/16	4995287	3519577592	4282173	3370732136
0					
	fc1/17	55146756	178045212	1733567096	3030415436
0					
	fc1/18	63005788	4287094736	1726651844	2640371212
0					
	fc1/19	1	200	1	200
0					
	fc1/20	1	104	1	104
0					
	fc1/21	1	108	1	108
0					
	fc1/22	1	108	1	108
0					
	fc1/23	1	164	1	164
0					
	fc1/24	1	216	1	216
0					
	fc1/25	2810698819	1611009260	471527156	1900246656
0					
	fc1/26	1	104	1	104
0					
	fc1/27	4165019838	887421780	3848122102	2581891136
0					
	fc1/28	58607737	1015197080	101621078	3482734024
0					
	fc1/29	4266270960	222242144	3766674764	2400640552
0					
	fc1/30	3984658378	1443835508	152597387	678837848
0					
	fc1/31	1	220	1	220
0					
	fc1/32	1	120	1	120
0					
	fc1/33	1	132	1	132

0	fc1/34	1	144	1	144
0	fc1/35	1	160	1	160
0	fc1/36	1	104	1	104
0	fc1/37	1	148	1	148
0	fc1/38	1	184	1	184
0	fc1/39	1	160	1	160
0	fc1/40	1	136	1	136
0	fc1/41	1	196	1	196
0	fc1/42	1	128	1	128
0	fc1/43	1	168	1	168
0	fc1/44	1	212	1	212
0	fc1/45	1	136	1	136
0	fc1/46	1	224	1	224
0	fc1/47	1	104	1	104
0	fc1/48	1	104	1	104

Related Links

- [system switch fibre-channel add](#)

Copyright Information

Copyright © 2022 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.