■ NetApp

ucm events

ONTAP 9.13.1 EMS reference

NetApp February 12, 2024

This PDF was generated from https://docs.netapp.com/us-en/ontap-ems-9131/ucm-disabled-events.html on February 12, 2024. Always check docs.netapp.com for the latest.

Table of Contents

ucm events	
ucm.disabled events	
ucm.mode events	
ucm.type events	

ucm events

ucm.disabled events

ucm.disabled.slot

Severity

ERROR

Description

This message occurs when the Unified Target Adapter reads an invalid mode from flash memory. The valid supported modes are FC (0x1) or CNA (0x2). The adapter's flash memory has failed or has been corrupted. The adapter will be disabled.

Corrective Action

Contact NetApp technical support.

Syslog Message

Disabling adapter %s because invalid mode %d was read from nonvolatile memory.

Parameters

adapter (STRING): Name of the affected adapter. **faultyMode** (INT): Value of the mode read from flash memory.

ucm.mode events

ucm.mode.autoReboot

Severity

INFORMATIONAL

Description

This message occurs when the FC adapter or converged networking adapter is reconfigured from a backup. The reconfiguration requires a reboot to enable correct adapter operation. The reboot occurs automatically.

Corrective Action

A change in the FC adapter or converged networking adapter mode configuration has occurred. The system is being rebooted to enable the new adapter configuration.

Syslog Message

Rebooting for adapters %s to become available.

Parameters

adapters (STRING): Affected adapters.

ucm.mode.changed

Severity

INFORMATIONAL

Description

This message occurs when the user changes the personality mode on a configurable adapter. The new mode will take effect on the next controller reboot.

Corrective Action

(None).

Syslog Message

Personality mode has changed to %s on adapter %s. Reboot the controller for the changes to take effect.

Parameters

mode (STRING): Current adapter mode. **adapter** (STRING): Name of the associated adapter.

ucm.mode.needsReboot

Severity

ERROR

Description

This message occurs when the FC adapter or converged networking adapter is unable to automatically initiate a reboot after it reconfigures from a backup. The reconfiguration requires a reboot to enable correct adapter operation.

Corrective Action

Perform a planned takeover and giveback on this controller node to enable the new adapter configuration.

Syslog Message

The adapter %s was unable to automatically initiate a reboot after reconfiguration from the backup.

Parameters

adapters (STRING): Affected adapter or adapters.

ucm.type events

ucm.type.changed

Severity

INFORMATIONAL

Description

This message occurs when the user changes the FC-4 type on a configurable adapter. The new type will take effect on the next controller reboot.

Corrective Action

(None).

Syslog Message

FC-4 type has changed to %s on adapter %s. Reboot the controller for the changes to take effect.

Parameters

type (STRING): Current adapter type. **adapter** (STRING): Name of the associated adapter.

Copyright information

Copyright © 2024 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at http://www.netapp.com/TM are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.