



## **ucm events**

### **ONTAP 9.14.1 EMS reference**

NetApp  
February 12, 2024

# Table of Contents

- ucm events ..... 1
- ucm.disabled events ..... 1
- ucm.mode events ..... 1
- ucm.type events ..... 2

# ucm events

## ucm.disabled events

### ucm.disabled.slot

#### Severity

ERROR

#### Description

This message occurs when the Unified Target Adapter reads an invalid mode from flash memory. The valid supported modes are FC (0x1) or CNA (0x2). The adapter's flash memory has failed or has been corrupted. The adapter will be disabled.

#### Corrective Action

Contact NetApp technical support.

#### Syslog Message

Disabling adapter %s because invalid mode %d was read from nonvolatile memory.

#### Parameters

**adapter** (STRING): Name of the affected adapter.

**faultyMode** (INT): Value of the mode read from flash memory.

## ucm.mode events

### ucm.mode.autoReboot

#### Severity

INFORMATIONAL

#### Description

This message occurs when the FC adapter or converged networking adapter is reconfigured from a backup. The reconfiguration requires a reboot to enable correct adapter operation. The reboot occurs automatically.

#### Corrective Action

A change in the FC adapter or converged networking adapter mode configuration has occurred. The system is being rebooted to enable the new adapter configuration.

#### Syslog Message

Rebooting for adapters %s to become available.

#### Parameters

**adapters** (STRING): Affected adapters.

### ucm.mode.changed

#### Severity

INFORMATIONAL

## Description

This message occurs when the user changes the personality mode on a configurable adapter. The new mode will take effect on the next controller reboot.

## Corrective Action

(None).

## Syslog Message

Personality mode has changed to %s on adapter %s. Reboot the controller for the changes to take effect.

## Parameters

**mode** (STRING): Current adapter mode.

**adapter** (STRING): Name of the associated adapter.

## ucm.mode.needsReboot

### Severity

ERROR

### Description

This message occurs when the FC adapter or converged networking adapter is unable to automatically initiate a reboot after it reconfigures from a backup. The reconfiguration requires a reboot to enable correct adapter operation.

### Corrective Action

Perform a planned takeover and giveback on this controller node to enable the new adapter configuration.

### Syslog Message

The adapter %s was unable to automatically initiate a reboot after reconfiguration from the backup.

### Parameters

**adapters** (STRING): Affected adapter or adapters.

## ucm.type events

### ucm.type.changed

#### Severity

INFORMATIONAL

#### Description

This message occurs when the user changes the FC-4 type on a configurable adapter. The new type will take effect on the next controller reboot.

#### Corrective Action

(None).

#### Syslog Message

FC-4 type has changed to %s on adapter %s. Reboot the controller for the changes to take effect.

## Parameters

**type** (STRING): Current adapter type.

**adapter** (STRING): Name of the associated adapter.

## Copyright information

Copyright © 2024 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

## Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.