



flexcache events

ONTAP EMS reference

NetApp
November 19, 2025

Table of Contents

flexcache events	1
flexcache.attrib events	1
flexcache.attrib.sync.failed	1
flexcache.attrib.sync.passed	1
flexcache.attrib.sync.warn	1
flexcache.autogrow events	2
flexcache.autogrow.fail	2
flexcache.cacheconnected events	2
flexcache.cacheConnected	2
flexcache.cachedisconnected events	3
flexcache.cacheDisconnected	3
flexcache.capacity events	3
flexcache.capacity.exceeded	4
flexcache.cfg events	4
flexcache.cfg.refresh.failed	4
flexcache.conf events	5
flexcache.conf.refreshFailed	5
flexcache.config events	5
flexcache.config.sync.failed	5
flexcache.encryption events	6
flexcache.encryption.mismatch.with.origin	6
flexcache.featuredisabled events	6
flexcache.featureDisabled	6
flexcache.mcc events	6
flexcache.mcc.refresh.failed	6
flexcache.name events	7
flexcache.name.sync.failed	7
flexcache.nearly events	8
flexcache.nearly.full	8
flexcache.origin events	8
flexcache.origin.config.sync.failed	8
flexcache.origin.size.sync.failed.disconnect.mode	8
flexcache.origin.size.sync.failed.for.cache.cluster	9
flexcache.origin.size.sync.failed.for.cache.volume	9
flexcache.origincleanup events	10
flexcache.origincleanup.fail	10
flexcache.origincleanup.retry	10
flexcache.originconnected events	11
flexcache.originConnected	11
flexcache.origindisconnected events	11
flexcache.originDisconnected	11
flexcache.originfull events	12
flexcache.originFull	12

flexcache.originfull_1 events	12
flexcache.originFull_1	12
flexcache.softevict events	13
flexcache.softEvict.failed	13
flexcache.softEvict.success	13

flexcache events

flexcache.attrib events

flexcache.attrib.sync.failed

Severity

ALERT

Description

This message occurs when when syncing properties between an origin of a FlexCache volume and its FlexCache volume fails, and due to which FlexCache volume may not be able to proceed with accurate data.

Corrective Action

Use the "volume flexcache sync-properties" command on the cluster hosting the FlexCache volume to sync the origin volume properties with the FlexCache volume.

Syslog Message

Failed to sync the FlexCache configuration for cluster %s in Vserver %s hosting FlexCache volume %s.

Parameters

cacheCluster (STRING): Name of the cluster hosting the FlexCache volume.
cacheVserver (STRING): Name of the Vserver hosting the FlexCache volume.
cacheVolName (STRING): Name of FlexCache volume for which sync failed.

flexcache.attrib.sync.passed

Severity

NOTICE

Description

This message occurs when origin of a FlexCache volume properties sync succeeds for all connected FlexCache volumes.

Corrective Action

(None).

Syslog Message

Sync of origin of a FlexCache volume %s in Vserver %s succeeded for all connected FlexCache volumes.

Parameters

originVolName (STRING): Origin of a FlexCache volume.
originVserver (STRING): Name of the Vserver hosting the origin of a FlexCache volume.

flexcache.attrib.sync.warn

Severity

NOTICE

Description

This message occurs when syncing properties between an origin of a FlexCache volume and its FlexCache volume fails, and the sync operation will be retried.

Corrective Action

Use the "volume flexcache sync-properties" command on the cluster hosting the FlexCache volume to sync the origin volume properties with the FlexCache volume.

Syslog Message

Failed to sync the FlexCache configuration for cluster %s in Vserver %s hosting FlexCache volume %s. Operation will be retried.

Parameters

cacheCluster (STRING): Name of the cluster hosting the FlexCache volume.

cacheVserver (STRING): Name of the Vserver hosting the FlexCache volume.

cacheVolName (STRING): Name of FlexCache volume for which sync failed.

flexcache.autogrow events

flexcache.autogrow.fail

Severity

ERROR

Description

This message occurs when automatically growing a FlexCache volume fails because the total cluster-wide FlexCache provisioned space has exceeded the licensed limit.

Corrective Action

To increase the licensed capacity, install a new license in the cluster.

Syslog Message

Autosize of FlexCache volume '%s%s%s' failed because the total cluster-wide FlexCache provisioned space has exceeded the licensed limit in the cluster %s.

Parameters

vol (STRING): Volume name.

app (STRING): Application UUID.

volident (STRING): Unique identifier of the volume when the volume name by itself is insufficient.

cluster_uuid (STRING): UUID of the Cluster.

flexcache.cacheconnected events

flexcache.cacheConnected

Severity

INFORMATIONAL

Description

This message occurs when a FlexCache® origin volume establishes communication with its cache volume.

Corrective Action

No action required.

Syslog Message

FlexCache origin volume with Name %s MSID %lu on Vserver Name %s UUID %s is connected with FlexCache volume with Vserver UUID %s and MSID %lu.

Parameters

originVolumeName (STRING): Origin Volume name.
originMsid (LONGINT): Master data set identifier (MSID) of the origin volume.
originVserverName (STRING): Vserver name of the origin volume.
originVserverUuid (STRING): Vserver UUID of the origin volume.
cacheVserverUuid (STRING): Vserver UUID of the FlexCache volume.
cacheMsid (LONGINT): MSID of the FlexCache volume.

flexcache.cachedisconnected events

flexcache.cacheDisconnected

Severity

EMERGENCY

Description

This message occurs when a FlexCache® origin volume cannot communicate with its cache volume. The cache volume might therefore present stale data to its clients until the connection is reestablished.

Corrective Action

Verify that the origin volume can connect with the FlexCache volume. If both volumes are within the same cluster, check the health of the owning nodes by using the "system node show" command. If the volumes are on different clusters, ensure that the intercluster LIFs on each cluster can connect by using the "network ping" command.

Syslog Message

FlexCache origin volume with Name %s MSID %lu on Vserver Name %s UUID %s is disconnected from FlexCache volume with Vserver UUID %s and MSID %lu.

Parameters

originVolumeName (STRING): Origin Volume name.
originMsid (LONGINT): Master data set identifier (MSID) of the origin volume.
originVserverName (STRING): Vserver name of the origin volume.
originVserverUuid (STRING): Vserver UUID of the origin volume.
cacheVserverUuid (STRING): Vserver UUID of the FlexCache volume.
cacheMsid (LONGINT): MSID of the FlexCache volume.

flexcache.capacity events

flexcache.capacity.exceeded

Severity

ERROR

Description

This message occurs when the total cluster-wide FlexCache provisioned space has exceeded the licensed limit.

Corrective Action

To increase the licensed capacity, install a new license in the cluster.

Syslog Message

The total cluster-wide FlexCache provisioned space has exceeded the licensed limit. Cluster id: %s, Current usage: %s, Licensed capacity: %s.

Parameters

cluster_uuid (STRING): UUID of the Cluster.

used_capacity (STRING): Total FlexCache provisioned space in the cluster.

licensed_capacity (STRING): FlexCache licensed capacity.

flexcache.cfg events

flexcache.cfg.refresh.failed

Severity

ERROR

Description

This message occurs when a FlexCache® configuration refresh operation fails during cluster takeover or giveback, or when there is a connection state update triggered when origin or cache moves from connected state to disconnected state, or the other way round. Data access through FlexCache volumes might be impacted as a result.

Corrective Action

First, verify that the two SVMs in question are peered by using the "vserver peer show" command. Next, enter the "flexcache config-refresh -peer-vserver <peer-vserver> -peer-volume <peer-volume> -peer-endpoint-type <peer-endpoint-type>" command on a node within the cluster that directly manages the peer endpoint.

Syslog Message

FlexCache configuration refresh fails on peer SVM %s for peer volume %s and peer endpoint %s on cluster %s.

Parameters

peeredVserverUuid (STRING): Universal unique identifier (UUID) of the peered storage virtual machine (SVM).

peerVolumeName (STRING): Name of the peer volume.

peerEndPointType (STRING): Peer endpoint type.

clusterUuid (STRING): UUID of the cluster with the peer endpoint.

localVserverUuid (STRING): UUID of the local SVM.

flexcache.conf events

flexcache.conf.refreshFailed

Severity

ALERT

Description

This message occurs when FlexCache configuration refresh fails. If this event happens, FlexCache will not be able to reach to its origin which will cause FlexCache to serve only cached data. This message occurs at most once every 30 minutes.

Corrective Action

Use the "volume flexcache config-refresh" command on the cluster hosting the FlexCache volume to refresh the origin volume configuration on FlexCache volume.

Syslog Message

Failed to refresh FlexCache configuration for peer vserver UUID %s and peer volume MSID %lu.
isPeerOrigin : %u.

Parameters

peerVserverUuid (STRING): Peer vserver UUID in string format for which refresh failed.
peerVolMsid (LONGINT): Peer volume MSID for which refresh failed.
isPeerOrigin (INT): Origin peer volume or cache peer volume for which refresh failed.

flexcache.config events

flexcache.config.sync.failed

Severity

ERROR

Description

This message occurs when the FlexCache volume expand operation fails to synchronize the FlexCache configuration information between the newly created constituent volume and the origin cluster.

Corrective Action

Use the "volume flexcache config-refresh" command on the origin cluster to update the FlexCache configuration.

Syslog Message

Volume expand failed to create the cache configuration for FlexCache volume "%s" in Vserver "%s" on the origin of the FlexCache cluster. Error: %s.

Parameters

cacheVolName (STRING): Name of the FlexCache volume.
cacheVserver (STRING): Name of the Vserver hosting the FlexCache volume.
errorString (STRING): Error string.

flexcache.encryption events

flexcache.encryption.mismatch.with.origin

Severity

ALERT

Description

This message occurs when a plaintext FlexCache volume has been created for an encrypted origin volume.

Corrective Action

(None).

Syslog Message

A plaintext FlexCache volume "%s" in Vserver "%s" has been created for origin volume "%s" in Vserver "%s".

Parameters

originVolumeName (STRING): Origin Volume Name.

cacheVolumeName (STRING): Cache Volume Name.

cacheVserverName (STRING): Cache Vserver Name.

originVserverName (STRING): Origin Vserver Name.

flexcache.featuredisabled events

flexcache.featureDisabled

Severity

ERROR

Description

This message occurs when an attempt is made to mount a FlexCache volume. FlexCache is no longer supported, please remove any remaining FlexCache volumes left over from upgrading the cluster.

Corrective Action

Delete all FlexCache volumes in the cluster. They can be displayed by using the "volume flexcache show" command.

Syslog Message

(None).

Parameters

volume (STRING): FlexCache volume involved.

flexcache.mcc events

flexcache.mcc.refresh.failed

Severity

ERROR

Description

This message occurs when a FlexCache® configuration refresh operation fails during MetroCluster(tm) switchover and switchback. Data access through FlexCache volumes might be impacted as a result.

Corrective Action

First, verify that the two Vservers in question are peered by using the "vserver peer show" command. Next, enter the "flexcache config-refresh -peer-server <peer-vserver> -peer-volume <peer-volume> -peer-endpoint-type <peer-endpoint-type>" command on a node within the cluster that directly manages the peer endpoint.

Syslog Message

FlexCache configuration refresh failed on peer Vserver %s for peer volume %s and peer endpoint %s on cluster %s.

Parameters

peeredVserverUuid (STRING): UUID of the peered Vserver.

peerVolumeName (STRING): Name of the peer volume.

peerEndPointType (STRING): Peer endpoint type.

clusterUuid (STRING): UUID of the cluster with the peer endpoint.

localVserverUuid (STRING): UUID of the local Vserver.

flexcache.name events

flexcache.name.sync.failed

Severity

ERROR

Description

This message occurs when the FlexCache® volume rename operation fails to synchronize the FlexCache name information to the origin cluster. Because of this failure, the "volume flexcache origin show-caches" command shows the old FlexCache volume name for the origin relationship.

Corrective Action

Use the "volume flexcache sync-properties" command on the FlexCache cluster to update the FlexCache name on the origin cluster. Make sure that the FlexCache cluster and the origin of the FlexCache cluster are running on the same ONTAP® build.

Syslog Message

Volume rename failed to update the new FlexCache volume "%s" on Vserver "%s" to the origin of the FlexCache cluster. Error: %s.

Parameters

cacheVolName (STRING): Name of the FlexCache volume.

cacheVserver (STRING): Name of the Vserver hosting the FlexCache volume.

errorString (STRING): Error string.

flexcache.nearly events

flexcache.nearly.full

Severity

ERROR

Description

This message occurs when the total cluster-wide FlexCache provisioned space has nearly reached the licensed limit.

Corrective Action

To increase the licensed capacity, install a new license in the cluster.

Syslog Message

The total cluster-wide FlexCache provisioned space has nearly reached the licensed limit. Cluster id: %s, Current usage: %s, Licensed capacity: %s.

Parameters

cluster_uuid (STRING): UUID of the Cluster.

used_capacity (STRING): Total FlexCache provisioned space in the cluster.

licensed_capacity (STRING): FlexCache licensed capacity.

flexcache.origin events

flexcache.origin.config.sync.failed

Severity

ERROR

Description

This message occurs when the origin of the FlexCache volume expand operation fails to synchronize the configuration information between the newly created constituent volume and the cache cluster.

Corrective Action

Use the "volume flexcache config-refresh" command on the cache cluster to update the origin of the FlexCache configuration.

Syslog Message

Volume expand failed to create the origin configuration for the origin of the FlexCache volume "%s" in Vserver "%s" on the FlexCache cluster. Error: %s.

Parameters

originVolName (STRING): Name of the origin of the FlexCache volume.

cacheVserver (STRING): Name of the Vserver hosting the origin of the FlexCache volume.

errorString (STRING): Error string.

flexcache.origin.size.sync.failed.disconnected.mode

Severity

ERROR

Description

This message occurs when syncing the size property of the origin volume between an origin of a FlexCache volume and its FlexCache volume fails because the cluster containing the FlexCache volume is not reachable.

Corrective Action

Make sure that the cluster containing the FlexCache volume is reachable. Make sure that the FlexCache cluster and the origin of the FlexCache cluster are running on the same ONTAP® build.

Syslog Message

Failed to sync origin size property for FlexCache Cluster "%s". Error: %s

Parameters

originClusterUuid (STRING): Cache Cluster UUID.

errorString (STRING): Error string.

flexcache.origin.size.sync.failed.for.cache.cluster**Severity**

ERROR

Description

This message occurs when syncing the size property of the origin volume between an origin of a FlexCache volume and its FlexCache volume fails because we encountered some error on the cluster containing the FlexCache volume.

Corrective Action

Look for an EMS on the cache cluster and take the corrective action needed. Make sure that the FlexCache cluster and the origin of the FlexCache cluster are running on the same ONTAP® build.

Syslog Message

Failed to sync origin size property for Cache Cluster "%s".

Parameters

cacheClusterUuid (STRING): Cache Cluster UUID.

flexcache.origin.size.sync.failed.for.cache.volume**Severity**

ERROR

Description

This message occurs when syncing the size property of the origin volume between an origin of a FlexCache volume and its FlexCache volume fails, and the sync operation will be retried.

Corrective Action

Take the appropriate action depending on the error message. Make sure that the FlexCache cluster and the origin of the FlexCache cluster are running on the same ONTAP® build.

Syslog Message

Failed to sync origin size property for FlexCache volume "%s" in Vserver "%s". Error: %s.

Parameters

volumeName (STRING): Cache Volume Name.
vserverName (STRING): Cache Vserver Name.
errorString (STRING): Error string.

flexcache.origincleanup events

flexcache.origincleanup.fail

Severity

ERROR

Description

This message occurs when the origin of a FlexCache® volume cleanup job fails to clean up the origin volume. All future FlexCache operations on the origin volume will fail.

Corrective Action

Use the "volume flexcache origin cleanup-cache-relationship -force-retry true" command on the origin cluster to cleanup origin of a FlexCache volume. If the problem persists then contact technical support for assistance.

Syslog Message

Origin volume cleanup job failed to clean up the origin volume of the FlexCache volume %s in Vserver %s.

Parameters

originVolName (STRING): Name of the origin volume of the FlexCache volume.
originVserver (STRING): Name of the Vserver hosting the origin of a FlexCache volume.

flexcache.origincleanup.retry

Severity

ERROR

Description

This message occurs when the RAL cleanup at the origin volume of a FlexCache® volume fails due to timeout. All future FlexCache operations on the origin volume will fail.

Corrective Action

Use the "volume flexcache origin cleanup-cache-relationship -force-retry true" command on the origin cluster to cleanup origin of a FlexCache volume. If the problem persists then contact technical support for assistance.

Syslog Message

RAL cleanup incomplete for the origin volume of the FlexCache volume %s in Vserver %s.

Parameters

originVolName (STRING): Name of the origin volume of the FlexCache volume.
originVserver (STRING): Name of the Vserver hosting the origin of a FlexCache volume.

flexcache.originconnected events

flexcache.originConnected

Severity

INFORMATIONAL

Description

This message occurs when a FlexCache® volume establishes communication with its origin volume.

Corrective Action

No action required.

Syslog Message

FlexCache volume with Name %s MSID %lu on Vserver Name %s UUID %s is connected with its origin volume with Vserver UUID %s and MSID %lu.

Parameters

cacheVolumeName (STRING): Volume Name of the FlexCache volume.

cacheMsid (LONGINT): MSID of the FlexCache volume.

cacheVserverName (STRING): Vserver Name of the FlexCache volume.

cacheVserverUuid (STRING): Vserver UUID of the FlexCache volume.

originVserverUuid (STRING): Vserver UUID of the origin volume.

originMsid (LONGINT): Master data set identifier (MSID) of the origin volume.

flexcache.origindisconnected events

flexcache.originDisconnected

Severity

EMERGENCY

Description

This message occurs when a FlexCache® volume cannot communicate with its origin volume. The cache volume might therefore present stale data to its clients. Client I/O to the cache volume might also not appear to respond if the client is requesting data that has not been cached.

Corrective Action

Verify that the FlexCache volume can connect with its origin volume. If both volumes are within the same cluster, check the health of the owning nodes by using the "system node show" command. If the volumes are on different clusters, ensure that the intercluster LIFs on each cluster can connect by using the "network ping" command.

Syslog Message

FlexCache volume with Name %s MSID %lu on Vserver Name %s UUID %s is disconnected from its origin volume with Vserver UUID %s and MSID %lu.

Parameters

cacheVolumeName (STRING): Volume Name of the FlexCache volume.

cacheMsid (LONGINT): MSID of the FlexCache volume.

cacheVserverName (STRING): Vserver Name of the FlexCache volume.

cacheVserverUuid (STRING): Vserver UUID of the FlexCache volume.
originVserverUuid (STRING): Vserver UUID of the origin volume.
originMsid (LONGINT): Master data set identifier (MSID) of the origin volume.

flexcache.originfull events

flexcache.originFull

Severity

ALERT

Description

This message occurs when a FlexCache® origin volume cannot serve data to cache volume because origin volume is full. The cache volume might therefore not be able to serve data to its clients until the origin has free space.

Corrective Action

Ensure that the origin volume has free space.

Syslog Message

FlexCache origin volume with Name %s MSID %lu on Vserver Name %s UUID %s may not be able to serve data to FlexCache volume with Vserver UUID %s and MSID %lu because origin volume is full.

Parameters

originVolumeName (STRING): Origin Volume name.
originMsid (LONGINT): Master data set identifier (MSID) of the origin volume.
originVserverName (STRING): Vserver name of the origin volume.
originVserverUuid (STRING): Vserver UUID of the origin volume.
cacheVserverUuid (STRING): Vserver UUID of the FlexCache volume.
cacheMsid (LONGINT): MSID of the FlexCache volume.

flexcache.originfull_1 events

flexcache.originFull_1

Severity

ALERT

Description

This message occurs when a FlexCache® volume cannot retrieve data from its origin volume because origin volume is full. Client I/O to the cache volume might not appear to respond if the client is requesting data that has not been cached.

Corrective Action

Ensure that the origin volume has free space.

Syslog Message

FlexCache volume with Name %s MSID %lu on Vserver Name %s UUID %s may not be able to retrieve data from its origin volume with Vserver UUID %s and MSID %lu because origin volume is full.

Parameters

cacheVolumeName (STRING): Volume Name of the FlexCache volume.

cacheMsid (LONGINT): MSID of the FlexCache volume.

cacheVserverName (STRING): Vserver Name of the FlexCache volume.

cacheVserverUuid (STRING): Vserver UUID of the FlexCache volume.

originVserverUuid (STRING): Vserver UUID of the origin volume.

originMsid (LONGINT): Master data set identifier (MSID) of the origin volume.

flexcache.softevict events

flexcache.softEvict.failed

Severity

ERROR

Description

This message occurs when soft evicting a cache volume fails. The cache volume might therefore present stale data to its clients.

Corrective Action

(None).

Syslog Message

Soft eviction of constituent DSID %lu failed.

Parameters

constituentDsid (LONGINT): Constituent's DSID.

flexcache.softEvict.success

Severity

INFORMATIONAL

Description

This message occurs on successfully soft evicting the cache volume.

Corrective Action

No Action Required.

Syslog Message

Constituent DSID %lu is successfully soft evicted.

Parameters

constituentDsid (LONGINT): Constituent's DSID.

Copyright information

Copyright © 2025 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.