



vserver events

ONTAP EMS reference

NetApp
November 18, 2025

Table of Contents

vserver events	1
vserver.config events	1
vserver.config.createDirectoryFailed	1
vserver.config.nameService.createDirectoryFailed	1
vserver.dest events	1
vserver.dest.volume.modify.failed	1
vserver.ipspace events	2
vserver.ipspace.lookupfailed	2
vserver.ipspace.notAvailable	2
vserver.ipspace.notfound	3
vserver.mcc events	3
vserver.mcc.repl.failed	3
vserver.mcc.start.failed	4
vserver.mcc.stop.failed	4
vserver.name events	4
vserver.name.conflict.local	5
vserver.name.conflict.peer	5
vserver.oper events	5
vserver.oper.state.down	5
vserver.peering events	6
vserver.peering.relCreated	6
vserver.peering.relDeleted	6
vserver.peering.relRenamed	7
vserver.peering.relResumed	7
vserver.peering.relSuspended	8
vserver.peering.remCallFailed	8
vserver.rbac events	8
vserver.rbac.alias.command	8
vserver.rbac.replicateRole	9
vserver.rename events	9
vserver.rename.fail.peer	9
vserver.rootvolume events	10
vserver.rootVolume.full	10
vserver.rootVolume.noNodes	10
vserver.rootVolume.offline	11
vserver.start events	11
vserver.start.failed	11
vserver.start.succeeded	11
vserver.stop events	12
vserver.stop.failed	12
vserver.stop.succeeded	12
vserver.storage events	12
vserver.storage.full	13

vserver.storage.nearlyFull	13
vserver.storage.size.breached	13
vserver.storage.size.mismatch	14
vserver.storage.threshold	14
vserver.vol events	15
vserver.vol.max.size.reduced	15
vserver.vol.modify.on.dest.failed	15
vserver.volume events	15
vserver.volume.nonhomogen	15
vserver.vsd events	16
vserver.vsd.adt.romode	16
vserver.vsd.adt.supported	16

vserver events

vserver.config events

vserver.config.createDirectoryFailed

Severity

ERROR

Description

This message occurs when the Vserver create operation cannot create the Vserver-specific configuration directory.

Corrective Action

Ensure that, the root volume File System(FS) is available and has enough space to create Vserver-specific configuration directory.

Syslog Message

"Failed to create the Vserver-specific configuration directory for Vserver %s. Reason: The root volume is full or not available."

Parameters

vserver_name (STRING): Name of the Vserver.

vserver.config.nameService.createDirectoryFailed

Severity

ERROR

Description

This message occurs when Vserver-specific name-service configuration directory cannot be created.

Corrective Action

Ensure that, the root volume File System(FS) is available and has enough space to create Vserver-specific name-service configuration directory.

Syslog Message

Failed to create the Vserver-specific name-service configuration directory for Vserver %s. Reason: The root volume is full or not available.

Parameters

vserver_name (STRING): Name of the Vserver.

vserver.dest events

vserver.dest.volume.modify.failed

Severity

ERROR

Description

This message occurs after you have modified either the size or maximum autosize of a source volume in a SnapMirror sync relationship and the maximum autosize at the destination DP volume (which is in a storage limit enabled SVM) fails to modify automatically. The failure occurs because the destination cluster is unreachable.

Corrective Action

Verify network connectivity between the local cluster and the peer cluster. Check the cluster peer EMS messages for more information.

Syslog Message

Maximum-autosize of destination volume "%s" which is in a storage-limit enabled SVM "%s" was not modified.

Parameters

vserver_name (STRING): Name of the storage virtual machine (SVM).
volume_name (STRING): Name of the volume.

vserver.ipspace events

vserver.ipspace.lookupfailed

Severity

ALERT

Description

This message occurs in a MetroCluster® configuration when attempting to replicate a "vserver create" operation onto the destination cluster, but the configured IPspace cannot be found on the destination cluster. This error can occur due to networking subsystem issues on the destination cluster.

Corrective Action

The operation is retried several times. Use the "metrocluster vserver show" command to verify that the configuration state of the Vserver becomes healthy. If the configuration state does not become healthy after an hour, contact NetApp technical support for assistance.

Syslog Message

Vserver "%s" cannot be created because IPspace information related to the Vserver is not currently available.

Parameters

vserver_name (STRING): Name of the Vserver that is being replicated.

vserver.ipspace.notAvailable

Severity

ERROR

Description

This message occurs in a MetroCluster® configuration when attempting to replicate a "vserver create" operation onto the destination cluster, but the IPspace name for creation of the Vserver has not yet propagated to the destination cluster. This error can occur due to networking subsystem issues on the

source cluster.

Corrective Action

The operation is retried several times. Use the "metrocluster vserver show" command to verify that the configuration state of the Vserver becomes healthy. If the configuration state does not become healthy after an hour, contact NetApp technical support for assistance.

Syslog Message

Vserver "%s" cannot be created because IPspace information related to the Vserver is not currently available.

Parameters

vserver_name (STRING): Name of the Vserver that is being replicated.

vserver.ipspace.notfound

Severity

ERROR

Description

This message occurs in a Metrocluster configuration when we are attempting to replicate a Vserver create operation on to the destination cluster and the Ipspace provided does not exist on the destination cluster.

Corrective Action

Create an Ipspace with the same name as that of the ipspace used for creating the Vserver on the source cluster.

Syslog Message

Vserver %s cannot be created as ipspace %s does not exist.

Parameters

vserver_name (STRING): Name of the vserver we are trying to replicate.

ipspace_name (STRING): Name of the ipspace on which we are trying to create the Vserver.

vserver.mcc events

vserver.mcc.repl.failed

Severity

ERROR

Description

This message occurs in a MetroCluster™ configuration when an attempt to create a Vserver on the partner cluster fails.

Corrective Action

Run the 'metrocluster vserver show' command, and follow the corrective action specified in the output.

Syslog Message

Vserver %s cannot be created on the partner cluster.

Parameters

vserver_name (STRING): Name of the Vserver.

vserver.mcc.start.failed

Deprecated

Deprecated as of version 9.2.0 as this EMS is not required.

Severity

ALERT

Description

This message occurs when a sync-destination Vserver fails to get started during a MetroCluster(tm) switchover operation or a sync-source Vserver fails to get started during a MetroCluster switchback operation.

Corrective Action

Start the Vserver which failed to get started during MetroCluster switchover/switchback.

Syslog Message

Failed to start the Vserver %s during Metrocluster switchover/switchback operation.

Parameters

vserver_name (STRING): Name of the vserver which failed to get started.

vserver.mcc.stop.failed

Deprecated

Deprecated as of version 9.2.0 as this EMS is not required.

Severity

ERROR

Description

This message occurs when a sync-destination Vserver fails to get stopped during a MetroCluster switchback operation.

Corrective Action

Stop the Vserver which failed to get stopped during MetroCluster switchback.

Syslog Message

Failed to stop the Vserver %s during MetroCluster switchback operation.

Parameters

vserver_name (STRING): Name of the vserver which failed to get stopped during MetroCluster switchback.

vserver.name events

vserver.name.conflict.local

Severity

NOTICE

Description

This message occurs when use of the "vserver rename" command creates a Vserver name conflict in the local cluster, and the local cluster resolves the name conflict by incorporating the Vserver Unique Identifier (UID) into the name. This creates a new and unique Vserver name, but that new name is not the name specified in the original rename command.

Corrective Action

None

Syslog Message

Vserver name conflict in local cluster with existing local or peer Vserver %s. Local cluster has assigned unique Vserver name %s

Parameters

vserver_name (STRING): Vserver name that caused the renaming conflict.

unique_vserver_name (STRING): Unique Vserver name that Local cluster has assigned.

vserver.name.conflict.peer

Severity

NOTICE

Description

This message occurs when use of the "vserver rename" command creates a Vserver name conflict in the peer cluster, and the peer cluster resolves the name conflict by incorporating the Vserver Unique Identifier (UID) into the name. This creates a new and unique Vserver name, but that new name is not the name specified in the original rename command.

Corrective Action

None

Syslog Message

Vserver name conflict occurred in peer cluster %s with existing local or peer Vserver %s. Peer cluster has assigned unique Vserver name %s.

Parameters

peer_cluster (STRING): Peer cluster name.

vserver_name (STRING): Vserver name that caused the renaming conflict.

unique_vsname (STRING): Unique Vserver name that Peer cluster has assigned.

vserver.oper events

vserver.oper.state.down

Severity

ERROR

Description

This message occurs when the system detects a cluster reboot on a Disaster Recovery Source (MetroCluster(tm) configuration or Vserver DR). All Vservers that are a source of the disaster-recovery relationship are brought down operationally if the destination is activated. This is done to prevent an identity clash in case the Secondary site is brought up.

Corrective Action

If the destination Vservers or site are already brought up, nothing needs to be done. Otherwise, if the source is brought down, then unlock the Vservers by using the "vserver unlock" command, and then bring them up operationally by using the "vserver start" command.

Syslog Message

The Vservers on cluster %s that are in a DR relationship have been operationally brought down.

Parameters

cluster_name (STRING): Name of the source cluster.

vserver.peering events

vserver.peering.relCreated

Severity

NOTICE

Description

This message occurs when the Vserver peer relationship is established.

Corrective Action

(None).

Syslog Message

Vserver peer relationship between %s and %s is established having remote peer Vserver name %s.

Parameters

vserver (STRING): Name of the Vserver for which a peer is created.

peer_vserver_localname (STRING): Name locally used for the peer Vserver created.

peer_vserver_remotename (STRING): Actual name of the peer Vserver.

vserver.peering.relDeleted

Severity

INFORMATIONAL

Description

This message occurs when the Vserver peer relationship is deleted successfully.

Corrective Action

(None).

Syslog Message

"Vserver peer relationship between %s and %s is deleted."

Parameters

vserver (STRING): Name of the Vserver.

peer_vserver (STRING): Name of the peer Vserver.

vserver.peering.relRenamed**Severity**

NOTICE

Description

This message occurs when the storage virtual machine (SVM) peer relationship is modified.

Corrective Action

(None).

Syslog Message

The SVM peer relationship between local SVM "%s" (UUID "%s") and peer SVM "%s" (UUID "%s") is modified. The peer cluster changed from "%s" (ID "%s") to "%s" (ID "%s").

Parameters

local_vserver_name (STRING): Local SVM name.

local_vserver_uuid (STRING): Local SVM universally unique identifier (UUID).

peer_vserver_name (STRING): Peer SVM name.

peer_vserver_uuid (STRING): Peer SVM UUID.

old_peer_cluster_name (STRING): Old peer cluster name.

old_peer_cluster_id (STRING): Old peer cluster ID.

new_peer_cluster_name (STRING): New peer cluster name.

new_peer_cluster_id (STRING): New peer cluster ID.

vserver.peering.relResumed**Severity**

INFORMATIONAL

Description

This message occurs when the Vserver peer relationship is resumed successfully.

Corrective Action

(None).

Syslog Message

"Vserver peer relationship between %s and %s is resumed."

Parameters

vserver (STRING): Name of the Vserver.

peer_vserver (STRING): Name of the peer Vserver.

vserver.peering.relSuspended

Severity

INFORMATIONAL

Description

This message occurs when the Vserver peer relationship is suspended successfully.

Corrective Action

(None).

Syslog Message

"Vserver peer relationship between %s and %s is suspended."

Parameters

vserver (STRING): Name of the Vserver.

peer_vserver (STRING): Name of the peer Vserver.

vserver.peering.remCallFailed

Severity

ERROR

Description

This message occurs when any Vserver peering command fails because of a communication failure with a remote system.

Corrective Action

Use the "network interface show" command to verify that intercluster logical interfaces (LIFs) on both clusters are up. Use the "cluster peer health show -bypass-cache true" command to verify that cluster peering is healthy. If you want to retry a failed delete, suspend, or resume operation, consider using the "force" option, which bypasses network connectivity issues.

Syslog Message

"Vserver peering command '%s' failed. Reason: %s. Vserver peering states might be inconsistent."

Parameters

command (STRING): Vserver peering command.

reason (STRING): Reason for failure.

vserver.rbac events

vserver.rbac.alias.command

Deprecated

ONTAP now directly creates a role entry on the target of the alias.

Severity

ERROR

Description

This message occurs when a custom role associated with a Storage Virtual Machine (SVM) has an aliased command directory associated with it. SVM custom roles must be associated with actual command directories and commands, not aliases to them. The aliased commands associated with SVM custom roles will not be available under SVM context.

Corrective Action

Delete the role on the SVM, and then re-create it using the actual command.

Syslog Message

The custom role %s is associated with alias command - %s on SVM %s. Create role with actual command - %s.

Parameters

role_name (STRING): Name of the role for which creation failed.
alias_name (STRING): Name of the alias that is associated with the role.
vserver_name (STRING): Name of the SVM.
non_alias_name (STRING): Name of the actual command.

vserver.rbac.replicateRole**Severity**

ERROR

Description

This message occurs when replication of a role is failed on a Vserver because the command directory associated with it is an alias.

Corrective Action

Delete the role on the source Vserver, and then re-create it using the non-alias target. Then retry the operation again.

Syslog Message

Failed to replicate the role %s associated with the alias %s on Vserver %s.

Parameters

role_name (STRING): Name of the role for which creation failed.
alias_name (STRING): Name of the alias that is associated with the role.
vserver_name (STRING): Name of the Vserver.

vserver.rename events**vserver.rename.fail.peer****Severity**

ERROR

Description

This message occurs when the "vserver rename" command fails to update the peer Vserver name on the peer cluster in a Vserver peer relationship.

Corrective Action

Use the (privilege: advanced) "vserver peer repair-peer-name" command in the local cluster to update the peer Vserver name in the Vserver peer relationships present on the peer cluster.

Syslog Message

Failed to update new peer Vserver %s name on peer cluster %s.

Parameters

vserver_name (STRING): Vserver name that caused the update attempt to fail.
peer_cluster (STRING): Peer cluster name.

vserver.rootvolume events

vserver.rootVolume.full

Severity

ERROR

Description

This message occurs when there is no space left on Vserver root Volume.

Corrective Action

Increase the size of the root volume. To increase the size of the volume, run the 'volume modify' command.

Syslog Message

Vserver %s has its root volume full.

Parameters

vserver_name (STRING): Name of the vserver with root volume full.

vserver.rootVolume.noInodes

Severity

ERROR

Description

This message occurs when there are no inodes available on Vserver root volume.

Corrective Action

Increase the size of the root volume. To increase the size of the volume, run the 'volume modify' command.

Syslog Message

Vserver %s has no inodes in its root volume.

Parameters

vserver_name (STRING): Name of the vserver with no inodes left in root volume.

vserver.rootVolume.offline

Severity

ERROR

Description

This message occurs when the Vserver root Volume is offline or not accessible for read/write operations.

Corrective Action

Make the vservers root volume online.

Syslog Message

Vserver %s has its root volume offline.

Parameters

vserver_name (STRING): Name of the vservers for which the root volume is not accessible.

vserver.start events

vserver.start.failed

Severity

ERROR

Description

This message occurs when a 'vservers start' operation fails due to failure to start either a logical interface (LIF) or a protocol for the Vserver specified.

Corrective Action

Ensure that the network configuration, LIF details, and protocol configurations are correct, then try to start the Vserver again.

Syslog Message

Failed in Vserver start due to failure to start either a LIF or a protocol for the Vserver %s (UUID: %s).

Parameters

vserver_name (STRING): Name of the Vserver.

vserver_uuid (STRING): UUID of the Vserver.

vserver.start.succeeded

Severity

INFORMATIONAL

Description

This message occurs when a 'vservers start' operation succeeds.

Corrective Action

(None).

Syslog Message

Vserver %s (UUID: %s) started successfully.

Parameters

vserver_name (STRING): Name of the Vserver.

vserver_uuid (STRING): UUID of the Vserver.

vserver.stop events

vserver.stop.failed

Severity

ERROR

Description

This message occurs when a 'vserver stop' operation fails due to failure to stop either a logical interface (LIF) or a protocol for the Vserver specified.

Corrective Action

Ensure that the network configuration, LIF details, and protocol configurations are correct, then try to stop the Vserver again.

Syslog Message

Failed in Vserver stop due to failure to stop either a LIF or a protocol for the Vserver %s (UUID: %s).

Parameters

vserver_name (STRING): Name of the Vserver.

vserver_uuid (STRING): UUID of the Vserver.

vserver.stop.succeeded

Severity

INFORMATIONAL

Description

This message occurs when a 'vserver stop' operation succeeds.

Corrective Action

(None).

Syslog Message

Vserver %s (UUID: %s) stopped successfully.

Parameters

vserver_name (STRING): Name of the Vserver.

vserver_uuid (STRING): UUID of the Vserver.

vserver.storage events

vserver.storage.full

Severity

ERROR

Description

This message occurs when the Storage of Vserver is full.

Corrective Action

Increase the available size of Vserver either by raising storage-limit or by downsizing or deleting volumes.

Syslog Message

Vserver "%s" is full by consuming the storage limit "%s".

Parameters

vserver_name (STRING): Vserver name for which the storage is full.

storage_limit (STRING): The storage-limit for the Vserver.

vserver.storage.nearlyFull

Severity

ALERT

Description

This message occurs when the Vserver storage size exceeds 95% of the storage limit.

Corrective Action

Increase the available size of Vserver either by raising storage-limit or by downsizing or deleting volumes.

Syslog Message

Vserver "%s" with current storage size of "%s" has exceeded "95%%" of storage limit "%s".

Parameters

vserver_name (STRING): Vserver name for which the storage size has exceeded 95% of the storage limit.

storage_size (STRING): The storage used size of the Vserver.

storage_limit (STRING): The storage-limit for the Vserver.

vserver.storage.size.breached

Severity

NOTICE

Description

This message occurs when tenant has exceeded the capacity quota allotted to the Vserver. The checker automatically deselects this mismatch and attempts a fix. To see details including the updated size use "vserver show -fields storage-limit,storage-allocated,storage-reserved" command.

Corrective Action

(None).

Syslog Message

Vserver "%s" size "%s" has exceeded storage capacity quota of "%s".

Parameters

vserver_name (STRING): The Vserver whose size exceeded the capacity quota allotted to the tenant.

vserver_size (STRING): Vserver's size allotted up to a point to the tenant.

capacity_limit (STRING): Capacity limit allotted to the Vserver.

vserver.storage.size.mismatch

Severity

NOTICE

Description

This message occurs when the Vserver's size allotted to the tenant up to a point does not match sum of all the volume's provisioned size that can be used to enforce Vserver capacity quota. The checker automatically deselects this mismatch and attempts a fix. To see details including the updated size use "vserver show -fields storage-limit,storage-allocated,storage-reserved" command.

Corrective Action

(None).

Syslog Message

Vserver "%s" size allocated to the tenant up to a point "%s" does not match sum of all the volume's provisioned size "%s".

Parameters

vserver_name (STRING): Vserver for which the size allotted to the tenant up to a point does not match sum of all the volume's provisioned size.

vserver_size (STRING): Vserver's size allotted up to a point to the tenant.

provisioned_size (STRING): Sum of all the volume's provisioned size in Vserver.

vserver.storage.threshold

Severity

ALERT

Description

This message occurs when the Vserver storage size exceeds the storage-limit-threshold-alert value.

Corrective Action

Increase the available size of Vserver either by raising storage-limit or by downsizing or deleting volumes.

Syslog Message

Vserver "%s" with current storage size of "%s" has exceeded "%s%%" of storage limit "%s".

Parameters

vserver_name (STRING): Vserver name for which the storage size has exceeded the storage-limit-threshold-alert value.

storage_size (STRING): The storage used size of the Vserver.

storage_limit_threshold (STRING): The storage-limit-threshold-alert value of the Vserver.

storage_limit (STRING): The storage-limit for the Vserver.

vserver.vol events

vserver.vol.max.size.reduced

Severity

NOTICE

Description

This message occurs when the size or the maximum autosize of a destination DP volume in a storage-limit enabled SVM is reduced, which is part of a SnapMirror relationship.

Corrective Action

(None).

Syslog Message

Maximum-autosize or size of destination volume "%s" in the storage-limit enabled SVM "%s" is reduced.

Parameters

volume_name (STRING): Name of the storage virtual machine (SVM).

vserver_name (STRING): Name of the volume.

vserver.vol.modify.on.dest.failed

Severity

ERROR

Description

This message occurs when an attempt to modify either the size or maximum autosize of a source volume in a SnapMirror sync relationship fails because it fails to modify the size or maximum autosize at the destination DP volume which is in a storage limit enabled SVM.

Corrective Action

Check the reason for destination volume modify failure and take appropriate actions.

Syslog Message

Maximum-autosize or size of destination volume "%s" which is in a storage-limit enabled SVM "%s" was not modified. Reason: "%s"

Parameters

volume_name (STRING): Name of the storage virtual machine (SVM).

vserver_name (STRING): Name of the volume.

reason (STRING): Error message.

vserver.volume events

vserver.volume.nonhomogen

Severity

NOTICE

Description

This message occurs when a volume is placed on nonhomogeneous aggregates, because of errors on homogeneous aggregates, such as max volumes is reached or aggregate is not home.

Corrective Action

(None).

Syslog Message

Volume "%s" in Vserver "%s" was placed on nonhomogeneous aggregate "%s".

Parameters

vserver_name (STRING): Name of the Vserver.

volume_name (STRING): Name of the Volume.

aggr_name (STRING): Name of the aggregate used for volume provisioning.

vserver.vsdrr events

vserver.vsdrr.adt.romode

Severity

ERROR

Description

This message occurs in Async Vserver-DR setup, when an auditing-configured Vserver is starting up in Read-Only (RO) mode.

Corrective Action

None.

Syslog Message

The Vserver %s is in Async Vserver-DR (RO) mode. Therefore, auditing cannot happen on this Vserver.

Parameters

vserver_name (STRING): Name of the Vserver that is in Async Vserver-DR (RO) mode.

vserver.vsdrr.adt.supported

Severity

INFORMATIONAL

Description

This message occurs during asynchronous Vserver disaster recovery setup, when the status of Vserver-Disaster Recovery Read-Only mode of a Vserver configured for auditing is set to false when a SnapMirror® relationship breaks.

Corrective Action

None.

Syslog Message

Vserver %s is configured with auditing support in Async Vserver-Disaster Recovery setup.

Parameters

vserver_name (STRING): Name of the Vserver that is in Async Vserver-Disaster Recovery Read only mode.

Copyright information

Copyright © 2025 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.