



mgmt events

ONTAP EMS reference

NetApp
May 13, 2026

Table of Contents

- mgmt events 1
 - mgmt.aba events 1
 - mgmt.aba.abortCloneParent 1
 - mgmt.aba.abortMirrorMove 1
 - mgmt.aba.move.unbalanced 1
 - mgmt.aba.moveVolume 2
 - mgmt.aba.noMovableVols 2
 - mgmt.aba.rcmd.unbalanced 3
 - mgmt.aba.recommendMove 3
 - mgmt.abv events 4
 - mgmt.abv.service.filling 4
 - mgmt.abv.service.full 4
 - mgmt.abv.volume.filling 5
 - mgmt.abv.volume.full 6
 - mgmt.cifserver events 6
 - mgmt.cifserver.failure 6
 - mgmt.cifserver.success 6
 - mgmt.cifsshare events 7
 - mgmt.cifsshare.duplicatesid 7
 - mgmt.cifsshare.failure 7
 - mgmt.cifsshare.success 8
 - mgmt.cifssuperuser events 8
 - mgmt.cifssuperuser.failure 8
 - mgmt.cifssuperuser.success 9
 - mgmt.cifssymlink events 9
 - mgmt.cifssymlink.failure 9
 - mgmt.cifssymlink.success 9
 - mgmt.cr events 10
 - mgmt.cr.constituent.added 10
 - mgmt.cr.constituent.deleted 10
 - mgmt.cr.constituent.failure 11
 - mgmt.cr.constituent.resized 11
 - mgmt.cr.job.failed 12
 - mgmt.cr.job.succeeded 12
 - mgmt.cr.missing.footprint 13
 - mgmt.exovol events 13
 - mgmt.exovol.transfer.failed 13
 - mgmt.exovol.xfer.dest.no.space 14
 - mgmt.fpolicy events 14
 - mgmt.fpolicy.policy.disabled 14
 - mgmt.fpolicy.policy.enabled 14
 - mgmt.fpolicy.priv.failed 15
 - mgmt.fpolicy.replay.failed 15

mgmt.fsecurity events	16
mgmt.fsecurity.failure	16
mgmt.fsecurity.policy.EACCES	16
mgmt.fsecurity.success	16
mgmt.keymgr events	17
mgmt.keymgr.keyid.noDelete	17
mgmt.mcc events	17
mgmt.mcc.fsecurity.cfig.err	17
mgmt.nfslisteners events	18
mgmt.nfslisteners.failure	18
mgmt.nfslisteners.success	18
mgmt.nfsserver events	18
mgmt.nfsserver.failure	19
mgmt.nfsserver.success	19
mgmt.rst events	19
mgmt.rst.fail.dst.compressed	19
mgmt.s3 events	20
mgmt.s3.sm.license.near.limit	20
mgmt.s3.sm.license.over.limit	20
mgmt.sm events	21
mgmt.sm.cant.clear.autolnit	21
mgmt.sm.cg.force.delete	21
mgmt.sm.cgRel.limit	22
mgmt.sm.cgVolRel.limit	22
mgmt.sm.dp.depr.msg	22
mgmt.sm.ep.cant.clr.autolnit	23
mgmt.sm.expand.overprovision	23
mgmt.sm.keymgr.not.setup	24
mgmt.sm.license.near.limit	24
mgmt.sm.license.not.found	24
mgmt.sm.license.over.limit	25
mgmt.sm.obj.fanout.unsupp	25
mgmt.sm.protect.internal.err	26
mgmt.sm.rel.exists	26
mgmt.sm.rename.ndu.error	27
mgmt.sm.restore.fail	27
mgmt.sm.schd.invalid	27
mgmt.sm.schd.unavailable	28
mgmt.sm.snap.create.fail	28
mgmt.sm.src.policy.creat	29
mgmt.sm.src.vol.not.found	29
mgmt.sm.sync.break.dp.error	30
mgmt.sm.v2.upgrade.chk	30
mgmt.sm.vol.place.create.err	31
mgmt.sm.vol.style.unsupp	31

mgmt.sm.vsr.s.not.peered	32
mgmt.smbc events	32
mgmt.smbc.config.not.repl	32
mgmt.smbc.proxy.create.fail	33
mgmt.snapmir events	33
mgmt.snapmir.dst.invalidType	33
mgmt.snapmir.fl.bkt.del.fail	34
mgmt.snapmir.fl.crt.cleanup	34
mgmt.snapmir.fl.failover.rmt	35
mgmt.snapmir.fl.mod.rmt.fail	35
mgmt.snapmir.fl.rstr.bkt.cln	35
mgmt.snapmir.fl.rstr.cln.all	36
mgmt.snapmir.fl.rstr.lnk.cln	36
mgmt.snapmir.init.fail	37
mgmt.snapmir.ls.catchup.fail	37
mgmt.snapmir.resync.fail	37
mgmt.snapmir.schd.trans.fail	38
mgmt.snapmir.schd.trans.overrun	38
mgmt.snapmir.unexpected.err	39
mgmt.snapmir.update.fail	39
mgmt.vdr events	39
mgmt.vdr.fsecurity.cfig.err	39
mgmt.vopl events	40
mgmt.vopl.cleanup.failed	40
mgmt.vopl.del.staleLunMaps	41
mgmt.vopl.fail.rstart.nosvol	41
mgmt.vopl.fail.status.entry	41
mgmt.vopl.fail.status.modify	42
mgmt.vopl.lun.quiesce.migr	42
mgmt.vopl.lun.unquiesce.migr	43
mgmt.vopl.made.status.entry	43
mgmt.vopl.move.badDstVol	44
mgmt.vopl.move.badSourceVol	44
mgmt.vopl.move.bytesLeft	44
mgmt.vopl.move.cantCrtDstVol	45
mgmt.vopl.move.cantCrtSrcSnp	45
mgmt.vopl.move.cantDstCncl	46
mgmt.vopl.move.cantReadCfg	46
mgmt.vopl.move.cantSaveToRdb	46
mgmt.vopl.move.cantSrcCncl	47
mgmt.vopl.move.ClnupFldDIVol	47
mgmt.vopl.move.cntRdDstDAttr	48
mgmt.vopl.move.cntRdPostCutoverSrcDAttr	48
mgmt.vopl.move.cntRdSrcDAttr	48
mgmt.vopl.move.cut.entryFail	49

mgmt.vopl.move.cutover.deferred	49
mgmt.vopl.move.cutover.deferred.wait	50
mgmt.vopl.move.cutover.failed	50
mgmt.vopl.move.cutoverMod	51
mgmt.vopl.move.done	51
mgmt.vopl.move.dstPrepareFld	52
mgmt.vopl.move.findSnpDltFld	52
mgmt.vopl.move.getNextSnapFld	52
mgmt.vopl.move.gtDstSSLstFld	53
mgmt.vopl.move.gtSnpTgSrcFld	53
mgmt.vopl.move.gtSrcSSLstFld	53
mgmt.vopl.move.gtSSTgsDstFld	54
mgmt.vopl.move.has.clones	54
mgmt.vopl.move.invlDXfrState	55
mgmt.vopl.move.jobIgnoreQuit	55
mgmt.vopl.move.jobQuit	55
mgmt.vopl.move.last.upd.fail	56
mgmt.vopl.move.mark.source.reapable.failed	56
mgmt.vopl.move.memAllocFld	57
mgmt.vopl.move.moveModlgr	57
mgmt.vopl.move.nosnapspace	58
mgmt.vopl.move.nospace	58
mgmt.vopl.move.parent.online	59
mgmt.vopl.move.queryDstFld	59
mgmt.vopl.move.querySrcFld	59
mgmt.vopl.move.refVldbFld	60
mgmt.vopl.move.restart.failed	60
mgmt.vopl.move.snpNtDeletd	61
mgmt.vopl.move.source.cleanup.failed	61
mgmt.vopl.move.srcVAttrGtFld	62
mgmt.vopl.move.srcVolInconst	62
mgmt.vopl.move.srcVolOffln	62
mgmt.vopl.move.srcVolRstrctd	63
mgmt.vopl.move.srcVolTemp	63
mgmt.vopl.move.stSnpTgDstFld	64
mgmt.vopl.move.voplIntrnlErr	64
mgmt.vopl.move.XferNotFound	64
mgmt.vopl.rehost.failed	65
mgmt.vopl.rehost.succeeded	65
mgmt.vopl.rstart.fail.jstate	66
mgmt.vopl.rstart.retry.fail	66
mgmt.vopl.vmsi.fail.no.entry	67

mgmt events

mgmt.aba events

mgmt.aba.abortCloneParent

Severity

INFORMATIONAL

Description

This message occurs when Auto Balance Aggregate initiates a move of a volume that was then changed to a FlexClone® parent.

Corrective Action

(None).

Syslog Message

The Auto Balance Aggregate initiated move of volume %s from aggregate %s to aggregate %s was aborted when the move job detected that the volume was now a FlexClone parent.

Parameters

volume (STRING): Name of the volume.

srcAggregate (STRING): Name of the source aggregate.

dstAggregate (STRING): Name of the destination aggregate.

mgmt.aba.abortMirrorMove

Severity

INFORMATIONAL

Description

This message occurs when Auto Balance Aggregate initiates a move of a volume that was then changed to be part of a SnapMirror® relationship".

Corrective Action

(None).

Syslog Message

The Auto Balance Aggregate initiated move of volume %s from aggregate %s to aggregate %s was aborted when the move job detected that the volume was now part of a SnapMirror relationship.

Parameters

volume (STRING): Name of the volume.

srcAggregate (STRING): Name of the source aggregate.

dstAggregate (STRING): Name of the destination aggregate.

mgmt.aba.move.unbalanced

Severity

INFORMATIONAL

Description

This message occurs when Auto Balance Aggregate is running in auto mode and identifies an aggregate in which the used space has exceeded the high-water mark. Auto Balance Aggregate attempts to trigger moves to lower the aggregate's usage below the threshold.

Corrective Action

Use the "volume move show" command to monitor active moves.

Syslog Message

Auto Balance Aggregate has detected that aggregate %s has exceeded the threshold of %jd. The aggregate currently shows a usage of %jd.

Parameters

aggr (STRING): Name of the aggregate.
usedSpace (LONGINT): Aggregate's used space.
threshold (LONGINT): Configured high-water mark.

mgmt.aba.moveVolume

Severity

INFORMATIONAL

Description

This message occurs when Auto Balance Aggregate identifies a volume that can be moved to alleviate a low-space condition with an aggregate. The move will be initiated by Auto Balance Aggregate and can be monitored by using the "volume move show" command.

Corrective Action

(None).

Syslog Message

Auto Balance Aggregate is moving volume %s in Vserver %s from aggregate %s to aggregate %s. Upon completion of the move, the source aggregate is projected to be %d percent full and the destination aggregate is projected to be %d percent full.

Parameters

volume (STRING): Volume that will be moved.
vserver (STRING): Vserver hosting the volume.
srcAggr (STRING): Aggregate the volume will be moved from.
dstAggr (STRING): Aggregate the volume will be moved to.
afterSourceSpace (INT): Projected percentage of used space in the source aggregate after the move is performed.
afterDestSpace (INT): Projected percentage of used space in the destination aggregate after the move is performed.

mgmt.aba.noMovableVols

Severity

ERROR

Description

This message occurs when Auto Balance Aggregate identifies an aggregate that is unbalanced but cannot identify a volume to move from that aggregate. Some of the more common reasons this can occur for an aggregate are that its volumes are being heavily accessed, its volumes have been recently moved, or Auto Balance Aggregate cannot identify an aggregate to move to.

Corrective Action

Manually inspect the aggregate to determine whether any volumes can be moved.

Syslog Message

Auto Balance Aggregate could not find any volumes to move from aggregate %s. The aggregate's calculated space is %jd and the threshold is %jd.

Parameters

aggregate (STRING): Name of the aggregate.

usedSize (LONGINT): Recorded used size.

threshold (LONGINT): Configured threshold.

mgmt.aba.rcmd.unbalanced

Severity

ERROR

Description

This message occurs when Auto Balance Aggregate is running in recommend mode and identifies an aggregate in which the used space has exceeded the high-water mark.

Corrective Action

Use the "volume move recommend show" command to see the list of recommended actions.

Syslog Message

Auto Balance Aggregate has detected that aggregate %s has exceeded the threshold of %jd. The aggregate currently shows a usage of %jd.

Parameters

aggr (STRING): Name of the aggregate.

usedSpace (LONGINT): Aggregate's used space.

threshold (LONGINT): Configured high-water mark.

mgmt.aba.recommendMove

Severity

INFORMATIONAL

Description

This message occurs when Auto Balance Aggregate identifies a volume that can be moved to alleviate a low-space condition with an aggregate. The move will not be initiated, but will be listed with other recommendations listed by running the "volume move recommend show" command.

Corrective Action

If desired, initiate the recommended move by using the "volume move start" command.

Syslog Message

Auto Balance Aggregate is recommending that volume %s in Vserver %s be moved from aggregate %s to aggregate %s. Upon completion of the move, the source aggregate is projected to be %d percent full and the destination aggregate is projected to be %d percent full.

Parameters

volume (STRING): Volume identified as a candidate to move.

vserver (STRING): Vserver hosting the volume.

srcAggr (STRING): Aggregate the volume should be moved from.

dstAggr (STRING): Aggregate the volume should be moved to.

afterSourceSpace (INT): Projected percentage of used space in the source aggregate if the move is performed.

afterDestSpace (INT): Projected percentage of used space in the destination aggregate if the move is performed.

mgmt.abv events

mgmt.abv.service.filling

Deprecated

Deprecated as of Data ONTAP 9.6 because Infinite Volumes no longer exist.

Severity

ERROR

Description

This message occurs when the percentage of data used on one or more data constituents in a storage service of a managed Infinite Volume exceeds the full watermark. Constituents that have exceeded the full watermark will receive no new content.

Corrective Action

Either increase the size of this Infinite Volume by entering the "volume modify -size" command, or enter the "autobalance volume start" command to equalize the percentage of data used across all data constituents within this storage service.

Syslog Message

(None).

Parameters

vserver (STRING): Vserver that hosts the constituent.

storageService (STRING): Storage service that holds the constituents.

fullCount (INT): Number of constituents that are full.

totalCount (INT): Total number of constituents within this storage service.

mgmt.abv.service.full

Deprecated

Deprecated as of Data ONTAP 9.6 because Infinite Volumes no longer exist.

Severity

ALERT

Description

This message occurs when the percentage of data used for all of the data constituents within an Infinite Volume's storage service have exceeded the Infinite Volume's full watermark. As a result, users cannot write any more data to this Infinite Volume that would be stored in this storage service by the create-time policy, and the post-ingest policy cannot move files to this storage service while all of its data constituents are in excess of the full watermark.

Corrective Action

This storage service requires more capacity. Either increase the size of one or more of its data constituents, or add one or more new data constituents to it. After adding more capacity, it is strongly recommended that you enter the "autobalance volume start" command to equalize the percentage of data used across all data constituents in this storage service.

Syslog Message

The percentage of data used for all of the data constituents within an Infinite Volume's storage service has exceeded the Infinite Volume's full watermark. Vserver: %s, storage service: %s.

Parameters

vserver (STRING): Vserver that hosts these constituents.

storageService (STRING): Storage service that holds the constituents.

mgmt.abv.volume.filling

Deprecated

Deprecated as of Data ONTAP 9.6 because Infinite Volumes no longer exist.

Severity

ERROR

Description

This message occurs when the percentage of data used on one or more data constituents in this Infinite Volume exceeds the full watermark. Constituents that have exceeded the full watermark will receive no new content.

Corrective Action

Either increase the size of this Infinite Volume by entering the "volume modify -size" command, or enter the "autobalance volume start" command to equalize the percentage of data used across all data constituents.

Syslog Message

(None).

Parameters

vserver (STRING): Vserver that hosts the constituent.

fullCount (INT): Number of full data constituents within this Infinite Volume.

totalCount (INT): Total number of data constituents within this Infinite Volume.

mgmt.abv.volume.full

Deprecated

Deprecated as of Data ONTAP 9.6 because Infinite Volumes no longer exist.

Severity

ALERT

Description

This message occurs when all of the data constituents within an Infinite Volume have exceeded the Infinite Volume's full watermark. Users cannot write any more data to this Infinite Volume.

Corrective Action

Expand this Infinite Volume by entering the "volume modify -size" command. After expanding the Infinite Volume, it is strongly recommended that you enter the "autobalance volume start" command to equalize the percentage of data used across all data constituents.

Syslog Message

(None).

Parameters

vserver (STRING): Vserver that hosts the constituents.

mgmt.cifsserver events

mgmt.cifsserver.failure

Severity

ERROR

Description

This message occurs when a CIFS server fails to be configured and, therefore, CIFS access might not be available.

Corrective Action

Check the reason for the error and take action accordingly. For further assistance, contact technical support.

Syslog Message

Failed to configure CIFS server. Error: %s.

Parameters

reason (STRING): Reason for the failure.

vservername (STRING): Name of the vservers.

cifsservername (STRING): Name of the cifs server.

mgmt.cifsserver.success

Severity

INFORMATIONAL

Description

This message occurs when a CIFS server is successfully configured after a failure.

Corrective Action

(None).

Syslog Message

(None).

Parameters

vservername (STRING): Name of the vserver.

cifsservername (STRING): Name of the cifs server.

mgmt.cifsshare events

mgmt.cifsshare.duplicatesid

Severity

NOTICE

Description

This message occurs when a network client attempts to set a CIFS share's discretionary access control list (DACL) to a list where any security descriptor (SID) appears in more than one access control entry (ACE). The operation is failed and no changes are made to the share's DACL.

Corrective Action

(None).

Syslog Message

Duplicate SID not supported in CIFS share DACL %s

Parameters

vservername (STRING): Name of the Vserver.

cifssharename (STRING): Name of the CIFS share.

sid (STRING): Textual SID.

mgmt.cifsshare.failure

Severity

ERROR

Description

This message occurs when configuration of a CIFS share fails; CIFS access to the share might not be available.

Corrective Action

Check the reason for the error and take action accordingly.

Syslog Message

Failed to configure CIFS share. Error: %s.

Parameters

reason (STRING): Reason for the failure.
vservername (STRING): Name of the vserver.
cifsservername (STRING): Name of the cifs server.
cifssharename (STRING): Name of the cifs share.

mgmt.cifsshare.success

Severity

INFORMATIONAL

Description

This message occurs when a CIFS share is successfully configured after a failure.

Corrective Action

(None).

Syslog Message

(None).

Parameters

vservername (STRING): Name of the vserver.
cifssharename (STRING): Name of the cifs share.

mgmt.cifssuperuser events

mgmt.cifssuperuser.failure

Severity

ERROR

Description

This message occurs when configuration of a CIFS super-user fails; CIFS access through this account may not grant full super-user privileges.

Corrective Action

Check the reason for the error and take action accordingly.

Syslog Message

Failed to configure CIFS superuser. Error: %s.

Parameters

reason (STRING): Reason for the failure.
vservername (STRING): Name of the vserver.
cifsservername (STRING): Name of the cifs server.
cifsdomainname (STRING): Name of the cifs domain.
accountname (STRING): Name of the superuser account.

mgmt.cifssuperuser.success

Severity

INFORMATIONAL

Description

This message occurs when a CIFS super-user is successfully configured after a failure.

Corrective Action

(None).

Syslog Message

(None).

Parameters

vservername (STRING): Name of the vserver.

cifsservername (STRING): Name of the cifs server.

cifsdomainname (STRING): Name of the cifs domain.

accountname (STRING): Name of the superuser account.

mgmt.cifssymlink events

mgmt.cifssymlink.failure

Severity

ERROR

Description

This message occurs when configuration of a CIFS symbolic link fails; the symbolic link might not be available through CIFS.

Corrective Action

Check the reason for the error and take action accordingly.

Syslog Message

Failed to configure CIFS symlink. Error: %s.

Parameters

reason (STRING): Reason for the failure.

vservername (STRING): Name of the vserver.

unix_path (STRING): The UNIX path.

mgmt.cifssymlink.success

Severity

INFORMATIONAL

Description

This message occurs when a CIFS symbolic link is successfully configured after a failure.

Corrective Action

(None).

Syslog Message

(None).

Parameters

vservername (STRING): Name of the vserver.

unix_path (STRING): The UNIX path.

mgmt.cr events

mgmt.cr.constituent.added

Deprecated

Deprecated as of Data ONTAP 9.6 because Infinite Volumes no longer exist.

Severity

INFORMATIONAL

Description

This message occurs when a constituent volume is added to the Infinite Volume.

Corrective Action

(None).

Syslog Message

Constituent volume "%s" has been added to Infinite Volume "%s" in Vserver "%s". Its size is %ld bytes.

Parameters

constituentName (STRING): Name of the added volume.

repositoryName (STRING): Name of the Infinite Volume.

vserverName (STRING): Name of the Vserver.

size (LONGINT): Size of the added volume.

mgmt.cr.constituent.deleted

Deprecated

Deprecated as of Data ONTAP 9.6 because Infinite Volumes no longer exist.

Severity

INFORMATIONAL

Description

This message occurs when a constituent volume is deleted from the Infinite Volume.

Corrective Action

(None).

Syslog Message

Constituent volume "%s" has been deleted from the Infinite Volume "%s" in Vserver "%s".

Parameters

constituentName (STRING): Name of the deleted volume.

repositoryName (STRING): Name of the Infinite Volume.

vserverName (STRING): Name of the Vserver.

mgmt.cr.constituent.failure

Deprecated

Deprecated as of Data ONTAP 9.6 because Infinite Volumes no longer exist.

Severity

ERROR

Description

This message occurs when an Infinite Volume operation that operates on the constituent volumes succeeds, but fails on an individual constituent.

Corrective Action

Fix the cause of the failure listed in the error, and then run the command again.

Syslog Message

Repository job "%s" run on Infinite Volume "%s" in Vserver "%s" failed for constituent volume "%s": %s

Parameters

jobName (STRING): Name of the repository job.

repositoryName (STRING): Name of the Infinite Volume.

vserverName (STRING): Name of the Vserver.

constituentName (STRING): Name of the constituent volume.

reason (STRING): Reason for the failure.

mgmt.cr.constituent.resized

Deprecated

Deprecated as of Data ONTAP 9.6 because Infinite Volumes no longer exist.

Severity

INFORMATIONAL

Description

This message occurs when an Infinite Volume constituent volume is resized.

Corrective Action

(None).

Syslog Message

Constituent volume "%s" of Infinite Volume "%s" in Vserver "%s" has been resized to %ld bytes.

Parameters

constituentName (STRING): Name of the resized volume.
repositoryName (STRING): Name of the Infinite Volume.
vserverName (STRING): Name of the Vserver.
size (LONGINT): New size of the volume.

mgmt.cr.job.failed

Deprecated

Deprecated as of Data ONTAP 9.6 because Infinite Volumes no longer exist.

Severity

ERROR

Description

This message occurs when a repository job fails.

Corrective Action

Fix the cause of the failure, listed in the error, and run the command again.

Syslog Message

Repository job "%s" has failed for Infinite Volume "%s" in Vserver "%s": %s

Parameters

jobName (STRING): Name of the repository job.
repositoryName (STRING): Name of the Infinite Volume.
vserverName (STRING): Name of the Vserver.
reason (STRING): Reason for the failure.

mgmt.cr.job.succeeded

Deprecated

Deprecated as of Data ONTAP 9.6 because Infinite Volumes no longer exist.

Severity

INFORMATIONAL

Description

This message occurs when a repository job is completed successfully.

Corrective Action

(None).

Syslog Message

Repository job "%s" has succeeded for Infinite Volume "%s" in Vserver "%s": %s

Parameters

jobName (STRING): Name of the repository job.
repositoryName (STRING): Name of the Infinite Volume.
vserverName (STRING): Name of the Vserver.
reason (STRING): Success message of the job.

mgmt.cr.missing.footprint

Deprecated

Deprecated as of Data ONTAP 9.6 because Infinite Volumes no longer exist.

Severity

ERROR

Description

This message occurs when Data ONTAP® is attempting to create or expand an Infinite Volume and cannot retrieve volume footprint information about a volume. The footprint information for all volumes on aggregates used by an Infinite Volume, even those in other Vservers, must be known to safely create or expand an Infinite Volume.

Corrective Action

Ensure that the volume is healthy and online, and then retry the operation.

Syslog Message

Unable to get footprint information about volume "%s" in Vserver "%s".;

Parameters

constituentName (STRING): Name of the volume for which footprint information could not be retrieved.
vserverName (STRING): Name of the Vserver the volume belongs to.

mgmt.exovol events

mgmt.exovol.transfer.failed

Severity

ERROR

Description

This message occurs when the replication engine fails to transfer exo-volume data.

Corrective Action

If problem persists, Contact NetApp technical support.

Syslog Message

The replication for volume dsid %jd, transfer-id %s failed to transfer %s exo-volume data, error: %d, failure reason: %s, extended failure reason: %s.

Parameters

volDsid (LONGINT): Data set identifier of the volume.
transferId (STRING): Replication transfer id.
streamType (STRING): Type of data being transferred.
error (INT): Transfer failure error code.
failureReason (STRING): Basic reason for the failure.
extendendFailureReason (STRING): Detailed reason for the failure.

mgmt.exovol.xfer.dest.no.space

Severity

ERROR

Description

This message occurs when there is no free space left on the destination aggregate.

Corrective Action

Please increase the amount of free space available on the destination aggregate.

Syslog Message

The replication for volume dsid %jd, transfer-id %s failed to transfer %s exo-volume data because there is no free space left on the destination aggregate.

Parameters

volDsid (LONGINT): Data set identifier of the volume.

transferId (STRING): Replication transfer id.

streamType (STRING): Type of data being transferred.

mgmt.fpolicy events

mgmt.fpolicy.policy.disabled

Severity

INFORMATIONAL

Description

This message occurs when a Vserver administrator disables an FPolicy® policy. No subsequent client requests will be processed and no notifications will be sent to FPolicy servers attached with this policy.

Corrective Action

(None).

Syslog Message

FPolicy policy %s is disabled on Vserver %s.

Parameters

policyname (STRING): Name of the policy.

vservername (STRING): Name of the Vserver.

mgmt.fpolicy.policy.enabled

Severity

INFORMATIONAL

Description

This message occurs when a Vserver administrator enables an FPolicy® policy. Based on the event configuration, subsequent client requests will be processed, notifications will be generated, and notifications might be sent (based on the policy configuration) to FPolicy servers attached with this policy.

Corrective Action

(None).

Syslog Message

FPolicy policy %s is enabled on Vserver %s.

Parameters

policyname (STRING): Name of the policy.

vservername (STRING): Name of the Vserver.

mgmt.fpolicy.priv.failed**Severity**

ERROR

Description

This message occurs when the creation of privileged share ONTAP_ADMIN\$ fails. Attempted connections to ONTAP_ADMIN\$ share by the FPolicy servers will fail.

Corrective Action

Check the reason for failure and take action accordingly. If the problem persists, contact NetApp technical support for assistance.

Syslog Message

Failed to create privileged share ONTAP_ADMIN\$ for Vserver "%s". Reason: "%s".

Parameters

vserverName (STRING): Name of the Vserver.

reason (STRING): Reason for failure.

mgmt.fpolicy.replay.failed**Severity**

ERROR

Description

This message occurs when an FPolicy® configuration replication mechanism fails after a maximum number of retries. FPolicy Service Manager (FSM) process will restart to resync configuration.

Corrective Action

If the error persists, contact NetApp technical support for assistance.

Syslog Message

FPolicy configuration replication process failed.

Parameters

(None).

mgmt.fsecurity events

mgmt.fsecurity.failure

Severity

ERROR

Description

This message occurs when applying configuration of fsecurity fails.

Corrective Action

Wait for a while and reapply using the "vserver security file-directory apply" command. See the "vserver security file-directory" man pages for information, or if the problem persists, contact NetApp technical support.

Syslog Message

Failed to apply file security policy. Error: %s.

Parameters

reason (STRING): Reason for the failure.

vservername (STRING): Name of the vserver.

mgmt.fsecurity.policy.EACCES

Severity

NOTICE

Description

This message occurs when file-directory policy apply fails due to EACCES error. When this happens, the policy will be skipped for the volume or directory.

Corrective Action

(None).

Syslog Message

Command "file-directory policy apply" failed due to EACCES error on SVM: %s. Policy will be skipped for paths: %s.

Parameters

SVM (STRING): Name of the SVM on which file-directory policy applied.

ErrorPath (STRING): Volume or directory path on which file-directory policy applied.

mgmt.fsecurity.success

Severity

INFORMATIONAL

Description

This message occurs when a file security policy was applied successfully after a previous failure.

Corrective Action

(None).

Syslog Message

(None).

Parameters

vservername (STRING): Name of the Vserver.

mgmt.keymgr events

mgmt.keymgr.keyid.noDelete

Severity

ERROR

Description

This message occurs when the system cannot delete the key ID associated with the encrypted aggregate from the key management server.

Corrective Action

Manually delete the key ID associated with the encrypted aggregate from the key management server.

Syslog Message

Encrypted aggregate "%s" with UUID "%s" has been deleted. The key ID "%s" was associated with this aggregate and must be manually deleted from the key management server.

Parameters

name (STRING): Aggregate name.

uuid (STRING): Unique identifier of the aggregate when the aggregate name by itself is insufficient.

key_id (STRING): Unique key ID used by the encrypted aggregate.

mgmt.mcc events

mgmt.mcc.fsecurity.cfig.err

Severity

ERROR

Description

This message occurs when MetroCluster(tm) switchback or switchover happens while applying a file security (fsecurity) policy on the MetroCluster partner. The policy was not applied to the partner.

Corrective Action

Reapply the policy by using the "vserver security file-directory apply" command. See the "vserver security file-directory" man pages for information. If the problem persists, contact NetApp technical support.

Syslog Message

Failed to apply file security policy "%s" on Vserver "%s".

Parameters

policy (STRING): Fsecurity policy name.
vservername (STRING): Name of the Vserver.

mgmt.nfslisteners events

mgmt.nfslisteners.failure

Severity

ERROR

Description

This message occurs when the listener for the NFS service is not configured. If the problem persists, NFS access is not available.

Corrective Action

This problem might be resolved by subsequent automatic retries of the NFS request. If NFS service is not available, check the NFS configuration of the service and the external services it uses. To verify NFS configuration of the service, use the "nfs server show -vserver <vserver name> [-fields <field name>]" command. If the problem persists after you check the NFS configuration, delete the NFS Vserver, and then re-create it. See the NFS man page guide for information about deleting and re-creating the NFS Vserver, or contact NetApp technical support.

Syslog Message

Failed to configure NFS listener. Error: %s.

Parameters

reason (STRING): Message provided by the NFS service when a listener configuration does not succeed.

mgmt.nfslisteners.success

Severity

INFORMATIONAL

Description

This message occurs when the listener for the NFS service is configured after a failure.

Corrective Action

(None).

Syslog Message

(None).

Parameters

(None).

mgmt.nfsserver events

mgmt.nfsserver.failure

Severity

ERROR

Description

This message occurs when a NFS server fails to be configured and, therefore, NFS access might not be available.

Corrective Action

Check the reason for the error and take action accordingly. For further assistance, contact technical support.

Syslog Message

Failed to configure NFS server. Error: %s.

Parameters

reason (STRING): Reason for the failure.

vservername (STRING): Name of the vserver.

mgmt.nfsserver.success

Severity

INFORMATIONAL

Description

This message occurs when a NFS server is successfully configured after a failure.

Corrective Action

(None).

Syslog Message

(None).

Parameters

vservername (STRING): Name of the nfs server.

mgmt.rst events

mgmt.rst.fail.dst.compressed

Severity

ERROR

Description

This message occurs when the SnapMirror® 'restore' command fails because compression is enabled on the destination volume.

Corrective Action

Force a cleanup of the failed operation by reissuing the 'restore' command with the parameter 'clean-up-failure', disable compression on the destination volume, create a Snapshot(tm) copy, and then reissue the 'restore' command.

Syslog Message

SnapMirror restore from source volume '%s' to destination volume '%s' failed with error: %s.

Parameters

srcpath (STRING): Path name of the source volume for restore.

dstpath (STRING): Path name of the destination volume for restore.

error (STRING): Error message.

mgmt.s3 events

mgmt.s3.sm.license.near.limit

Severity

NOTICE

Description

This message occurs when the total cluster-wide logical used size for S3 Snapmirror external object store relationships is near the license capacity limit but does not exceed the limit.

Corrective Action

To increase the license capacity, install a new license on the cluster. Alternatively, remove some data you are managing.

Syslog Message

%s.

Parameters

message (STRING): Capacity warning message for users

mgmt.s3.sm.license.over.limit

Severity

ERROR

Description

This message occurs when the total cluster-wide bucket used size for S3 Snapmirror external object store relationships is over the license capacity limit.

Corrective Action

To increase the license capacity, install a new license on the cluster. Alternatively, remove some data you are managing.

Syslog Message

%s.

Parameters

message (STRING): Capacity warning message for users

mgmt.sm events

mgmt.sm.cant.clear.autolnit

Severity

NOTICE

Description

This message occurs when a SnapMirror® protect operation fails because the source volume is already protected with a SnapMirror relationship in the specified destination Vserver with the same policy, schedule, relationship type, destination volume prefix, and destination volume suffix and auto-initialize parameter set to true. The auto-initialize parameter cannot be cleared on a SnapMirror relationship once it is set to true.

Corrective Action

(None).

Syslog Message

Job ID %lld failed to disable auto-initialize for SnapMirror relationship on volume %s, destination vserver %s. This operation is not permitted.

Parameters

jobID (LONGINT): Job ID.

srcpath (STRING): Path name of the source volume to be protected.

dstvserver (STRING): Destination Vserver name.

mgmt.sm.cg.force.delete

Severity

ERROR

Description

This message occurs when a sync granular consistency group relationship is deleted with the force option. Consistency Group relationship will be the deleted, however the items of the Consistency Group might not be made read-write or deletable after the operation.

Corrective Action

For ASA r2 systems, contact NetApp technical support for assistance to resolve this internal error. For all other systems: Perform a volume offline and online on the destination volume to trigger the cleanup of any remaining relationship information on the volume.

Syslog Message

Sync granular consistency group relationship with source path %s. Destination path %s has been force deleted and items of the consistency group on the destination volume might not be read-write or deletable.

Parameters

src_path (STRING): Source path of the sync granular consistency group relationship that was force deleted.

dst_path (STRING): Destination path of the sync granular consistency group relationship that was force deleted.

mgmt.sm.cgRel.limit

Severity

ALERT

Description

This message occurs when either Consistency Group relationships or FlexGroups relationships exceeds the cluster-wide limit.

Corrective Action

To delete the excess relationships. Alternatively, not to create any more additional relationship in the cluster.

Syslog Message

Number of Consistency Group SnapMirror and/or FlexGroup relationships exceeds supported limit. Number of relationships supported on this cluster "%d". Current Number of relationships "%lu"

Parameters

max_count (INT): Maximum number of relationships supported on cluster.

cur_count (LONGINT): Current count of relationships on cluster.

mgmt.sm.cgVolRel.limit

Severity

ALERT

Description

This message occurs when either Consistency Group item relationships or FlexGroups item relationships exceeds the cluster-wide limit.

Corrective Action

To delete the excess item relationships. Alternatively, not to create any more additional relationship in the cluster.

Syslog Message

Number of Consistency Group item SnapMirror and/or FlexGroup item relationships exceeds supported limit. Number of item relationships supported on this cluster "%d". Current Number of relationships "%lu"

Parameters

max_count (INT): Maximum number of item relationships supported on cluster.

cur_count (LONGINT): Current count of item relationships on cluster.

mgmt.sm.dp.depr.msg

Severity

NOTICE

Description

SnapMirror relationships of type DP are deprecated. From the previous release, users were no longer able to initialize new relationships of type DP. From this release, relationships of type DP will no longer function.

Corrective Action

Use SnapMirror relationships of type XDP instead of type DP.

Syslog Message

SnapMirror relationships of type DP are deprecated in this ONTAP release.

Parameters

(None).

mgmt.sm.ep.cant.clr.autolnit

Severity

NOTICE

Description

This message occurs when a SnapMirror® protect operation fails because the source is already protected with a SnapMirror relationship that has the specified destination endpoint type and the same "-destination-volume-prefix" and "-destination-volume-suffix" parameter values, with the "-auto-initialize" parameter set to "true". The "-auto-initialize" parameter cannot be cleared on a SnapMirror relationship after it is set to "true".

Corrective Action

To change the auto-initialize behavior, delete and release the existing SnapMirror relationship by using the "snapmirror delete" command and the "snapmirror release" command, and then establish another relationship without auto-initialize.

Syslog Message

Job ID %lld: Failed to disable auto-initialize for SnapMirror relationship from source %s to destination endpoint type %s. This operation is not permitted.

Parameters

jobID (LONGINT): Job ID.

srcpath (STRING): Path name of the source to be protected.

dsteptype (STRING): Destination endpoint type.

mgmt.sm.expand.overprovision

Severity

ERROR

Description

This message occurs when a volume expand job starts for the source of a SnapMirror® relationship and the provisioning check finds that there isn't enough free space on the aggregates for destination volume. The source volume expand job is not impacted, but auto-expand will fail for the destination FlexGroup after the source FlexGroup is expanded.

Corrective Action

Increase the size of the aggregates for the destination Flexgroup volume.

Syslog Message

The aggregates on the cluster hosting destination FlexGroup volume '%s' do not have enough free space to be used for expanding the FlexGroup volume. Expansion of the destination will fail until the size of enough aggregates is increased to provide enough space.

Parameters

dstVolume (STRING): Destination volume name of the SnapMirror® relationship.

mgmt.sm.keymgr.not.setup

Severity

ERROR

Description

This message occurs when a SnapMirror® protect operation on an encrypted source volume fails because the Key Manager is not set up on the destination node. A SnapMirror relationship with the destination in the specified destination Vserver to protect the source volume will not be created until this condition is corrected.

Corrective Action

Set up the Key Manager by using the "security key-manager setup" command on the destination.

Syslog Message

SnapMirror protect of source volume "%s" failed to destination Vserver "%s" because the Key Manager was not set up on the destination cluster. Job ID: %llu.

Parameters

srcpath (STRING): Path name of the source volume to be protected.

dstvserver (STRING): Destination Vserver name.

jobID (LONGINT): Job ID.

mgmt.sm.license.near.limit

Severity

NOTICE

Description

This message occurs when the total cluster-wide virtual used size for object store relationships is near the license capacity limit but does not exceed the limit.

Corrective Action

To increase the license capacity, install a new license on the cluster. Alternatively, remove some data you are managing.

Syslog Message

%s.

Parameters

message (STRING): Capacity warning message for users

mgmt.sm.license.not.found

Severity

ERROR

Description

This message occurs when a SnapMirror® protect operation of a source volume fails because a required license on the destination cluster is missing. The error message contains the information about the missing license. A SnapMirror relationship with the destination in the specified destination Vserver to protect the source volume will not be created until this condition is corrected.

Corrective Action

Install the license that is missing on the destination cluster. The error message contains information about the missing license.

Syslog Message

SnapMirror protect of source volume "%s" failed to destination Vserver "%s" because there was a license missing on the destination cluster. Error: %s, Job ID: %llu.

Parameters

srcpath (STRING): Path name of the source volume to be protected.
dstvserver (STRING): Destination Vserver name.
error (STRING): Error message.
jobID (LONGINT): Job ID.

mgmt.sm.license.over.limit

Severity

ERROR

Description

This message occurs when the total cluster-wide virtual used size for object store relationships is over the license capacity limit.

Corrective Action

To increase the license capacity, install a new license on the cluster. Alternatively, remove some data you are managing.

Syslog Message

%s.

Parameters

message (STRING): Capacity warning message for users

mgmt.sm.obj.fanout.unsupp

Severity

ERROR

Description

This message occurs when a SnapMirror® protect operation fails because the source is already protected with a SnapMirror relationship with an object store destination. Creation of multiple SnapMirror relationships from a source endpoint to object store destinations is unsupported.

Corrective Action

View the existing SnapMirror relationship using the "snapmirror show" command, and correct as necessary.

Syslog Message

Source endpoint "%s" is already protected in an object store. Job ID: %llu.

Parameters

srcpath (STRING): Path name of the source volume to be protected.
jobID (LONGINT): Job ID.

mgmt.sm.protect.internal.err

Severity

ERROR

Description

This message occurs when a SnapMirror® protect operation fails because of an unexpected internal error.

Corrective Action

Retry the command after some time. If the problem persists, contact NetApp technical support.

Syslog Message

SnapMirror protect failed because of an unexpected internal error. Error: %s, Job ID: %llu.

Parameters

error (STRING): Error message.
jobID (LONGINT): Job ID.

mgmt.sm.rel.exists

Severity

ERROR

Description

This message occurs when a SnapMirror® protect operation fails because the source volume is already protected with a SnapMirror relationship in the specified destination storage virtual machine (SVM) with the same policy, schedule, relationship type, destination volume prefix, and destination volume suffix.

Corrective Action

For ASA r2 systems, contact NetApp technical support for assistance to resolve this internal error. For all other systems: Protect the volume again by carrying out the following three steps: 1. Use a different destination volume suffix or destination volume prefix. 2. Use a different schedule or policy. 3. Use the "volume create" command to create a destination volume with a user defined name and then the "snapmirror create" command to create another SnapMirror relationship for the same source volume.

Syslog Message

SnapMirror protect operation of source volume "%s" fails to destination SVM "%s" because the source volume is already protected with a SnapMirror relationship in the specified destination SVM with the same policy, schedule, relationship type, destination volume prefix, and destination volume suffix. Error: %s, Job ID: %llu.

Parameters

srcpath (STRING): Path name of the source volume to be protected.
dstvserver (STRING): Destination SVM name.

error (STRING): Error message.
jobID (LONGINT): Job ID.

mgmt.sm.rename.ndu.error

Severity

ERROR

Description

This message occurs when the renaming of a SnapMirror® volume in another cluster fails, due to the lack of support for this operation in that cluster's effective version of ONTAP® software.

Corrective Action

Contact NetApp technical support.

Syslog Message

Failed to update Volume name "%s" in remote cluster "%s".

Parameters

volume (STRING): Volume for which the rename operation failed.
clusName (STRING): Remote cluster name.

mgmt.sm.restore.fail

Severity

ERROR

Description

This message occurs when the SnapMirror® 'restore' command fails.

Corrective Action

To retry the restore, reissue the command. Alternatively, force a cleanup of the failed operation without starting another restore by including the parameter 'clean-up-failure' when reissuing the 'restore' command.

Syslog Message

SnapMirror restore from source volume '%s' to destination volume '%s' failed with error: %s.

Parameters

srcpath (STRING): Path name of the source volume for restore.
dstpath (STRING): Path name of the destination volume for restore.
error (STRING): Error message.

mgmt.sm.schd.invalid

Severity

ERROR

Description

This message occurs when the SnapMirror® protect operation fails to find the specified schedule name or the schedule has not been specified. A SnapMirror relationship with the destination will be created and initialized, if auto-initialize is enabled, but subsequent periodic backup operations will not be initiated.

Corrective Action

Add a valid schedule.

Syslog Message

The schedule "%s" is not valid or has not been specified.

Parameters

schd_name (STRING): Name of the schedule that is invalid.

mgmt.sm.schd.unavailable

Severity

ERROR

Description

This message occurs when a schedule is not available on the secondary site for configuration replication of a SnapMirror® relationship of -type Load Sharing (LS) in a MetroCluster(tm) configuration.

Corrective Action

Create a job schedule on the secondary site that is identical to that on the primary site by using the 'job schedule cron create' command.

Syslog Message

Configuration replication of SnapMirror relationship of -type Load Sharing for destination path "%s" has failed because the schedule "%s" is not available.

Parameters

dstpath (STRING): Destination path name of the SnapMirror relationship.

schd_name (STRING): Name of the schedule that is unavailable on the secondary site.

mgmt.sm.snap.create.fail

Severity

ALERT

Description

This message occurs when a SnapMirror® "snapshot create" command fails on the destination volume, after successfully converting a FlexVol® volume to a FlexGroup volume. Future SnapMirror transfers will be unsuccessful.

Corrective Action

For ASA r2 systems, contact NetApp technical support for assistance to resolve this internal error. For all other systems: Create the baseline Snapshot copy on destination volume "%s" using the "volume conversion create-destination-snapshot" command, and then re-create the SnapMirror relationship using the "snapmirror create -destination-path %s -source-path %s -policy %s -throttle %d -schedule %s" command.

Syslog Message

Create the baseline Snapshot copy on destination volume "%s" using the "volume conversion create-destination-snapshot" command, and then re-create the SnapMirror relationship using the "snapmirror create -destination-path %s -source-path %s -policy %s -throttle %s -schedule %s" command.

Parameters

volume (STRING): Volume converted to a FlexGroup volume.
dstPath (STRING): Destination path for SnapMirror create.
srcPath (STRING): Source path for SnapMirror create.
policy (STRING): Policy for SnapMirror create.
throttle (STRING): Throttle for SnapMirror create.
schedule (STRING): Schedule for SnapMirror create.

mgmt.sm.src.policy.creat

Severity

ALERT

Description

This message occurs when a reverse resync operation was performed from System Manager and the SnapMirror policy associated with an intercluster SnapMirror relationship was replicated to the source from the destination, but the retention period in the policy was not replicated. This will happen only if the source cluster ONTAP® version is earlier than ONTAP 9.13.1. Because the retention period was not associated with the Snapshot copies, the Snapshot copies are prone to deletion, which might lead to data protection issues.

Corrective Action

Add the retention period to the appropriate rules of the SnapMirror policy in the source cluster using the command "snapmirror policy modify-rule -vserver <storage_VM_name> -policy <policy_name> -snapmirror -label <snapmirror_label_name> -retention-period <retention_period>".

Syslog Message

The retention period setting in the destination SnapMirror policy "%s" has not been replicated to the source during a reverse resync, and it might need to be updated manually.

Parameters

policyName (STRING): Name of the policy associated with the SnapMirror relationship that was replicated from the destination to source.

mgmt.sm.src.vol.not.found

Severity

ERROR

Description

This message occurs when a SnapMirror® protect operation fails because the source volume was not found.

Corrective Action

Check whether the source path is correct, and then retry the operation with the correct path.

Syslog Message

SnapMirror protect of source volume "%s" failed to destination Vserver "%s" because the source volume was not found. Job ID: %llu.

Parameters

srcpath (STRING): Path name of the source volume to be protected.

dstvserver (STRING): Destination Vserver name.

jobID (LONGINT): Job ID.

mgmt.sm.sync.break.dp.error

Severity

ERROR

Description

This message occurs when a SnapMirror® break operation fails on a synchronous SnapMirror destination volume, because the destination is either in the "broken-off" state, or another state that is inconsistent with the operation.

Corrective Action

Contact NetApp technical support.

Syslog Message

SnapMirror break operation failed for sync SnapMirror relationship with destination volume "%s" because the destination volume is either in the broken-off state or the volume state is inconsistent.

Parameters

dstpath (STRING): Path name of the destination volume.

mgmt.sm.v2.upgrade.chk

Severity

ERROR

Description

This message occurs after booting, when there is a Data Protection relationship created in a Data ONTAP® release prior to 8.2.

Corrective Action

Establish Vserver peering so that the system can convert the pre-8.2 relationships to 8.2 and later relationships. Vserver peering can only be established if both endpoints are running Data ONTAP 8.2 or later on all nodes in the cluster. To check whether the source cluster supports Data ONTAP 8.2 SnapMirror® relationships, run the "capability show -node * -capability volume.snapmirror_v2" command. If the capability is "true" on all nodes, create a Vserver peer relationship between the source and destination endpoint Vservers by issuing the "vserver peer create" command. If the capability is "false" on any node in the source cluster, upgrade and configure the source cluster by following instructions in the Upgrade and Revert/Downgrade Guide.

Syslog Message

SnapMirror relationships from a pre-8.2 installation are present on this cluster but no Vserver peer relationships were found between the source and destination Vservers.

Parameters

(None).

mgmt.sm.vol.place.create.err

Severity

ERROR

Description

This message occurs when a SnapMirror® protect operation fails to find an aggregate with sufficient free space for a destination volume or fails to create the volume. A SnapMirror relationship with the destination in the specified destination storage virtual machine (SVM) to protect the source volume will not be created until this condition is corrected.

Corrective Action

For ASA r2 systems, contact NetApp technical support for assistance to resolve this internal error. For all other systems: Use the "vserver show -vserver <vserver-name> -fields aggr-list" command to check whether there is a list of aggregates assigned to the destination SVM. If there are aggregates listed, check the status of and the space left in the storage aggregates belonging to that SVM. If there are no aggregates listed, then check the status of and the space left in all of the non-root, non-taken-over and non-SnapLock aggregates. To check whether storage aggregates are non-root, non-taken-over and non-SnapLock, run the "storage aggregate show -fields root, is-home, snaplock-type" command. To check the status of and the space left in a storage aggregate, run the "storage aggregate show -aggregate <aggr-name>" command for a particular aggregate or the "storage aggregate show" command for all storage aggregates on the cluster. If storage aggregates are offline, use "storage aggregate online -aggregate <aggr-name>" command to bring the storage aggregates online. If there is no space in the storage aggregates: 1) Use the "vserver add-aggregates -vserver <vserver-name> -aggregates <aggr-name>" command to add more storage aggregates to the destination SVM. 2) If needed, use the "storage aggregate create -aggregate <aggr-name> -diskcount <number-of-disks> -node <node-name>" command to create new storage aggregates on available nodes. 3) Use the "storage aggregate add-disks -aggregate <aggr-name> -diskcount <number-of-disks>" command to add space to the storage aggregate. Even if there is free space on storage aggregates, it is possible that the maximum number of volumes already exist on a node. If so, additional volumes cannot be created on that node. If this is the case, add more aggregate space on other nodes. You can determine the number of volumes on a node by using the "volume show -node <node-name>" command. Note the entry count at the end of the show output. To check the overall status of the SnapMirror protect operation, use the "job show <jobID> -instance" or "job history show -id <jobID> -instance" commands. If the problem persists, contact NetApp technical support.

Syslog Message

SnapMirror protect of source volume "%s" failed on destination SVM "%s". Error: %s, Job ID: %llu.

Parameters

srcpath (STRING): Path name of the source volume to be protected.

dstvserver (STRING): Destination SVM name.

error (STRING): Error message.

jobID (LONGINT): Job ID.

mgmt.sm.vol.style.unsupp

Severity

ERROR

Description

This message occurs when a SnapMirror® protect operation fails because the source volume style is unsupported. The "SnapMirror" protect command only supports FlexVol® volumes. FlexGroup volumes, FlexGroup constituents, Infinite Volumes, and Infinite Volume constituents are unsupported. Temporary

volumes are also not unsupported.

Corrective Action

For ASA r2 systems, contact NetApp technical support for assistance to resolve this internal error. For all other systems: If you want to protect Infinite Volumes or FlexGroup volumes, use the individual commands: 1. "volume create" for the destination volume 2. "snapmirror create" for the relationship 3. "snapmirror initialize" for the relationship Creating individual SnapMirror relationships on FlexGroup volumes or Infinite Volume constituents is unsupported.

Syslog Message

SnapMirror protect of source volume "%s" fails because the volume is not a FlexVol volume. Job ID: %llu.

Parameters

srcpath (STRING): Path name of the source volume to be protected.
jobID (LONGINT): Job ID.

mgmt.sm.vsrs.not.peered

Severity

ERROR

Description

This message occurs when a SnapMirror® protect operation fails because either the source or destination Vservers do not exist or the source and destination Vservers are not peered. A SnapMirror relationship with the specified destination Vserver will not be created, and the source volume will not be protected, until this condition is corrected.

Corrective Action

Use the 'vserver show' and 'vserver peer' commands to verify that the source and destination Vservers exist and are named uniquely. Also make sure that the 'snapmirror protect' operation targets the intended Vservers. See the man pages of these commands for further information.

Syslog Message

SnapMirror protect operation of source volume "%s" failed because destination Vserver "%s" and source Vserver %s are not peered. Job ID: %llu.

Parameters

srcpath (STRING): Path name of the source volume to be protected.
srcvserver (STRING): Source Vserver name.
dstvserver (STRING): Destination Vserver name.
jobID (LONGINT): Job ID.

mgmt.smbc events

mgmt.smbc.config.not.repl

Severity

NOTICE

Description

This message occurs when the system fails to replicate the configuration of Report Target Group

Port(RTPG) and Inter-Cluster(IC) LIF information.

Corrective Action

(None).

Syslog Message

Failure in configuration replication of RTPG, IC LIF information with relationship UUID "%s".

Parameters

srcpath (STRING): Path name of the source group of the SnapMirror® active sync relationship.
dstpath (STRING): Path name of the destination group of the SnapMirror® active sync relationship.
relationship_id (STRING): Relationship UUID.

mgmt.smbc.proxy.create.fail

Severity

ERROR

Description

This message occurs when there is a failure to create proxy I/O path channel between the SnapMirror® active sync peer clusters.

Corrective Action

Check the network connection between the source and destination volumes by using the "net interface show -role intercluster -status-admin up" command.

Syslog Message

Failure in proxy initiator %s and target %s creation.

Parameters

proxy_initiator (STRING): Path name of the proxy initiator.
proxy_target (STRING): Path name of the proxy target.
relationship_id (STRING): Relationship UUID.
error_msg (STRING): Description of the failure.

mgmt.snapmir events

mgmt.snapmir.dst.invalidType

Severity

ERROR

Description

This message occurs when the destination volume of a SnapMirror® relationship is not a Data Protection (DP) or Load Sharing (LS) type, and a SnapMirror initialize operation is attempted. A volume must be a DP or LS type to accept a SnapMirror initialize operation.

Corrective Action

For ASA r2 systems, contact NetApp technical support for assistance to resolve this internal error. For all other systems: Use a DP or LS type of volume, or use the "volume create" command to create a new volume with a DP or LS type to use as a destination of the SnapMirror relationship. You cannot modify the

type of a volume using the "volume modify" command.

Syslog Message

Destination volume "%s" of a SnapMirror relationship is not a DP or LS type. Job ID %llu.

Parameters

dstpath (STRING): Path name of the destination volume of the SnapMirror relationship.
jobID (LONGINT): Job ID.

mgmt.snapmir.fl.bkt.del.fail

Severity

ERROR

Description

This message occurs when a bucket could not be deleted during a cleanup of a SnapMirror restore or create operation. Because the operation did not complete successfully, the bucket might be left in an inconsistent state.

Corrective Action

Use the "object-store-server bucket delete" command to delete the bucket.

Syslog Message

Bucket "%s" could not be deleted as part of the clean up of a SnapMirror create or restore operation.

Parameters

bucket (STRING): Name of the bucket in the SnapMirror relationship.

mgmt.snapmir.fl.crt.cleanup

Severity

ERROR

Description

This message occurs when the cleanup of a link failed when it encountered an error during a SnapMirror create operation. Because the link could not be cleaned up properly, the bucket could be in an inconsistent state and might not be able to accept any traffic. Also, if the links are not cleaned up, a new SnapMirror relationship cannot be established with these two buckets.

Corrective Action

1. Run the "snapmirror delete" command to delete the link.

Syslog Message

Cleanup of the link between buckets "%s" and "%s" failed with error "%s".

Parameters

sourceBucket (STRING): Name of the source bucket in the SnapMirror relationship.
destBucket (STRING): Name of the destination bucket in the SnapMirror relationship.
error (STRING): Error that was encountered.

mgmt.snapmir.fl.failover.rmt

Severity

ERROR

Description

This message occurs when the remote bucket was not demoted during a failover operation. This could allow the remote bucket to still accept the traffic even though it is no longer permitted to so. Use the "demote bucket" command to avoid this situation.

Corrective Action

Use the "fabriclink demote-bucket" command in the cluster where remote bucket "%s" is located.

Syslog Message

Failover failed for remote bucket "%s".

Parameters

remoteBucket (STRING): Name of the remote bucket for which the failover operation failed.

mgmt.snapmir.fl.mod.rmt.fail

Severity

NOTICE

Description

This message occurs when the links on a remote cluster could not be modified during the execution of the "snapmirror modify" command. Even though the SnapMirror policy was modified, some of the links on the remote cluster could not be updated with new rpo/ throttle values. There is no detectable impact until a failover is performed. Only when a failover is performed would the reverse link be used, and it would still be functional even if the links on the remote cluster were not updated previously. They would just be using old rpo/throttle values.

Corrective Action

(None).

Syslog Message

Links on remote cluster "%s" were not modified.

Parameters

clusterUuid (STRING): Cluster UUID of the cluster where the links were not updated.

mgmt.snapmir.fl.rstr.bkt.cln

Severity

ERROR

Description

This message occurs when objects in a restore bucket were not deleted during the cleanup of a SnapMirror restore operation. The restore bucket has objects in it even though the restore relationship no longer exists.

Corrective Action

Delete the objects in bucket "%s".

Syslog Message

Objects in bucket "%s" were not deleted during a restore failure cleanup.

Parameters

restoreBucket (STRING): Name of the restore bucket in the SnapMirror relationship.

mgmt.snapmir.fl.rstr.cln.all

Severity

ERROR

Description

This message occurs when the deletion of objects and the cleanup of link failed when the operations encountered an error during a SnapMirror restore operation. Because the link could not be cleaned up properly, the bucket could be in an inconsistent state and might not be able to accept any traffic. Also, if the links are not cleaned up, a new SnapMirror relationship cannot be established with these two buckets.

Corrective Action

1. Run the "snapmirror delete" command to delete the link.
2. Delete the objects in the restore bucket.

Syslog Message

Cleanup of the link between buckets "%s" and "%s" failed with error "%s" and the objects in the restore bucket could not be deleted.

Parameters

sourceBucket (STRING): Name of the source bucket in the SnapMirror relationship.

destBucket (STRING): Name of the destination bucket in the SnapMirror relationship.

error (STRING): Error that was encountered.

mgmt.snapmir.fl.rstr.lnk.cln

Severity

ERROR

Description

This message occurs when the cleanup of a link failed when it encountered an error during a SnapMirror restore operation. Because the link could not be cleaned up properly, the bucket could be in an inconsistent state and might not be able to accept any traffic. Also, if the links are not cleaned up, a new SnapMirror relationship cannot be established with these two buckets.

Corrective Action

Run the "snapmirror delete" command to delete the link.

Syslog Message

Cleanup of the link between buckets "%s" and "%s" failed with error "%s".

Parameters

sourceBucket (STRING): Name of the source bucket in the SnapMirror relationship.

destBucket (STRING): Name of the destination bucket in the SnapMirror relationship.
error (STRING): Error that was encountered.

mgmt.snapmir.init.fail

Severity

ERROR

Description

This message occurs when a SnapMirror® 'initialize' or 'initialize-ls-set' command fails and no more retries will be attempted.

Corrective Action

Check the reason for the error, take action accordingly, and issue the command again.

Syslog Message

Initialize from source volume '%s' to destination volume(s) '%s' failed with error '%s'. Job ID %llu.

Parameters

srcpath (STRING): Path name of the source volume of the SnapMirror relationship.
dstpaths (STRING): Path names of the destination volumes to which the initialize failed.
error (STRING): Error message.
jobID (LONGINT): Job ID.

mgmt.snapmir.ls.catchup.fail

Severity

ALERT

Description

This message occurs when a catch-up update for a lagging member in a load-sharing set fails.

Corrective Action

Check the reason for the error and take action accordingly.

Syslog Message

Load-share catch-up update transfer from source volume '%s' to destination volume '%s' failed with error '%s'. Job ID %llu.

Parameters

srcpath (STRING): Path name of the source volume of the SnapMirror® relationship.
dstpath (STRING): Path name of the destination volume to which the catch-up update transfer failed.
error (STRING): Error message.
jobID (LONGINT): Job ID.

mgmt.snapmir.resync.fail

Severity

ALERT

Description

This message occurs when a SnapMirror® 'resync' command fails and no more retries will be attempted.

Corrective Action

Check the reason for the error, take action accordingly, and issue the command again.

Syslog Message

Resync from source volume '%s' to destination volume '%s' failed with error '%s'. Job ID %llu.

Parameters

srcpath (STRING): Path name of the source volume of the SnapMirror relationship.

dstpath (STRING): Path name of the destination volume to which the resync failed.

error (STRING): Error message.

jobID (LONGINT): Job ID.

mgmt.snapmir.schd.trans.fail

Severity

ALERT

Description

This message occurs when a scheduled SnapMirror® transfer fails and no automatic retry will be attempted until the next scheduled transfer.

Corrective Action

Check the reason for the error and take action accordingly.

Syslog Message

Scheduled transfer from source volume '%s' to destination volume(s) '%s' failed with error '%s'. Job ID %llu.

Parameters

srcpath (STRING): Path name of the source volume of the SnapMirror relationship.

dstpaths (STRING): Path names of the destination volumes to which the scheduled transfer failed.

error (STRING): Error message.

jobID (LONGINT): Job ID.

mgmt.snapmir.schd.trans.overrun

Severity

ERROR

Description

This message occurs when a scheduled SnapMirror® transfer overruns the schedule window.

Corrective Action

Check the reason for the schedule overrun and take action accordingly.

Syslog Message

Scheduled transfer from source volume '%s' to destination volume(s) '%s' is taking longer than the schedule window. Job ID %llu.

Parameters

srcpath (STRING): Path name of the source volume of the SnapMirror relationship.
dstpaths (STRING): Path names of the destination volumes of the scheduled transfer.
jobID (LONGINT): Job ID.

mgmt.snapmir.unexpected.err

Severity

ERROR

Description

This message occurs when a SnapMirror operation encounters an unexpected error. JobID might be zero if the job ID could not be determined at the time the error was generated.

Corrective Action

If the problem persists, contact NetApp technical support.

Syslog Message

SnapMirror unexpected error '%s'. Job ID %llu.

Parameters

error (STRING): Error message.
jobID (LONGINT): Job ID.

mgmt.snapmir.update.fail

Severity

ALERT

Description

This message occurs when a SnapMirror@ 'update' or 'update-ls-set' command fails and no more retries will be attempted.

Corrective Action

Check the reason for the error, take action accordingly, and issue the command again.

Syslog Message

Update from source volume '%s' to destination volume(s) '%s' failed with error '%s'. Job ID %llu.

Parameters

srcpath (STRING): Path name of the source volume of the SnapMirror relationship.
dstpaths (STRING): Path names of the destination volumes to which the update failed.
error (STRING): Error message.
jobID (LONGINT): Job ID.

mgmt.vdr events

mgmt.vdr.fsecurity.cfig.err

Severity

ERROR

Description

This message occurs when a "snapmirror break" operation is executed while a file security job is running and the previous "snapmirror update" operation only partially transfers the changes made to the file system by the file security job. This results in the policy being applied only partially to the partner; that is, ACLs on the files are applied partially.

Corrective Action

Verify that the file security job has been successfully applied on the Vserver DR partner by using the "job show" command on the source; it should display the "complete" status. Then resync the SnapMirror® relationship by using the "snapmirror resync -source-vserver <source-vserver-name> -destination-vserver <destination-vserver-name>" command. Alternatively, you can break the SnapMirror relationship, and then reapply the job on the destination by using the "vserver security file-directory apply -vserver <vserver-name> -policy-name <policy-name>" command. See the "vserver security file-directory" man pages for more information. If the problem persists, contact NetApp technical support.

Syslog Message

Failed to apply file security policy "%s" on Vserver "%s".

Parameters

policy (STRING): Fsecurity policy name.
vservername (STRING): Name of the Vserver.

mgmt.vopl events

mgmt.vopl.cleanup.failed

Severity

ALERT

Description

This message occurs when the system encounters an error trying to clean up after a failed 'volume move' operation.

Corrective Action

Contact NetApp technical support..

Syslog Message

'volume move' cleanup operation with job ID '%jd' failed in step (%s) with the error (%s) for volume '%s' in Vserver '%s'.

Parameters

jobID (LONGINT): Job ID of the 'volume move' operation.
step (STRING): Phase during cleanup where the error occurred.
error (STRING): Error recorded during the cleanup phase.
volName (STRING): Name of the source volume.
vserverName (STRING): Name of the source Vserver.

mgmt.vopl.del.staleLunMaps

Severity

ERROR

Description

This message occurs when a 'volume delete' operation cannot delete LUN initiator group maps for the LUNs in the volume, resulting in stale LUN initiator group maps. Any attempt to delete these initiator groups that are mapped to nonexistent LUNs (provided that they are not mapped to any other LUNs) fails. 'lun mapped show -igroup <igroup name>' does not list any maps, but 'igroup delete -igroup <igroup name>' fails with an error, suggesting that the initiator group cannot be deleted because it is mapped to LUNs.

Corrective Action

Contact NetApp technical support.

Syslog Message

Could not delete LUN initiator group maps for the volume with MSID '%llu' on Vserver '%s'. Error: %s.

Parameters

voidMsid (LONGINT): Master data set ID of the volume being deleted.

vserver (STRING): Vserver hosting the volume.

error (STRING): Internal software error.

mgmt.vopl.fail.restart.nosvol

Severity

ALERT

Description

This message occurs when a 'volume move' operation fails in the restart phase because the source volume is not found. The system repeatedly attempts the phase until the restart can be completed. In the time between the first failure and when the restart can be completed, there might be disruption to client traffic for the volume being moved.

Corrective Action

Verify that the job restart is completed by running the "volume move show -vserver <vservname> -volume <volName>" command. If the restart phase continues to fail, contact NetApp technical support.

Syslog Message

'volume move' operation with job ID '%jd' for volume '%s' in Vserver '%s' failed in the restart phase when attempting to retrieve the source volume.

Parameters

jobID (LONGINT): Job ID of the 'volume move' operation.

volName (STRING): Name of the source volume.

vserverName (STRING): Name of the source Vserver.

mgmt.vopl.fail.status.entry

Severity

ALERT

Description

This message occurs when a 'volume move' operation fails to make an entry in the VLDB table for the 'volume move show' command. The system repeatedly attempts this operation until it exhausts the number of retries. Until an entry is made, the 'volume move show' command might return stale entries use 'job show -id' to show the status of the current volume move operation.

Corrective Action

Use the 'job show -id' command to show the status of the current 'volume move' operation. Retry the 'volume move' operation. If the problem persists, contact NetApp technical support.

Syslog Message

The 'volume move' operation with ID '%jd' for volume name '%s' in Vserver '%s' failed while attempting to make an entry in the VLDB table for the 'volume move show' command. Use 'job show -id' command to show the current status of the job.

Parameters

jobID (LONGINT): Job ID of the 'volume move' operation.

volName (STRING): Name of the source volume.

vserverName (STRING): Name of the source Vserver.

mgmt.vopl.fail.status.modify

Severity

ALERT

Description

This message occurs when a 'volume move' operation fails to modify the VLDB table for the 'volume move show' command. The system repeatedly attempts this phase. Until the modification succeeds, the 'volume move show' command might return stale information about the current 'volume move' operation.

Corrective Action

If the problem persists, contact NetApp technical support.

Syslog Message

The 'volume move' operation for volume '%s' with job ID '%jd' in Vserver '%s' cannot modify an entry in the VLDB table.

Parameters

volName (STRING): Name of the source volume.

jobId (LONGINT): Job ID of the 'volume move' operation.

vserverName (STRING): Name of the source Vserver.

mgmt.vopl.lun.quiesce.migr

Severity

NOTICE

Description

This message occurs when the LUN is quiesced during data migration.

Corrective Action

(None).

Syslog Message

LUN %s with uuid %s, present on volume %s, SVM %s has been successfully quiesced during data migration on to the Clone volume %s, Clone SVM %s.

Parameters

lun_name (STRING): Name of the LUN which is quiesced.

lun_uuid (STRING): Unique identifier of the LUN.

parent_vol (STRING): Name of the parent volume.

parent_vserver (STRING): Name of the SVM on which the parent volume resides.

clone_vol (STRING): Name of the clone volume on which the LUN will be migrated.

clone_vserver (STRING): Name of the SVM on which clone volume resides.

mgmt.vopl.lun.unquiesce.migr

Severity

NOTICE

Description

This message occurs when the LUN is unquiesced during data migration due to volume clone creation failure.

Corrective Action

(None).

Syslog Message

LUN %s with uuid %s, present on volume %s, SVM %s has been successfully unquiesced during data migration on to the Clone volume: %s, Clone SVM: %s due to volume clone creation failure.

Parameters

lun_name (STRING): Name of the LUN which is unquiesced.

lun_uuid (STRING): Unique identifier of the LUN.

parent_vol (STRING): Name of the parent volume.

parent_vserver (STRING): Name of the SVM on which the parent volume resides.

clone_vol (STRING): Name of the clone volume where the LUN resides after migration.

clone_vserver (STRING): Name of the SVM on which clone volume resides.

mgmt.vopl.made.status.entry

Severity

INFORMATIONAL

Description

This message occurs when a 'volume move' operation makes an entry for the 'volume move show' command because the entry did not exist in the VLDB table.

Corrective Action

(None).

Syslog Message

Use the 'volume move show -vserver %s -volume %s' command to show the status of this 'volume move' operation.

Parameters

vserverName (STRING): Name of the source Vserver.

volName (STRING): Name of the source volume.

mgmt.vopl.move.badDstVol

Severity

ERROR

Description

This message occurs when a 'volume move' operation cannot access the specified destination volume.

Corrective Action

Verify that the destination volume exists and is online.

Syslog Message

The move operation could not access the specified destination volume '%s'.

Parameters

dstVol (STRING): Name of the temporary destination volume for move operation.

mgmt.vopl.move.badSourceVol

Severity

ERROR

Description

This message occurs when a 'volume move' operation cannot access the specified source volume.

Corrective Action

Verify that the source volume exists and is online.

Syslog Message

The move operation could not access the specified source volume '%s' in Vserver '%s' for job ID '%jd'.

Parameters

srcVol (STRING): Name of the volume to be moved.

vserverName (STRING): Name of the Vserver.

jobID (LONGINT): Job ID of the volume move operation.

mgmt.vopl.move.bytesLeft

Severity

INFORMATIONAL

Description

This message occurs when a 'volume move' operation is in data copy phase and we want to know the bytes left.

Corrective Action

(None).

Syslog Message

The 'volume move' operation for volume '%s' in Vserver '%s' and job ID '%jd' is in data copy phase. We want to know the number of bytes left to transfer.

Parameters

volpath (STRING): Name of the source volume of the move job.

vserverName (STRING): Name of the source Vserver.

jobID (LONGINT): Job ID of the 'volume move' operation.

mgmt.vopl.move.cantCrtDstVol

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because the destination volume cannot be created.

Corrective Action

Check for space on the destination aggregate. Execute the "volume move" command with the "-perform-validation-only" parameter. If it succeeds, contact NetApp technical support. If it does not succeed, increase space on the destination aggregate, then try the "volume move" command again.

Syslog Message

Volume move job failed because destination volume "%s" could not be created.

Parameters

volpath (STRING): Name of the destination volume of the move.

mgmt.vopl.move.cantCrtSrcSnp

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because creation of a snapshot on the source volume failed.

Corrective Action

Use the "volume show" to check if the volume has enough space for the snapshot. Use the "snapshot show" command to check if the number of snapshots have reached the maximum count. If the issue persists, contact Contact NetApp technical support..

Syslog Message

Volume move job failed because creation of a snapshot on source volume "%s" failed.

Parameters

volpath (STRING): Name of the source volume of the move job.

mgmt.vopl.move.cantDstCncl

Severity

NOTICE

Description

This message occurs when the 'volume move' job cannot conclude a transfer on the destination volume.

Corrective Action

Contact NetApp technical support.

Syslog Message

'volume move' job could not conclude a transfer on the destination volume '%s'.

Parameters

volpath (STRING): Name of the destination volume of the move job.

mgmt.vopl.move.cantReadCfg

Severity

ERROR

Description

This message occurs when the 'volume move' job cannot read the configuration information.

Corrective Action

Check whether the replicated database is online.

Syslog Message

The job configuration information for 'volume move' operation with job ID '%jd' could not be read.

Parameters

jobID (LONGINT): Job ID of the 'volume move' operation.

mgmt.vopl.move.cantSaveToRdb

Severity

NOTICE

Description

This message occurs when the 'volume move' job cannot save information to the replicated database. The 'volume move' job attempts to retry the operation.

Corrective Action

The "volume move" job is retried automatically. Check the status of database with "cluster ring show" advanced command. If the problem persists, contact NetApp technical support.

Syslog Message

The volume move job '%jd' for volume '%s' in Vserver '%s' could not save the information to the replicated database.

Parameters

jobId (LONGINT): ID of the 'volume move' job.
volName (STRING): Name of the source volume.
vserverName (STRING): Name of the Vserver.

mgmt.vopl.move.cantSrcCncl

Severity

NOTICE

Description

This message occurs when the 'volume move' job cannot conclude a transfer on the source volume.

Corrective Action

Verify that the source volume exists, is readable, and is not currently locked exclusively by another process. If the problem persists, contact NetApp technical support.

Syslog Message

'volume move' job could not conclude the transfer on the source volume '%s'.

Parameters

volpath (STRING): Name of the source volume of the move job.

mgmt.vopl.move.ClnupFldDIVol

Severity

ERROR

Description

This message occurs when a cleanup operation cannot delete the destination volume after a 'volume move' job fails.

Corrective Action

Delete the destination volume by using the 'volume delete' command.

Syslog Message

Could not delete destination volume '%s' following a failed 'volume move'.

Parameters

volpath (STRING): Name of the destination volume that could not be deleted.

mgmt.vopl.move.cntRdDstDAttr

Severity

NOTICE

Description

This message occurs when the 'volume move' job cannot read the attributes of the destination volume from disk. The 'volume move' job attempts to retry the operation.

Corrective Action

Use the 'volume move show' command to get the status of the current move operation. If the problem persists, contact NetApp technical support.

Syslog Message

The 'volume move' job could not fetch attributes of destination volume '%s' from the disk.

Parameters

volpath (STRING): Name of the destination volume involved in the move operation.

mgmt.vopl.move.cntRdPostCutoverSrcDAttr

Severity

ERROR

Description

This message occurs when a 'volume move' operation cannot access the specified source volume after cutover to propagate final volume attributes. The attributes were set to values that were either obtained immediately before the cutover occurred, or were set to default values.

Corrective Action

Verify that the attributes on the destination volume are correct. Specifically, check the value for the attribute "filesystem-size-fixed".

Syslog Message

The move operation could not read post-cutover attributes from the specified temporary source volume '%s' in Vserver '%s' for job ID '%jd'.

Parameters

dstVol (STRING): Name of the temporary source volume for the move operation.

vserverName (STRING): Name of the Vserver.

jobID (LONGINT): Job ID of the volume move operation.

mgmt.vopl.move.cntRdSrcDAttr

Severity

NOTICE

Description

This message occurs when the volume move operation cannot read the attributes of the source volume from disk. The volume move operation will attempt to retry the operation.

Corrective Action

(None).

Syslog Message

The volume move operation could not fetch the attributes of source volume '%s' from the disk.

Parameters

volpath (STRING): Name of the source volume involved in the move operation.

mgmt.vopl.move.cut.entryFail

Severity

ERROR

Description

This message occurs when the volume move operation cannot enter the cutover phase. The original source volume is functional. After a short delay, the volume move operation will reattempt cutover entry.

Corrective Action

If the problem persists, reduce client traffic on the volume being moved and reduce the general load on the destination node.

Syslog Message

The volume move operation of volume '%s' in Vserver '%s' to destination aggregate '%s' did not enter the cutover phase. The system provided the additional explanation: '%s'. After a short delay, the volume move operation will reattempt cutover entry. The job ID for the volume move job is '%jd'.

Parameters

volName (STRING): Name of the volume.

vserverName (STRING): Name of the Vserver.

aggrName (STRING): Name of the destination aggregate.

reasonforFailure (STRING): Reason for the failure.

jobID (LONGINT): Job ID of the volume move operation.

mgmt.vopl.move.cutover.deferred

Severity

ALERT

Description

This message occurs when the volume move job cannot be completed because the cutover phase has been deferred.

Corrective Action

Address the reason for the cutover deferral, and then use the 'volume move trigger-cutover' command to reattempt the cutover phase for this volume move operation.

Syslog Message

Cutover phase has been deferred for the volume move operation with ID '%jd' on volume '%s' on Vserver '%s' to destination aggregate '%s', because of '%s'. Space savings from efficiency could be lost.

Parameters

jobID (LONGINT): Job ID of the volume move operation.
volName (STRING): Name of the volume.
vserverName (STRING): Name of the Vserver.
aggrName (STRING): Name of the destination aggregate.
reasonforDefer (STRING): Reason for deferred cutover.

mgmt.vopl.move.cutover.deferred.wait

Severity

INFORMATIONAL

Description

This message occurs when the volume move job cannot be completed because the cutover phase has been deferred due to the user specifying the cutover action as 'wait'.

Corrective Action

Use the 'volume move trigger-cutover' command to attempt the cutover phase for this volume move operation.

Syslog Message

Cutover phase has been deferred for the volume move operation with ID '%jd' on volume '%s' on Vserver '%s' to destination aggregate '%s', because of '%s'. Space savings from efficiency could be lost.

Parameters

jobID (LONGINT): Job ID of the volume move operation.
volName (STRING): Name of the volume.
vserverName (STRING): Name of the Vserver.
aggrName (STRING): Name of the destination aggregate.
reasonforDefer (STRING): Reason for the deferred cutover.

mgmt.vopl.move.cutover.failed

Severity

ERROR

Description

This message occurs when the volume move job attempts to cut over and is unsuccessful. The system continues to retry the operation until it exhausts the number of cutover attempts allowed.

Corrective Action

Reduce client traffic on the volume, that is scheduled to be moved.

Syslog Message

The volume move operation with ID '%jd' on volume '%s' on Vserver '%s' to destination aggregate '%s' did not cut over because: '%s'. The volume move operation has tried to cut over '%d' out of '%d' times, %d forced.

Parameters

jobID (LONGINT): Job ID of the volume move operation.
volName (STRING): Name of the volume.
vserverName (STRING): Name of the Vserver.

aggrName (STRING): Name of the aggregate.
reasonforFailure (STRING): Reason for cutover failure.
actualcutoverAttempt (INT): Number of actual cutover attempts made.
cutoverAttempt (INT): Number of cutover attempts.
forcedCutoverAttempt (INT): Number of forced cutover attempts.

mgmt.vopl.move.cutoverMod

Severity

INFORMATIONAL

Description

This message occurs when a 'volume move' operation is in cutover and one of the modifiable parameters used by the 'move' job has been modified with the 'volume move modify' command. These modified values will be used for next cutover attempt.

Corrective Action

(None).

Syslog Message

The 'volume move' operation with job ID '%jd' for volume '%s' in Vserver '%s' is performing a cutover. Values modified with the 'volume move modify' command will not be used until the next cutover attempt.

Parameters

jobId (LONGINT): Job ID of the 'volume move' operation.
volName (STRING): Name of the source volume.
vserverName (STRING): Name of the source Vserver.

mgmt.vopl.move.done

Severity

NOTICE

Description

This message occurs when the volume move job succeeds.

Corrective Action

(None).

Syslog Message

The volume move job with ID '%jd' on volume '%s' on Vserver '%s' to destination aggregate '%s' succeeded.

Parameters

jobID (LONGINT): Job ID of the volume move operation.
volName (STRING): Name of the volume.
vserverName (STRING): Name of the Vserver.
aggrName (STRING): Name of the destination aggregate.

mgmt.vopl.move.dstPrepareFld

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because the destination volume cannot be prepared for a transfer.

Corrective Action

Contact NetApp technical support.

Syslog Message

Volume move job failed because the destination volume '%s' could not be prepared for a transfer.

Parameters

volpath (STRING): Name of the destination volume of the move job.

mgmt.vopl.move.findSnpDltFld

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because the call to calculate the delta between a snapshot and the active file system failed.

Corrective Action

Contact NetApp technical support.

Syslog Message

Volume move job failed because the call to calculate the delta between a snapshot and the active file system on the source volume '%s' failed.

Parameters

volpath (STRING): Name of the source volume of the move job.

mgmt.vopl.move.getNextSnapFld

Severity

ERROR

Description

This message occurs when the 'volume move' job cannot look up the snapshot next in age to the currently referenced snapshot. The 'volume move' job attempts to retry the operation.

Corrective Action

Use the 'volume move show' command to get the status of the current move operation. If the problem persists, contact NetApp technical support.

Syslog Message

The 'volume move' job could not to look up the snapshot next in age to the currently referenced snapshot on the source volume '%s'.

Parameters

volpath (STRING): Name of the source volume involved in the move operation.

mgmt.vopl.move.gtDstSSLstFld

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because a snapshot list cannot be obtained from the destination volume.

Corrective Action

Check whether the destination volume is online. If the problem persists, contact NetApp technical support.

Syslog Message

Volume move job failed because a snapshot list could not be obtained from the destination volume '%s'.

Parameters

volpath (STRING): Name of the destination volume of the move job.

mgmt.vopl.move.gtSnpTgSrcFld

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because a snapshot tag cannot be read from the source volume.

Corrective Action

Check whether the source volume is online. If the problem persists, contact NetApp technical support.

Syslog Message

Volume move job failed because a snapshot tag could not be read from the source volume '%s'.

Parameters

volpath (STRING): Name of the source volume of the move job.

mgmt.vopl.move.gtSrcSSLstFld

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because a snapshot list cannot be obtained from the source volume.

Corrective Action

Check whether the source volume is online. If the problem persists, contact NetApp technical support.

Syslog Message

Volume move job failed because a snapshot list could not be obtained from the source volume '%s'.

Parameters

volpath (STRING): Name of the source volume of the move job.

mgmt.vopl.move.gtSSTgsDstFld

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because the snapshot tags on the destination volume cannot be read.

Corrective Action

Retry the volume move job. If the problem persists, this indicates a system level problem. Contact NetApp technical support.

Syslog Message

Volume move job failed because snapshot tags on the destination volume '%s' in vserver '%s' for the volume move of source volume '%s' in vserver '%s' could not be read.

Parameters

dstVol (STRING): Name of the destination volume of the move job.

srcVol (STRING): Name of the source volume of the move job.

dstVserverName (STRING): Name of destination vserver.

srcVserverName (STRING): Name of source vserver.

mgmt.vopl.move.has.clones

Severity

ERROR

Description

This message occurs when a 'volume move' operation finishes moving the volume to the destination aggregate but cannot delete the original volume instance on the source aggregate. This is because the original volume instance has volume clones.

Corrective Action

The system usually reaps these types of volume after all clones have been deleted or split automatically. If space occupied by source needs to be freed immediately, then delete the original volume instance using the 'volume delete' command after all the volume clones have been deleted or split.

Syslog Message

The 'volume move' operation with ID '%jd' could not delete the original volume %s in Vserver %s on %s aggregate following a successful volume move because the original volume instance has volume clones.

Parameters

jobId (LONGINT): Job ID of the volume move operation.
volName (STRING): Name of the volume instance that could not be deleted.
vserverName (STRING): Name of the volume's Vserver.
aggrName (STRING): Name of the source aggregate.

mgmt.vopl.move.invlDXfrState

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because a transfer is in an invalid state.

Corrective Action

Contact NetApp technical support.

Syslog Message

Volume move job with job ID '%jd' for volume '%s' in Vserver '%s' failed because a transfer was in an invalid state.

Parameters

jobID (LONGINT): ID of the 'volume move' job.
volName (STRING): Name of the volume.
vserverName (STRING): Name of the Vserver.

mgmt.vopl.move.jobIgnoreQuit

Severity

ERROR

Description

This message occurs when a volume move job fails to stop when you issue a 'volume move abort' or 'job stop' command. If the command is not repeated, the volume move job might continue to run to completion.

Corrective Action

Retry the 'volume move abort' or 'job stop' command before the volume move job is complete.

Syslog Message

Volume move job '%jd' for volume '%s' in Vserver '%s' could not be stopped at this time. Retry the 'volume move abort' or 'job stop' command.

Parameters

jobID (LONGINT): ID of the volume move job.
volName (STRING): Name of the volume.
vserverName (STRING): Name of the Vserver.

mgmt.vopl.move.jobQuit

Severity

INFORMATIONAL

Description

This message occurs when a 'volume move' job is not completed because a 'volume move abort' or 'job stop' command was issued.

Corrective Action

Verify the status of the move job through the 'volume move show' command.

Syslog Message

'volume move' job with ID '%jd' for volume '%s' in Vserver '%s' was not completed because a 'volume move abort' or 'job stop' command was issued.

Parameters

jobID (LONGINT): Job ID of the 'volume move' operation.

volName (STRING): Name of the volume.

vserverName (STRING): Name of the Vserver.

mgmt.vopl.move.last.upd.fail**Severity**

ERROR

Description

This message occurs when a 'volume move' operation fails to update attributes on the destination volume after the cutover has been completed.

Corrective Action

Contact NetApp technical support.

Syslog Message

'volume move' operation with job ID '%jd' for volume '%s' in Vserver '%s' failed to update the attributes on the destination volume after the cutover has been completed.

Parameters

jobID (LONGINT): Job ID of the 'volume move' operation.

volName (STRING): Name of the source volume.

vserverName (STRING): Name of the source Vserver.

mgmt.vopl.move.mark.source.reapable.failed**Severity**

ERROR

Description

This message occurs when a 'volume move' operation finishes moving the volume to the destination aggregate but cannot mark the original volume instance on the source aggregate for deletion. The original volume instance cannot be deleted immediately because it has volume clones.

Corrective Action

Delete the original volume instance using the 'volume delete' command after all the volume clones have been deleted or split.

Syslog Message

The 'volume move' operation with ID '%jd' could not mark the Volume %s containing volume clones in Vserver %s on %s aggregate for later deletion after a successful volume move.

Parameters

jobId (LONGINT): Job ID of the volume move operation.
volName (STRING): Name of the volume instance that could not be marked for later deletion.
vserverName (STRING): Name of the volume's Vserver.
aggrName (STRING): Name of the destination aggregate.

mgmt.vopl.move.memAllocFId

Severity

NOTICE

Description

This message occurs when the 'volume move' job cannot allocate memory. The 'volume move' job attempts to retry the operation.

Corrective Action

Use the 'volume move show' command to get the status of the current move operation. If the problem persists, contact NetApp technical support.

Syslog Message

The 'volume move' job ID '%jd' for volume '%s' in Vserver '%s' could not allocate memory.

Parameters

jobId (LONGINT): ID of the 'volume move' job.
volName (STRING): Name of the volume.
vserverName (STRING): Name of the Vserver.

mgmt.vopl.move.moveModlgr

Severity

INFORMATIONAL

Description

This message occurs when modifiable parameters of the 'move' job have been modified by 'volume move modify' command, but the 'volume move' operation finished with older values and did not use the newly modified values.

Corrective Action

Use 'volume move show' command to verify the parameters used during cutover phase and the final state of the volume move operation.

Syslog Message

The 'volume move' operation with job ID '%jd' for volume '%s' in Vserver '%s' has completed. Parameters modified during last cutover attempt through 'volume move modify' command have been ignored or 'volume

move' operation failed on job restart before refreshing parameters from the VLDB.

Parameters

jobId (LONGINT): Job ID of the 'volume move' operation.

volName (STRING): Name of the source volume.

vserverName (STRING): Name of the source Vserver.

mgmt.vopl.move.nosnapSPACE

Severity

ERROR

Description

This message occurs when a 'volume move' operation fails to create a snapshot on source volume because the number of snapshots in the volume exceeds the maximum limit or there is insufficient disk space in the volume.

Corrective Action

Make sure that the snapshot limit is not reached for the volume. The current Data ONTAP version allows a maximum of 255 snapshots per volume. If required, delete old snapshots of the volumes on the aggregate by running the 'volume snapshot delete' command.

Syslog Message

The 'volume move' operation with job ID '%jd' for volume '%s' present on Vserver '%s' cannot proceed (Reason: Cannot create a snapshot on the volume).

Parameters

jobId (LONGINT): Job ID of the 'volume move' operation.

volName (STRING): Name of the volume.

vserverName (STRING): Name of the Vserver.

mgmt.vopl.move.nospace

Severity

ERROR

Description

This message occurs when there is not enough space on the volume or aggregate for a 'volume move' operation to proceed. It could be on the source or the destination node.

Corrective Action

Reduce the amount of used space on the volume or aggregate, or increase the size of the volume or aggregate. To increase the size of the volume, run the 'volume modify' command. To create space on an aggregate, take one of the following actions: a. To free up more space on a volume, delete old snapshots of the volumes on the aggregate by running the 'volume snapshot delete' command. b. To increase the size of a volume or an aggregate, add disks to the aggregate by running the 'storage aggregate add-disks' command.

Syslog Message

The 'volume move' operation with ID '%jd' for volume '%s' present on Vserver '%s' cannot proceed (Reason: Not enough space in the volume or aggregate).

Parameters

jobId (LONGINT): Job ID of the 'volume move' operation.

volName (STRING): Name of the volume.

vserverName (STRING): Name of the Vserver.

mgmt.vopl.move.parent.online

Severity

NOTICE

Description

This message occurs when a "volume move" operation fails to take offline the quiesced volume remaining after moving a clone parent, because wafiron is running.

Corrective Action

No action is required, because the system removes the quiesced clone parent automatically. To free some of the resources used by the volume, you can manually take it offline by using the "volume offline" command after the wafiron operation has completed.

Syslog Message

The "volume move" operation for the volume %s on vserver %s with job-id %jd could not offline the quiesced clone parent volume left behind.

Parameters

volName (STRING): Name of the volume.

vserverName (STRING): Name of the Vserver.

jobId (LONGINT): Job ID of the "volume move" operation.

mgmt.vopl.move.queryDstFId

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because a query of the destination for transfer status failed.

Corrective Action

Its a system level problem. Contact Contact NetApp technical support. for further investigation.

Syslog Message

Volume move job failed because a query for transfer status of the destination volume '%s' in vserver '%s' failed.

Parameters

volpath (STRING): Name of the destination volume of the move job.

vserverName (STRING): Name of destination vserver.

mgmt.vopl.move.querySrcFId

Severity

NOTICE

Description

This message occurs when the 'volume move' job cannot be completed because a query of the source for transfer status failed. The 'volume move' job attempts to retry the operation.

Corrective Action

Use the 'volume move show' command to get the status of the move operation. If the problem persists, contact NetApp technical support.

Syslog Message

The 'volume move' job could not query the source '%s' for transfer status.

Parameters

volpath (STRING): Name of the source volume involved in the move operation.

mgmt.vopl.move.refVldbFld

Severity

NOTICE

Description

This message occurs when a 'volume move' operation fails to refresh modifiable parameters used by the 'move' job from the Volume Location Database (VLDB). Volume move operation will use current parameters until a refresh attempt succeeds.

Corrective Action

(None).

Syslog Message

The 'volume move' operation with job ID '%jd' for volume '%s' in Vserver '%s' could not refresh the modifiable parameters used by the 'move' job from the VLDB. Volume move operation will use current parameters until a refresh attempt succeeds.

Parameters

jobId (LONGINT): Job ID of the 'volume move' operation.

volName (STRING): Name of the source volume.

vserverName (STRING): Name of the source Vserver.

mgmt.vopl.move.restart.failed

Severity

ERROR

Description

This message occurs when a volume move job encounters conditions that prevent it from restarting; for example, required snapshots have been deleted. This might result in loss of client access to the volume, stale temporary volumes and stale metadata.

Corrective Action

Contact NetApp technical support.

Syslog Message

Volume move job ID '%jd' could not restart correctly and might have left a stale temporary volume and stale persistent volume move data. Client access to the data stored on the source volume might be blocked. Reason: %s, error %d. Move job was started for volume '%s' in Vserver '%s'.

Parameters

jobID (LONGINT): Job ID of the volume move job.
reason (STRING): Reason for restart failure.
error (INT): Error code for the restart failure.
volName (STRING): Name of the volume.
vserverName (STRING): Name of the Vserver.

mgmt.vopl.move.snpNtDeletd

Severity

ERROR

Description

This message occurs when a 'volume move' operation cannot delete a reference snapshot created by the move job.

Corrective Action

Use the 'snapshot show' command to verify that the snapshot exists and is not locked by another process. Use the 'snapshot delete' command to delete the snapshot manually.

Syslog Message

snapshot for 'volume move' job ID %jd could not be deleted: name: %s; Vserver ID: %d; volume name: %s.

Parameters

jobId (LONGINT): ID of the volume move job.
snapName (STRING): Name of the snapshot.
vserverId (INT): Destination Vserver ID.
volName (STRING): Name of the parent volume of the snapshot.

mgmt.vopl.move.source.cleanup.failed

Severity

ERROR

Description

This message occurs when a 'volume move' operation finishes moving the volume to the destination aggregate but cannot delete the original volume instance on the source aggregate.

Corrective Action

Delete the original volume instance using the 'volume delete' command after offlining the volume.

Syslog Message

The 'volume move' operation with ID '%jd' could not delete the Volume %s in Vserver %s on %s aggregate after a successful volume move.

Parameters

jobId (LONGINT): Job ID of the volume move operation.
volName (STRING): Name of the volume instance that could not be deleted
vserverName (STRING): Name of the volume's Vserver.
aggrName (STRING): Name of the destination aggregate.

mgmt.vopl.move.srcVAttrGtFld

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because the Volume Location Database (VLDB) attributes for the source volume cannot be read.

Corrective Action

To check whether the VLDB process is up and running, run the (privilege: advanced) "cluster ring show -unitname vldb" command. Contact NetApp technical support.

Syslog Message

Volume move job failed because the VLDB attributes for source volume "%s" could not be read.

Parameters

volpath (STRING): Name of the source volume of the move job.

mgmt.vopl.move.srcVolInconst

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because the source volume is inconsistent.

Corrective Action

Contact NetApp technical support.

Syslog Message

Volume move job failed because the source volume '%s' is inconsistent.

Parameters

volpath (STRING): Name of the source volume of the move job.

mgmt.vopl.move.srcVolOffln

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because the source volume is offline.

Corrective Action

Bring the source volume online and retry the move job.

Syslog Message

Volume move job failed because the source volume '%s' is offline.

Parameters

volpath (STRING): Name of the source volume of the move.

mgmt.vopl.move.srcVolRstrctd**Severity**

ERROR

Description

This message occurs when the volume move job cannot be completed because the source volume is restricted.

Corrective Action

If the source volume is of type DP and a "snapmirror initialize" operation is running on it, wait for the operation to finish, then retry "volume move" operation. If the problem persists, contact NetApp technical support.

Syslog Message

Volume move job failed because the source volume "%s" is restricted.

Parameters

volpath (STRING): Name of the source volume of the move job.

mgmt.vopl.move.srcVolTemp**Severity**

ALERT

Description

This message occurs when a 'volume move' operation cannot start because the source volume is marked as temporary.

Corrective Action

Verify that the source volume exists.

Syslog Message

'volume move' operation with job ID '%jd' for source volume name '%s' and Vserver name '%s' failed because the source volume is marked as temporary.

Parameters

jobID (LONGINT): Job ID of the 'volume move' operation.

volName (STRING): Name of the source volume.

vserverName (STRING): Name of the source Vserver.

mgmt.vopl.move.stSnpTgDstFld

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because a snapshot tag cannot be written to the destination volume.

Corrective Action

Check whether the destination volume is online. If the problem persists, contact NetApp technical support.

Syslog Message

Volume move job failed because a snapshot tag could not be written to the destination volume '%s'.

Parameters

volpath (STRING): Name of the destination volume of the move job.

mgmt.vopl.move.voplIntrnlErr

Severity

ERROR

Description

This message occurs when the volume move job cannot be completed because of an internal error in the Volume Operations Library used by the job management code.

Corrective Action

Contact NetApp technical support.

Syslog Message

Volume move job ID '%jd' for volume '%s' in Vserver '%s' failed because of an internal error in Volume Operations Library used by the job management code.

Parameters

jobID (LONGINT): Job ID of the 'volume move' operation.

volName (STRING): Name of the volume.

vserverName (STRING): Name of the Vserver.

mgmt.vopl.move.XferNotFound

Severity

ERROR

Description

This message occurs when the 'volume move' job cannot find the specified transfer.

Corrective Action

Contact NetApp technical support.

Syslog Message

Transfer not found for 'volume move' job with '%jd' for volume '%s' in Vserver '%s'.

Parameters

jobId (LONGINT): ID of the 'volume move' job.
volName (STRING): Name of the volume.
vserverName (STRING): Name of the Vserver.

mgmt.vopl.rehost.failed

Severity

ERROR

Description

This message occurs when a volume rehost job attempts to rehost a volume from one Vserver to another and is unsuccessful. This might happen if the target volume is being accessed by some other Data ONTAP® operations (for example, volume move); if the target volume is in a relationship, such as a SnapMirror DP relationship; or if the aggregate hosting the volume is undergoing a wafiron process. The system makes its best effort to revert the rehost procedure and make the volume available under the source Vserver. Subsequent attempts to rehost this volume might be successful; if the volume rehost revert procedure still fails, use the command "debug vreport" to fix volume discrepancies.

Corrective Action

Follow the instructions provided as part of the volume rehost error and retry the operation after some time. If the volume rehost revert procedure fails and there are volume discrepancies, use command "debug vreport" in diagnostic mode to fix volume discrepancies.

Syslog Message

The volume rehost operation on volume '%s [%s]' on Vserver '%s' to destination Vserver '%s' by administrator '%s' failed with reason: '%s'. The volume rehost operation can be retried after sometime.

Parameters

volName (STRING): Name of the target volume.
volUuid (STRING): Target volume UUID.
vserverName (STRING): Name of the source Vserver.
destinationVserverName (STRING): Name of the destination Vserver.
adminName (STRING): Name of the administrator attempting the volume rehost operation.
reasonforFailure (STRING): Reason for volume rehost failure.

mgmt.vopl.rehost.succeeded

Severity

INFORMATIONAL

Description

This message occurs when a volume rehost job is successful in rehosting a volume from one Vserver to another.

Corrective Action

(None).

Syslog Message

The volume rehost operation on volume '%s [%s]' on Vserver '%s' to destination Vserver '%s' by administrator '%s' is successful.

Parameters

volName (STRING): Name of the target volume.

volUuid (STRING): Target volume UUID.

vserverName (STRING): Name of the source Vserver.

destinationVserverName (STRING): Name of the destination Vserver.

adminName (STRING): Name of the administrator attempting the volume rehost operation.

mgmt.vopl.restart.fail.jstate

Severity

NOTICE

Description

This message occurs when a volume move operation encounters an error during the restart phase because it cannot retrieve the state information from the job manager. The system repeatedly attempts the restart process until it can be completed.

Corrective Action

Verify that the restart phase is completed by running the "volume move show -vserver <vservename> -volume <volName>";" command. If the restart phase continues to fail, contact NetApp technical support.

Syslog Message

volume move operation with job ID '%jd' for volume '%s' in Vserver '%s' encountered an error in the restart phase when attempting to retrieve the job state information.

Parameters

jobID (LONGINT): Job ID of the volume move operation.

volName (STRING): Name of the source volume.

vserverName (STRING): Name of the source Vserver.

mgmt.vopl.restart.retry.fail

Severity

ALERT

Description

This message occurs when an attempt to restart an interrupted 'volume move' operation repeatedly encounters an error and cannot proceed any further. The 'volume move' job will transition to a failed state without cleanup being attempted.

Corrective Action

Check the job status for the ID listed in the event message, and look for errors involving the source and destination nodes and aggregates, and then contact NetApp technical support.

Syslog Message

The attempt to restart the 'volume move' operation with job ID '%jd' for volume '%s' in Vserver '%s' failed.

Parameters

jobID (LONGINT): Job ID of the 'volume move' operation.

volName (STRING): Name of the source volume.

vserverName (STRING): Name of the source Vserver.

mgmt.vopl.vmsi.fail.no.entry

Severity

ALERT

Description

This message occurs when a "volume move" operation cannot update the VLDB table, because the system cannot find any record of the operation within the table. This failure prevents the operation from being displayed in by the "volume move show" command.

Corrective Action

Use the "job show -id" command to display the current status of the "volume move" operation.

Syslog Message

The "volume move" operation for the volume %s with job-id %jd could not modify the entry in the VLDB table for the "volume move show" command. Use the "job show -id" command to track the status of this move operation.

Parameters

volName (STRING): Name of the volume.

jobId (LONGINT): Job ID of the "volume move" operation.

Copyright information

Copyright © 2026 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.