



## **ndo events**

### **ONTAP 9.15.1 EMS reference**

NetApp  
June 10, 2024

# Table of Contents

ndo events .....	1
ndo.cr events .....	1

# ndo events

## ndo.cr events

### ndo.cr.canceled

#### Severity

NOTICE

#### Description

This message occurs when a controller replacement operation is canceled by the operator.

#### Corrective Action

(None).

#### Syslog Message

Controller replacement operation on node "%s" is canceled by the operator.

#### Parameters

**nodeName** (STRING): Name of the node that was being replaced when the operation was canceled.

### ndo.cr.completed

#### Severity

NOTICE

#### Description

This message occurs when a controller replacement operation has been completed successfully in the HA group.

#### Corrective Action

(None).

#### Syslog Message

Controller replacement operation completed. New node "%s" (model: %s), HA partner node "%s" (model: %s)

#### Parameters

**newNodeName** (STRING): Node name of the first new controller.

**newModelName** (STRING): Model name of the first new controller.

**haNodeName** (STRING): Node name of the new HA partner controller.

**haModelName** (STRING): Model name of the new HA partner controller.

### ndo.cr.completed.firstNode

#### Severity

NOTICE

**Description**

This message occurs when a controller replacement operation has been completed on the first node of the HA group.

**Corrective Action**

(None).

**Syslog Message**

Controller replacement operation completed on the first controller of the HA group. New node: %s (model: %s).

**Parameters**

**nodeName** (STRING): Node name of the new controller.

**modelName** (STRING): Model name of the new controller.

**ndo.cr.nso.canceled****Severity**

NOTICE

**Description**

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster FC configuration has been canceled.

**Corrective Action**

(None).

**Syslog Message**

NSO-based controller replacement operation was canceled from node: %s. Remote cluster node: %s, remote cluster HA partner node: %s.

**Parameters**

**initiatingClusterNodeName** (STRING): Name of the node from where controller replacement operation was canceled.

**targetClusterNodeName** (STRING): Node name of the controller that will be replaced.

**targetClusterHAPartnerNodeName** (STRING): Node name of the HA partner controller that will be replaced.

**ndo.cr.nso.completed****Severity**

NOTICE

**Description**

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster FC configuration has completed.

**Corrective Action**

(None).

## Syslog Message

NSO-based controller replacement operation completed. Initiating cluster node: %s, remote cluster node: %s (model: %s), remote cluster HA partner node: %s (model: %s).

## Parameters

**initiatingClusterNodeName** (STRING): Node name of the controller that has initiated the upgrade.  
**newTargetClusterNodeName** (STRING): Node name of the new controller.  
**newTargetClusterModelName** (STRING): Model name of the new controller.  
**newTargetClusterHApartnerNodeName** (STRING): Node name of the new HA partner controller.  
**newTargetClusterHApartnerModelName** (STRING): Model name of the new HA partner controller.

## ndo.cr.nso.mccip.canceled

### Severity

NOTICE

### Description

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster IP configuration has been canceled.

### Corrective Action

(None).

## Syslog Message

An NSO-based controller replacement operation was canceled in a MetroCluster IP configuration from node "%s". The remote cluster node is "%s", and the remote cluster HA partner node is "%s".

## Parameters

**initiatingClusterNodeName** (STRING): Name of the node where the controller replacement operation was canceled.  
**targetClusterNodeName** (STRING): Node name of the controller that was to be replaced.  
**targetClusterHApartnerNodeName** (STRING): Node name of the HA partner controller that was to be replaced.

## ndo.cr.nso.mccip.completed

### Severity

NOTICE

### Description

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster IP configuration has completed.

### Corrective Action

(None).

## Syslog Message

An NSO-based controller replacement operation completed in a MetroCluster IP configuration. The initiating cluster node is "%s", remote cluster node is "%s" (model "%s"), and the remote cluster HA partner node is "%s" (model "%s").

## Parameters

**initiatingClusterNodeName** (STRING): Node name of the controller that initiated the controller replacement operation.  
**newTargetClusterNodeName** (STRING): Node name of the new controller.  
**newTargetClusterModelName** (STRING): Model name of the new controller.  
**newTargetClusterHApartnerNodeName** (STRING): Node name of the new HA partner controller.  
**newTargetClusterHApartnerModelName** (STRING): Model name of the new HA partner controller.

## ndo.cr.nso.mccip.paused

### Severity

NOTICE

### Description

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster IP configuration has been paused.

### Corrective Action

Use the "system controller replace show-details" command to check the status of the operation. Then, use the "system controller replace resume" command to resume the replacement operation.

### Syslog Message

An NSO-based controller replacement operation was paused in a MetroCluster IP configuration from node "%s". The remote cluster node is "%s", and the remote cluster HA partner node is "%s".

## Parameters

**initiatingClusterNodeName** (STRING): Name of the node from where the controller replacement operation was paused.  
**targetClusterNodeName** (STRING): Node name of the controller that is being replaced.  
**targetClusterHApartnerNodeName** (STRING): Node name of the HA partner controller that is being replaced.

## ndo.cr.nso.mccip.paused.error

### Severity

ERROR

### Description

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster IP configuration was paused due to an error.

### Corrective Action

Use the "system controller replace show-details" command to check the status of the operation. Resolve the error. Then, use the "system controller replace resume" command to resume the replacement operation.

### Syslog Message

An NSO-based controller replacement operation has been paused in a MetroCluster IP configuration on node "%s" during a task "%s" due to the following error: %s.

## Parameters

**nodeName** (STRING): Name of the node where the controller replacement operation was paused due to an error.

**taskName** (STRING): Name of the task.  
**taskReport** (STRING): Detailed error report.

## **ndo.cr.nso.mccip.paused.userInput**

### **Severity**

NOTICE

### **Description**

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster IP configuration has been paused for operator intervention.

### **Corrective Action**

Use the "system controller replace show-details" command to check the status of the operation. Collect the requested information or perform the steps as mentioned in the "system controller replace show-details" command output. Then, use the "system controller replace resume" command to resume the replacement operation.

### **Syslog Message**

An NSO-based controller replacement operation from initiating node "%s" has been paused in a MetroCluster IP configuration. The remote cluster node "%s" and remote cluster HA partner node "%s" have been paused for operator interventio while performing a "%s" task during the "%s" phase.

### **Parameters**

**initiatingClusterNodeName** (STRING): Name of the node where the controller replacement operation was initiated.

**targetClusterNodeName** (STRING): Node name of the controller that is being replaced.

**targetClusterHApartnerNodeName** (STRING): Node name of the HA partner controller that is being replaced.

**taskName** (STRING): Name of the task where the controller replacement operation has been paused for operator intervention.

**phaseInfo** (STRING): Name of the phase where the controller replacement operation has been paused for operator intervention.

## **ndo.cr.nso.mccip.resumed**

### **Severity**

NOTICE

### **Description**

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster IP configuration has been resumed.

### **Corrective Action**

(None).

### **Syslog Message**

An NSO-based controller replacement operation has been resumed in a MetroCluster IP configuration from node "%s". The remote cluster node is "%s", and the remote cluster HA partner node is "%s".

## Parameters

**initiatingClusterNodeName** (STRING): Name of the node from where the controller replacement operation has been resumed.

**targetClusterNodeName** (STRING): Node name of the controller that is being replaced.

**targetClusterHApartnerNodeName** (STRING): Node name of the HA partner controller that is being replaced.

## ndo.cr.nso.mccip.started

### Severity

NOTICE

### Description

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster IP configuration has been started.

### Corrective Action

(None).

### Syslog Message

An NSO-based controller replacement operation has been started in a MetroCluster IP configuration. The local cluster node is "%s", the remote cluster node is "%s" (model "%s"), and the remote cluster HA partner node is "%s" (model "%s").

## Parameters

**initiatingClusterNodeName** (STRING): Node name of the controller that initiated the controller replacement operation.

**targetClusterNodeName** (STRING): Node name of the controller that will be replaced.

**targetClusterModelName** (STRING): Model name of the controller that will be replaced.

**targetClusterHApartnerNodeName** (STRING): Node name of the HA partner controller that will be replaced.

**targetClusterHApartnerModelName** (STRING): Model name of the HA partner controller that will be replaced.

## ndo.cr.nso.paused

### Severity

NOTICE

### Description

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster FC configuration has been paused.

### Corrective Action

Use the "system controller replace show-details" command to check the status of the operation. Then, use the "system controller replace resume" command to resume the replacement operation.

### Syslog Message

NSO-based controller replacement operation was paused from node: %s. Remote cluster node: %s, remote cluster HA partner node: %s.



## Parameters

**initiatingClusterNodeName** (STRING): Name of the node from where the controller replacement operation was paused.

**targetClusterNodeName** (STRING): Node name of the controller that will be replaced.

**targetClusterHApartnerNodeName** (STRING): Node name of the HA partner controller that will be replaced.

## ndo.cr.nso.paused.error

### Severity

ERROR

### Description

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster FC configuration has been paused due to an error.

### Corrective Action

Use the "system controller replace show-details" command to check the status of the operation. Resolve the error. Then, use the "system controller replace resume" command to resume the replacement operation.

### Syslog Message

NSO-based controller replacement operation has been paused on node "%s" during %s task due to an error: %s.

## Parameters

**nodeName** (STRING): Name of the node where the controller replacement operation has been paused due to an error.

**taskName** (STRING): Name of the task.

**taskReport** (STRING): Detailed error report.

## ndo.cr.nso.paused.userInput

### Severity

NOTICE

### Description

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster FC configuration has been paused for operator intervention.

### Corrective Action

Use the "system controller replace show-details" command to check the status of the operation. Collect the requested information or perform the steps as mentioned in the "system controller replace show-details" command. Then, use the "system controller replace resume" command to resume the replacement operation.

### Syslog Message

NSO-based controller replacement operation from initiating node "%s" has been paused. Remote cluster node %s and remote cluster HA partner node %s are paused in %s task during %s phase for operator intervention.

## Parameters

**initiatingClusterNodeName** (STRING): Name of the node where the controller replacement operation was initiated.

**targetClusterNodeName** (STRING): Node name of the controller that will be replaced.

**targetClusterHAPartnerNodeName** (STRING): Node name of the HA partner controller that will be replaced.

**taskName** (STRING): NSO-based controller replacement operation from initiating node "%s" has been paused. Remote cluster node %s and remote cluster HA partner node %s are paused in %s task during %s phase for operator intervention

**phaseInfo** (STRING): Name of the phase where the controller replacement operation has been paused for operator intervention.

## ndo.cr.nso.resumed

### Severity

NOTICE

### Description

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster FC configuration has been resumed.

### Corrective Action

(None).

### Syslog Message

NSO-based controller replacement operation has been resumed from node %s. Remote cluster node: %s, remote cluster HA partner node: %s.

## Parameters

**initiatingClusterNodeName** (STRING): Name of the node from where the controller replacement operation has been resumed.

**targetClusterNodeName** (STRING): Node name of the controller that will be replaced.

**targetClusterHAPartnerNodeName** (STRING): Node name of the HA partner controller that will be replaced.

## ndo.cr.nso.started

### Severity

NOTICE

### Description

This message occurs when a controller replacement operation using negotiated switchover (NSO) in a MetroCluster FC configuration has been started.

### Corrective Action

(None).

### Syslog Message

NSO-based controller replacement operation has been started. Local cluster node: %s, remote cluster node: %s (model: %s), remote cluster HA partner node: %s (model: %s).

## Parameters

**initiatingClusterNodeName** (STRING): Node name of the controller that has initiated the upgrade.

**targetClusterNodeName** (STRING): Node name of the controller that will be replaced.

**targetClusterModelName** (STRING): Model name of the controller that will be replaced.

**targetClusterHApartnerNodeName** (STRING): Node name of the HA partner controller that will be replaced.

**targetClusterHApartnerModelName** (STRING): Model name of the HA partner controller that will be replaced.

## ndo.cr.paused

### Severity

NOTICE

### Description

This message occurs when a controller replacement operation has been paused by the operator.

### Corrective Action

Use the "system controller replace show-details" command to check the status of the operation. Then, use the "system controller replace resume" command to resume the replacement operation.

### Syslog Message

Controller replacement operation on node "%s" is paused by the operator.

### Parameters

**nodeName** (STRING): Name of the node where the replacement was in progress when the operation was paused.

## ndo.cr.paused.error

### Severity

ERROR

### Description

This message occurs when the controller replacement operation has been paused due to an error.

### Corrective Action

Use the "system controller replace show-details" command to check the status of the operation. Resolve the error. Then, use the "system controller replace resume" command to resume the replacement operation.

### Syslog Message

Controller replacement operation has been paused on node "%s" during %s task due to an error: %s.

### Parameters

**nodeName** (STRING): Name of the node where the controller replacement operation has been paused due to an error.

**taskName** (STRING): Name of the task.

**taskReport** (STRING): Detailed error report.

## ndo.cr.paused.userInput

### Severity

NOTICE

### Description

This message occurs when a controller replacement operation has been paused for operator intervention.

### Corrective Action

Use the "system controller replace show-details" command to check the status of the operation. Collect the requested information or perform the steps as mentioned in the "system controller replace show-details" command. Then, use the "system controller replace resume" command to resume the replacement operation.

### Syslog Message

Controller replacement operation has been paused on node "%s" in "%s" task during "%s" phase for operator intervention.

### Parameters

**nodeName** (STRING): Name of the node where the controller replacement operation has been paused for operator intervention.

**taskName** (STRING): Name of the task where the controller replacement operation has been paused for operator intervention.

**phaseInfo** (STRING): Name of the phase where the controller replacement operation has been paused for operator intervention.

## ndo.cr.resumed

### Severity

NOTICE

### Description

This message occurs when a controller replacement operation has been resumed by the operator.

### Corrective Action

(None).

### Syslog Message

Controller replacement operation has been resumed on node "%s" by the operator.

### Parameters

**nodeName** (STRING): Name of the node where the controller replacement operation has been resumed.

## ndo.cr.started

### Severity

NOTICE

### Description

This message occurs when a controller replacement operation has been started in the HA group by the operator.

**Corrective Action**

(None).

**Syslog Message**

Controller replacement operation has been started. Node "%s" (model: %s), HA partner node "%s" (model: %s).

**Parameters**

**nodeName** (STRING): Node name of the controller that will be replaced.

**modelName** (STRING): Model name of the controller that will be replaced.

**hanodeName** (STRING): Node name of the HA partner controller that will be replaced.

**hamodelName** (STRING): Model name of the HA partner controller that will be replaced.

## Copyright information

Copyright © 2024 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

## Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.