



Configuring switch zones

ONTAP

NetApp
July 27, 2021

Table of Contents


Configuring switch zones 1

Configuring switch zones

You must create required zones on the SAN switches for connecting the source storage to the destination storage.

Steps

1. Back up the existing zonesets on each switch in the production and migration fabric.
2. Zone the source storage and destination storage as shown below.

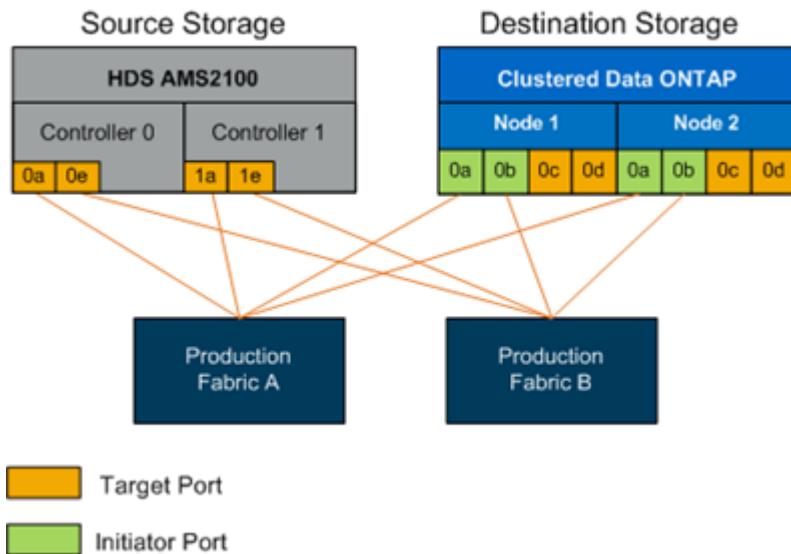

3. Create the zone and add it to the zoneset in production fabric A.

The following is an example of the production zone, production fabric A for zone ZONE_AMS2100_cDOT_Initiator_fabA.

WWPN	Zone Members
50:06:0e:80:10:46:b9:60	AMS2100 Ctrl 0 Port 0a
50:06:0e:80:10:46:b9:68	AMS2100 Ctrl 1 Port 1a
50:0a:09:80:00:d3:51:59	ONTAP Node 1 Port 0a
50:0a:09:80:00:e7:81:04	ONTAP Node 2 Port 0a

4. Activate the zoneset in fabric A.

5. Create the zone and add it to the zoneset in production fabric B.

The following is an example of the production zone, production fabric A for zone ZONE_AMS2100_cDOT_Initiator_fabB.

WWPN	Zone Members
50:06:0e:80:10:46:b9:64	AMS2100 Ctrl 0 Port 0e
50:06:0e:80:10:46:b9:6c	AMS2100 Ctrl 1 Port 1e
50:0a:09:80:00:d3:51:59	ONTAP Node 1 Port 0b
50:0a:09:80:00:e7:81:04	ONTAP Node 2 Port 0b

6. Activate the zoneset in production fabric B.

Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.