



# **Manage storage FlexCache origin volumes**

ONTAP 9.14.1 REST API reference

NetApp  
May 23, 2024

# Table of Contents

- Manage storage FlexCache origin volumes ..... 1
  - Storage flexcache origins endpoint overview ..... 1
  - Retrieve the origin of a FlexCache in the cluster ..... 6
  - Retrieve attributes of the origin of a FlexCache volume in the cluster ..... 16
  - Modify origin options for a Flexcache origin volume in the cluster ..... 23

# Manage storage FlexCache origin volumes

## Storage flexcache origins endpoint overview

### Overview

FlexCache is a persistent cache of an origin volume. An origin volume can only be a FlexVol while a FlexCache is always a FlexGroup.

The following relationship configurations are supported:

&ndash; Intra-Vserver where FlexCache and the corresponding origin volume reside in the same Vserver.

&ndash; Cross-Vserver but intra-cluster where FlexCache and the origin volume reside in the same cluster but belong to different Vservers.

&ndash; Cross-cluster where FlexCache and the origin volume reside in different clusters.

FlexCache supports fan-out and more than one FlexCache can be created from one origin volume. This API retrieves the origin of FlexCache configurations in the origin cluster.

### FlexCache APIs

The following APIs can be used to perform operations related to the origin of a FlexCache:

&ndash; GET `/api/storage/flexcache/origins`

&ndash; GET `/api/storage/flexcache/origins/{uuid}`

&ndash; PATCH `/api/storage/flexcache/origins/{uuid}`

### Examples

#### Retrieving origins of FlexCache attributes

The GET request is used to retrieve the origins of FlexCache attributes.

```

# The API:
/api/storage/flexcache/origins

# The call:
curl -X GET "https://<mgmt-ip>/api/storage/flexcache/origins?" -H
"accept: application/json"

# The response:
{
  "records": [
    {
      "uuid": "2bc957dd-2617-4afb-8d2f-66ac6070d313",
      "name": "vol_01",
      "_links": {
        "self": {
          "href": "/api/storage/flexcache/origins/2bc957dd-2617-4afb-8d2f-
66ac6070d313"
        }
      }
    },
    {
      "uuid": "80fcaee4-0dc2-488b-afb8-86d28a34cda8",
      "name": "vol_1",
      "_links": {
        "self": {
          "href": "/api/storage/flexcache/origins/80fcaee4-0dc2-488b-afb8-
86d28a34cda8"
        }
      }
    }
  ],
  "num_records": 2,
  "_links": {
    "self": {
      "href": "/api/storage/flexcache/origins?"
    }
  }
}

```

### Retrieving the attributes of an origin volume

The GET request is used to retrieve the attributes of an origin volume.

```

# The API:
/api/storage/flexcache/origins/{uuid}

```

```

# The call:
curl -X GET "https://<mgmt-ip>/api/storage/flexcache/origins/80fcaee4-0dc2-488b-afb8-86d28a34cda8" -H "accept: application/json"

# The response:
{
  "uuid": "80fcaee4-0dc2-488b-afb8-86d28a34cda8",
  "name": "vol_1",
  "svm": {
    "name": "vs_3",
    "uuid": "8aa2cd28-0e92-11e9-b391-0050568e4115"
  },
  "block_level_invalidation": "false",
  "global_file_locking_enabled": "true",
  "flexcaches": [
    {
      "ip_address": "10.140.103.183",
      "create_time": "2019-01-02T19:27:22+05:30",
      "volume": {
        "name": "fc_42",
        "uuid": "4e7f9d49-0e96-11e9-aed0-0050568eddbbe"
      },
      "svm": {
        "name": "vs_1_4",
        "uuid": "36f68322-0e93-11e9-aed0-0050568eddbbe"
      },
      "cluster": {
        "name": "node4",
        "uuid": "c32f16b8-0e90-11e9-aed0-0050568eddbbe"
      }
    },
    {
      "ip_address": "10.140.103.183",
      "create_time": "2019-01-02T21:08:34+05:30",
      "volume": {
        "name": "fc_421",
        "uuid": "71ee8f36-0ea4-11e9-aed0-0050568eddbbe"
      },
      "svm": {
        "name": "vs_1_4",
        "uuid": "36f68322-0e93-11e9-aed0-0050568eddbbe"
      },
      "cluster": {
        "name": "node4",
        "uuid": "c32f16b8-0e90-11e9-aed0-0050568eddbbe"
      }
    }
  ]
}

```

```

    }
  },
  {
    "ip_address": "10.140.103.183",
    "create_time": "2019-01-03T11:14:38+05:30",
    "volume": {
      "name": "fc_422"
    },
    "svm": {
      "name": "vs_1_4",
      "uuid": "36f68322-0e93-11e9-aed0-0050568eddbe"
    },
    "cluster": {
      "name": "node4",
      "uuid": "c32f16b8-0e90-11e9-aed0-0050568eddbe"
    }
  },
  {
    "ip_address": "10.140.103.179",
    "size": 4294967296,
    "create_time": "2019-01-02T19:24:14+05:30",
    "state": "online",
    "volume": {
      "name": "fc_32",
      "uuid": "ddb42bbc-0e95-11e9-8180-0050568e0b79"
    },
    "svm": {
      "name": "vs_1",
      "uuid": "e708fbe2-0e92-11e9-8180-0050568e0b79"
    },
    "cluster": {
      "name": "node3",
      "uuid": "8eb21b3b-0e90-11e9-8180-0050568e0b79"
    }
  },
  {
    "ip_address": "10.140.103.179",
    "size": 4294967296,
    "create_time": "2019-01-02T21:07:23+05:30",
    "state": "online",
    "volume": {
      "name": "fc_321",
      "uuid": "47902654-0ea4-11e9-8180-0050568e0b79"
    },
    "svm": {
      "name": "vs_1",

```

```

    "uuid": "e708fbe2-0e92-11e9-8180-0050568e0b79"
  },
  "cluster": {
    "name": "node3",
    "uuid": "8eb21b3b-0e90-11e9-8180-0050568e0b79"
  }
},
{
  "ip_address": "10.140.103.179",
  "size": 4294967296,
  "create_time": "2019-01-03T00:11:38+05:30",
  "state": "online",
  "volume": {
    "name": "fc_322",
    "uuid": "04d5e07b-0ebe-11e9-8180-0050568e0b79"
  },
  "svm": {
    "name": "vs_1",
    "uuid": "e708fbe2-0e92-11e9-8180-0050568e0b79"
  },
  "cluster": {
    "name": "node3",
    "uuid": "8eb21b3b-0e90-11e9-8180-0050568e0b79"
  }
},
{
  "ip_address": "10.140.103.179",
  "size": 4294967296,
  "create_time": "2019-01-03T00:14:52+05:30",
  "state": "online",
  "volume": {
    "name": "fc_323",
    "uuid": "77e911ff-0ebe-11e9-8180-0050568e0b79"
  },
  "svm": {
    "name": "vs_1",
    "uuid": "e708fbe2-0e92-11e9-8180-0050568e0b79"
  },
  "cluster": {
    "name": "node3",
    "uuid": "8eb21b3b-0e90-11e9-8180-0050568e0b79"
  }
}
],
"_links": {
  "self": {

```

```
    "href": "/api/storage/flexcache/origins/80fcaee4-0dc2-488b-afb8-86d28a34cda8"
  }
}
```

## Modifying origin options of an origin volume

Use the PATCH request to update options of an origin volume.

```
# the API:
/api/storage/flexcache/origins/{uuid}

# The call:
curl -X PATCH "https://<mgmt-ip>/api/storage/flexcache/origins/1fbc0ebb-2440-11eb-a86c-005056ac8ca0" -H "accept: application/json" -H "Content-Type: application/json" -d '{"block_level_invalidation": "true"}'

# The response:
{
  "job": {
    "uuid": "e751dd5d-0f3c-11e9-8b2b-0050568e0b79",
    "_links": {
      "self": {
        "href": "/api/cluster/jobs/e751dd5d-0f3c-11e9-8b2b-0050568e0b79"
      }
    }
  }
}
```

## Retrieve the origin of a FlexCache in the cluster

GET /storage/flexcache/origins

**Introduced In:** 9.6

Retrieves origin of FlexCache in the cluster.

### Expensive properties

There is an added computational cost to retrieving values for these properties. They are not included by default in GET results and must be explicitly requested using the `fields` query parameter. See [Requesting specific fields](#) to learn more.

- `flexcaches.ip_address` - IP address of FlexCache.
- `flexcaches.size` - Physical size of FlexCache.



- `flexcaches.guarantee.type` - Space guarantee style of FlexCache.
- `flexcaches.state` - State of FlexCache.

## Related ONTAP commands

- `volume flexcache origin show-caches`

## Learn more

- [DOC /storage/flexcache/origins](#)

## Parameters

Name	Type	In	Required	Description
<code>uuid</code>	string	query	False	Filter by uuid
<code>flexcaches.svm.uuid</code>	string	query	False	Filter by flexcaches.svm.uuid
<code>flexcaches.svm.name</code>	string	query	False	Filter by flexcaches.svm.name
<code>flexcaches.create_time</code>	string	query	False	Filter by flexcaches.create_time
<code>flexcaches.ip_address</code>	string	query	False	Filter by flexcaches.ip_address
<code>flexcaches.size</code>	integer	query	False	Filter by flexcaches.size
<code>flexcaches.cluster.uuid</code>	string	query	False	Filter by flexcaches.cluster.uuid
<code>flexcaches.cluster.name</code>	string	query	False	Filter by flexcaches.cluster.name
<code>flexcaches.volume.name</code>	string	query	False	Filter by flexcaches.volume.name

Name	Type	In	Required	Description
flexcaches.volume.uuid	string	query	False	Filter by flexcaches.volume.uuid
flexcaches.state	string	query	False	Filter by flexcaches.state
block_level_invalidat ion	boolean	query	False	Filter by block_level_invalidat ion  <ul style="list-style-type: none"> <li>Introduced in: 9.9</li> </ul>
svm.uuid	string	query	False	Filter by svm.uuid
svm.name	string	query	False	Filter by svm.name
name	string	query	False	Filter by name  <ul style="list-style-type: none"> <li>maxLength: 203</li> <li>minLength: 1</li> </ul>
global_file_locking_e nabled	boolean	query	False	Filter by global_file_locking_ enabled  <ul style="list-style-type: none"> <li>Introduced in: 9.9</li> </ul>
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When iterating over a collection, the default is 15 seconds. ONTAP returns earlier if either max records or the end of the collection is reached.  <ul style="list-style-type: none"> <li>Default value: 1</li> <li>Max value: 120</li> <li>Min value: 0</li> </ul>

Name	Type	In	Required	Description
fields	array[string]	query	False	Specify the fields to return.
max_records	integer	query	False	Limit the number of records returned.
order_by	array[string]	query	False	Order results by specified fields and optional [asc
desc] direction. Default direction is 'asc' for ascending.	return_records	boolean	query	False

## Response

Status: 200, Ok

Name	Type	Description
_links	<a href="#">_links</a>	
num_records	integer	Number of records
records	array[ <a href="#">flexcache_origin</a> ]	

## Example response

```
{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "num_records": 1,
  "records": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "flexcaches": {
      "cluster": {
        "_links": {
          "self": {
            "href": "/api/resourcelink"
          }
        },
        "name": "cluster1",
        "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
      },
      "create_time": "2018-06-04 15:00:00 -0400",
      "ip_address": "10.10.10.7",
      "size": 0,
      "state": "error",
      "svm": {
        "_links": {
          "self": {
            "href": "/api/resourcelink"
          }
        },
        "name": "svm1",
        "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"
      },
      "volume": {
        "_links": {
          "self": {
            "href": "/api/resourcelink"
          }
        }
      }
    }
  }
}
```

```

    },
    "name": "volume1",
    "uuid": "028baa66-41bd-11e9-81d5-00a0986138f7"
  }
},
"name": "voll, vol_2",
"svm": {
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "name": "svm1",
  "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"
},
"uuid": "1cd8a442-86d1-11e0-ae1c-123478563512"
}
}

```

## Error

Status: Default, Error

Name	Type	Description
error	<a href="#">returned_error</a>	

## Example error

```

{
  "error": {
    "arguments": {
      "code": "string",
      "message": "string"
    },
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}

```

# Definitions

## See Definitions

href

Name	Type	Description
href	string	

\_links

Name	Type	Description
next	<a href="#">href</a>	
self	<a href="#">href</a>	

\_links

Name	Type	Description
self	<a href="#">href</a>	

cluster

Name	Type	Description
_links	<a href="#">_links</a>	
name	string	
uuid	string	

svm

SVM, applies only to SVM-scoped objects.

Name	Type	Description
_links	<a href="#">_links</a>	
name	string	The name of the SVM. This field cannot be specified in a PATCH method.
uuid	string	The unique identifier of the SVM. This field cannot be specified in a PATCH method.

volume

Name	Type	Description
_links	<a href="#">_links</a>	

Name	Type	Description
name	string	The name of the volume. This field cannot be specified in a POST or PATCH method.
uuid	string	<p>Unique identifier for the volume. This corresponds to the instance-uuid that is exposed in the CLI and ONTAPI. It does not change due to a volume move.</p> <ul style="list-style-type: none"> <li>• example: 028baa66-41bd-11e9-81d5-00a0986138f7</li> <li>• Introduced in: 9.6</li> <li>• x-nullable: true</li> </ul>

#### flexcache\_relationship

Name	Type	Description
cluster	<a href="#">cluster</a>	
create_time	string	Creation time of the relationship.
ip_address	string	Cluster management IP of the remote cluster.
size	integer	Size of the remote volume.
state	string	Volume state
svm	<a href="#">svm</a>	SVM, applies only to SVM-scoped objects.
volume	<a href="#">volume</a>	

#### svm

##### Origin volume SVM

Name	Type	Description
_links	<a href="#">_links</a>	
name	string	The name of the SVM. This field cannot be specified in a PATCH method.



Name	Type	Description
uuid	string	The unique identifier of the SVM. This field cannot be specified in a PATCH method.

flexcache\_origin

Defines the origin endpoint of FlexCache.

Name	Type	Description
<a href="#">_links</a>	<a href="#">_links</a>	
block_level_invalidation	boolean	Block level invalidation enables the FlexCache volume to retain blocks that are not changed at the FlexCache volume without having to evict them. This means that the FlexCache volume does not have to again incur the computational cost of fetching blocks over the WAN from the FlexCache volume origin on the next client access. Block level invalidation is a property of the origin volume. Without block level invalidation, any write at the origin volume would evict the whole file at the FlexCache volume, since by default, origin volume does a file level invalidation.
flexcaches	array[ <a href="#">flexcache_relationship</a> ]	
global_file_locking_enabled	boolean	Specifies whether a global file locking option is enabled for an origin volume of a FlexCache volume.
name	string	Origin volume name
svm	<a href="#">svm</a>	Origin volume SVM
uuid	string	Origin volume UUID. Unique identifier for origin of FlexCache.

error\_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

returned\_error

Name	Type	Description
arguments	array[ <a href="#">error_arguments</a> ]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

## Retrieve attributes of the origin of a FlexCache volume in the cluster

GET /storage/flexcache/origins/{uuid}

**Introduced In:** 9.6

Retrieves attributes of the origin of a FlexCache in the cluster.

### Expensive properties

There is an added computational cost to retrieving values for these properties. They are included by default in GET results. The recommended method to use this API is to filter and retrieve only the required fields. See [Requesting specific fields](#) to learn more.

- `flexcaches.ip_address` - IP address of FlexCache.
- `flexcaches.size` - Physical size of FlexCache.
- `flexcaches.guarantee.type` - Space guarantee style of FlexCache.
- `flexcaches.state` - State of FlexCache.
- `flexcaches.dr_cache` - True if the cache is a DR cache.

### Related ONTAP commands

- `volume flexcache origin show-caches`

## Learn more

- [DOC /storage/flexcache/origins](#)

## Parameters

Name	Type	In	Required	Description
uuid	string	path	True	Unique identifier of origin of FlexCache.
fields	array[string]	query	False	Specify the fields to return.

## Response

Status: 200, Ok

Name	Type	Description
<a href="#">_links</a>	<a href="#">_links</a>	
block_level_invalidation	boolean	Block level invalidation enables the FlexCache volume to retain blocks that are not changed at the FlexCache volume without having to evict them. This means that the FlexCache volume does not have to again incur the computational cost of fetching blocks over the WAN from the FlexCache volume origin on the next client access. Block level invalidation is a property of the origin volume. Without block level invalidation, any write at the origin volume would evict the whole file at the FlexCache volume, since by default, origin volume does a file level invalidation.
flexcaches	array[ <a href="#">flexcache_relationship</a> ]	
global_file_locking_enabled	boolean	Specifies whether a global file locking option is enabled for an origin volume of a FlexCache volume.
name	string	Origin volume name

Name	Type	Description
svm	svm	Origin volume SVM
uuid	string	Origin volume UUID. Unique identifier for origin of FlexCache.

## Example response

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "flexcaches": {
    "cluster": {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "cluster1",
      "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
    },
    "create_time": "2018-06-04 15:00:00 -0400",
    "ip_address": "10.10.10.7",
    "size": 0,
    "state": "error",
    "svm": {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "svm1",
      "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"
    },
    "volume": {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "volume1",
      "uuid": "028baa66-41bd-11e9-81d5-00a0986138f7"
    }
  },
  "name": "voll, vol_2",
  "svm": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    }
  }
}
```

```
    }
  },
  "name": "svm1",
  "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"
},
"uuid": "1cd8a442-86d1-11e0-ae1c-123478563512"
}
```

## Error

Status: Default, Error

Name	Type	Description
error	returned_error	

## Example error

```
{
  "error": {
    "arguments": {
      "code": "string",
      "message": "string"
    },
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

## Definitions

## See Definitions

href

Name	Type	Description
href	string	

\_links

Name	Type	Description
self	<a href="#">href</a>	

cluster

Name	Type	Description
_links	<a href="#">_links</a>	
name	string	
uuid	string	

svm

SVM, applies only to SVM-scoped objects.

Name	Type	Description
_links	<a href="#">_links</a>	
name	string	The name of the SVM. This field cannot be specified in a PATCH method.
uuid	string	The unique identifier of the SVM. This field cannot be specified in a PATCH method.

volume

Name	Type	Description
_links	<a href="#">_links</a>	
name	string	The name of the volume. This field cannot be specified in a POST or PATCH method.

Name	Type	Description
uuid	string	<p>Unique identifier for the volume. This corresponds to the instance-uuid that is exposed in the CLI and ONTAPI. It does not change due to a volume move.</p> <ul style="list-style-type: none"> <li>• example: 028baa66-41bd-11e9-81d5-00a0986138f7</li> <li>• Introduced in: 9.6</li> <li>• x-nullable: true</li> </ul>

#### flexcache\_relationship

Name	Type	Description
cluster	<a href="#">cluster</a>	
create_time	string	Creation time of the relationship.
ip_address	string	Cluster management IP of the remote cluster.
size	integer	Size of the remote volume.
state	string	Volume state
svm	<a href="#">svm</a>	SVM, applies only to SVM-scoped objects.
volume	<a href="#">volume</a>	

#### svm

##### Origin volume SVM

Name	Type	Description
<a href="#">_links</a>	<a href="#">_links</a>	
name	string	The name of the SVM. This field cannot be specified in a PATCH method.
uuid	string	The unique identifier of the SVM. This field cannot be specified in a PATCH method.

#### error\_arguments



Name	Type	Description
code	string	Argument code
message	string	Message argument

returned\_error

Name	Type	Description
arguments	array[ <a href="#">error_arguments</a> ]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

## Modify origin options for a Flexcache origin volume in the cluster

PATCH `/storage/flexcache/origins/{uuid}`

**Introduced In:** 9.9

Modifies origin options for a origin volume in the cluster.

### Required properties

- `uuid` - Origin volume UUID.
- `block_level_invalidation` - Value for the Block Level Invalidation flag - options {true|false}.

### Related ONTAP commands

- `volume flexcache origin config modify`

### Learn more

- [DOC /storage/flexcache/origins](#)

### Parameters

Name	Type	In	Required	Description
uuid	string	path	True	Unique identifier of the origin of the FlexCache volume.
return_timeout	integer	query	False	<p>The number of seconds to allow the call to execute before returning. When doing a POST, PATCH, or DELETE operation on a single record, the default is 0 seconds. This means that if an asynchronous operation is started, the server immediately returns HTTP code 202 (Accepted) along with a link to the job. If a non-zero value is specified for POST, PATCH, or DELETE operations, ONTAP waits that length of time to see if the job completes so it can return something other than 202.</p> <ul style="list-style-type: none"> <li>• Default value: 1</li> <li>• Max value: 120</li> <li>• Min value: 0</li> </ul>

## Request Body

Name	Type	Description
_links	<a href="#">_links</a>	

Name	Type	Description
block_level_invalidation	boolean	Block level invalidation enables the FlexCache volume to retain blocks that are not changed at the FlexCache volume without having to evict them. This means that the FlexCache volume does not have to again incur the computational cost of fetching blocks over the WAN from the FlexCache volume origin on the next client access. Block level invalidation is a property of the origin volume. Without block level invalidation, any write at the origin volume would evict the whole file at the FlexCache volume, since by default, origin volume does a file level invalidation.
flexcaches	array[ <a href="#">flexcache_relationship</a> ]	
global_file_locking_enabled	boolean	Specifies whether a global file locking option is enabled for an origin volume of a FlexCache volume.
name	string	Origin volume name
svm	<a href="#">svm</a>	Origin volume SVM
uuid	string	Origin volume UUID. Unique identifier for origin of FlexCache.

## Example request

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "flexcaches": {
    "cluster": {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "cluster1",
      "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
    },
    "create_time": "2018-06-04 15:00:00 -0400",
    "ip_address": "10.10.10.7",
    "size": 0,
    "state": "error",
    "svm": {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "svm1",
      "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"
    },
    "volume": {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "volume1",
      "uuid": "028baa66-41bd-11e9-81d5-00a0986138f7"
    }
  },
  "name": "vol1, vol_2",
  "svm": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    }
  }
}
```

```
    }
  },
  "name": "svm1",
  "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"
},
"uuid": "1cd8a442-86d1-11e0-ae1c-123478563512"
}
```

## Response

Status: 200, Ok

Name	Type	Description
job	job_link	

## Example response

```
{
  "job": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "uuid": "string"
  }
}
```

## Response

Status: 202, Accepted

## Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
66846870	Either origin volume uuid or BLI option value is missing
66847020	Failed to get origin volume details using volume uuid
66847021	Failed to modify origin volume options

Name	Type	Description
error	<a href="#">returned_error</a>	

### Example error

```
{
  "error": {
    "arguments": {
      "code": "string",
      "message": "string"
    },
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

### Definitions

## See Definitions

href

Name	Type	Description
href	string	

\_links

Name	Type	Description
self	<a href="#">href</a>	

cluster

Name	Type	Description
_links	<a href="#">_links</a>	
name	string	
uuid	string	

svm

SVM, applies only to SVM-scoped objects.

Name	Type	Description
_links	<a href="#">_links</a>	
name	string	The name of the SVM. This field cannot be specified in a PATCH method.
uuid	string	The unique identifier of the SVM. This field cannot be specified in a PATCH method.

volume

Name	Type	Description
_links	<a href="#">_links</a>	
name	string	The name of the volume. This field cannot be specified in a POST or PATCH method.

Name	Type	Description
uuid	string	<p>Unique identifier for the volume. This corresponds to the instance-uuid that is exposed in the CLI and ONTAPI. It does not change due to a volume move.</p> <ul style="list-style-type: none"> <li>• example: 028baa66-41bd-11e9-81d5-00a0986138f7</li> <li>• Introduced in: 9.6</li> <li>• x-nullable: true</li> </ul>

#### flexcache\_relationship

Name	Type	Description
cluster	<a href="#">cluster</a>	
create_time	string	Creation time of the relationship.
ip_address	string	Cluster management IP of the remote cluster.
size	integer	Size of the remote volume.
state	string	Volume state
svm	<a href="#">svm</a>	SVM, applies only to SVM-scoped objects.
volume	<a href="#">volume</a>	

#### svm

##### Origin volume SVM

Name	Type	Description
<a href="#">_links</a>	<a href="#">_links</a>	
name	string	The name of the SVM. This field cannot be specified in a PATCH method.
uuid	string	The unique identifier of the SVM. This field cannot be specified in a PATCH method.

#### flexcache\_origin



Defines the origin endpoint of FlexCache.

Name	Type	Description
<a href="#">_links</a>	<a href="#">_links</a>	
block_level_invalidation	boolean	Block level invalidation enables the FlexCache volume to retain blocks that are not changed at the FlexCache volume without having to evict them. This means that the FlexCache volume does not have to again incur the computational cost of fetching blocks over the WAN from the FlexCache volume origin on the next client access. Block level invalidation is a property of the origin volume. Without block level invalidation, any write at the origin volume would evict the whole file at the FlexCache volume, since by default, origin volume does a file level invalidation.
flexcaches	array[ <a href="#">flexcache_relationship</a> ]	
global_file_locking_enabled	boolean	Specifies whether a global file locking option is enabled for an origin volume of a FlexCache volume.
name	string	Origin volume name
svm	<a href="#">svm</a>	Origin volume SVM
uuid	string	Origin volume UUID. Unique identifier for origin of FlexCache.

job\_link

Name	Type	Description
<a href="#">_links</a>	<a href="#">_links</a>	
uuid	string	The UUID of the asynchronous job that is triggered by a POST, PATCH, or DELETE operation.

error\_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

returned\_error

Name	Type	Description
arguments	array[ <a href="#">error_arguments</a> ]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

## Copyright information

Copyright © 2024 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

## Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.