



Manage JIT privilege user configurations

REST API reference

NetApp
February 13, 2026

This PDF was generated from https://docs.netapp.com/us-en/ontap-restapi-9171/manage_jit_privilege_user_configurations.html on February 13, 2026. Always check docs.netapp.com for the latest.

Table of Contents

Manage JIT privilege user configurations	1
Manage JIT privilege user configurations	1
Overview	1
Examples	1
Retrieve the JIT privilege user configurations for an SVM	2
Related ONTAP commands	3
Parameters	3
Response	4
Error	6
Definitions	6
Create JIT privilege user configurations for an SVM	9
Required properties	9
Related ONTAP commands	9
Parameters	9
Request Body	9
Response	11
Error	12
Definitions	12

Manage JIT privilege user configurations

Manage JIT privilege user configurations

Overview

This API is used to create, retrieve, and delete relevant information related to user-specific JIT privilege session configurations. Prerequisites: You must create a user that has a JIT supported login method configured on the SVM that you want to create the elevated session configurations.

Examples

Creating the JIT session configuration for a user

```
# The API:  
POST "/api/security/jit-privilege-users"  
  
# The call:  
curl -X POST "https://<mgmt-ip>/api/security/jit-privilege-  
users?return_records=true" -H "accept: application/hal+json" -d '{  
"owner": { "name": "Cserver" }, "account": { "name": "joe"},  
"application": "ssh", "role": { "name": "admin"}, "session_validity":  
"PT30M", "jit_validity": "PT2H10M20S" }'  
  
# The response:  
{ }
```

Retrieving the configured JIT privilege sessions for users

Retrieves the JIT privilege user session configurations or a filtered list (for a specific SVM, user, etc).

```

# The API:
GET "/api/security/jit-privilege-users"

# The call:
curl -X GET "https://<mgmt-ip>/api/security/jit-privilege-users" -H
"accept: application/hal+json"

# The response:
{
  "records": [
    {
      "owner": {
        "uuid": "b009a9e7-4081-b576-7575-ada21efcaf16",
        "name": "Cserver",
        "_links": {
          "self": {
            "href": "/api/svm/svms/b009a9e7-4081-b576-7575-ada21efcaf16"
          }
        }
      },
      "account": {
        "name": "testUser"
      },
      "application": "ssh",
      "_links": {
        "self": {
          "href": "/api/security/jit-privilege-users/b009a9e7-4081-b576-7575-ada21efcaf16/testUser/ssh"
        }
      }
    },
    "num_records": 1,
    "_links": {
      "self": {
        "href": "/api/security/jit-privilege-users"
      }
    }
  }
}

```

Retrieve the JIT privilege user configurations for an SVM

GET /security/jit-privilege-users

Introduced In: 9.17

Retrieves the JIT privilege user configurations for an SVM.

Related ONTAP commands

- `security jit-privilege user show`

Parameters

Name	Type	In	Required	Description
start_time	string	query	False	Filter by start_time
end_time	string	query	False	Filter by end_time
account.name	string	query	False	Filter by account.name
session_validity	string	query	False	Filter by session_validity
comment	string	query	False	Filter by comment
application	string	query	False	Filter by application
owner.name	string	query	False	Filter by owner.name
owner.uuid	string	query	False	Filter by owner.uuid
jit_state	string	query	False	Filter by jit_state
role.name	string	query	False	Filter by role.name
jit_validity	string	query	False	Filter by jit_validity
max_records	integer	query	False	Limit the number of records returned.
return_records	boolean	query	False	<p>The default is true for GET calls. When set to false, only the number of records is returned.</p> <ul style="list-style-type: none">• Default value: 1

Name	Type	In	Required	Description
return_timeout	integer	query	False	<p>The number of seconds to allow the call to execute before returning. When iterating over a collection, the default is 15 seconds. ONTAP returns earlier if either max records or the end of the collection is reached.</p> <ul style="list-style-type: none"> • Default value: 15 • Max value: 120 • Min value: 0
order_by	array[string]	query	False	Order results by specified fields and optional [asc]
desc] direction. Default direction is 'asc' for ascending.	fields	array[string]	query	False

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
num_records	integer	Number of records.
records	array[security_jit_privilege_user]	

Example response

```
{  
  "_links": {  
    "next": {  
      "href": "/api/resourcelink"  
    },  
    "self": {  
      "href": "/api/resourcelink"  
    }  
  },  
  "num_records": 1,  
  "records": [  
    {  
      "account": {  
        "_links": {  
          "self": {  
            "href": "/api/resourcelink"  
          }  
        },  
        "name": "joe.smith"  
      },  
      "application": "string",  
      "comment": "Comment text",  
      "end_time": "2024-11-08 06:15:31 -0500",  
      "jit_state": "active",  
      "jit_validity": "P90D",  
      "owner": {  
        "_links": {  
          "self": {  
            "href": "/api/resourcelink"  
          }  
        },  
        "name": "svml1",  
        "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"  
      },  
      "role": {  
        "_links": {  
          "self": {  
            "href": "/api/resourcelink"  
          }  
        },  
        "name": "admin"  
      },  
      "session_validity": "PT1H",  
      "start_time": "2024-11-08 05:15:31 -0500"  
    }  
  ]  
}
```

```
        }
    ]
}
```

Error

Status: Default, Error

Name	Type	Description
error	returned_error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
next	href	
self	href	

_links

Name	Type	Description
self	href	

account_reference

The name of the user.

Name	Type	Description
_links	_links	
name	string	User account

owner

Owner name and UUID that uniquely identifies the JIT settings for a user.

Name	Type	Description
_links	_links	
name	string	The name of the SVM. This field cannot be specified in a PATCH method.
uuid	string	The unique identifier of the SVM. This field cannot be specified in a PATCH method.

role

The role the user will be elevated to.

Name	Type	Description
_links	_links	
name	string	Role name

security_jit_privilege_user

Name	Type	Description
account	account_reference	The name of the user.
application	string	The name of the application.
comment	string	The description of the elevation rule.
end_time	string	The end date and time of the JIT privilege session in UTC.
jit_state	string	The current status of the rule: preactive, idle, or active.
jit_validity	string	The JIT validity period on this SVM for this user.
owner	owner	Owner name and UUID that uniquely identifies the JIT settings for a user.
role	role	The role the user will be elevated to.
session_validity	string	The session validity period on this SVM for this user.
start_time	string	The start date and time of the JIT privilege session in UTC.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

returned_error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Create JIT privilege user configurations for an SVM

POST /security/jit-privilege-users

Introduced In: 9.17

Creates the JIT privilege user configurations for an SVM.

Required properties

- owner.uuid - Account owner UUID.
- account.name - User name.
- application - Application

Related ONTAP commands

- security jit-privilege user create

Parameters

Name	Type	In	Required	Description
return_records	boolean	query	False	<p>The default is false. If set to true, the records are returned.</p> <ul style="list-style-type: none"> • Default value:

Request Body

Name	Type	Description
account	account_reference	The name of the user.

Name	Type	Description
application	string	The name of the application.
comment	string	The description of the elevation rule.
end_time	string	The end date and time of the JIT privilege session in UTC.
jit_state	string	The current status of the rule: preactive, idle, or active.
jit_validity	string	The JIT validity period on this SVM for this user.
owner	owner	Owner name and UUID that uniquely identifies the JIT settings for a user.
role	role	The role the user will be elevated to.
session_validity	string	The session validity period on this SVM for this user.
start_time	string	The start date and time of the JIT privilege session in UTC.

Example request

```
{  
  "account": {  
    "name": "joe.smith"  
  },  
  "application": "string",  
  "comment": "Comment text",  
  "end_time": "2024-11-08 06:15:31 -0500",  
  "jit_state": "active",  
  "jit_validity": "P90D",  
  "owner": {  
    "name": "svml1",  
    "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"  
  },  
  "role": {  
    "name": "admin"  
  },  
  "session_validity": "PT1H",  
  "start_time": "2024-11-08 05:15:31 -0500"  
}
```

Response

Status: 201, Created

Name	Type	Description
num_records	integer	Number of records.
records	array[security_jit_privilege_user]	

Example response

```
{  
  "num_records": 1,  
  "records": [  
    {  
      "account": {  
        "name": "joe.smith"  
      },  
      "application": "string",  
      "comment": "Comment text",  
      "end_time": "2024-11-08 06:15:31 -0500",  
      "jit_state": "active",  
      "jit_validity": "P90D",  
      "owner": {  
        "name": "svml1",  
        "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"  
      },  
      "role": {  
        "name": "admin"  
      },  
      "session_validity": "PT1H",  
      "start_time": "2024-11-08 05:15:31 -0500"  
    }  
  ]  
}
```

Headers

Name	Description	Type
Location	Useful for tracking the resource location	string

Error

Status: Default, Error

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

account_reference

The name of the user.

Name	Type	Description
name	string	User account

owner

Owner name and UUID that uniquely identifies the JIT settings for a user.

Name	Type	Description
name	string	The name of the SVM. This field cannot be specified in a PATCH method.
uuid	string	The unique identifier of the SVM. This field cannot be specified in a PATCH method.

role

The role the user will be elevated to.

Name	Type	Description
name	string	Role name

security_jit_privilege_user

Name	Type	Description
account	account_reference	The name of the user.
application	string	The name of the application.
comment	string	The description of the elevation rule.

Name	Type	Description
end_time	string	The end date and time of the JIT privilege session in UTC.
jit_state	string	The current status of the rule: preactive, idle, or active.
jit_validity	string	The JIT validity period on this SVM for this user.
owner	owner	Owner name and UUID that uniquely identifies the JIT settings for a user.
role	role	The role the user will be elevated to.
session_validity	string	The session validity period on this SVM for this user.
start_time	string	The start date and time of the JIT privilege session in UTC.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

returned_error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Copyright information

Copyright © 2026 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.