



Manage NDMP node configurations

REST API reference

NetApp

February 07, 2026

This PDF was generated from https://docs.netapp.com/us-en/ontap-restapi-9171/manage_ndmp_node_configurations.html on February 07, 2026. Always check docs.netapp.com for the latest.

Table of Contents

- Manage NDMP node configurations 1
 - Manage NDMP node configurations 1
 - Retrieve the NDMP node configurations for all nodes 1
 - Related ONTAP commands 1
 - Learn more 1
 - Parameters 1
 - Response 2
 - Error 4
 - Definitions 4
 - Retrieve the NDMP node configuration for a node 6
 - Related ONTAP commands 6
 - Learn more 6
 - Parameters 6
 - Response 6
 - Error 7
 - Definitions 8
 - Update the NDMP node configuration for a node 9
 - Related ONTAP commands 10
 - Learn more 10
 - Parameters 10
 - Request Body 10
 - Response 11
 - Error 12
 - Definitions 12

Manage NDMP node configurations

Manage NDMP node configurations

You can use this API to manage node configurations. The authentication types "plaintext" and "plaintext_sso" are used to show that the password uses clear text. Also, they contain no differences for NDMP node scope.

Examples

Updates "enabled" and "authentication_types" fields:

```
PATCH "/api/protocols/ndmp/nodes/13bb2092-458b-11e9-9c06-0050568ea64e"
'{"enabled":"false","authentication_types":["plaintext"]}'
```

Updates the "user" field:

```
PATCH "/api/protocols/ndmp/nodes/13bb2092-458b-11e9-9c06-0050568ea64e"
'{"user":"user22"}'
```

Retrieve the NDMP node configurations for all nodes

GET /protocols/ndmp/nodes

Introduced In: 9.7

Retrieves NDMP node configurations for all of the nodes.

Related ONTAP commands

- `system services ndmp show`

Learn more

- [DOC /protocols/ndmp/nodes](#)

Parameters

Name	Type	In	Required	Description
enabled	boolean	query	False	Filter by enabled
authentication_types	string	query	False	Filter by authentication_types
user	string	query	False	Filter by user

Name	Type	In	Required	Description
node.uuid	string	query	False	Filter by node.uuid
node.name	string	query	False	Filter by node.name
fields	array[string]	query	False	Specify the fields to return.
max_records	integer	query	False	Limit the number of records returned.
return_records	boolean	query	False	The default is true for GET calls. When set to false, only the number of records is returned. • Default value: 1
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When iterating over a collection, the default is 15 seconds. ONTAP returns earlier if either max records or the end of the collection is reached. • Default value: 15 • Max value: 120 • Min value: 0
order_by	array[string]	query	False	Order results by specified fields and optional [asc

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
num_records	integer	Number of Records
records	array[ndmp_node]	

Example response

```
{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "num_records": 1,
  "records": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "authentication_types": [
        "plaintext",
        "challenge"
      ],
      "enabled": 1,
      "node": {
        "_links": {
          "self": {
            "href": "/api/resourcelink"
          }
        },
        "name": "node1",
        "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
      },
      "user": "ndmp_user"
    }
  ]
}
```

Error

Status: Default

ONTAP Error Response codes

Error code	Description
68812801	Node-scoped operations are not allowed in an SVM-scope.
68812804	Failed to get the node name from the specified node UUID.

Name	Type	Description
error	returned_error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
next	href	
self	href	

_links

Name	Type	Description
self	href	

node

Storage system node

Name	Type	Description
_links	_links	
name	string	
uuid	string	

ndmp_node

Name	Type	Description
_links	_links	
authentication_types	array[string]	NDMP authentication types.
enabled	boolean	Is the NDMP service enabled?
node	node	Storage system node
user	string	NDMP user ID

error_arguments

Name	Type	Description
code	string	Argument code

Name	Type	Description
message	string	Message argument

returned_error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Retrieve the NDMP node configuration for a node

GET /protocols/ndmp/nodes/{node.uuid}

Introduced In: 9.7

Retrieves an NDMP node configuration for a specific node.

Related ONTAP commands

- `system services ndmp show`

Learn more

- [DOC /protocols/ndmp/nodes](#)

Parameters

Name	Type	In	Required	Description
node.uuid	string	path	True	Node UUID
fields	array[string]	query	False	Specify the fields to return.

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
authentication_types	array[string]	NDMP authentication types.
enabled	boolean	Is the NDMP service enabled?
node	node	Storage system node
user	string	NDMP user ID

Example response

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "authentication_types": [
    "plaintext",
    "challenge"
  ],
  "enabled": 1,
  "node": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "name": "node1",
    "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
  },
  "user": "ndmp_user"
}
```

Error

Status: Default

ONTAP Error Response codes

Error code	Description
68812801	Node-scoped operations are not allowed in an SVM-scope.
68812802	The UUID is not valid.
68812804	Failed to get the node name from the specified node UUID.

Name	Type	Description
error	returned_error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

node

Storage system node

Name	Type	Description
_links	_links	
name	string	
uuid	string	

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

returned_error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Update the NDMP node configuration for a node

PATCH /protocols/ndmp/nodes/{node.uuid}

Introduced In: 9.7

Updates the NDMP node configuration for a specific node.

Related ONTAP commands

- `system services ndmp modify`

Learn more

- [DOC /protocols/ndmp/nodes](#)

Parameters

Name	Type	In	Required	Description
node.uuid	string	path	True	Node UUID

Request Body

Name	Type	Description
authentication_types	array[string]	NDMP authentication types.
enabled	boolean	Is the NDMP service enabled?
node	node	Storage system node
password	string	NDMP password. This can only be set and cannot be read back.
user	string	NDMP user ID

Example request

```
{
  "authentication_types": [
    "plaintext",
    "challenge"
  ],
  "enabled": 1,
  "node": {
    "name": "node1",
    "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
  },
  "password": "string",
  "user": "ndmp_user"
}
```

Response

Status: 200, Ok

Name	Type	Description
authentication_types	array[string]	NDMP authentication types.
enabled	boolean	Is the NDMP service enabled?
node	node	Storage system node
password	string	NDMP password. This can only be set and cannot be read back.
user	string	NDMP user ID

Example response

```
{
  "authentication_types": [
    "plaintext",
    "challenge"
  ],
  "enabled": 1,
  "node": {
    "name": "node1",
    "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
  },
  "password": "string",
  "user": "ndmp_user"
}
```

Error

Status: Default

ONTAP Error Response codes

Error code	Description
68812800	The user is required to enable NDMP on a node.
68812801	Node-scoped operations are not allowed in an SVM-scope.
68812802	The UUID is not valid.

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

node

Storage system node

Name	Type	Description
name	string	
uuid	string	

ndmp_node

Name	Type	Description
authentication_types	array[string]	NDMP authentication types.
enabled	boolean	Is the NDMP service enabled?
node	node	Storage system node
password	string	NDMP password. This can only be set and cannot be read back.
user	string	NDMP user ID

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

returned_error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code

Name	Type	Description
message	string	Error message
target	string	The target parameter that caused the error.

Copyright information

Copyright © 2026 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.