



Support

ONTAP 9.7 REST API reference

NetApp
August 29, 2024

Table of Contents

- Support 1
 - Support overview 1
 - Manage AutoSupport configuration 1
 - Manage AutoSupport messages 21
 - Manage cluster configuration backup information 44
 - Manage configuration backups 52
 - Manage EMS configuration 76
 - Manage event destinations 86
 - Manage an event destination instance 100
 - Retrieve events 115
 - Create or retrieve event filters 122
 - Manage event filters 139
 - Create or retrieve filter rules 153
 - Manage event filter rules 168
 - Manage the EMS event catalog 181
 - Manage cluster-wide SNMP configuration 187

Support

Support overview

Overview

You can use ONTAP support APIs to manage configuration backups, autosupport settings, and event handling.

Configuration backups

Configuration backups are copies of node and cluster settings saved to an external server. Single-node clusters must have configuration backups as protection against corruption of the configuration database. Multi-node clusters back up the configuration automatically between the nodes in the cluster.

Manage AutoSupport configuration

Support AutoSupport endpoint overview

Overview

AutoSupport is the NetApp *call home* mechanism. AutoSupport sends configuration details, status details, and error reporting details to NetApp.

This endpoint supports both GET and PATCH calls. GET is used to retrieve AutoSupport configuration details for the cluster and PATCH is used to modify the AutoSupport configuration of the cluster. You can also use GET calls to check AutoSupport connectivity.

Examples

Configuring 'to' addresses

The following example configures AutoSupport to send emails to 'to' addresses.

```
# The API:
PATCH /support/autosupport

# The call:
curl -X PATCH "https://<mgmt-ip>/api/support/autosupport" -H "accept:
application/hal+json" -H "Content-Type: application/json" -d "{ \"to\": [
\"abc@netapp.com\", \"xyz@netapp.com\" ]}"

# The response:
200 OK
{ }
```

Configuring 'SMTP' transport

The following example configures AutoSupport to use 'SMTP' transport. The default transport is 'HTTPS'.

```
# The API:
PATCH /support/autosupport

# The call:
curl -X PATCH "https://<mgmt-ip>/api/support/autosupport" -H "accept:
application/hal+json" -H "Content-Type: application/json" -d "{
\"transport\": \"smtp\"}"

# The response:
200 OK
{}
```

Retrieving the AutoSupport configuration

The following example retrieves AutoSupport configuration for the cluster.

```

# The API:
GET /support/autosupport

# The call:
curl -X GET "https://<mgmt-ip>/api/support/autosupport" -H "accept:
application/hal+json" OR
curl -X GET "https://<mgmt-ip>/api/support/autosupport?fields=*" -H
"accept: application/hal+json"

# The response:
200 OK
{
  "enabled": true,
  "mail_hosts": [
    "mailhost"
  ],
  "from": "Postmaster",
  "to": [
    "abc@netapp.com",
    "xyz@netapp.com"
  ],
  "contact_support": true,
  "transport": "smtp",
  "proxy_url": "",
  "is_minimal": false,
  "_links": {
    "self": {
      "href": "/api/support/autosupport"
    }
  }
}

```

Retrieving AutoSupport connectivity issues

The following example retrieves AutoSupport connectivity issues for the cluster. The `fields=issues` parameter must be specified, for the response to return connectivity issues. The `corrective_action` section might contain commands which needs to be executed on the ONTAP CLI.

Note that the connectivity check can take up to 10 seconds to complete.

```

# The API:
GET /support/autosupport

# The call:

```

```

curl -X GET "https://<mgmt-ip>/api/support/autosupport?fields=issues" -H
"accept: application/hal+json"

# The response:
200 OK
{
  "issues": [
    {
      "node": {
        "name": "node3",
        "uuid": "0ecfd0a6-f1b3-11e8-9d9f-005056bbaadc",
        "_links": {
          "self": {
            "href": "/api/cluster/nodes/0ecfd0a6-f1b3-11e8-9d9f-
005056bbaadc"
          }
        }
      },
      "issue": {
        "message": "SMTP connectivity check failed for destination:
mailhost. Error: Could not resolve host - 'mailhost'",
        "code": "53149746"
      },
      "corrective_action": {
        "message": "Check the hostname of the SMTP server",
        "code": "53149746"
      }
    },
    {
      "node": {
        "name": "node3",
        "uuid": "0ecfd0a6-f1b3-11e8-9d9f-005056bbaadc",
        "_links": {
          "self": {
            "href": "/api/cluster/nodes/0ecfd0a6-f1b3-11e8-9d9f-
005056bbaadc"
          }
        }
      },
      "issue": {
        "message": "AutoSupport OnDemand is disabled when \"-transport\" is
not set to \"https\".",
        "code": "53149740"
      },
      "corrective_action": {
        "message": "Run \"system node autosupport modify -transport https

```

```
-node <node name>\\" to set \\"-transport\\" to \\"https\\".",
  "code": "53149740"
}
}
],
"_links": {
  "self": {
    "href": "/api/support/autosupport"
  }
}
}
```

Retrieving AutoSupport configuration and connectivity issues

The following example retrieves AutoSupport configuration and connectivity issues on the cluster. Use `fields=*,issues` parameter to return both configuration and connectivity issues.

```
# The API:
GET /support/autosupport

# The call:
curl -X GET "https://<mgmt-ip>/api/support/autosupport?fields=*&issues"
-H "accept: application/hal+json"

# The response:
200 OK
{
  "enabled": true,
  "mail_hosts": [
    "mailhost"
  ],
  "from": "Postmaster",
  "to": [
    "abc@netapp.com",
    "xyz@netapp.com"
  ],
  "contact_support": true,
  "transport": "smtp",
  "proxy_url": "",
  "is_minimal": false,
  "issues": [
    {
      "node": {
        "name": "node3",
```

```

    "uuid": "0ecfd0a6-f1b3-11e8-9d9f-005056bbaadc",
    "_links": {
      "self": {
        "href": "/api/cluster/nodes/0ecfd0a6-f1b3-11e8-9d9f-005056bbaadc"
      }
    }
  },
  "issue": {
    "message": "SMTP connectivity check failed for destination: mailhost. Error: Could not resolve host - 'mailhost'",
    "code": "53149746"
  },
  "corrective_action": {
    "message": "Check the hostname of the SMTP server",
    "code": "53149746"
  }
},
{
  "node": {
    "name": "node3",
    "uuid": "0ecfd0a6-f1b3-11e8-9d9f-005056bbaadc",
    "_links": {
      "self": {
        "href": "/api/cluster/nodes/0ecfd0a6-f1b3-11e8-9d9f-005056bbaadc"
      }
    }
  },
  "issue": {
    "message": "AutoSupport OnDemand is disabled when \"-transport\" is not set to \"https\".",
    "code": "53149740"
  },
  "corrective_action": {
    "message": "Run \"system node autosupport modify -transport https -node <node name>\" to set \"-transport\" to \"https\".",
    "code": "53149740"
  }
}
],
"_links": {
  "self": {
    "href": "/api/support/autosupport"
  }
}
}

```



```
}
```

Retrieve the AutoSupport configuration

GET `/support/autosupport`

Retrieves the AutoSupport configuration of the cluster and if requested, returns connectivity issues with the AutoSupport configuration.

Important note:

- The **issues** field consists of a list of objects containing details of the node that has a connectivity issue, the issue description, and corrective action you can take to address the issue. When not empty, this indicates a connection issue to the **HTTP/S**, **SMTP**, or **AutoSupport On Demand** server.

Expensive properties

There is an added cost to retrieving values for these properties. They are not included by default in GET results and must be explicitly requested using the `fields` query parameter. See [DOC Requesting specific fields](#) to learn more.

- `issues`

Related ONTAP commands

- `system node autosupport show -instance`
- `system node autosupport check show-details`

Learn more

- [DOC /support/autosupport](#)

Parameters

Name	Type	In	Required	Description
<code>max_records</code>	integer	query	False	Limit the number of records returned.
<code>return_records</code>	boolean	query	False	The default is true for GET calls. When set to false, only the number of records is returned.

Name	Type	In	Required	Description
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When iterating over a collection, the default is 15 seconds. ONTAP returns earlier if either max records or the end of the collection is reached.
order_by	array[string]	query	False	Order results by specified fields and optional [asc
desc] direction. Default direction is 'asc' for ascending.	fields	array[string]	query	False

Response

Status: 200, Ok

Name	Type	Description
contact_support	boolean	Specifies whether to send the AutoSupport messages to vendor support.
enabled	boolean	Specifies whether the AutoSupport daemon is enabled. When this setting is disabled, delivery of all AutoSupport messages is turned off.
from	string	The e-mail address from which the AutoSupport messages are sent. To generate node-specific 'from' addresses, enable '-node-specific-from' parameter via ONTAP CLI. <ul style="list-style-type: none"> example: postmaster@example.com format: email

Name	Type	Description
is_minimal	boolean	Specifies whether the system information is collected in compliant form, to remove private data or in complete form, to enhance diagnostics.
issues	array[autosupport_issues]	A list of nodes in the cluster with connectivity issues to HTTP/SMTP/AOD AutoSupport destinations along with the corresponding error descriptions and corrective actions.
mail_hosts	array[string]	The names of the mail servers used to deliver AutoSupport messages via SMTP.
partner_addresses	array[string]	The list of partner addresses.
proxy_url	string	Proxy server for AutoSupport message delivery via HTTP/S. Optionally specify a username/password for authentication with the proxy server.
to	array[string]	The e-mail addresses to which the AutoSupport messages are sent.
transport	string	The name of the transport protocol used to deliver AutoSupport messages.

Example response

```
{
  "contact_support": 1,
  "enabled": 1,
  "from": "<a href="
mailto:postmaster@example.com">postmaster@example.com</a>",
  "is_minimal": 1,
  "issues": [
    {
      "corrective_action": {
        "code": "53149746",
        "message": "Check the hostname of the SMTP server"
      },
      "issue": {
        "code": "53149746",
        "message": "SMTP connectivity check failed for destination:
mailhost. Error: Could not resolve host - 'mailhost'"
      },
      "node": {
        "_links": {
          "self": {
            "href": "/api/resourcelink"
          }
        },
        "name": "node1",
        "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
      }
    }
  ],
  "mail_hosts": [
    "mailhost1.example.com",
    "mailhost2.example.com"
  ],
  "partner_addresses": [
    "<a href="mailto:user1@partner.com">user1@partner.com</a>",
    "<a href="mailto:user2@partner.com">user2@partner.com</a>"
  ],
  "proxy_url": "https://proxy.company.com",
  "to": [
    "<a href="mailto:user1@example.com">user1@example.com</a>",
    "<a href="mailto:user2@example.com">user2@example.com</a>"
  ],
  "transport": "smtp"
}
```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

autosupport_connectivity_corrective_action

Name	Type	Description
code	string	Corrective action code
message	string	Corrective action message. The corrective action might contain commands which needs to be executed on the ONTAP CLI. <ul style="list-style-type: none">• example: Check the hostname of the SMTP server• readOnly: 1

autosupport_connectivity_issue

Name	Type	Description
code	string	Error code
message	string	Error message

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

node

Name	Type	Description
_links	_links	
name	string	
uuid	string	

autosupport_issues

Name	Type	Description
corrective_action	autosupport_connectivity_corrective_action	
issue	autosupport_connectivity_issue	
node	node	

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Update AutoSupport configuration for an entire cluster

PATCH `/support/autosupport`

Updates the AutoSupport configuration for the entire cluster.

Related ONTAP commands

- `system node autosupport modify`

Learn more

- [DOC /support/autosupport](#)

Parameters

Name	Type	In	Required	Description
return_records	boolean	query	False	The default is false. If set to true, the records are returned.

Request Body

Name	Type	Description
contact_support	boolean	Specifies whether to send the AutoSupport messages to vendor support.
enabled	boolean	Specifies whether the AutoSupport daemon is enabled. When this setting is disabled, delivery of all AutoSupport messages is turned off.
from	string	The e-mail address from which the AutoSupport messages are sent. To generate node-specific 'from' addresses, enable '-node-specific-from' parameter via ONTAP CLI. <ul style="list-style-type: none"> example: postmaster@example.com format: email
is_minimal	boolean	Specifies whether the system information is collected in compliant form, to remove private data or in complete form, to enhance diagnostics.
issues	array[autosupport_issues]	A list of nodes in the cluster with connectivity issues to HTTP/SMTP/AOD AutoSupport destinations along with the corresponding error descriptions and corrective actions.
mail_hosts	array[string]	The names of the mail servers used to deliver AutoSupport messages via SMTP.
partner_addresses	array[string]	The list of partner addresses.

Name	Type	Description
proxy_url	string	Proxy server for AutoSupport message delivery via HTTP/S. Optionally specify a username/password for authentication with the proxy server.
to	array[string]	The e-mail addresses to which the AutoSupport messages are sent.
transport	string	The name of the transport protocol used to deliver AutoSupport messages.

Example request

```
{
  "contact_support": 1,
  "enabled": 1,
  "from": "<a href="
mailto:postmaster@example.com">postmaster@example.com</a>",
  "is_minimal": 1,
  "issues": [
    {
      "corrective_action": {
        "code": "53149746",
        "message": "Check the hostname of the SMTP server"
      },
      "issue": {
        "code": "53149746",
        "message": "SMTP connectivity check failed for destination:
mailhost. Error: Could not resolve host - 'mailhost'"
      },
      "node": {
        "_links": {
          "self": {
            "href": "/api/resourcelink"
          }
        },
        "name": "node1",
        "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
      }
    }
  ],
  "mail_hosts": [
    "mailhost1.example.com",
    "mailhost2.example.com"
  ],
  "partner_addresses": [
    "<a href="mailto:user1@partner.com">user1@partner.com</a>",
    "<a href="mailto:user2@partner.com">user2@partner.com</a>"
  ],
  "proxy_url": "https://proxy.company.com",
  "to": [
    "<a href="mailto:user1@example.com">user1@example.com</a>",
    "<a href="mailto:user2@example.com">user2@example.com</a>"
  ],
  "transport": "smtp"
}
```

Response

Status: 200, Ok

Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
8650862	The SMTP mail host provided cannot be empty
8650863	A maximum of 5 SMTP mail hosts can be provided
8650864	A maximum of 5 email addresses can be provided
8650865	A maximum of 5 partner email addresses can be provided
53149727	The proxy URI provided is invalid
53149728	The mailhost URI provided is invalid

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

autosupport_connectivity_corrective_action

Name	Type	Description
code	string	Corrective action code
message	string	Corrective action message. The corrective action might contain commands which needs to be executed on the ONTAP CLI. <ul style="list-style-type: none">• example: Check the hostname of the SMTP server• readOnly: 1

autosupport_connectivity_issue

Name	Type	Description
code	string	Error code
message	string	Error message

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

node

Name	Type	Description
_links	_links	
name	string	
uuid	string	

autosupport_issues

Name	Type	Description
corrective_action	autosupport_connectivity_corrective_action	
issue	autosupport_connectivity_issue	
node	node	

autosupport

Name	Type	Description
contact_support	boolean	Specifies whether to send the AutoSupport messages to vendor support.
enabled	boolean	Specifies whether the AutoSupport daemon is enabled. When this setting is disabled, delivery of all AutoSupport messages is turned off.
from	string	The e-mail address from which the AutoSupport messages are sent. To generate node-specific 'from' addresses, enable '-node-specific-from' parameter via ONTAP CLI. <ul style="list-style-type: none"> example: postmaster@example.com format: email
is_minimal	boolean	Specifies whether the system information is collected in compliant form, to remove private data or in complete form, to enhance diagnostics.
issues	array[autosupport_issues]	A list of nodes in the cluster with connectivity issues to HTTP/SMTP/AOD AutoSupport destinations along with the corresponding error descriptions and corrective actions.
mail_hosts	array[string]	The names of the mail servers used to deliver AutoSupport messages via SMTP.

Name	Type	Description
partner_addresses	array[string]	The list of partner addresses.
proxy_url	string	Proxy server for AutoSupport message delivery via HTTP/S. Optionally specify a username/password for authentication with the proxy server.
to	array[string]	The e-mail addresses to which the AutoSupport messages are sent.
transport	string	The name of the transport protocol used to deliver AutoSupport messages.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Manage AutoSupport messages

Support AutoSupport messages endpoint overview

Overview

Use this API to invoke and retrieve AutoSupport messages from the nodes in the cluster.

This API supports POST and GET calls. Use a POST call to invoke AutoSupport and a GET call to retrieve AutoSupport messages.

Examples

Invoking an AutoSupport on all nodes in the cluster

The following example invokes an AutoSupport on every node in the cluster. Note that AutoSupport is invoked on all nodes in the cluster if the `node` parameter is omitted. Also, note that the `subject` line is the same when invoking on all nodes.

By default, the response is an empty object. If `return_records=true` is passed in the request, the response includes information about the node and the index of the invoked AutoSupport message.

```
# The API:
POST /support/autosupport/messages

# The call:
curl -X POST "https://<mgmt-
ip>/api/support/autosupport/messages?return_records=true" -H "accept:
application/hal+json" -H "Content-Type: application/json" -d "{
 \"message\": \"test_msg\", \"type\": \"all\"}"

# The response:
201 CREATED
{
  "num_records": 2,
  "records": [
    {
      "index": 4,
      "node": {
        "name": "node1",
        "uuid": "092e0298-f250-11e8-9a05-005056bb6666",
        "_links": {
          "self": {
            "href": "/api/cluster/nodes/092e0298-f250-11e8-9a05-
005056bb6666"
          }
        }
      },
      "_links": {
        "self": {
          "href": "/api/support/autosupport/messages/092e0298-f250-11e8-
9a05-005056bb6666/4"
        }
      }
    }
  ]
}
```



```

},
{
  "index": 2,
  "node": {
    "name": "node2",
    "uuid": "e47d2630-f250-11e8-b186-005056bb5cab",
    "_links": {
      "self": {
        "href": "/api/cluster/nodes/e47d2630-f250-11e8-b186-005056bb5cab"
      }
    }
  },
  "_links": {
    "self": {
      "href": "/api/support/autosupport/messages/e47d2630-f250-11e8-b186-005056bb5cab/2"
    }
  }
}
],
"_links": {
  "self": {
    "href": "/api/support/autosupport/messages/"
  }
}
}
}

```

Invoking an AutoSupport on a single node

The following examples invoke an AutoSupport on a single node in the cluster. Note that AutoSupport is invoked on all nodes in the cluster if the `node` parameter is omitted. You can specify the node-name with either `node` or `node.name` parameter. You can also specify UUID of the node with the `node.uuid` parameter.

By default, the response is an empty object. If `return_records=true` is passed in the request, the response includes information about the node and the index of the invoked AutoSupport message.

```

# The API:
POST /support/autosupport/messages

# The call:
curl -X POST "https://<mgmt-ip>/api/support/autosupport/messages?return_records=true" -H "accept: application/hal+json" -H "Content-Type: application/json" -d '{"message": "test_msg", "type": "test", "node": "node1"}'

```

```

# The response:
201 CREATED
{
  "num_records": 1,
  "records": [
    {
      "index": 8,
      "node": {
        "name": "node1",
        "uuid": "092e0298-f250-11e8-9a05-005056bb6666",
        "_links": {
          "self": {
            "href": "/api/cluster/nodes/092e0298-f250-11e8-9a05-005056bb6666"
          }
        }
      },
      "_links": {
        "self": {
          "href": "/api/support/autosupport/messages/092e0298-f250-11e8-9a05-005056bb6666/8"
        }
      }
    }
  ],
  "_links": {
    "self": {
      "href": "/api/support/autosupport/messages/"
    }
  }
}

# The call:
curl -X POST "https://<mgmt-ip>/api/support/autosupport/messages?return_records=true" -H "accept: application/hal+json" -H "Content-Type: application/json" -d '{"message": "test_msg", "type": "test", "node.name": "node2"}'

# The response:
201 CREATED
{
  "num_records": 1,
  "records": [
    {
      "index": 4,

```

```

    "node": {
      "name": "node2",
      "uuid": "e47d2630-f250-11e8-b186-005056bb5cab",
      "_links": {
        "self": {
          "href": "/api/cluster/nodes/e47d2630-f250-11e8-b186-005056bb5cab"
        }
      }
    },
    "_links": {
      "self": {
        "href": "/api/support/autosupport/messages/e47d2630-f250-11e8-b186-005056bb5cab/4"
      }
    }
  ],
  "_links": {
    "self": {
      "href": "/api/support/autosupport/messages/"
    }
  }
}

# The call:
curl -X POST "https://<mgmt-ip>/api/support/autosupport/messages?return_records=true" -H "accept: application/hal+json" -H "Content-Type: application/json" -d '{"message": "test_msg", "type": "test", "node.uuid": "092e0298-f250-11e8-9a05-005056bb6666"}'

# The response:
201 CREATED
{
  "num_records": 1,
  "records": [
    {
      "index": 5,
      "node": {
        "name": "node1",
        "uuid": "092e0298-f250-11e8-9a05-005056bb6666",
        "_links": {
          "self": {
            "href": "/api/cluster/nodes/092e0298-f250-11e8-9a05-005056bb6666"
          }
        }
      }
    }
  ]
}

```

```

    }
  }
},
"_links": {
  "self": {
    "href": "/api/support/autosupport/messages/092e0298-f250-11e8-9a05-005056bb6666/5"
  }
}
},
],
"_links": {
  "self": {
    "href": "/api/support/autosupport/messages/"
  }
}
}
}

```

Retrieving AutoSupport messages from all nodes in the cluster

The following example retrieves AutoSupport messages from every node in the cluster. Note that if the *fields=** parameter is not specified, only node, index, and destination fields are returned. Filters can be added on the fields to limit the results.

```

# The API:
GET /support/autosupport/messages

# The call:
curl -X GET "https://<mgmt-
ip>/api/support/autosupport/messages?fields=*&return_timeout=15" -H
"accept: application/hal+json"

# The response:
200 OK
{
"records": [
  {
    "node": {
      "uuid": "092e0298-f250-11e8-9a05-005056bb6666",
      "name": "node1",
      "_links": {
        "self": {
          "href": "/api/cluster/nodes/092e0298-f250-11e8-9a05-005056bb6666"
        }
      }
    }
  }
]
}

```

```

    }
  },
  "index": 1,
  "destination": "smtp",
  "subject": "USER_TRIGGERED (TEST:test_msg)",
  "state": "ignore",
  "generated_on": "2019-03-28T10:18:04-04:00",
  "_links": {
    "self": {
      "href": "/api/support/autosupport/messages/092e0298-f250-11e8-9a05-005056bb6666/1/smtp"
    }
  }
},
{
  "node": {
    "uuid": "092e0298-f250-11e8-9a05-005056bb6666",
    "name": "node1",
    "_links": {
      "self": {
        "href": "/api/cluster/nodes/092e0298-f250-11e8-9a05-005056bb6666"
      }
    }
  },
  "index": 1,
  "destination": "http",
  "subject": "USER_TRIGGERED (TEST:test_msg)",
  "state": "sent_successful",
  "generated_on": "2019-03-28T10:18:04-04:00",
  "_links": {
    "self": {
      "href": "/api/support/autosupport/messages/092e0298-f250-11e8-9a05-005056bb6666/1/http"
    }
  }
},
{
  "node": {
    "uuid": "092e0298-f250-11e8-9a05-005056bb6666",
    "name": "node1",
    "_links": {
      "self": {
        "href": "/api/cluster/nodes/092e0298-f250-11e8-9a05-005056bb6666"
      }
    }
  }
}

```

```

    }
  },
  "index": 1,
  "destination": "noteto",
  "subject": "USER_TRIGGERED (TEST:test_msg)",
  "state": "ignore",
  "generated_on": "2019-03-28T10:18:04-04:00",
  "_links": {
    "self": {
      "href": "/api/support/autosupport/messages/092e0298-f250-11e8-9a05-005056bb6666/1/noteto"
    }
  }
},
{
  "node": {
    "uuid": "e47d2630-f250-11e8-b186-005056bb5cab",
    "name": "node2",
    "_links": {
      "self": {
        "href": "/api/cluster/nodes/e47d2630-f250-11e8-b186-005056bb5cab"
      }
    }
  },
  "index": 1,
  "destination": "smtp",
  "subject": "USER_TRIGGERED (TEST:test_msg)",
  "state": "ignore",
  "generated_on": "2019-03-28T10:18:06-04:00",
  "_links": {
    "self": {
      "href": "/api/support/autosupport/messages/e47d2630-f250-11e8-b186-005056bb5cab/1/smtp"
    }
  }
},
{
  "node": {
    "uuid": "e47d2630-f250-11e8-b186-005056bb5cab",
    "name": "node2",
    "_links": {
      "self": {
        "href": "/api/cluster/nodes/e47d2630-f250-11e8-b186-005056bb5cab"
      }
    }
  }
}

```

```

    }
  },
  "index": 1,
  "destination": "http",
  "subject": "USER_TRIGGERED (TEST:test_msg)",
  "state": "sent_successful",
  "generated_on": "2019-03-28T10:18:06-04:00",
  "_links": {
    "self": {
      "href": "/api/support/autosupport/messages/e47d2630-f250-11e8-
b186-005056bb5cab/1/http"
    }
  }
},
{
  "node": {
    "uuid": "e47d2630-f250-11e8-b186-005056bb5cab",
    "name": "node2",
    "_links": {
      "self": {
        "href": "/api/cluster/nodes/e47d2630-f250-11e8-b186-
005056bb5cab"
      }
    }
  },
  "index": 1,
  "destination": "noteto",
  "subject": "USER_TRIGGERED (TEST:test_msg)",
  "state": "ignore",
  "generated_on": "2019-03-28T10:18:06-04:00",
  "_links": {
    "self": {
      "href": "/api/support/autosupport/messages/e47d2630-f250-11e8-
b186-005056bb5cab/1/noteto"
    }
  }
}
],
"num_records": 6,
"_links": {
  "self": {
    "href": "/api/support/autosupport/messages?fields=*&return_timeout=15"
  }
}
}
}

```

Retrieving AutoSupport messages from a specific node and has 'sent_sucesful' state

The following example retrieves AutoSupport messages from a specific node in the cluster. Note that if the `fields=*` parameter is not specified, only `node`, `index`, and `destination` fields are returned. This example uses a filter on the `node.name` and `state` fields. You can add filters to any fields in the response.


```

# The API:
GET /support/autosupport/messages

# The call:
curl -X GET "https://<mgmt-
ip>/api/support/autosupport/messages?node.name=node1&state=sent_successful
&fields=*&return_timeout=15" -H "accept: application/hal+json"

# The response:
200 OK
{
"records": [
  {
    "node": {
      "uuid": "092e0298-f250-11e8-9a05-005056bb6666",
      "name": "node1",
      "_links": {
        "self": {
          "href": "/api/cluster/nodes/092e0298-f250-11e8-9a05-
005056bb6666"
        }
      }
    },
    "index": 1,
    "destination": "http",
    "subject": "USER_TRIGGERED (TEST:test_msg)",
    "state": "sent_successful",
    "generated_on": "2019-03-28T10:18:04-04:00",
    "_links": {
      "self": {
        "href": "/api/support/autosupport/messages/092e0298-f250-11e8-
9a05-005056bb6666/1/http"
      }
    }
  }
],
"num_records": 1,
"_links": {
  "self": {
    "href":
"/api/support/autosupport/messages?node.name=node1&state=sent_successful&f
ields=*&return_timeout=15"
  }
}
}

```

Retrieve AutoSupport message history

GET /support/autosupport/messages

Retrieves AutoSupport message history from all nodes in the cluster.

There can be a short delay on invoked AutoSupport messages showing in history, dependent on processing of other AutoSupports in the queue.

Related ONTAP commands

- `system node autosupport history show`

Learn more

- [DOC /support/autosupport/messages](#)

Parameters

Name	Type	In	Required	Description
return_records	boolean	query	False	The default is true for GET calls. When set to false, only the number of records is returned.
order_by	array[string]	query	False	Order results by specified fields and optional [asc
desc] direction. Default direction is 'asc' for ascending.	node.uuid	string	query	False
Filter by node.uuid	node.name	string	query	False
Filter by node.name	destination	string	query	False
Filter by destination	state	string	query	False
Filter by state	generated_on	string	query	False
Filter by generated_on	index	integer	query	False
Filter by index	subject	string	query	False
Filter by subject	error.message	string	query	False

Name	Type	In	Required	Description
Filter by error.message	error.code	integer	query	False
Filter by error.code	fields	array[string]	query	False
Specify the fields to return.	max_records	integer	query	False
Limit the number of records returned.	return_timeout	integer	query	False

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
num_records	integer	Number of records
records	array[autosupport_message]	List of messages invoked on the node

Example response

```
{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "num_records": 3,
  "records": [
    {
      "destination": "http",
      "error": {
        "code": "53149746",
        "message": "Could not resolve host: test.com"
      },
      "generated_on": "2019-03-25 17:30:04 -0400",
      "index": 9,
      "message": "invoked_test_autosupport_rest",
      "node": {
        "_links": {
          "self": {
            "href": "/api/resourcelink"
          }
        },
        "name": "node1",
        "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
      },
      "state": "sent_successful",
      "subject": "WEEKLY_LOG",
      "type": "test",
      "uri": "http://1.2.3.4/delivery_uri"
    }
  ]
}
```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
next	href	
self	href	

error

Last error during delivery attempt. Empty if "status=sent-successful".

Name	Type	Description
code	integer	Error code
message	string	Error message

_links

Name	Type	Description
self	href	

node

Name	Type	Description
_links	_links	
name	string	
uuid	string	

autosupport_message

Name	Type	Description
destination	string	Destination for the AutoSupport
error	error	Last error during delivery attempt. Empty if "status=sent-successful".

Name	Type	Description
generated_on	string	Date and Time of AutoSupport generation in ISO-8601 format
index	integer	Sequence number of the AutoSupport
message	string	Message included in the AutoSupport subject
node	node	
state	string	State of AutoSupport delivery
subject	string	Subject line for the AutoSupport
type	string	Type of AutoSupport collection to issue
uri	string	Alternate destination for the AutoSupport

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Create and send an AutoSupport message

POST /support/autosupport/messages

Creates and sends an AutoSupport message with the provided input parameters.

Important note:

- By default, the response is an empty object. If `return_records=true` is passed in the request, the response includes information about the node and the index of the invoked AutoSupport message.

Recommended optional properties

- `message` - Message included in the AutoSupport subject. Use this to identify the generated AutoSupport message.

Default property values

If not specified in POST, the following are the default property values:

- `type` - *all*
- `node.name` or `node.uuid` - Not specifying these properties invokes AutoSupport on all nodes in the cluster.

Related ONTAP commands

- `system node autosupport invoke`

Learn more

- [DOC /support/autosupport/messages](#)

Parameters

Name	Type	In	Required	Description
<code>return_records</code>	boolean	query	False	The default is false. If set to true, the records are returned.

Request Body

Name	Type	Description
<code>destination</code>	string	Destination for the AutoSupport
<code>error</code>	error	Last error during delivery attempt. Empty if "status=sent-successful".
<code>generated_on</code>	string	Date and Time of AutoSupport generation in ISO-8601 format

Name	Type	Description
index	integer	Sequence number of the AutoSupport
message	string	Message included in the AutoSupport subject
node	node	
state	string	State of AutoSupport delivery
subject	string	Subject line for the AutoSupport
type	string	Type of AutoSupport collection to issue
uri	string	Alternate destination for the AutoSupport

Example request

```
{
  "destination": "http",
  "error": {
    "code": "53149746",
    "message": "Could not resolve host: test.com"
  },
  "generated_on": "2019-03-25 17:30:04 -0400",
  "index": 9,
  "message": "invoked_test_autosupport_rest",
  "node": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "name": "node1",
    "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
  },
  "state": "sent_successful",
  "subject": "WEEKLY_LOG",
  "type": "test",
  "uri": "http://1.2.3.4/delivery_uri"
}
```

Response

Status: 201, Created

Name	Type	Description
_links	_links	
num_records	integer	Number of records
records	array[records]	

Example response

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "num_records": 3,
  "records": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "index": 9,
      "node": {
        "_links": {
          "self": {
            "href": "/api/resourcelink"
          }
        },
        "name": "node1",
        "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
      }
    }
  ]
}
```

Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
53149748	The destination URI provided for the invoked AutoSupport is invalid
655294464	The message parameter is not supported with performance AutoSupports

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

error

Last error during delivery attempt. Empty if "status=sent-successful".

Name	Type	Description
code	integer	Error code
message	string	Error message

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

node

Name	Type	Description
_links	_links	
name	string	
uuid	string	

autosupport_message

Name	Type	Description
destination	string	Destination for the AutoSupport
error	error	Last error during delivery attempt. Empty if "status=sent-successful".
generated_on	string	Date and Time of AutoSupport generation in ISO-8601 format
index	integer	Sequence number of the AutoSupport
message	string	Message included in the AutoSupport subject

Name	Type	Description
node	node	
state	string	State of AutoSupport delivery
subject	string	Subject line for the AutoSupport
type	string	Type of AutoSupport collection to issue
uri	string	Alternate destination for the AutoSupport

records

Name	Type	Description
_links	_links	
index	integer	Sequence number of the generated AutoSupport
node	node	

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Manage cluster configuration backup information

Support configuration-backup endpoint overview

Overview

This API retrieves the current settings for the configuration and updates configuration backup settings. The GET operation retrieves the current settings for the configuration and the PATCH operation updates the configuration backup settings.

Examples

These examples show how to retrieve and update the configuration backup settings.

Retrieving the configuration backup settings

```
# The API:
/api/support/configuration-backup

# The call:
curl -X GET "https://<mgmt-ip>/api/support/configuration-backup" -H
"accept: application/hal+json"

# The response:
{
  "url": "http://10.224.65.198/backups",
  "username": "me",
  "_links": {
    "self": {
      "href": "/api/support/configuration-backup"
    }
  }
}
```

Updating the configuration backup settings

```

# The API:
/api/support/configuration-backup

# The call:
curl -X PATCH "https://<mgmt-ip>/api/support/configuration-backup" -H
"accept: application/hal+json"

# The body:
{
  "url": "https://10.224.65.198/new_backups",
  "username": "new_me",
  "password": "new_pass",
  "validate_certificate": "true"
}

# The response header:
HTTP/1.1 200 OK
Date: Tue, 05 Jun 2018 18:17:48 GMT
Server: libzapid-httpd
Cache-Control: no-cache,no-store,must-revalidate
Content-Length: 3
Content-Type: application/hal+json

```

Retrieve cluster configuration backup information

GET /support/configuration-backup

Retrieves the cluster configuration backup information.

Learn more

- [DOC /support/configuration-backup](#)

Parameters

Name	Type	In	Required	Description
max_records	integer	query	False	Limit the number of records returned.
return_records	boolean	query	False	The default is true for GET calls. When set to false, only the number of records is returned.

Name	Type	In	Required	Description
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When iterating over a collection, the default is 15 seconds. ONTAP returns earlier if either max records or the end of the collection is reached.
order_by	array[string]	query	False	Order results by specified fields and optional [asc
desc] direction. Default direction is 'asc' for ascending.	fields	array[string]	query	False

Response

Status: 200, Ok

Name	Type	Description
password	string	
url	string	An external backup location for the cluster configuration. This is mostly required for single node clusters where node and cluster configuration backups cannot be copied to other nodes in the cluster.
username	string	
validate_certificate	boolean	Use this parameter with the value "true" to validate the digital certificate of the remote server. Digital certificate validation is available only when the HTTPS protocol is used in the URL; it is disabled by default.

Example response

```
{
  "password": "yourpassword",
  "url": "http://10.224.65.198/backups",
  "username": "me"
}
```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Update cluster configuration backup information

PATCH /support/configuration-backup

Updates the cluster configuration backup information.

Learn more

- [DOC /support/configuration-backup](#)

Parameters

Name	Type	In	Required	Description
return_records	boolean	query	False	The default is false. If set to true, the records are returned.

Request Body

Name	Type	Description
password	string	

Name	Type	Description
url	string	An external backup location for the cluster configuration. This is mostly required for single node clusters where node and cluster configuration backups cannot be copied to other nodes in the cluster.
username	string	
validate_certificate	boolean	Use this parameter with the value "true" to validate the digital certificate of the remote server. Digital certificate validation is available only when the HTTPS protocol is used in the URL; it is disabled by default.

Example request

```
{
  "password": "yourpassword",
  "url": "http://10.224.65.198/backups",
  "username": "me"
}
```

Response

```
Status: 200, Ok
```

Error

```
Status: Default
```

ONTAP Error Response Codes

Error Code	Description
39387137	Invalid URL
39387138	Invalid URL Scheme
5963792	Using HTTPS for URL requires an effective cluster version of 9.7.0 or later.

Error Code	Description
5963794	Validating the certificate is supported for the HTTPS protocol only.

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

configuration_backup

Name	Type	Description
password	string	
url	string	An external backup location for the cluster configuration. This is mostly required for single node clusters where node and cluster configuration backups cannot be copied to other nodes in the cluster.
username	string	
validate_certificate	boolean	Use this parameter with the value "true" to validate the digital certificate of the remote server. Digital certificate validation is available only when the HTTPS protocol is used in the URL; it is disabled by default.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Manage configuration backups

Support configuration-backup backups endpoint overview

Overview

This API supports creating, deleting and retrieving configuration backup files. Configuration backups can be 'cluster' or 'node' type. A 'cluster' backup contains cluster-wide configuration in addition to the configuration of each node in the cluster. A 'node' backup contains only node-specific configuration such as configuration files on the root volume and the boot variables. For creating a cluster backup, a cluster-wide job is queued. For creating a node backup, a private job local to the node is queued. In addition to the backups created using this API, ONTAP creates configuration backups automatically based on job schedules. This API supports creating configuration backups on demand only. It supports deleting and retrieving configuration backups that are created automatically or on demand. For information on configuration backup settings for automatically created backups, see [DOC /support/configuration-backup](#)

Examples

Retrieving a list of configuration backup files

```
# The API:
/api/support/configuration-backup/backups

# The call:
curl -X GET "https://<mgmt-ip>/api/support/configuration-backup/backups"
-H "accept: application/hal+json"

# The response:
{
  "records": [
    {
      "node": {
        "uuid": "5cafe0f6-499f-11e9-b644-005056bbcf93",
        "name": "node1",
        "_links": {
          "self": {
            "href": "/api/cluster/nodes/5cafe0f6-499f-11e9-b644-005056bbcf93"
          }
        }
      },
      "name": "backup1.7z",
      "_links": {
        "self": {
          "href": "/api/support/configuration_backup/backups/5cafe0f6-499f-11e9-b644-005056bbcf93/backup1.7z"
        }
      }
    }
  ],
  "num_records": 1,
  "_links": {
    "self": {
      "href": "/api/support/configuration_backup/backups"
    }
  }
}
```

Retrieving details of the specified configuration backup file

```
# The API:
/api/support/configuration-backup/backups/{node.uuid}/{name}

# The call:
curl -X GET "https://<mgmt-ip>/api/support/configuration-
backup/backups/bc2f15d0-8b93-11e9-90e9-005056bb6a30/backup1.7z" -H
"accept: application/hal+json"

# The response:
{
  "node": {
    "uuid": "bc2f15d0-8b93-11e9-90e9-005056bb6a30",
    "name": "node1",
    "_links": {
      "self": {
        "href": "/api/cluster/nodes/bc2f15d0-8b93-11e9-90e9-005056bb6a30"
      }
    }
  },
  "name": "backup1.7z",
  "type": "cluster",
  "time": "2019-06-10T13:35:06-04:00",
  "size": 6058408,
  "backup_nodes": [
    {
      "name": "node1"
    },
    {
      "name": "node2"
    }
  ],
  "version": "9.7.0",
  "auto": false,
  "download_link": "https://10.224.66.113/backups/backup1.7z",
  "_links": {
    "self": {
      "href": "/api/support/configuration-backup/backups/bc2f15d0-8b93-11e9-
90e9-005056bb6a30/backup1.7z"
    }
  }
}
```


Creating a configuration backup file

```
# The API:
/api/support/configuration-backup/backups

# The call:
curl -X POST "https://<mgmt-ip>/api/support/configuration-backup/backups"
-H "accept: application/hal+json"

# The body:
{
"node":
  {
    "uuid": "ac13c636-4fc9-11e9-94c2-005056bb2516",
    "name": "node1"
  },
"name": "backup3.7z"
}

# The response header:
HTTP/1.1 202 Accepted
Date: Tue, 26 Mar 2019 14:26:24 GMT
Server: libzapid-httpd
X-Content-Type-Options: nosniff
Cache-Control: no-cache,no-store,must-revalidate
Location: /api/support/configuration_backup/backups/ac13c636-4fc9-11e9-
94c2-005056bb2516/backup3.7z
Content-Length: 189
Content-Type: application/hal+json
{
"job": {
  "uuid": "22acfb68-4fd3-11e9-94c2-005056bb2516",
  "_links": {
    "self": {
      "href": "/api/cluster/jobs/22acfb68-4fd3-11e9-94c2-005056bb2516"
    }
  }
}
}
}
```

Deleting a configuration backup file

```
# The API:
/api/support/configuration-backup/backups/{node.uuid}/{name}

# The call:
curl -X DELETE "https://<mgmt-
ip>/api/support/configuration_backup/backups/5cafe0f6-499f-11e9-b644-
005056bbcf93/backup1.7z" -H "content-type: application/json"

# The response header:
HTTP/1.1 200 OK
Date: Tue, 26 Mar 2019 14:32:23 GMT
Server: libzapid-httpd
X-Content-Type-Options: nosniff
Cache-Control: no-cache,no-store,must-revalidate
Content-Length: 3
Content-Type: application/hal+json
```

Retrieve configuration backup files

GET /support/configuration-backup/backups

Retrieves a list of configuration backup files.

Related ONTAP commands

- `system configuration backup show`

Learn more

- [DOC /support/configuration-backup/backups](#)

Parameters

Name	Type	In	Required	Description
max_records	integer	query	False	Limit the number of records returned.
return_records	boolean	query	False	The default is true for GET calls. When set to false, only the number of records is returned.

Name	Type	In	Required	Description
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When iterating over a collection, the default is 15 seconds. ONTAP returns earlier if either max records or the end of the collection is reached.
order_by	array[string]	query	False	Order results by specified fields and optional [asc
desc] direction. Default direction is 'asc' for ascending.	fields	array[string]	query	False
Specify the fields to return.	time	string	query	False
Filter by time	node.uuid	string	query	False
Filter by node.uuid	node.name	string	query	False
Filter by node.name	download_link	string	query	False
Filter by download_link	type	string	query	False
Filter by type	backup_nodes.name	string	query	False
Filter by backup_nodes.name	name	string	query	False
Filter by name	auto	boolean	query	False
Filter by auto	version	string	query	False
Filter by version	size	integer	query	False

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
num_records	integer	Number of records
records	array[configuration_backup_file]	

Example response

```
{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "records": [
    {
      "backup_nodes": [
        {
          "name": "string"
        }
      ],
      "download_link": "https://10.224.65.198/backups/backup_file.7z",
      "name": "backup_file.7z",
      "node": {
        "_links": {
          "self": {
            "href": "/api/resourcelink"
          }
        },
        "name": "node1",
        "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
      },
      "size": 4787563,
      "time": "2019-02-04 13:33:48 -0500",
      "type": "string",
      "version": "9.7.0"
    }
  ]
}
```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
next	href	
self	href	

backup_node

The node name in the backup.

Name	Type	Description
name	string	

_links

Name	Type	Description
self	href	

node

The node that owns the configuration backup.

Name	Type	Description
_links	_links	
name	string	
uuid	string	

configuration_backup_file

The configuration backup file.

Name	Type	Description
auto	boolean	Indicates if the backup was created automatically.
backup_nodes	array[backup_node]	The list of nodes included in the backup.

Name	Type	Description
download_link	string	The link to download the backup file.
name	string	The backup name.
node	node	The node that owns the configuration backup.
size	integer	The size of the backup in bytes.
time	string	The backup creation time.
type	string	The backup type.
version	string	The software version.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Create a configuration backup

POST /support/configuration-backup/backups

Creates a configuration backup. The required backup file name must end with .7z extension.

Required properties

- `node.uuid` or `node.name` - The node UUID or node name on which the configuration backup will be created.
- `name` - The backup file name

Related ONTAP commands

- `system configuration backup create`

Learn more

- [DOC /support/configuration-backup/backups](#)

Parameters

Name	Type	In	Required	Description
<code>return_timeout</code>	integer	query	False	The number of seconds to allow the call to execute before returning. When doing a POST, PATCH, or DELETE operation on a single record, the default is 0 seconds. This means that if an asynchronous operation is started, the server immediately returns HTTP code 202 (Accepted) along with a link to the job. If a non-zero value is specified for POST, PATCH, or DELETE operations, ONTAP waits that length of time to see if the job completes so it can return something other than 202.
<code>return_records</code>	boolean	query	False	The default is false. If set to true, the records are returned.

Request Body

Name	Type	Description
auto	boolean	Indicates if the backup was created automatically.
backup_nodes	array[backup_node]	The list of nodes included in the backup.
download_link	string	The link to download the backup file.
name	string	The backup name.
node	node	The node that owns the configuration backup.
size	integer	The size of the backup in bytes.
time	string	The backup creation time.
type	string	The backup type.
version	string	The software version.

Example request

```
{
  "backup_nodes": [
    {
      "name": "string"
    }
  ],
  "download_link": "https://10.224.65.198/backups/backup_file.7z",
  "name": "backup_file.7z",
  "node": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "name": "node1",
    "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
  },
  "size": 4787563,
  "time": "2019-02-04 13:33:48 -0500",
  "type": "string",
  "version": "9.7.0"
}
```

Response

Status: 202, Accepted

Name	Type	Description
job	job_link	

Example response

```
{
  "job": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "uuid": "string"
  }
}
```

Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
5963818	Failed to queue private job.
5963819	Failed to queue cluster job.
5963871	Requested backup name is missing .7z suffix.

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

backup_node

The node name in the backup.

Name	Type	Description
name	string	

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

node

The node that owns the configuration backup.

Name	Type	Description
_links	_links	
name	string	
uuid	string	

configuration_backup_file

The configuration backup file.

Name	Type	Description
auto	boolean	Indicates if the backup was created automatically.
backup_nodes	array[backup_node]	The list of nodes included in the backup.
download_link	string	The link to download the backup file.
name	string	The backup name.
node	node	The node that owns the configuration backup.

Name	Type	Description
size	integer	The size of the backup in bytes.
time	string	The backup creation time.
type	string	The backup type.
version	string	The software version.

job_link

Name	Type	Description
_links	_links	
uuid	string	The UUID of the asynchronous job that is triggered by a POST, PATCH, or DELETE operation.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Delete a configuration backup

DELETE /support/configuration-backup/backups/{node.uuid}/{name}

Deletes a configuration backup.

Related ONTAP commands

- `system configuration backup delete`

Learn more

- [DOC /support/configuration-backup/backups](#)

Parameters

Name	Type	In	Required	Description
node.uuid	string	path	True	
name	string	path	True	

Response

```
Status: 200, Ok
```

Error

```
Status: Default
```

ONTAP Error Response Codes

Error Code	Description
5963826	Failed to delete backup file.

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Retrieve configuration backup file details

GET /support/configuration-backup/backups/{node.uuid}/{name}

Retrieves details of the specified configuration backup file.

Related ONTAP commands

- `system configuration backup show`

Learn more

- [DOC /support/configuration-backup/backups](#)

Parameters

Name	Type	In	Required	Description
fields	array[string]	query	False	Specify the fields to return.
node.uuid	string	path	True	UUID of the node that owns the configuration backup.
name	string	path	True	Name of the configuration backup.

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
num_records	integer	Number of records
records	array[configuration_backup_file]	

Example response

```
{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "records": [
    {
      "backup_nodes": [
        {
          "name": "string"
        }
      ],
      "download_link": "https://10.224.65.198/backups/backup_file.7z",
      "name": "backup_file.7z",
      "node": {
        "_links": {
          "self": {
            "href": "/api/resourcelink"
          }
        },
        "name": "node1",
        "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
      },
      "size": 4787563,
      "time": "2019-02-04 13:33:48 -0500",
      "type": "string",
      "version": "9.7.0"
    }
  ]
}
```

Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
5963777	Configuration backup file does not exist.

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
next	href	
self	href	

backup_node

The node name in the backup.

Name	Type	Description
name	string	

_links

Name	Type	Description
self	href	

node

The node that owns the configuration backup.

Name	Type	Description
_links	_links	
name	string	
uuid	string	

configuration_backup_file

The configuration backup file.

Name	Type	Description
auto	boolean	Indicates if the backup was created automatically.
backup_nodes	array[backup_node]	The list of nodes included in the backup.

Name	Type	Description
download_link	string	The link to download the backup file.
name	string	The backup name.
node	node	The node that owns the configuration backup.
size	integer	The size of the backup in bytes.
time	string	The backup creation time.
type	string	The backup type.
version	string	The software version.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Manage EMS configuration

Support EMS endpoint overview

Overview

The Event Management System (EMS) collects and processes events, and sends notification of the events through various reporting mechanisms. The following endpoints defined under '/support/ems', allow you to query a list of observed events, and configure which events you handle and how you are notified:

- /support/ems
- /support/ems/events
- /support/ems/messages
- /support/ems/filters
- /support/ems/filters/{name}/rules
- /support/ems/filters/{name}/rules/{index}
- /support/ems/destinations
- /support/ems/destinations/{name}

Examples

Configuring an email destination

The following example configures EMS to send a support email when a WAFL event is observed with an error severity.

Configure the system-wide email parameters

```
# API
PATCH /support/ems

# JSON Body
{
  "mail_from": "administrator@mycompany.com",
  "mail_server": "smtp@mycompany.com"
}

# Response
200 OK
```

Configuring a filter with an enclosed rule

```
# API
POST /support/ems/filters

# JSON Body
{
  "name": "critical-wafl",
  "rules": [
    {
      "index": 1,
      "type": "include",
      "message_criteria": {
        "name_pattern": "wafl.*",
        "severities": "emergency,error,alert"
      }
    }
  ]
}

# Response
201 Created
```

Setting up an email destination

```
# API
POST /support/ems/destinations

# JSON Body
{
  "name": "Technician_Email",
  "type": "email",
  "destination": "technician@mycompany.com",
  "filters": [
    { "name" : "critical-wafl" }
  ]
}

# Response
201 Created
```

Retrieve EMS configuration

GET /support/ems

Retrieves the EMS configuration.

Related ONTAP commands

- `event config show`

Learn more

- [DOC /support/ems](#)

Parameters

Name	Type	In	Required	Description
max_records	integer	query	False	Limit the number of records returned.
return_records	boolean	query	False	The default is true for GET calls. When set to false, only the number of records is returned.
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When iterating over a collection, the default is 15 seconds. ONTAP returns earlier if either max records or the end of the collection is reached.
order_by	array[string]	query	False	Order results by specified fields and optional [asc
desc] direction. Default direction is 'asc' for ascending.	fields	array[string]	query	False

Response

Status: 200, Ok

Name	Type	Description
_links	_links	

Name	Type	Description
mail_from	string	Mail from
mail_server	string	Mail server (SMTP)
proxy_password	string	Password for HTTP/HTTPS proxy
proxy_url	string	HTTP/HTTPS proxy URL
proxy_user	string	User name for HTTP/HTTPS proxy

Example response

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "mail_from": "<a href="
mailto:administrator@mycompany.com">administrator@mycompany.com</a>",
  "mail_server": "<a href="
mailto:mail@mycompany.com">mail@mycompany.com</a>",
  "proxy_password": "password",
  "proxy_url": "https://proxyserver.mycompany.com",
  "proxy_user": "proxy_user"
}
```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Update EMS configuration

PATCH `/support/ems`

Updates the EMS configuration.

Related ONTAP commands

- `event config modify`

Learn more

- [DOC /support/ems](#)

Parameters

Name	Type	In	Required	Description
return_records	boolean	query	False	The default is false. If set to true, the records are returned.

Request Body

Name	Type	Description
_links	_links	
mail_from	string	Mail from
mail_server	string	Mail server (SMTP)
proxy_password	string	Password for HTTP/HTTPS proxy
proxy_url	string	HTTP/HTTPS proxy URL
proxy_user	string	User name for HTTP/HTTPS proxy

Example request

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "mail_from": "<a href="
mailto:administrator@mycompany.com">administrator@mycompany.com</a>",
  "mail_server": "<a href="
mailto:mail@mycompany.com">mail@mycompany.com</a>",
  "proxy_password": "password",
  "proxy_url": "https://proxyserver.mycompany.com",
  "proxy_user": "proxy_user"
}
```

Response

Status: 200, Ok

Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
983123	The validation of the mail server provided failed
983136	The proxy URL cannot contain a username or password
983137	The proxy URL provided is invalid
983139	The IPv6 proxy URL provided is invalid
983140	The proxy URL provided contains an invalid scheme. Supported schemes are 'http' or 'https'

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

ems_config

Name	Type	Description
_links	_links	
mail_from	string	Mail from
mail_server	string	Mail server (SMTP)
proxy_password	string	Password for HTTP/HTTPS proxy
proxy_url	string	HTTP/HTTPS proxy URL
proxy_user	string	User name for HTTP/HTTPS proxy

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message

Name	Type	Description
target	string	The target parameter that caused the error.

Manage event destinations

Support EMS destinations endpoint overview

Overview

Manages the list of destinations. A destination is defined by a type and a place to which an event's information is transmitted.

Destination Types

An EMS destination is defined by a single type, which is one of the following:

- email
- syslog
- rest_api
- snmp

Email

The 'email' type allows you to define a mailbox where information about an observed event is sent by SMTP. Enter the address in the destination field in a valid format. For example: administrator@mycompany.com

Syslog

The 'syslog' type allows you to specify a remote syslog server that can receive information about an observed event. Enter the hostname or IP address in the destination field. For example: `syslog.mycompany.com`, `192.168.1.1`

Rest API

The 'rest_api' type allows you to define a URL where information about an observed event is sent using the REST protocol. Enter the URL in the destination field. The URL must contain a valid transmission schema which can be one of the following:

- http
- https Using the 'https' schema, you can configure a client-side certificate for mutual authentication. For example: <http://rest.mycompany.com>, <https://192.168.1.1>

SNMP

The 'snmp' type describes addresses where information about an observed event is sent using SNMP traps. The system defines a default instance of this type and it is restricted to read-only. This type has the following limitations:

- Cannot create new destinations of type 'snmp'
- Cannot modify the default 'snmp' destination

SNMP trap host details need to be configured through one of the following:

Type	Command / API
CLI	'system snmp traphost'
ZAPI	'snmp-traphost-add' / 'snmp-traphost-delete'

Examples

Retrieving the list of active destinations

```
# API
GET /api/support/ems/destinations

# Response
200 OK

# JSON Body
{
  "records": [
    {
      "name": "snmp-traphost",
      "_links": {
        "self": {
          "href": "/api/support/ems/destinations/snmp-traphost"
        }
      }
    }
  ],
  "num_records": 1,
  "_links": {
    "self": {
      "href": "/api/support/ems/destinations"
    }
  }
}
```

Creating a new 'email' destination

```

# API
POST /support/ems/destinations

# JSON Body
{
  "name": "Technician_Email",
  "type": "email",
  "destination": "technician@mycompany.com",
  "filters": [
    { "name" : "critical-wafl" }
  ]
}

# Response
201 Created

```

Retrieve a collection of event destinations

GET /support/ems/destinations

Retrieves a collection of event destinations.

Related ONTAP commands

- event notification destination show
- event notification show

Learn more

- [DOC /support/ems/destinations](#)

Parameters

Name	Type	In	Required	Description
filters.name	string	query	False	Filter by filters.name
type	string	query	False	Filter by type
destination	string	query	False	Filter by destination
name	string	query	False	Filter by name
certificate.serial_number	string	query	False	Filter by certificate.serial_number

Name	Type	In	Required	Description
certificate.ca	string	query	False	Filter by certificate.ca
fields	array[string]	query	False	Specify the fields to return.
max_records	integer	query	False	Limit the number of records returned.
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When iterating over a collection, the default is 15 seconds. ONTAP returns earlier if either max records or the end of the collection is reached.
return_records	boolean	query	False	The default is true for GET calls. When set to false, only the number of records is returned.
order_by	array[string]	query	False	Order results by specified fields and optional [asc

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
num_records	integer	Number of records
records	array[records]	

Example response

```
{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "num_records": 3,
  "records": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "certificate": {
        "ca": "VeriSign",
        "serial_number": 1234567890
      },
      "destination": "<a href="
mailto:administrator@mycompany.com">administrator@mycompany.com</a>",
      "filters": [
        {
          "_links": {
            "self": {
              "href": "/api/resourcelink"
            }
          },
          "name": "important-events"
        }
      ],
      "name": "Admin_Email",
      "type": "email"
    }
  ]
}
```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
next	href	
self	href	

_links

Name	Type	Description
self	href	

certificate

Certificate information is valid for the "rest_api" type.

Name	Type	Description
ca	string	Client certificate issuing CA
serial_number	string	Client certificate serial number

filters

Name	Type	Description
_links	_links	
name	string	

records

Name	Type	Description
_links	_links	
certificate	certificate	Certificate information is valid for the "rest_api" type.
destination	string	Event destination
filters	array[filters]	

Name	Type	Description
name	string	Destination name. Valid in POST.
type	string	Type of destination. Valid in POST.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Create an event destination

POST /support/ems/destinations

Creates an event destination.

Required properties

- `name` - String that uniquely identifies the destination.
- `type` - Type of destination that is to be created.
- `destination` - String that identifies the destination. The contents of this property changes depending on `type`.

Recommended optional properties

- `filters.name` - List of filter names that should direct to this destination.
- `certificate` - When specifying a rest api destination, a client certificate can be provided.

Related ONTAP commands

- `event notification destination create`
- `event notification create`

Learn more

- [DOC /support/ems/destinations](#)

Parameters

Name	Type	In	Required	Description
return_records	boolean	query	False	The default is false. If set to true, the records are returned.

Request Body

Name	Type	Description
_links	_links	
certificate	certificate	Certificate information is valid for the "rest_api" type.
destination	string	Event destination
filters	array[filters]	
name	string	Destination name. Valid in POST.
type	string	Type of destination. Valid in POST.

Example request

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "certificate": {
    "ca": "VeriSign",
    "serial_number": 1234567890
  },
  "destination": "<a href="
mailto:administrator@mycompany.com">administrator@mycompany.com</a>",
  "filters": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "important-events"
    }
  ],
  "name": "Admin_Email",
  "type": "email"
}
```

Response

Status: 201, Created

Name	Type	Description
_links	_links	
num_records	integer	Number of records
records	array[records]	

Example response

```
{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "num_records": 3,
  "records": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "certificate": {
        "ca": "VeriSign",
        "serial_number": 1234567890
      },
      "destination": "<a href="
mailto:administrator@mycompany.com">administrator@mycompany.com</a>",
      "filters": [
        {
          "_links": {
            "self": {
              "href": "/api/resourcelink"
            }
          },
          "name": "important-events"
        }
      ],
      "name": "Admin_Email",
      "type": "email"
    }
  ]
}
```

Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
983088	The destination name provided cannot be empty
983089	The destination name provided cannot contain spaces
983094	The destination name provided is invalid. The destination name must contain between 2 and 64 characters and start and end with an alphanumeric symbol or _(underscore). The allowed special characters are _(underscore) and -(hyphen)
983104	The syslog destination provided is invalid
983116	The number of notifications has reached maximum capacity
983117	The number of destinations has reached maximum capacity
983129	The rest-api destination provided must contain a valid scheme, such as http// or https//
983130	The rest-api destination provided contains an invalid URL
983131	The rest-api destination provided contains an invalid IPv6 URL
983144	The security certificate information provided is incomplete. Provide the certificate and serial number
983145	The rest-api destination provided has an 'http://' scheme. It is invalid to provide certificate information
983149	New SNMP destinations cannot be created
983151	A property provided cannot be configured on the requested destination type
983152	Default destinations cannot be modified or removed
983153	The security certificate provided does not exist
983154	The necessary private key is not installed on the system

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

certificate

Certificate information is valid for the "rest_api" type.

Name	Type	Description
ca	string	Client certificate issuing CA
serial_number	string	Client certificate serial number

filters

Name	Type	Description
_links	_links	
name	string	

ems_destination

Name	Type	Description
_links	_links	
certificate	certificate	Certificate information is valid for the "rest_api" type.
destination	string	Event destination
filters	array[filters]	
name	string	Destination name. Valid in POST.
type	string	Type of destination. Valid in POST.

_links

Name	Type	Description
next	href	
self	href	

records

Name	Type	Description
_links	_links	
certificate	certificate	Certificate information is valid for the "rest_api" type.
destination	string	Event destination
filters	array[filters]	
name	string	Destination name. Valid in POST.
type	string	Type of destination. Valid in POST.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Manage an event destination instance

Support EMS destinations name endpoint overview

Overview

Manages a specific instance of a destination. There are limits to the information that you can modify after a destination is created. For example, you cannot change a destination's type, but you can modify the underlying details of the type. See the documentation for [/support/ems/destinations](#) for details on the various properties in a destination.

Examples

Retrieving a specific destination instance

```
# API
GET /api/support/ems/destinations/snmp-traphost

# Response
200 OK

# JSON Body
{
  "name": "snmp-traphost",
  "type": "snmp",
  "destination": "",
  "filters": [
    {
      "name": "default-trap-events",
      "_links": {
        "self": {
          "href": "/api/support/ems/filters/default-trap-events"
        }
      }
    }
  ],
  "_links": {
    "self": {
      "href": "/api/support/ems/destinations/snmp-traphost"
    }
  }
}
```

Updating an existing destination (change of email address)

```
# API
PATCH /api/support/ems/destinations/test-destination

# JSON Body
{
  "destination": "support@mycompany.com"
}

# Response
200 OK
```

Deleting an existing destination

```
# API
DELETE /api/support/ems/destinations/test-destination

# Response
200 OK
```

Delete an event destination

DELETE /support/ems/destinations/{name}

Deletes an event destination.

Related ONTAP commands

- event notification destination delete
- event notification delete

Learn more

- [DOC /support/ems/destinations/{name}](#)

Parameters

Name	Type	In	Required	Description
name	string	path	True	

Response

```
Status: 200, Ok
```


Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
983152	Default destinations cannot be modified or removed

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Retrieve an event destination

GET /support/ems/destinations/{name}

Retrieves event destinations.

Related ONTAP commands

- `event notification destination show`
- `event notification show`

Learn more

- [DOC /support/ems/destinations/{name}](#)

Parameters

Name	Type	In	Required	Description
name	string	path	True	Destination name
fields	array[string]	query	False	Specify the fields to return.

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
certificate	certificate	Certificate information is valid for the "rest_api" type.
destination	string	Event destination
filters	array[filters]	
name	string	Destination name. Valid in POST.
type	string	Type of destination. Valid in POST.

Example response

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "certificate": {
    "ca": "VeriSign",
    "serial_number": 1234567890
  },
  "destination": "<a href="
mailto:administrator@mycompany.com">administrator@mycompany.com</a>",
  "filters": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "important-events"
    }
  ],
  "name": "Admin_Email",
  "type": "email"
}
```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

certificate

Certificate information is valid for the "rest_api" type.

Name	Type	Description
ca	string	Client certificate issuing CA
serial_number	string	Client certificate serial number

filters

Name	Type	Description
_links	_links	
name	string	

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message

Name	Type	Description
target	string	The target parameter that caused the error.

Update an event destination

PATCH /support/ems/destinations/{name}

Updates an event destination.

Recommended optional properties

- `filters.name` - New list of filters that should direct to this destination. The existing list is discarded.
- `certificate` - New certificate parameters when the destination type is `rest api`.

Related ONTAP commands

- `event notification destination modify`
- `event notification modify`

Learn more

- [DOC /support/ems/destinations/{name}](#)

Parameters

Name	Type	In	Required	Description
name	string	path	True	Destination name

Request Body

Name	Type	Description
<code>_links</code>	<code>_links</code>	
<code>certificate</code>	<code>certificate</code>	Certificate information is valid for the "rest_api" type.
<code>destination</code>	string	Event destination
<code>filters</code>	array[<code>filters</code>]	
<code>name</code>	string	Destination name. Valid in POST.
<code>type</code>	string	Type of destination. Valid in POST.

Example request

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "certificate": {
    "ca": "VeriSign",
    "serial_number": 1234567890
  },
  "destination": "<a href="
mailto:administrator@mycompany.com">administrator@mycompany.com</a>",
  "filters": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "important-events"
    }
  ],
  "name": "Admin_Email",
  "type": "email"
}
```

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
certificate	certificate	Certificate information is valid for the "rest_api" type.
destination	string	Event destination
filters	array[filters]	
name	string	Destination name. Valid in POST.

Name	Type	Description
type	string	Type of destination. Valid in POST.

Example response

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "certificate": {
    "ca": "VeriSign",
    "serial_number": 1234567890
  },
  "destination": "<a href="
mailto:administrator@mycompany.com">administrator@mycompany.com</a>",
  "filters": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "important-events"
    }
  ],
  "name": "Admin_Email",
  "type": "email"
}
```

Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
983088	The destination name provided cannot be empty
983089	The destination name provided cannot contain spaces

Error Code	Description
983094	The destination name provided is invalid. The destination name must contain between 2 and 64 characters and start and end with an alphanumeric symbol or _(underscore). The allowed special characters are _(underscore) and -(hyphen)
983104	The syslog destination provided is invalid
983116	The number of notifications has reached maximum capacity
983117	The number of destinations has reached maximum capacity
983129	The rest-api destination must contain a valid scheme, such as http// or https//
983130	The rest-api destination provided contains an invalid URL
983131	The rest-api destination provided contains an invalid IPv6 URL
983142	The security certificate provided does not exist
983143	The private security key provided does not exist
983144	The security certificate information provided is incomplete. Provide the certificate and serial number
983145	The rest-api destination provided has an 'http://' scheme. It is invalid to provide certificate information
983150	The type of an existing destination cannot be changed
983151	A property provided cannot be configured on the requested destination type
983152	Default destinations cannot be modified or removed

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

certificate

Certificate information is valid for the "rest_api" type.

Name	Type	Description
ca	string	Client certificate issuing CA
serial_number	string	Client certificate serial number

filters

Name	Type	Description
_links	_links	
name	string	

ems_destination

Name	Type	Description
_links	_links	
certificate	certificate	Certificate information is valid for the "rest_api" type.
destination	string	Event destination
filters	array[filters]	
name	string	Destination name. Valid in POST.
type	string	Type of destination. Valid in POST.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Retrieve events

Support EMS events endpoint overview

Overview

Queries a live collection of observed events on the system.

Example

Querying for the latest event received by EMS

```

# API
GET /api/support/ems/events?fields=message.name&max_records=1

# Response
200 OK

# JSON Body
{
  "records": [
    {
      "node": {
        "name": "node1",
        "uuid": "f087b8e3-99ac-11e8-b5a5-005056bb4ec7",
        "_links": {
          "self": {
            "href": "/api/cluster/nodes/f087b8e3-99ac-11e8-b5a5-005056bb4ec7"
          }
        }
      },
      "index": 661,
      "message": {
        "name": "raid.aggr.log.CP.count"
      },
      "_links": {
        "self": {
          "href": "/api/support/ems/events/node1/661"
        }
      }
    }
  ],
  "num_records": 1,
  "_links": {
    "self": {
      "href": "/api/support/ems/events?fields=message.name&max_records=1"
    }
  }
}

```

Retrieve observed events

GET /support/ems/events

Retrieves a collection of observed events.

Related ONTAP commands

- `event log show`

Learn more

- [DOC /support/ems/events](#)

Parameters

Name	Type	In	Required	Description
source	string	query	False	Filter by source
parameters.name	string	query	False	Filter by parameters.name
parameters.value	string	query	False	Filter by parameters.value
index	integer	query	False	Filter by index
message.severity	string	query	False	Filter by message.severity
message.name	string	query	False	Filter by message.name
time	string	query	False	Filter by time
node.uuid	string	query	False	Filter by node.uuid
node.name	string	query	False	Filter by node.name
log_message	string	query	False	Filter by log_message
fields	array[string]	query	False	Specify the fields to return.
max_records	integer	query	False	Limit the number of records returned.
return_records	boolean	query	False	The default is true for GET calls. When set to false, only the number of records is returned.

Name	Type	In	Required	Description
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When iterating over a collection, the default is 15 seconds. ONTAP returns earlier if either max records or the end of the collection is reached.
order_by	array[string]	query	False	Order results by specified fields and optional [asc

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
num_records	integer	Number of records
records	array[records]	

Example response

```
{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "num_records": 3,
  "records": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "index": 1,
      "log_message": "string",
      "message": {
        "_links": {
          "self": {
            "href": "/api/resourcelink"
          }
        },
        "name": "callhome.spares.low",
        "severity": "emergency"
      },
      "node": {
        "_links": {
          "self": {
            "href": "/api/resourcelink"
          }
        },
        "name": "node1",
        "uuid": "1cd8a442-86d1-11e0-ae1c-123478563412"
      },
      "parameters": [
        {
          "name": "numOps",
          "value": 123
        }
      ],
      "source": "string",

```

```
    "time": "string"
  }
]
}
```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
next	href	
self	href	

_links

Name	Type	Description
self	href	

message

Name	Type	Description
_links	_links	
name	string	Message name of the event. Returned by default.
severity	string	Severity of the event. Returned by default.

node

Name	Type	Description
_links	_links	
name	string	
uuid	string	

parameters

Name	Type	Description
name	string	Name of parameter
value	string	Value of parameter

records

Name	Type	Description
_links	_links	
index	integer	Index of the event. Returned by default.
log_message	string	A formatted text string populated with parameter details. Returned by default.
message	message	
node	node	
parameters	array[parameters]	A list of parameters provided with the EMS event.
source	string	Source
time	string	Timestamp of the event. Returned by default.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Create or retrieve event filters

Support EMS filters endpoint overview

Overview

Manages the list of available filters. A filter is a named collection of rules that enable the system to identify events that require additional handling. A filter is linked with a destination to which the system sends specific events.

When EMS processes an event, each filter is evaluated for a match. More than one filter can handle a single event.

Filter rule position

A filter's rules are evaluated sequentially, according to their position index. When a rule is added or modified, the position can be set to customize the filter's logic. If no position is specified, a new rule is appended to the end of the list.

Filter rule types

A filter rule can be one of two types: 'include' or 'exclude'. If an event matches the criteria of the rule, the type dictates whether it should be forwarded to the destination or ignored.

Filter rule matching criteria

A valid filter rule must contain at least one set of criteria.

Name pattern

A name pattern is matched against an event's name. Multiple characters can be matched using the wildcard character '*'.

Severity

The severity pattern is matched against an event's severity. Multiple severities can be specified in a comma separated list. A single wildcard '*' will match all severities. Valid values are:

- emergency
- alert
- error
- notice
- informational
- debug

SNMP trap type

The SNMP trap type pattern is matched against an event's trap type. Multiple trap types can be specified in a comma separated list. A single wildcard '*' matches all trap types. Valid values are:

- standard
- built_in
- severity_based

Examples

Retrieving a list of filters whose names contain a hyphen

```
# API
GET /api/support/ems/filters?name=*-*

# Response
200 OK

# JSON Body
{
  "records": [
    {
      "name": "default-trap-events",
      "_links": {
        "self": {
          "href": "/api/support/ems/filters/default-trap-events"
        }
      }
    },
    {
      "name": "important-events",
      "_links": {
        "self": {
          "href": "/api/support/ems/filters/important-events"
        }
      }
    },
    {
      "name": "no-info-debug-events",
      "_links": {
        "self": {
          "href": "/api/support/ems/filters/no-info-debug-events"
        }
      }
    }
  ],
  "num_records": 3,
  "_links": {
    "self": {
      "href": "/api/support/ems/filters?name=*-*"
    }
  }
}
```

Creating a new filter using various matching criteria

```
# API
POST /api/support/ems/filters

# JSON Body
{
  "name": "test-filter",
  "rules": [
    {
      "index": 1,
      "type": "include",
      "message_criteria": {
        "name_pattern": "LUN.*",
        "severities": "alert,error",
        "snmp_trap_types": "severity_based"
      }
    }
  ]
}

# Response
201 Created
```

Retrieve event filters

GET /support/ems/filters

Retrieves a collection of event filters.

Related ONTAP commands

- `event filter show`

Learn more

- [DOC /support/ems/filters](#)

Parameters

Name	Type	In	Required	Description
name	string	query	False	Filter by name
rules.message_criteria.name_pattern	string	query	False	Filter by rules.message_criteria.name_pattern

Name	Type	In	Required	Description
rules.message_criteria.severities	string	query	False	Filter by rules.message_criteria.severities
rules.message_criteria.snmp_trap_types	string	query	False	Filter by rules.message_criteria.snmp_trap_types
rules.type	string	query	False	Filter by rules.type
rules.index	integer	query	False	Filter by rules.index
fields	array[string]	query	False	Specify the fields to return.
max_records	integer	query	False	Limit the number of records returned.
return_records	boolean	query	False	The default is true for GET calls. When set to false, only the number of records is returned.
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When iterating over a collection, the default is 15 seconds. ONTAP returns earlier if either max records or the end of the collection is reached.
order_by	array[string]	query	False	Order results by specified fields and optional [asc

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
num_records	integer	Number of records
records	array[records]	

Example response

```
{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "num_records": 3,
  "records": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "snmp-traphost",
      "rules": [
        {
          "_links": {
            "self": {
              "href": "/api/resourcelink"
            }
          },
          "index": 1,
          "message_criteria": {
            "_links": {
              "related": {
                "href": "/api/resourcelink"
              }
            },
            "name_pattern": "callhome.*",
            "severities": "error,informational",
            "snmp_trap_types": "standard|built_in"
          },
          "type": "include"
        }
      ]
    }
  ]
}
```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
next	href	
self	href	

_links

Name	Type	Description
self	href	

_links

Name	Type	Description
related	href	

message_criteria

Matching message definitions for the filter. A property must be specified.

Name	Type	Description
_links	_links	
name_pattern	string	Message name filter on which to match. Supports wildcards. Defaults to * if not specified.
severities	string	A comma-separated list of severities or a wildcard.
snmp_trap_types	string	A comma separated list of snmp_trap_types or a wildcard.

rules

Rule for an event filter

Name	Type	Description
_links	_links	

Name	Type	Description
index	integer	Rule index. Rules are evaluated in ascending order. If a rule's index order is not specified during creation, the rule is appended to the end of the list.
message_criteria	message_criteria	Matching message definitions for the filter. A property must be specified.
type	string	Rule type

records

Name	Type	Description
_links	_links	
name	string	Filter name
rules	array[rules]	Array of event filter rules on which to match.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Create an event filter

POST /support/ems/filters

Creates an event filter.

Required properties

- `name` - String that uniquely identifies the filter.

Recommended optional properties

- `rules` - List of criteria which is used to match a filter with an event.

Related ONTAP commands

- `event filter create`

Learn more

- [DOC /support/ems/filters](#)

Parameters

Name	Type	In	Required	Description
<code>return_records</code>	boolean	query	False	The default is false. If set to true, the records are returned.

Request Body

Name	Type	Description
<code>_links</code>	_links	
<code>name</code>	string	Filter name
<code>rules</code>	array[rules]	Array of event filter rules on which to match.

Example request

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "name": "snmp-traphost",
  "rules": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "index": 1,
      "message_criteria": {
        "_links": {
          "related": {
            "href": "/api/resourcelink"
          }
        },
        "name_pattern": "callhome.*",
        "severities": "error,informational",
        "snmp_trap_types": "standard|built_in"
      },
      "type": "include"
    }
  ]
}
```

Response

Status: 201, Created

Name	Type	Description
_links	_links	
num_records	integer	Number of records
records	array[records]	

Example response

```
{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "num_records": 3,
  "records": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "snmp-traphost",
      "rules": [
        {
          "_links": {
            "self": {
              "href": "/api/resourcelink"
            }
          },
          "index": 1,
          "message_criteria": {
            "_links": {
              "related": {
                "href": "/api/resourcelink"
              }
            },
            "name_pattern": "callhome.*",
            "severities": "error,informational",
            "snmp_trap_types": "standard|built_in"
          },
          "type": "include"
        }
      ]
    }
  ]
}
```


Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
983088	The filter name provided is empty
983089	The filter name provided cannot contain spaces
983092	The index of the rule provided is outside the allowed range for the filter provided
983094	The filter name provided is invalid. The filter name must contain between 2 and 64 characters and start and end with an alphanumeric symbol or (underscore). The allowed special characters are (underscore) and -(hyphen)
983095	The rule index provided is invalid for the filter provided
983101	No event is matched by the rule provided
983113	Default filters cannot be modified or removed
983114	The maximum number of filters is reached
983115	The maximum number of filter rules is reached
983126	A rule requires at least one name_pattern, severities, or snmp_trap_types to be defined
983127	A property cannot contain a combination of the wildcard character and other values
983128	An invalid value is provided for the property 'snmp_trap_types'
983146	An invalid value is provided for the property 'severities'
983147	The severity provided are not supported
983155	The provided severities property does not match that of the name_pattern
983156	The provided snmp_trap_types property does not match that of the name_pattern
983157	The provided severities and snmp_trap_types do not match those of the name_pattern
983158	The name_pattern provided does not exist

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

_links

Name	Type	Description
related	href	

message_criteria

Matching message definitions for the filter. A property must be specified.

Name	Type	Description
_links	_links	
name_pattern	string	Message name filter on which to match. Supports wildcards. Defaults to * if not specified.
severities	string	A comma-separated list of severities or a wildcard.
snmp_trap_types	string	A comma separated list of snmp_trap_types or a wildcard.

rules

Rule for an event filter

Name	Type	Description
_links	_links	
index	integer	Rule index. Rules are evaluated in ascending order. If a rule's index order is not specified during creation, the rule is appended to the end of the list.

Name	Type	Description
message_criteria	message_criteria	Matching message definitions for the filter. A property must be specified.
type	string	Rule type

ems_filter

Name	Type	Description
_links	_links	
name	string	Filter name
rules	array[rules]	Array of event filter rules on which to match.

_links

Name	Type	Description
next	href	
self	href	

records

Name	Type	Description
_links	_links	
name	string	Filter name
rules	array[rules]	Array of event filter rules on which to match.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Manage event filters

Support EMS filters name endpoint overview

Overview

Manages a specific filter instance. See the documentation for </support/ems/filters> for details on the various properties.

Examples

Retrieving a specific filter instance

```
# API
GET /api/support/ems/filters/no-info-debug-events

# Response
200 OK

# JSON Body
{
  "name": "no-info-debug-events",
  "rules": [
    {
      "index": 1,
      "type": "include",
      "message_criteria": {
        "name_pattern": "*",
        "severities": "emergency,alert,error,notice",
        "snmp_trap_types": "*",
        "_links": {
          "related": {
            "href":
"/api/support/ems/messages?name=*&severity=emergency,alert,error,notice&snmp_trap_type=*"

```

```

    }
  },
  "_links": {
    "self": {
      "href": "/api/support/ems/filters/no-info-debug-events/rules/1"
    }
  }
},
{
  "index": 2,
  "type": "exclude",
  "message_criteria": {
    "name_pattern": "*",
    "severities": "*",
    "snmp_trap_types": "*",
    "_links": {
      "related": {
        "href":
"/api/support/ems/messages?name=*&severity=*&snmp_trap_type="
      }
    }
  },
  "_links": {
    "self": {
      "href": "/api/support/ems/filters/no-info-debug-events/rules/2"
    }
  }
}
],
"_links": {
  "self": {
    "href": "/api/support/ems/filters/no-info-debug-events"
  }
}
}

```

Updating an existing filter with a new rule

```

# API
PATCH /api/support/ems/filters/test-filter

# JSON Body
{
  "rules": [
    {
      "type": "include",
      "message_criteria": {
        "name_pattern": "waf1.*",
        "severities": "error"
      }
    }
  ]
}

# Response
200 OK

```

Deleting an existing filter

```

# API
DELETE /api/support/ems/filters/test-filter

# Response
200 OK

```

Delete an event filter

```
DELETE /support/ems/filters/{name}
```

Deletes an event filter.

Related ONTAP commands

- `event filter delete`

Learn more

- [DOC /support/ems/filters/{name}](#)

Parameters

Name	Type	In	Required	Description
name	string	path	True	

Response

Status: 200, Ok

Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
983113	Default filters cannot be modified or removed

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Retrieve an event filter

GET /support/ems/filters/{name}

Retrieves an event filter.

Related ONTAP commands

- `event filter show`

Learn more

- [DOC /support/ems/filters/{name}](#)

Parameters

Name	Type	In	Required	Description
name	string	path	True	Filter name
fields	array[string]	query	False	Specify the fields to return.

Response

Status: 200, Ok

Name	Type	Description
<code>_links</code>	<code>_links</code>	
<code>name</code>	string	Filter name
<code>rules</code>	array[<code>rules</code>]	Array of event filter rules on which to match.

Example response

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "name": "snmp-traphost",
  "rules": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "index": 1,
      "message_criteria": {
        "_links": {
          "related": {
            "href": "/api/resourcelink"
          }
        },
        "name_pattern": "callhome.*",
        "severities": "error,informational",
        "snmp_trap_types": "standard|built_in"
      },
      "type": "include"
    }
  ]
}
```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

_links

Name	Type	Description
related	href	

message_criteria

Matching message definitions for the filter. A property must be specified.

Name	Type	Description
_links	_links	
name_pattern	string	Message name filter on which to match. Supports wildcards. Defaults to * if not specified.
severities	string	A comma-separated list of severities or a wildcard.
snmp_trap_types	string	A comma separated list of snmp_trap_types or a wildcard.

rules

Rule for an event filter

Name	Type	Description
_links	_links	
index	integer	Rule index. Rules are evaluated in ascending order. If a rule's index order is not specified during creation, the rule is appended to the end of the list.

Name	Type	Description
message_criteria	message_criteria	Matching message definitions for the filter. A property must be specified.
type	string	Rule type

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Update an event filter

PATCH /support/ems/filters/{name}

Updates an event filter.

Recommended optional properties

- `new_name` - New string that uniquely identifies a filter.
- `rules` - New list of criteria used to match the filter with an event. The existing list is discarded.

Related ONTAP commands

- `event filter create`
- `event filter delete`
- `event filter rename`
- `event filter rule add`

- event filter rule delete
- event filter rule reorder

Learn more

- [DOC /support/ems/filters/{name}](#)

Parameters

Name	Type	In	Required	Description
name	string	path	True	Filter name
new_name	string	query	False	New filter name for renames. Valid in PATCH.

Request Body

Name	Type	Description
_links	_links	
name	string	Filter name
rules	array[rules]	Array of event filter rules on which to match.

Example request

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "name": "snmp-traphost",
  "rules": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "index": 1,
      "message_criteria": {
        "_links": {
          "related": {
            "href": "/api/resourcelink"
          }
        },
        "name_pattern": "callhome.*",
        "severities": "error,informational",
        "snmp_trap_types": "standard|built_in"
      },
      "type": "include"
    }
  ]
}
```

Response

Status: 200, Ok

Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
983088	The filter name provided is empty
983089	The filter name provided cannot contain spaces
983092	The index of the rule provided is outside the allowed range for the filter provided
983094	The filter name provided is invalid. The filter name must contain between 2 and 64 characters and start and end with an alphanumeric symbol or (underscore). The allowed special characters are (underscore) and -(hyphen)
983095	The rule index provided is invalid for the filter provided
983101	No event is matched by the rule provided
983113	Default filters cannot be modified or removed
983114	The maximum number of filters is reached
983115	The maximum number of filter rules is reached
983126	A rule requires at least one of name_pattern, severities or snmp-trap-types to be defined
983127	A property cannot contain a combination of the wildcard characters and other values
983128	An invalid value is provided for the property 'snmp_trap_types'
983146	An invalid value is provided for the property 'severities'
983147	The severity levels provided are not supported
983155	The provided severities property does not match that of the name_pattern
983156	The provided snmp_trap_types property does not match that of the name_pattern
983157	The provided severities and snmp_trap_types do not match those of the name_pattern
983158	The name_pattern provided does not exist

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

_links

Name	Type	Description
related	href	

message_criteria

Matching message definitions for the filter. A property must be specified.

Name	Type	Description
_links	_links	
name_pattern	string	Message name filter on which to match. Supports wildcards. Defaults to * if not specified.
severities	string	A comma-separated list of severities or a wildcard.
snmp_trap_types	string	A comma separated list of snmp_trap_types or a wildcard.

rules

Rule for an event filter

Name	Type	Description
_links	_links	
index	integer	Rule index. Rules are evaluated in ascending order. If a rule's index order is not specified during creation, the rule is appended to the end of the list.

Name	Type	Description
message_criteria	message_criteria	Matching message definitions for the filter. A property must be specified.
type	string	Rule type

ems_filter

Name	Type	Description
_links	_links	
name	string	Filter name
rules	array[rules]	Array of event filter rules on which to match.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Create or retrieve filter rules

Support EMS filters name rules endpoint overview

Overview

Manages the list of rules associated with a specific filter. A filter contains a list of rules that are evaluated to determine whether an event matches the filter. When a rule matches an event, the filter is considered a match. See the documentation for </support/ems/filters> for details on the various properties in a rule.

Examples

Retrieving the collection of rules connected to a filter

```
# API
GET /api/support/ems/filters/no-info-debug-events/rules

# Response
200 OK

# JSON Body
{
  "records": [
    {
      "index": 1,
      "_links": {
        "self": {
          "href": "/api/support/ems/filters/no-info-debug-events/rules/1"
        }
      }
    },
    {
      "index": 2,
      "_links": {
        "self": {
          "href": "/api/support/ems/filters/no-info-debug-events/rules/2"
        }
      }
    }
  ],
  "num_records": 2,
  "_links": {
    "self": {
      "href": "/api/support/ems/filters/no-info-debug-events/rules"
    }
  }
}
```

Creating a new rule under an existing filter



The absence of a position index appends the rule to the end of the list.

```

# API
POST /api/support/ems/filters/test-filter/rules

# JSON Body
{
  "type": "include",
  "message_criteria": {
    "name_pattern": "wafl.*",
    "severities": "error,informational"
  }
}

# Response
201 Created

```

Retrieve event filter rules

GET /support/ems/filters/{name}/rules

Retrieves event filter rules.

Related ONTAP commands

- `event filter show`

Learn more

- [DOC /support/ems/filters/{name}/rules](#)

Parameters

Name	Type	In	Required	Description
name	string	path	True	Filter Name
message_criteria.name_pattern	string	query	False	Filter by message_criteria.name_pattern
message_criteria.severities	string	query	False	Filter by message_criteria.severities
message_criteria.snmp_trap_types	string	query	False	Filter by message_criteria.snmp_trap_types

Name	Type	In	Required	Description
type	string	query	False	Filter by type
index	integer	query	False	Filter by index
fields	array[string]	query	False	Specify the fields to return.
max_records	integer	query	False	Limit the number of records returned.
return_records	boolean	query	False	The default is true for GET calls. When set to false, only the number of records is returned.
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When iterating over a collection, the default is 15 seconds. ONTAP returns earlier if either max records or the end of the collection is reached.
order_by	array[string]	query	False	Order results by specified fields and optional [asc

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
num_records	integer	Number of records
records	array[records]	

Example response

```
{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "num_records": 3,
  "records": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "index": 1,
      "message_criteria": {
        "_links": {
          "related": {
            "href": "/api/resourcelink"
          }
        },
        "name_pattern": "callhome.*",
        "severities": "error,informational",
        "snmp_trap_types": "standard|built_in"
      },
      "type": "include"
    }
  ]
}
```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
next	href	
self	href	

_links

Name	Type	Description
self	href	

_links

Name	Type	Description
related	href	

message_criteria

Matching message definitions for the filter. A property must be specified.

Name	Type	Description
_links	_links	
name_pattern	string	Message name filter on which to match. Supports wildcards. Defaults to * if not specified.
severities	string	A comma-separated list of severities or a wildcard.
snmp_trap_types	string	A comma separated list of snmp_trap_types or a wildcard.

records

Rule for an event filter

Name	Type	Description
_links	_links	

Name	Type	Description
index	integer	Rule index. Rules are evaluated in ascending order. If a rule's index order is not specified during creation, the rule is appended to the end of the list.
message_criteria	message_criteria	Matching message definitions for the filter. A property must be specified.
type	string	Rule type

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Create an event filter rule

POST /support/ems/filters/{name}/rules

Creates an event filter rule.

Required properties

- `message_criteria` - Criteria on which a rule is to match an event.

Recommended optional properties

- `index` - One-based position index of the new rule.

Related ONTAP commands

- `event filter rule add`

Learn more

- [DOC /support/ems/filters/{name}/rules](#)

Parameters

Name	Type	In	Required	Description
<code>return_records</code>	boolean	query	False	The default is false. If set to true, the records are returned.
<code>name</code>	string	path	True	Filter name

Request Body

Name	Type	Description
<code>_links</code>	_links	
<code>index</code>	integer	Rule index. Rules are evaluated in ascending order. If a rule's index order is not specified during creation, the rule is appended to the end of the list.
<code>message_criteria</code>	message_criteria	Matching message definitions for the filter. A property must be specified.
<code>type</code>	string	Rule type

Example request

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "index": 1,
  "message_criteria": {
    "_links": {
      "related": {
        "href": "/api/resourcelink"
      }
    },
    "name_pattern": "callhome.*",
    "severities": "error,informational",
    "snmp_trap_types": "standard|built_in"
  },
  "type": "include"
}
```

Response

Status: 201, Created

Name	Type	Description
_links	_links	
num_records	integer	Number of records
records	array[records]	

Example response

```
{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "num_records": 3,
  "records": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "index": 1,
      "message_criteria": {
        "_links": {
          "related": {
            "href": "/api/resourcelink"
          }
        },
        "name_pattern": "callhome.*",
        "severities": "error,informational",
        "snmp_trap_types": "standard|built_in"
      },
      "type": "include"
    }
  ]
}
```

Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
983092	The index of the rule provided is outside the allowed range for the filter provided
983095	The rule index provided is invalid for the filter provided
983113	Default filters cannot be modified or removed
983115	The maximum number of filter rules is reached
983126	A rule requires at least one name_pattern, severities, or snmp_trap_types to be defined
983127	A property cannot contain a combination of the wildcard characters and other values
983128	An invalid value is provided for the property 'snmp_trap_types'
983146	An invalid value is provided for the property 'severities'
983147	The severity levels provided are not supported
983155	The provided severities property does not match that of the name_pattern
983156	The provided snmp_trap_types property does not match that of the name_pattern
983157	The provided severities and snmp_trap_types do not match those of the name_pattern
983158	The name_pattern provided does not exist

Name	Type	Description
error	error	

Example error

```

{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}

```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

_links

Name	Type	Description
related	href	

message_criteria

Matching message definitions for the filter. A property must be specified.

Name	Type	Description
_links	_links	
name_pattern	string	Message name filter on which to match. Supports wildcards. Defaults to * if not specified.
severities	string	A comma-separated list of severities or a wildcard.
snmp_trap_types	string	A comma separated list of snmp_trap_types or a wildcard.

ems_filter_rule

Rule for an event filter

Name	Type	Description
_links	_links	
index	integer	Rule index. Rules are evaluated in ascending order. If a rule's index order is not specified during creation, the rule is appended to the end of the list.

Name	Type	Description
message_criteria	message_criteria	Matching message definitions for the filter. A property must be specified.
type	string	Rule type

[_links](#)

Name	Type	Description
next	href	
self	href	

records

Rule for an event filter

Name	Type	Description
_links	_links	
index	integer	Rule index. Rules are evaluated in ascending order. If a rule's index order is not specified during creation, the rule is appended to the end of the list.
message_criteria	message_criteria	Matching message definitions for the filter. A property must be specified.
type	string	Rule type

[error_arguments](#)

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments

Name	Type	Description
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Manage event filter rules

Support EMS filters name rules index endpoint overview

Overview

Manages a specific instance of a rule within a filter. See the documentation for </support/ems/filters> for details on the various properties in a rule.

Examples

Retrieving a single instance of a rule

```

# API
GET /api/support/ems/filters/no-info-debug-events/rules/1

# Response
200 OK

# JSON Body
{
  "name": "no-info-debug-events",
  "index": 1,
  "type": "include",
  "message_criteria": {
    "name_pattern": "*",
    "severities": "emergency,alert,error,notice",
    "snmp_trap_types": "*",
    "_links": {
      "self": {
        "href":
"/api/support/ems/messages?name=&severity=emergency,alert,error,notice&sn
mp_trap_type="
      }
    }
  },
  "_links": {
    "self": {
      "href": "/api/support/ems/filters/no-info-debug-events/rules/1"
    }
  }
}

```

Updating an existing rule to use severity emergency

```

# API
PATCH /api/support/ems/filters/test-filter/rules/1

# JSON Body
{
  "message_criteria": {
    "severities": "emergency"
  }
}

# Response
200 OK

```

Deleting a rule from an existing filter

```
# API
DELETE /api/support/ems/filters/test-filter/rules/1

# Response
200 OK
```

Delete an event filter rule

```
DELETE /support/ems/filters/{name}/rules/{index}
```

Deletes an event filter rule.

Related ONTAP commands

- `event filter rule delete`

Learn more

- [DOC /support/ems/filters/{name}/rules/{index}](#)

Parameters

Name	Type	In	Required	Description
name	string	path	True	
index	string	path	True	

Response

```
Status: 200, Ok
```

Error

```
Status: Default
```

ONTAP Error Response Codes

Error Code	Description
983091	A default rule cannot be removed
983092	The index of the rule provided is outside the allowed range for the filter provided
983095	The rule index provided is invalid for the filter provided

Error Code	Description
983110	There are no user defined rules in the filter provided
983113	Default filters cannot be modified or removed

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Retrieve an event filter rule

GET /support/ems/filters/{name}/rules/{index}

Retrieves an event filter rule.

Related ONTAP commands

- `event filter show`

Learn more

- [DOC /support/ems/filters/{name}/rules/{index}](#)

Parameters

Name	Type	In	Required	Description
name	string	path	True	Filter name
index	string	path	True	Filter index
fields	array[string]	query	False	Specify the fields to return.

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
index	integer	Rule index. Rules are evaluated in ascending order. If a rule's index order is not specified during creation, the rule is appended to the end of the list.
message_criteria	message_criteria	Matching message definitions for the filter. A property must be specified.
type	string	Rule type

Example response

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "index": 1,
  "message_criteria": {
    "_links": {
      "related": {
        "href": "/api/resourcelink"
      }
    },
    "name_pattern": "callhome.*",
    "severities": "error,informational",
    "snmp_trap_types": "standard|built_in"
  },
  "type": "include"
}
```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

_links

Name	Type	Description
related	href	

message_criteria

Matching message definitions for the filter. A property must be specified.

Name	Type	Description
_links	_links	
name_pattern	string	Message name filter on which to match. Supports wildcards. Defaults to * if not specified.
severities	string	A comma-separated list of severities or a wildcard.
snmp_trap_types	string	A comma separated list of snmp_trap_types or a wildcard.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments

Name	Type	Description
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Update an event filter rule

PATCH `/support/ems/filters/{name}/rules/{index}`

Updates an event filter rule.

Recommended optional properties

- `message_criteria` - New criteria on which a rule is to match an event.

Related ONTAP commands

- `event filter rule add`
- `event filter rule delete`

Learn more

- [DOC /support/ems/filters/{name}/rules/{index}](#)

Parameters

Name	Type	In	Required	Description
name	string	path	True	Filter name
index	string	path	True	Filter index
new_index	integer	query	False	New position for the filter rule index

Request Body

Name	Type	Description
<code>_links</code>	_links	

Name	Type	Description
index	integer	Rule index. Rules are evaluated in ascending order. If a rule's index order is not specified during creation, the rule is appended to the end of the list.
message_criteria	message_criteria	Matching message definitions for the filter. A property must be specified.
type	string	Rule type

Example request

```

{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "index": 1,
  "message_criteria": {
    "_links": {
      "related": {
        "href": "/api/resourcelink"
      }
    },
    "name_pattern": "callhome.*",
    "severities": "error,informational",
    "snmp_trap_types": "standard|built_in"
  },
  "type": "include"
}

```

Response

```
Status: 200, Ok
```

Error

```
Status: Default
```

ONTAP Error Response Codes

Error Code	Description
983092	The index of the rule provided is outside the allowed range for the filter provided
983095	The rule index provided is invalid for the filter provided
983113	Default filters cannot be modified or removed
983126	A rule requires at least one name_pattern, severities, or snmp_trap_types to be defined
983127	A property cannot contain a combination of the wildcard characters and other values.
983128	An invalid value is provided for the property 'snmp_trap_types'
983146	An invalid value is provided for the property 'severities'
983147	The severity levels provided are not supported
983155	The provided severities property does not match that of the name_pattern
983156	The provided snmp_trap_types property does not match that of the name_pattern
983157	The provided severities and snmp_trap_types do not match those of the name_pattern
983158	The name_pattern provided does not exist

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

_links

Name	Type	Description
related	href	

message_criteria

Matching message definitions for the filter. A property must be specified.

Name	Type	Description
_links	_links	
name_pattern	string	Message name filter on which to match. Supports wildcards. Defaults to * if not specified.
severities	string	A comma-separated list of severities or a wildcard.
snmp_trap_types	string	A comma separated list of snmp_trap_types or a wildcard.

ems_filter_rule

Rule for an event filter

Name	Type	Description
_links	_links	
index	integer	Rule index. Rules are evaluated in ascending order. If a rule's index order is not specified during creation, the rule is appended to the end of the list.

Name	Type	Description
message_criteria	message_criteria	Matching message definitions for the filter. A property must be specified.
type	string	Rule type

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Manage the EMS event catalog

Support EMS messages endpoint overview

Overview

Allows access to the EMS event catalog. The catalog contains a list of all events supported by the system and their corresponding descriptions, the reason for an event occurrence, and how to correct issues related to the event.

Example

Querying for the first event that has a message name beginning with 'C'

```

# API
GET /api/support/ems/messages?fields=name&max_records=1&name=C*

# Response
200 OK

# JSON Body
{
  "records": [
    {
      "name": "CR.Data.File.Inaccessible",
      "_links": {
        "self": {
          "href": "/api/support/ems/messages/CR.Data.File.Inaccessible"
        }
      }
    }
  ],
  "num_records": 1,
  "_links": {
    "self": {
      "href": "/api/support/ems/messages?fields=name&max_records=1&name=C*"
    }
  }
}

```

Retrieve event catalog definitions

GET /support/ems/messages

Retrieves the event catalog definitions.

Related ONTAP commands

- [event catalog show](#)

Learn more

- [DOC /support/ems/messages](#)

Parameters

Name	Type	In	Required	Description
description	string	query	False	Filter by description

Name	Type	In	Required	Description
deprecated	boolean	query	False	Filter by deprecated
snmp_trap_type	string	query	False	Filter by snmp_trap_type
corrective_action	string	query	False	Filter by corrective_action
name	string	query	False	Filter by name
severity	string	query	False	Filter by severity
fields	array[string]	query	False	Specify the fields to return.
max_records	integer	query	False	Limit the number of records returned.
return_records	boolean	query	False	The default is true for GET calls. When set to false, only the number of records is returned.
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When iterating over a collection, the default is 15 seconds. ONTAP returns earlier if either max records or the end of the collection is reached.
order_by	array[string]	query	False	Order results by specified fields and optional [asc

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
num_records	integer	Number of records
records	array[records]	

Example response

```

{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "num_records": 3,
  "records": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "corrective_action": "string",
      "deprecated": 1,
      "description": "string",
      "name": "callhome.spares.low",
      "severity": "error",
      "snmp_trap_type": "standard"
    }
  ]
}

```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
next	href	
self	href	

_links

Name	Type	Description
self	href	

records

Name	Type	Description
_links	_links	
corrective_action	string	Corrective action
deprecated	boolean	Is deprecated?
description	string	Description
name	string	Name of the event.
severity	string	Severity
snmp_trap_type	string	SNMP trap type

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Manage cluster-wide SNMP configuration

Support SNMP endpoint overview

Overview

Cluster wide SNMP configuration. You can configure or retrieve the following SNMP parameters using this endpoint:

- enable or disable SNMP
- enable or disable SNMP authentication traps

Examples

Disables SNMP protocol in the cluster.

```
# The API:
PATCH "/api/support/snmp"

# The call
curl -H "accept: application/json" -H "Content-Type: application/json"
-X PATCH "https://<mgmt-ip>/api/support/snmp" -d '{"enabled":"false"}'

# The response
200 OK

### Enables SNMP authentication traps in the cluster.
```

The call

```
curl -H "accept: application/json" -H "Content-Type: application/json" -X
PATCH "https://+++<mgmt-ip>+++/api/support/snmp" -d
'{"auth_traps_enabled":"true"}'+++</mgmt-ip>+++
```

The response

200 OK

Enables SNMP protocol and SNMP authentication traps in the cluster.

```
# The call
  curl -H "accept: application/json" -H "Content-Type: application/json"
-X PATCH "https://+++<mgmt-ip>+++/api/support/snmp" -d '{"enabled":"true",
"auth_traps_enabled":"true"}'+++</mgmt-ip>+++
```

```
# The response
  200 OK
```

```
[[IDd183d13044b00aa6ccc424715fd0216d]]
= Retrieve cluster-wide SNMP configuration
```

```
[.api-doc-operation .api-doc-operation-get]#GET# [.api-doc-code-
block]#`/support/snmp`#
```

Retrieves the cluster wide SNMP configuration.

== Related ONTAP commands

```
* `options snmp.enable`
* `system snmp show`
```

== Learn more

```
* xref:{relative_path}support_snmp_endpoint_overview.html[DOC
/support/snmp]
```

== Parameters

```
[cols=5*,options=header]
```

```
|===
```

```
|Name
```

```

|Type
|In
|Required
|Description

|fields
|array[string]
|query
|False
a|Specify the fields to return.

|max_records
|integer
|query
|False
a|Limit the number of records returned.

|return_records
|boolean
|query
|False
a|The default is true for GET calls. When set to false, only the number
of records is returned.

|return_timeout
|integer
|query
|False
a|The number of seconds to allow the call to execute before returning.
When iterating over a collection, the default is 15 seconds. ONTAP
returns earlier if either max records or the end of the collection is
reached.

|order_by
|array[string]
|query
|False
a|Order results by specified fields and optional [asc|desc] direction.
Default direction is 'asc' for ascending.

|===

== Response

```

Status: 200, Ok

```
[cols=3*,options=header]
|===
|Name
|Type
|Description

|_links
|link:#self_link[self_link]
a|

|auth_traps_enabled
|boolean
a|Specifies whether to enable or disable SNMP authentication traps.

|enabled
|boolean
a|Specifies whether to enable or disable SNMP.

|===

.Example response
[%collapsible%closed]
====
[source,json,subs=+macros]
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "auth_traps_enabled": 1,
  "enabled": 1
}
====

== Error
```

Status: Default, Error

```
[cols=3*,options=header]
```



```

|===
|Name
|Type
|Description

|error
|link:#error[error]
a|

|===

.Example error
[%collapsible%closed]
=====
[source,json,subs=+macros]
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
=====

== Definitions

[.api-def-first-level]
.See Definitions
[%collapsible%closed]
//Start collapsible Definitions block
=====
[#href]
[.api-collapsible-fifth-title]
href

[cols=3*,options=header]
|===
|Name
|Type

```

```

|Description

|href
|string
a|

|===

[#self_link]
[.api-collapsible-fifth-title]
self_link

[cols=3*,options=header]
|===
|Name
|Type
|Description

|self
|link:#href[href]
a|

|===

[#error_arguments]
[.api-collapsible-fifth-title]
error_arguments

[cols=3*,options=header]
|===
|Name
|Type
|Description

|code
|string
a|Argument code

|message
|string
a|Message argument

|===

```

```

[#error]
[.api-collapsible-fifth-title]
error

[cols=3*,options=header]
|===
|Name
|Type
|Description

|arguments
|array[link:#error_arguments[error_arguments]]
a|Message arguments

|code
|string
a|Error code

|message
|string
a|Error message

|target
|string
a|The target parameter that caused the error.

|===

//end collapsible .Definitions block
====

[[IDa15e6aaa5838110ed92b9442608c3d5d]]
= Update cluster-wide SNMP configuration

[.api-doc-operation .api-doc-operation-patch]#PATCH# [.api-doc-code-
block]#`/support/snmp`#

```

Updates the cluster wide SNMP configuration, such as enabling or disabling SNMP and enabling or disabling authentication traps.

== Related ONTAP commands

```
* `options snmp.enable`  
* `system snmp authtrap`
```

== Learn more

```
* xref:{relative_path}support_snmp_endpoint_overview.html[DOC  
/support/snmp]
```

== Parameters

```
[cols=5*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|In
```

```
|Required
```

```
|Description
```

```
|return_records
```

```
|boolean
```

```
|query
```

```
|False
```

```
a|The default is false. If set to true, the records are returned.
```

```
|===
```

== Request Body

```
[cols=3*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|Description
```

```
 |_links
```

```
 |link:#self_link[self_link]
```

```
a|
```

```
|auth_traps_enabled
|boolean
a|Specifies whether to enable or disable SNMP authentication traps.
```

```
|enabled
|boolean
a|Specifies whether to enable or disable SNMP.
```

```
|===
```

```
.Example request
```

```
[%collapsible%closed]
```

```
====
```

```
[source,json,subs=+macros]
```

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "auth_traps_enabled": 1,
  "enabled": 1
}
====
```

```
== Response
```

Status: 200, Ok

```
== Error
```

Status: Default

ONTAP Error Response Codes

```
|===
```

```
| Error Code | Description
```

```
| 1179738
```

```
| Cluster identification not available for modification since a cluster
has not been created.
```

```
| 1179739
| Cluster identification modification is not available in maintenance mode
or other boot modes.
|===
```

```
[cols=3*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|Description
```

```
|error
```

```
|link:#error[error]
```

```
a|
```

```
|===
```

```
.Example error
```

```
[%collapsible%closed]
```

```
=====
```

```
[source,json,subs=+macros]
```

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

```
=====
```

```
== Definitions
```

```
[.api-def-first-level]
```

```
.See Definitions
```

```
[%collapsible%closed]
```

```
//Start collapsible Definitions block
```

```

====
[#href]
[.api-collapsible-fifth-title]
href

[cols=3*,options=header]
|===
|Name
|Type
|Description

|href
|string
a|

|===

[#self_link]
[.api-collapsible-fifth-title]
self_link

[cols=3*,options=header]
|===
|Name
|Type
|Description

|self
|link:#href[href]
a|

|===

[#snmp]
[.api-collapsible-fifth-title]
snmp

Cluster-wide SNMP configuration.

[cols=3*,options=header]
|===
|Name
|Type
|Description

```

```
|_links
|link:#self_link[self_link]
a|
```

```
|auth_traps_enabled
|boolean
a|Specifies whether to enable or disable SNMP authentication traps.
```

```
|enabled
|boolean
a|Specifies whether to enable or disable SNMP.
```

```
|===
```

```
[#error_arguments]
[.api-collapsible-fifth-title]
error_arguments
```

```
[cols=3*,options=header]
```

```
|===
```

```
|Name
|Type
|Description
```

```
|code
|string
a|Argument code
```

```
|message
|string
a|Message argument
```

```
|===
```

```
[#error]
[.api-collapsible-fifth-title]
error
```

```
[cols=3*,options=header]
```

```
|===
```



```

|Name
|Type
|Description

|arguments
|array[link:#error_arguments[error_arguments]]
a|Message arguments

|code
|string
a|Error code

|message
|string
a|Error message

|target
|string
a|The target parameter that caused the error.

|===

//end collapsible .Definitions block
====

:leveloffset: -1

= Create or retrieve SNMP traphosts

:leveloffset: +1

[[ID4519c38cc02033bb03cd0234b3defa9e]]
= Support SNMP traphosts endpoint overview

== Overview

```

This SNMP endpoint is used to retrieve, configure and reconfigure SNMP traphosts. An SNMP traphost is a host machine that is configured to receive SNMP traps from ONTAP. An SNMP traphost can be an SNMPv1/SNMPv2c traphost or an SNMPv3 traphost. ONTAP sends SNMPv1/SNMPv2c traps to an SNMPv1/SNMPv2c traphost over the SNMPv1/SNMPv2c protocol. Similarly, it sends SNMPv3 traps to an SNMPv3 traphost over the SNMPv3 protocol.

== Examples

=== Retrieves a list of SNMP traphosts in the cluster, sorted by IP address

The API:

```
GET "/api/support/snmp/traphosts"
```

The call:

```
curl -H "accept: application/hal+json" -X GET "https://<mgmt-ip>/api/support/snmp/traphosts?order_by=ip_address"
```

The response:

```
{
  "records": [
    {
      "host": "scspr0651011001.gdl.englab.netapp.com",
      "ip_address": "10.235.36.62",
      "_links": {
        "self": {
          "href":
"/api/support/snmp/traphosts/scspr0651011001.gdl.englab.netapp.com"
        }
      }
    },
    {
      "host": "scspr0647726006.gdl.englab.netapp.com",
      "ip_address": "10.235.36.139",
      "_links": {
        "self": {
          "href":
"/api/support/snmp/traphosts/scspr0647726006.gdl.englab.netapp.com"
        }
      }
    },
    {
      "host": "scspr0651055012.gdl.englab.netapp.com",
```

```

    "ip_address": "10.237.245.106",
    "_links": {
      "self": {
        "href":
"/api/support/snmp/traphosts/scspr0651055012.gdl.englab.netapp.com"
      }
    }
  },
  "num_records": 3,
  "_links": {
    "self": {
      "href": "/api/support/snmp/traphosts?order_by=ip_address"
    }
  }
}

```

Retrieves a list of SNMP traphosts in the cluster for which SNMP user is 'snmpv3user1'

The call:

```

curl -H "accept: application/hal+json" -X GET "https://+++<mgmt-
ip>+++/api/support/snmp/traphosts?name=snmpv3user1"+++</mgmt-ip>+++

```

The response:

```

{
  "records": [
    {
      "host": "scspr0653246020.gdl.englab.netapp.com",
      "user": {
        "name": "snmpv3user1",
        "_links": {
          "self": {
            "href":
"/api/support/snmp/users/800003150558b57e8dbd9ce9119d82005056a7b4e5/snmpv3
user1"
          }
        }
      },
      "_links": {
        "self": {
          "href":

```

```

"/api/support/snmp/traphosts/scspr0653246020.gdl.englab.netapp.com"
    }
  }
},
"num_records": 1,
"_links": {
  "self": {
    "href": "/api/support/snmp/traphosts?user.name=snmpv3user1"
  }
}
}

```

=== Adds an SNMPv1 or SNMPv2c traphost

The API:

POST "/api/support/snmp/traphosts"

The call:

```

curl -H "accept: application/json" -H "Content-Type: application/json"
-X POST "https://<mgmt-ip>/api/support/snmp/traphosts" -d
'{"host":"10.140.128.48"}'

```

The response:

201 Created

Adds an SNMPv3 traphost

The API:

POST "/api/support/snmp/traphosts"

The call:

```

curl -H "accept: application/json" -H "Content-Type: application/json"
-X POST "https://+++<mgmt-ip>+++/api/support/snmp/traphosts" -d
'{"host":"fd-geoycpi-uno.gycpi.b.yahoodns.net",
"user":{"name":"snmpv3user1"}}'+++</mgmt-ip>+++

```

The response:

201 Created

```
[[ID2395429e5b1ef139327c56230d8b4ba1]]
```

= Retrieve SNMP traphosts

```
[.api-doc-operation .api-doc-operation-get]#GET# [.api-doc-code-block]#`/support/snmp/traphosts`#
```

Retrieves the list of SNMP traphosts along with the SNMP users configured for those traphosts.

== Related ONTAP commands

```
* `system snmp traphost show`
```

== Learn more

```
* xref:{relative_path}support_snmp_traphosts_endpoint_overview.html[DOC /support/snmp/traphosts]
```

== Parameters

```
[cols=5*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|In
```

```
|Required
```

```
|Description
```

```
|host
```

```
|string
```

```
|query
```

```
|False
```

```
a|Filter by host
```

```
|ip_address
```

```
|string
```

```
|query
```

```
|False
```

```
a|Filter by ip_address
```

```
|user.name
```

```
|string
|query
|False
a|Filter by user.name
```

```
|fields
|array[string]
|query
|False
a|Specify the fields to return.
```

```
|max_records
|integer
|query
|False
a|Limit the number of records returned.
```

```
|return_records
|boolean
|query
|False
a|The default is true for GET calls. When set to false, only the number
of records is returned.
```

```
|return_timeout
|integer
|query
|False
a|The number of seconds to allow the call to execute before returning.
When iterating over a collection, the default is 15 seconds. ONTAP
returns earlier if either max records or the end of the collection is
reached.
```

```
|order_by
|array[string]
|query
|False
a|Order results by specified fields and optional [asc|desc] direction.
Default direction is 'asc' for ascending.
```

```
|===
```

== Response

Status: 200, Ok

```
[cols=3*,options=header]
|===
|Name
|Type
|Description

|_links
|link:#_links[_links]
a|

|num_records
|integer
a|Number of records.

|records
|array[link:#snmp_traphost[snmp_traphost]]
a|

|===

.Example response
[%collapsible%closed]
=====
[source,json,subs=+macros]
{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "records": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      }
    },
  ],
}
```

```

    "host": "traphost.example.com",
    "ip_address": "10.10.10.7",
    "user": {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "snmpv3user3"
    }
  ]
}
====

== Error

```

Status: Default, Error

```

[cols=3*,options=header]
|===
|Name
|Type
|Description

|error
|link:#error[error]
a|

|===

.Example error
[%collapsible%closed]
====
[source,json,subs=+macros]
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",

```



```

    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
====

== Definitions

[.api-def-first-level]
.See Definitions
[%collapsible%closed]
//Start collapsible Definitions block
====
[#href]
[.api-collapsible-fifth-title]
href

[cols=3*,options=header]
|===
|Name
|Type
|Description

|href
|string
a|

|===

[#_links]
[.api-collapsible-fifth-title]
_links

[cols=3*,options=header]
|===
|Name
|Type
|Description

|next
|link:#href[href]
a|

|self
|link:#href[href]
a|

```

```
|===
```

```
[#_links]
```

```
[.api-collapsible-fifth-title]
```

```
_links
```

```
[cols=3*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|Description
```

```
|self
```

```
|link:#href[href]
```

```
a|
```

```
|===
```

```
[#user]
```

```
[.api-collapsible-fifth-title]
```

```
user
```

Optional SNMP user parameter. For an SNMPv3 traphost, this property refers to an SNMPv3 or User-based Security Model (USM) user. For an SNMPv1 or SNMPv2c traphost, this property refers to an SNMP community.

```
[cols=3*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|Description
```

```
|_links
```

```
|link:#_links[_links]
```

```
a|
```

```
|name
```

```
|string
```

a|Optional SNMPv1/SNMPv2c or SNMPv3 user name. For an SNMPv3 traphost, this object refers to an SNMPv3 or User-based Security Model (USM) user. For an SNMPv1 or SNMPv2c traphost, this object refers to an SNMP community. For an SNMPv3 traphost, this object is mandatory and refers to an SNMPv3 or User-based Security Model (USM) user. For an SNMPv1 or

SNMPv2c traphost, ONTAP automatically uses "public", if the same is configured, or any other configured community as user. So, for an SNMPv1 or SNMPv2c traphost, this property should not be provided in the "POST" method. However, the configured community for the SNMPv1/SNMPv2c traphost is returned by the "GET" method.

* example: snmpv3user3

|===

```
[#snmp_traphost]
[.api-collapsible-fifth-title]
snmp_traphost
```

SNMP manager or host machine that receives SNMP traps from ONTAP.

```
[cols=3*,options=header]
```

|===

```
|Name
|Type
|Description
```

```
 |_links
|link:#_links[_links]
a|
```

```
|host
|string
a|Fully qualified domain name (FQDN), IPv4 address or IPv6 address of SNMP traphost.
```

```
|ip_address
|string
a|IPv4 or IPv6 address
```

```
|user
|link:#user[user]
a|Optional SNMP user parameter. For an SNMPv3 traphost, this property refers to an SNMPv3 or User-based Security Model (USM) user. For an SNMPv1 or SNMPv2c traphost, this property refers to an SNMP community.
```

```

|===

[#error_arguments]
[.api-collapsible-fifth-title]
error_arguments

[cols=3*,options=header]
|===
|Name
|Type
|Description

|code
|string
a|Argument code

|message
|string
a|Message argument

|===

[#error]
[.api-collapsible-fifth-title]
error

[cols=3*,options=header]
|===
|Name
|Type
|Description

|arguments
|array[link:#error_arguments[error_arguments]]
a|Message arguments

|code
|string
a|Error code

|message

```

```
|string
a|Error message
```

```
|target
|string
a|The target parameter that caused the error.
```

```
|===
```

```
//end collapsible .Definitions block
=====
```

```
[[IDbe6419996800c7130bd6001a64a7dfef]]
```

```
= Create SNMP traphosts
```

```
[.api-doc-operation .api-doc-operation-post]#POST# [.api-doc-code-  
block]#`/support/snmp/traphosts`#
```

Creates SNMP traphosts. While adding an SNMPv3 traphost, an SNMPv3 user configured in ONTAP must be specified. ONTAP uses this user's credentials to authenticate and/or encrypt traps sent to this SNMPv3 traphost. While adding an SNMPv1/SNMPv2c traphost, SNMPv1/SNMPv2c user or community need not be specified.

== Required properties

* `host` - Fully Qualified Domain Name (FQDN), IPv4 address or IPv6 address of SNMP traphost.

== Recommended optional properties

* If `host` refers to an SNMPv3 traphost, the following field is required:

*** `user` - SNMPv3 or User-based Security Model (USM) user.

* For an SNMPv1/SNMPv2c traphost, ONTAP automatically uses 'public' if 'public' is configured or no community is configured. Otherwise, ONTAP uses the first configured community.

== Related ONTAP commands

```
* `system snmp traphost add`
```

```
== Learn more
```

```
* xref:{relative_path}support_snmp_traphosts_endpoint_overview.html[DOC  
/support/snmp/traphosts]
```

```
== Parameters
```

```
[cols=5*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|In
```

```
|Required
```

```
|Description
```

```
|return_records
```

```
|boolean
```

```
|query
```

```
|False
```

```
a|The default is false. If set to true, the records are returned.
```

```
|===
```

```
== Request Body
```

```
[cols=3*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|Description
```

```
|_links
```

```
|link:#_links[_links]
```

```
a|
```

```
|host
```

```
|string
```

```
a|Fully qualified domain name (FQDN), IPv4 address or IPv6 address of SNMP  
traphost.
```

```
|ip_address
|string
a|IPv4 or IPv6 address
```

```
|user
|link:#user[user]
a|Optional SNMP user parameter. For an SNMPv3 traphost, this property
refers to an SNMPv3 or User-based Security Model (USM) user. For an SNMPv1
or SNMPv2c traphost, this property refers to an SNMP community.
```

```
|===
```

.Example request

```
[%collapsible%closed]
```

```
=====
```

```
[source,json,subs=+macros]
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "host": "traphost.example.com",
  "ip_address": "10.10.10.7",
  "user": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "name": "snmpv3user3"
  }
}
```

```
=====
```

```
== Response
```

Status: 201, Created

```
[cols=3*,options=header]
```

```
|===
```

```
|Name
```

```

|Type
|Description

|_links
|link:#_links[_links]
a|

|num_records
|integer
a|Number of records.

|records
|array[link:#snmp_trap[snmp_trap]]
a|

|===

```

.Example response

[%collapsible%closed]

====

[source,json,subs=+macros]

```

{
  "_links": {
    "next": {
      "href": "/api/resourcelink"
    },
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "records": [
    {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "host": "traphost.example.com",
      "ip_address": "10.10.10.7",
      "user": {
        "_links": {
          "self": {
            "href": "/api/resourcelink"
          }
        }
      }
    }
  ]
}

```



```
    },
    "name": "snmpv3user3"
  }
}
]
}
====

== Error
```

Status: Default

ONTAP Error Response Codes

```
|====
| Error Code | Description

| 8847365
| Unknown host.

| 9043969
| Duplicate traphost entry.

| 9043980
| IPv6 support is disabled.

| 9043991
| Not a USM user.

| 9043993
| Current cluster version does not support SNMPv3 traps.

| 9044001
| Failed to create SNMPv1 traphost.

| 9044002
| Failed to create SNMPv3 traphost.
|====
```

```
[cols=3*,options=header]
```

```
|====
|Name
|Type
|Description
```

```

|error
|link:#error[error]
a|

|===

.Example error
[%collapsible%closed]
====
[source,json,subs=+macros]
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
====

== Definitions

[.api-def-first-level]
.See Definitions
[%collapsible%closed]
//Start collapsible Definitions block
====
[#href]
[.api-collapsible-fifth-title]
href

[cols=3*,options=header]
|===
|Name
|Type
|Description

|href
|string

```

```
a|  
  
|===  
  
[#_links]  
[.api-collapsible-fifth-title]  
_links
```

```
[cols=3*,options=header]  
|===  
|Name  
|Type  
|Description
```

```
|self  
|link:#href[href]  
a|
```

```
|===
```

```
[#user]  
[.api-collapsible-fifth-title]  
user
```

Optional SNMP user parameter. For an SNMPv3 traphost, this property refers to an SNMPv3 or User-based Security Model (USM) user. For an SNMPv1 or SNMPv2c traphost, this property refers to an SNMP community.

```
[cols=3*,options=header]  
|===  
|Name  
|Type  
|Description
```

```
|_links  
|link:#_links[_links]  
a|
```

```
|name  
|string  
a|Optional SNMPv1/SNMPv2c or SNMPv3 user name. For an SNMPv3 traphost,  
this object refers to an SNMPv3 or User-based Security Model (USM) user.  
For an SNMPv1 or SNMPv2c traphost, this object refers to an SNMP  
community. For an SNMPv3 traphost, this object is mandatory and refers to
```

an SNMPv3 or User-based Security Model (USM) user. For an SNMPv1 or SNMPv2c traphost, ONTAP automatically uses "public", if the same is configured, or any other configured community as user. So, for an SNMPv1 or SNMPv2c traphost, this property should not be provided in the "POST" method. However, the configured community for the SNMPv1/SNMPv2c traphost is returned by the "GET" method.

* example: snmpv3user3

|===

```
[#snmp_traphost]
[.api-collapsible-fifth-title]
snmp_traphost
```

SNMP manager or host machine that receives SNMP traps from ONTAP.

```
[cols=3*,options=header]
```

|===

|Name

|Type

|Description

|_links

|link:#_links[_links]

a|

|host

|string

a|Fully qualified domain name (FQDN), IPv4 address or IPv6 address of SNMP traphost.

|ip_address

|string

a|IPv4 or IPv6 address

|user

|link:#user[user]

a|Optional SNMP user parameter. For an SNMPv3 traphost, this property refers to an SNMPv3 or User-based Security Model (USM) user. For an SNMPv1 or SNMPv2c traphost, this property refers to an SNMP community.

```

|===

[#_links]
[.api-collapsible-fifth-title]
_links

[cols=3*,options=header]
|===
|Name
|Type
|Description

|next
|link:#href[href]
a|

|self
|link:#href[href]
a|

|===

[#error_arguments]
[.api-collapsible-fifth-title]
error_arguments

[cols=3*,options=header]
|===
|Name
|Type
|Description

|code
|string
a|Argument code

|message
|string
a|Message argument

|===

```

```

[#error]
[.api-collapsible-fifth-title]
error

[cols=3*,options=header]
|===
|Name
|Type
|Description

|arguments
|array[link:#error_arguments[error_arguments]]
a|Message arguments

|code
|string
a|Error code

|message
|string
a|Error message

|target
|string
a|The target parameter that caused the error.

|===

//end collapsible .Definitions block
====

:leveloffset: -1

= Manage individual SNMP traphosts

:leveloffset: +1

```

```
[[ID625e8fa0ffbaa7f80525c1e7ea18f9e6]]
```

```
= Support SNMP traphosts host endpoint overview
```

```
== Overview
```

```
Defines, retrieves or deletes an individual SNMP traphost.
```

```
== Examples
```

```
=== Retrieves an individual traphost in the cluster
```

```
----
```

```
# The API:
```

```
GET "/api/support/snmp/traphosts/{host}"
```

```
# The call
```

```
curl -H "accept: application/hal+json" -X GET "https://<mgmt-  
ip>/api/support/snmp/traphosts/10.235.36.62"
```

```
# The response
```

```
{  
  "host": "scspr0651011001.gdl.englab.netapp.com",  
  "ip_address": "10.235.36.62",  
  "user": {  
    "name": "public",  
    "_links": {  
      "self": {  
        "href":  
"/api/support/snmp/users/800003150558b57e8dbd9ce9119d82005056a7b4e5/public  
"  
      }  
    }  
  },  
  "_links": {  
    "self": {  
      "href": "/api/support/snmp/traphosts/10.235.36.62"  
    }  
  }  
}
```

```
### Deletes an individual traphost in the cluster
```

```
-----  
  
# The API:  
DELETE "/api/support/snmp/traphosts/{host}"  
  
# The call:  
curl -H "accept: application/json" -H "Content-Type: application/json"  
-X DELETE "https://+++<mgmt-  
ip>+++/api/support/snmp/traphosts/3ffe:ffff:100:f102::1"+++</mgmt-ip>+++  
  
# The response:  
200 OK
```

```
[[ID38c4f1d6281e0ee22c99071bd5bb4fe2]]  
= Delete an SNMP traphost
```

```
[.api-doc-operation .api-doc-operation-delete]#DELETE# [.api-doc-code-  
block]#`/support/snmp/traphosts/{host}`#
```

Deletes an SNMP traphost.

== Learn more

*

xref:{relative_path}support_snmp_traphosts_host_endpoint_overview.html[DOC
/support/snmp/traphosts/{host}]

== Parameters

```
[cols=5*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|In
```

```
|Required
```

```
|Description
```

```
|host
```

```
|string
```



```

|path
|True
a|Fully Qualified Domain Name (FQDN), IPv4 address or IPv6 address of SNMP
traphost.

|return_timeout
|integer
|query
|False
a|The number of seconds to allow the call to execute before returning.
When doing a POST, PATCH, or DELETE operation on a single record, the
default is 0 seconds. This means that if an asynchronous operation is
started, the server immediately returns HTTP code 202 (Accepted) along
with a link to the job. If a non-zero value is specified for POST, PATCH,
or DELETE operations, ONTAP waits that length of time to see if the job
completes so it can return something other than 202.

|===

== Response

```

Status: 200, Ok

```

== Error

```

Status: Default

ONTAP Error Response Codes

```

|===
| Error Code | Description
| 9043970
| Traphost entry does not exist.
|===

```

```

[cols=3*,options=header]

```

```

|===
|Name
|Type
|Description

```

```

|error
|link:#error[error]
a|

|===

.Example error
[%collapsible%closed]
====
[source,json,subs=+macros]
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
====

== Definitions

[.api-def-first-level]
.See Definitions
[%collapsible%closed]
//Start collapsible Definitions block
====
[#error_arguments]
[.api-collapsible-fifth-title]
error_arguments

[cols=3*,options=header]
|===
|Name
|Type
|Description

|code
|string
a|Argument code

```

```

|message
|string
a|Message argument

|===

[#error]
[.api-collapsible-fifth-title]
error

[cols=3*,options=header]
|===
|Name
|Type
|Description

|arguments
|array[link:#error_arguments[error_arguments]]
a|Message arguments

|code
|string
a|Error code

|message
|string
a|Error message

|target
|string
a|The target parameter that caused the error.

|===

//end collapsible .Definitions block
=====

```

```
[[IDb2edf61d2ed190a7135164e6e78f9966]]
```

```
= Retrieve SNMP traphost details
```

```
[.api-doc-operation .api-doc-operation-get]#GET# [.api-doc-code-block]#`/support/snmp/traphosts/{host}`#
```

Retrieves the details of an SNMP traphost along with the SNMP user configured for that traphost.

```
== Learn more
```

```
*
```

```
xref:{relative_path}support_snmp_traphosts_host_endpoint_overview.html[DOC /support/snmp/traphosts/{host}]
```

```
== Parameters
```

```
[cols=5*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|In
```

```
|Required
```

```
|Description
```

```
|host
```

```
|string
```

```
|path
```

```
|True
```

```
a|Fully Qualified Domain Name (FQDN), IPv4 address or IPv6 address of SNMP traphost.
```

```
|fields
```

```
|array[string]
```

```
|query
```

```
|False
```

```
a|Specify the fields to return.
```

```
|return_timeout
```

```
|integer
```

```
|query
```

```
|False
a|The number of seconds to allow the call to execute before returning.
When iterating over a collection, the default is 15 seconds. ONTAP
returns earlier if either max records or the end of the collection is
reached.

|===

== Response
```

Status: 200, Ok

```
[cols=3*,options=header]
|===
|Name
|Type
|Description

|_links
|link:#_links[_links]
a|

|host
|string
a|Fully qualified domain name (FQDN), IPv4 address or IPv6 address of SNMP
traphost.

|ip_address
|string
a|IPv4 or IPv6 address

|user
|link:#user[user]
a|Optional SNMP user parameter. For an SNMPv3 traphost, this property
refers to an SNMPv3 or User-based Security Model (USM) user. For an SNMPv1
or SNMPv2c traphost, this property refers to an SNMP community.

|===

.Example response
[%collapsible%closed]
=====
```

```
[source,json,subs=+macros]
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "host": "traphost.example.com",
  "ip_address": "10.10.10.7",
  "user": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "name": "snmpv3user3"
  }
}
====

== Error
```

Status: Default, Error

```
[cols=3*,options=header]
|===
|Name
|Type
|Description

|error
|link:#error[error]
a|

|===

.Example error
[%collapsible%closed]
====
[source,json,subs=+macros]
{
  "error": {
    "arguments": [
      {
```

```

        "code": "string",
        "message": "string"
    }
],
"code": "4",
"message": "entry doesn't exist",
"target": "uuid"
}
}
====

```

== Definitions

```

[.api-def-first-level]
.See Definitions
[%collapsible%closed]
//Start collapsible Definitions block
====

```

```

[#href]
[.api-collapsible-fifth-title]
href

```

```

[cols=3*,options=header]
|===
|Name
|Type
|Description

```

```

|href
|string
a|

```

```

|===

```

```

[#_links]
[.api-collapsible-fifth-title]
_links

```

```

[cols=3*,options=header]
|===
|Name
|Type
|Description

```

```

|self

```

```
|link:#href[href]
```

```
a|
```

```
|===
```

```
[#user]
```

```
[.api-collapsible-fifth-title]
```

```
user
```

Optional SNMP user parameter. For an SNMPv3 traphost, this property refers to an SNMPv3 or User-based Security Model (USM) user. For an SNMPv1 or SNMPv2c traphost, this property refers to an SNMP community.

```
[cols=3*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|Description
```

```
|_links
```

```
|link:#_links[_links]
```

```
a|
```

```
|name
```

```
|string
```

a|Optional SNMPv1/SNMPv2c or SNMPv3 user name. For an SNMPv3 traphost, this object refers to an SNMPv3 or User-based Security Model (USM) user. For an SNMPv1 or SNMPv2c traphost, this object refers to an SNMP community. For an SNMPv3 traphost, this object is mandatory and refers to an SNMPv3 or User-based Security Model (USM) user. For an SNMPv1 or SNMPv2c traphost, ONTAP automatically uses "public", if the same is configured, or any other configured community as user. So, for an SNMPv1 or SNMPv2c traphost, this property should not be provided in the "POST" method. However, the configured community for the SNMPv1/SNMPv2c traphost is returned by the "GET" method.

* example: snmpv3user3

```
|===
```

```
[#error_arguments]
```

```
[.api-collapsible-fifth-title]
```

```
error_arguments
```



```
[cols=3*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|Description
```

```
|code
```

```
|string
```

```
a|Argument code
```

```
|message
```

```
|string
```

```
a|Message argument
```

```
|===
```

```
[#error]
```

```
[.api-collapsible-fifth-title]
```

```
error
```

```
[cols=3*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|Description
```

```
|arguments
```

```
|array[link:#error_arguments[error_arguments]]
```

```
a|Message arguments
```

```
|code
```

```
|string
```

```
a|Error code
```

```
|message
```

```
|string
```

```
a|Error message
```

```
|target
```

```
|string
```

```
a|The target parameter that caused the error.
```

```
|===
```

```
//end collapsible .Definitions block
```

```
====
```

```
:leveloffset: -1
```

```
= Retrieve and create SNMP users
```

```
:leveloffset: +1
```

```
[[ID9156c325fec0e563025c048e234c9f00]]
```

```
= Support SNMP users endpoint overview
```

```
== Overview
```

Defines, retrieves and adds new SNMP users. An SNMP user can be an SNMPv1/SNMPv2c user or an SNMPv3 user. SNMPv1/SNMPv2c user is also called a "community" user. Use a "community" user to query ONTAP SNMP server over SNMPv1/SNMPv2c protocol. An SNMPv3 user, also called a User-based Security Model (USM) user, can be a local SNMPv3 user or a remote SNMPv3 user. Use a local SNMPv3 user to query ONTAP SNMP server over SNMPv3 and/or to send SNMPv3 traps. A remote SNMPv3 user is configured in ONTAP as well as on a remote switch. ONTAP SNMP client uses a remote SNMPv3 user to query the switch over SNMPv3.

```
== Examples
```

```
=== Retrieves a list of SNMP users in the cluster, sorted by SVM UUID
```

```
----
```

```
# The API:
```

```
GET "/api/support/snmp/users"
```

```
# The call:
```

```
curl -H "accept: application/hal+json" -X GET "https://<mgmt-
```

```
ip>/api/support/snmp/users?order_by=owner.uuid"
```

```
# The response:
```

```
{
  "records": [
    {
      "engine_id": "80000315052d7d2c4410b8e911bc9f005056bb942e",
      "name": "snmpv1user1",
      "owner": {
        "uuid": "442c7d2d-b810-11e9-bc9f-005056bb942e"
      },
      "_links": {
        "self": {
          "href":
"/api/support/snmp/users/80000315052d7d2c4410b8e911bc9f005056bb942e/snmpv1
user1"
        }
      }
    },
    {
      "engine_id": "80000315058e02057c0fb8e911bc9f005056bb942e",
      "name": "snmpv3user1",
      "owner": {
        "uuid": "7c05028e-b80f-11e9-bc9f-005056bb942e"
      },
      "_links": {
        "self": {
          "href":
"/api/support/snmp/users/80000315058e02057c0fb8e911bc9f005056bb942e/snmpv3
user1"
        }
      }
    }
  ],
  "num_records": 2,
  "_links": {
    "self": {
      "href": "/api/support/snmp/users?order_by=owner.uuid"
    }
  }
}
```

```
### Creates an SNMPv1 or SNMPv2c community user
```

```
-----  
  
# The API:  
  POST "/api/support/snmp/users"  
  
# The call  
  curl -H "accept: application/json" -H "Content-Type: application/json"  
-X POST "https://+++<mgmt-ip>+++/api/support/snmp/users" -d  
'{"owner":{"uuid":"02c9e252-41be-11e9-81d5-00a0986138f7",  
"name":"cluster1"}, "name":"public",  
"authentication_method":"community"}'+++</mgmt-ip>+++  
  
# The response:  
  201 Created  
  
=== Creates a local SNMPv3 user
```

```
-----  
  
# The API:  
  POST "/api/support/snmp/users"  
  
# The call  
  curl -H "accept: application/json" -H "Content-Type: application/json"  
-X POST "https://<mgmt-ip>/api/support/snmp/users" -d  
'{"owner":{"uuid":"02c9e252-41be-11e9-81d5-00a0986138f7",  
"name":"cluster1"}, "name":"snmpv3u1", "authentication_method":"usm",  
"snmpv3":{"authentication_protocol":"sha",  
"authentication_password":"jelly22fi$h", "privacy_protocol":"aes",  
"privacy_password":"allBlack$"}}'  
  
# The response:  
  201 Created  
  
### Creates a remote SNMPv3 user
```

```
-----  
  
# The API:  
  POST "/api/support/snmp/users"  
  
# The call  
  curl -H "accept: application/json" -H "Content-Type: application/json"  
-X POST "https://+++<mgmt-ip>+++/api/support/snmp/users" -d  
'{"owner":{"uuid":"02c9e252-41be-11e9-81d5-00a0986138f7",  
"name":"cluster1"},  
"engine_id":"8000031505b67667a26975e9118a480050568e6f74",  
"name":"switchuser1", "authentication_method":"usm",
```

```
"switch_address":"fdf8:f53b:82e4::53",
"snmpv3":{"authentication_protocol":"md5",
"authentication_password":"TfhIeliw6011S.Rw$3pm"}}'+++</mgmt-ip>+++
```

```
# The response:
  201 Created
```

```
[[IDde6c0148971fd8adfea9500ea64bd69c]]
= Retrieve SNMP users on a cluster
```

```
[.api-doc-operation .api-doc-operation-get]#GET# [.api-doc-code-
block]#`/support/snmp/users`#
```

Retrieves the list of SNMP users on the cluster.

== Related ONTAP commands

```
* `security snmpusers`
* `security login show -application snmp`
```

== Learn more

```
* xref:{relative_path}support_snmp_users_endpoint_overview.html [DOC
/support/snmp/users]
```

== Parameters

```
[cols=5*,options=header]
```

```
|===
```

```
|Name
|Type
|In
|Required
|Description
```

```
|engine_id
|string
|query
|False
```

```
a|Filter by engine_id
```

```
|owner.uuid
```

```
|string
```

```
|query
```

```
|False
```

```
a|Filter by owner.uuid
```

```
|owner.name
```

```
|string
```

```
|query
```

```
|False
```

```
a|Filter by owner.name
```

```
|snmpv3.privacy_protocol
```

```
|string
```

```
|query
```

```
|False
```

```
a|Filter by snmpv3.privacy_protocol
```

```
|snmpv3.authentication_protocol
```

```
|string
```

```
|query
```

```
|False
```

```
a|Filter by snmpv3.authentication_protocol
```

```
|authentication_method
```

```
|string
```

```
|query
```

```
|False
```

```
a|Filter by authentication_method
```

```
|name
```

```
|string
```

```
|query
```

```
|False
```

```
a|Filter by name
```

```
|scope
```

```
|string
```

```
|query
|False
a|Filter by scope
```

```
|comment
|string
|query
|False
a|Filter by comment
```

```
|switch_address
|string
|query
|False
a|Filter by switch_address
```

```
|fields
|array[string]
|query
|False
a|Specify the fields to return.
```

```
|max_records
|integer
|query
|False
a|Limit the number of records returned.
```

```
|return_records
|boolean
|query
|False
a|The default is true for GET calls. When set to false, only the number
of records is returned.
```

```
|return_timeout
|integer
|query
|False
a|The number of seconds to allow the call to execute before returning.
When iterating over a collection, the default is 15 seconds. ONTAP
```

returns earlier if either max records or the end of the collection is reached.

```
|order_by
|array[string]
|query
|False
a|Order results by specified fields and optional [asc|desc] direction.
Default direction is 'asc' for ascending.

|===
```

== Response

Status: 200, Ok

```
[cols=3*,options=header]
|===
|Name
|Type
|Description

|_links
|link:#_links[_links]
a|

|num_records
|integer
a|Number of records.

|records
|array[link:#snmp_user[snmp_user]]
a|

|===
```

.Example response

```
[%collapsible%closed]
```

```
=====
```

```
[source,json,subs=+macros]
```

```
{
  "_links": {
    "next": {
```



```

    "href": "/api/resourcelink"
  },
  "self": {
    "href": "/api/resourcelink"
  }
},
"records": [
  {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "authentication_method": "usm",
    "comment": "This is a comment.",
    "engine_id": "80000315055415ab26d4aae811ac4d005056bb792e",
    "name": "snmpv3user2",
    "owner": {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "name": "svml",
      "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"
    },
    "scope": "svm",
    "snmpv3": {
      "_links": {
        "self": {
          "href": "/api/resourcelink"
        }
      },
      "authentication_password": "humTdumt*@tOnAwa11",
      "authentication_protocol": "sha2_256",
      "privacy_password": "p@**GOandCLCt*200",
      "privacy_protocol": "aes128"
    },
    "switch_address": "10.23.34.45"
  }
]
}
====

== Error

```

```
[cols=3*,options=header]
|===
|Name
|Type
|Description

|error
|link:#error[error]
a|

|===

.Example error
[%collapsible%closed]
====
[source,json,subs=+macros]
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
====

== Definitions

[.api-def-first-level]
.See Definitions
[%collapsible%closed]
//Start collapsible Definitions block
====
[#href]
[.api-collapsible-fifth-title]
href

[cols=3*,options=header]
```

```

|===
|Name
|Type
|Description

|href
|string
a|

|===

[#_links]
[.api-collapsible-fifth-title]
_links

[cols=3*,options=header]
|===
|Name
|Type
|Description

|next
|link:href[href]
a|

|self
|link:href[href]
a|

|===

[#_links]
[.api-collapsible-fifth-title]
_links

[cols=3*,options=header]
|===
|Name
|Type
|Description

|self
|link:href[href]
a|

```

```
|===
```

```
[#owner]  
[.api-collapsible-fifth-title]  
owner
```

Optional name and UUID of owning Storage Virtual Machine (SVM).

```
[cols=3*,options=header]
```

```
|===
```

```
|Name  
|Type  
|Description
```

```
|_links
```

```
|link:#_links[_links]
```

```
a|
```

```
|name
```

```
|string
```

```
a|The name of the SVM.
```

```
|uuid
```

```
|string
```

```
a|The unique identifier of the SVM.
```

```
|===
```

```
[#snmpv3]  
[.api-collapsible-fifth-title]  
snmpv3
```

Optional parameter that can be specified only for an SNMPv3 user i.e. when 'authentication_method' is either 'usm' or 'both'. This parameter defines the SNMPv3 credentials for an SNMPv3 user.

```
[cols=3*,options=header]
```

```
|===
```

```
|Name  
|Type  
|Description
```

```
|_links
|link:#_links[_links]
a|
```

```
|authentication_password
|string
a|Authentication protocol password.
```

```
|authentication_protocol
|string
a|Authentication protocol.
```

```
|privacy_password
|string
a|Privacy protocol password.
```

```
|privacy_protocol
|string
a|Privacy protocol.
```

```
|===
```

```
[#snmp_user]
[.api-collapsible-fifth-title]
snmp_user
```

An SNMP user can be an SNMPv1/SNMPv2c user or an SNMPv3 user. SNMPv1/SNMPv2c user is also called a "community" user. An SNMPv3 user, also called a User-based Security Model (USM) user, can be a local SNMPv3 user or a remote SNMPv3 user. A local SNMPv3 user can be used for querying ONTAP SNMP server over SNMPv3 and/or for sending SNMPv3 traps. The local SNMPv3 user used for sending SNMPv3 traps must be configured with the same authentication and privacy credentials on the traphost receiver as well. A remote SNMPv3 user is also configured on a remote switch and used by ONTAP SNMP client functionality to query the remote switch over SNMPv3. An SNMP user is scoped to its owning Storage Virtual Machine (SVM). Owing SVM could be a data SVM or the administrative SVM.

```
[cols=3*,options=header]
```

```
|===
```

```
|Name
|Type
|Description

|_links
|link:#_links[_links]
a|

|authentication_method
|string
a|Optional authentication method.

|comment
|string
a|Optional comment text.

|engine_id
|string
a|Optional SNMPv3 engine identifier. For a local SNMP user belonging to
the administrative Storage Virtual Machine (SVM), the default value of
this parameter is the SNMPv3 engine identifier for the administrative SVM.
For a local SNMP user belonging to a data SVM, the default value of this
parameter is the SNMPv3 engine identifier for that data SVM. For an
SNMPv1/SNMPv2c community, this parameter should not be specified in "POST"
method. For a remote switch SNMPv3 user, this parameter specifies the
SNMPv3 engine identifier for the remote switch. This parameter can also
optionally specify a custom engine identifier.

|name
|string
a|SNMP user name.

|owner
|link:#owner[owner]
a|Optional name and UUID of owning Storage Virtual Machine (SVM).

|scope
|string
a|Set to "svm" for interfaces owned by an SVM. Otherwise, set to
"cluster".
```

```

|snmpv3
|link:#snmpv3[snmpv3]
a|Optional parameter that can be specified only for an SNMPv3 user i.e.
when 'authentication_method' is either 'usm' or 'both'. This parameter
defines the SNMPv3 credentials for an SNMPv3 user.

|switch_address
|string
a|Optional remote switch address. It can be an IPv4 address or an IPv6
address. A remote switch can be queried over SNMPv3 using ONTAP SNMP
client functionality. Querying such a switch requires an SNMPv3 user
(remote switch user) to be configured on the switch. Since ONTAP requires
remote switch user's SNMPv3 credentials (to query it), this user must be
configured in ONTAP as well. This parameter is specified when configuring
such a user.

* example: 10.23.34.45
* readCreate: 1

|===

[#error_arguments]
[.api-collapsible-fifth-title]
error_arguments

[cols=3*,options=header]
|===
|Name
|Type
|Description

|code
|string
a|Argument code

|message
|string
a|Message argument

|===

```

```

[#error]
[.api-collapsible-fifth-title]
error

[cols=3*,options=header]
|===
|Name
|Type
|Description

|arguments
|array[link:#error_arguments[error_arguments]]
a|Message arguments

|code
|string
a|Error code

|message
|string
a|Error message

|target
|string
a|The target parameter that caused the error.

|===

//end collapsible .Definitions block
====

[[ID1d662413be5c8ffed70b68542607a037]]
= Create a cluster-scoped or an SVM-scoped SNMP user

[.api-doc-operation .api-doc-operation-post]#POST# [.api-doc-code-
block]#`/support/snmp/users`#

```

Creates either a cluster-scoped or an SVM-scoped SNMP user. This user can

be an SNMPv1 or SNMPv2c community user or an SNMPv3 user. An SNMPv3 user can be a local SNMPv3 user or a remote SNMPv3 user.

== Required properties

- * `owner` - Name and UUID of owning SVM.
- * `engine_id` - Engine ID of owning SVM or remote switch.
- * `name` - SNMP user name
- * `authentication_method` - Authentication method

== Optional properties

- * `switch_address` - Optional remote switch address
- * `snmpv3` - SNMPv3-specific credentials
- * `comment` - Comment text

== Default property values

- * `snmpv3.authentication_protocol` - none
- * `snmpv3.privacy_protocol` - none

== Related ONTAP commands

- * `security login create`
- * `system snmp community add`

== Learn more

* [xref:{relative_path}support_snmp_users_endpoint_overview.html](#) [DOC /support/snmp/users]

== Parameters

[cols=5*,options=header]

|===

|Name
|Type
|In
|Required
|Description

|return_records
|boolean
|query
|False

a|The default is false. If set to true, the records are returned.

|return_timeout

|integer

|query

|False

a|The number of seconds to allow the call to execute before returning.

When doing a POST, PATCH, or DELETE operation on a single record, the default is 0 seconds. This means that if an asynchronous operation is started, the server immediately returns HTTP code 202 (Accepted) along with a link to the job. If a non-zero value is specified for POST, PATCH, or DELETE operations, ONTAP waits that length of time to see if the job completes so it can return something other than 202.

|===

== Request Body

[cols=3*,options=header]

|===

|Name

|Type

|Description

|_links

|link:#_links[_links]

a|

|authentication_method

|string

a|Optional authentication method.

|comment

|string

a|Optional comment text.

|engine_id

|string

a|Optional SNMPv3 engine identifier. For a local SNMP user belonging to the administrative Storage Virtual Machine (SVM), the default value of this parameter is the SNMPv3 engine identifier for the administrative SVM. For a local SNMP user belonging to a data SVM, the default value of this

parameter is the SNMPv3 engine identifier for that data SVM. For an SNMPv1/SNMPv2c community, this parameter should not be specified in "POST" method. For a remote switch SNMPv3 user, this parameter specifies the SNMPv3 engine identifier for the remote switch. This parameter can also optionally specify a custom engine identifier.

|name
|string
a|SNMP user name.

|owner
|link:#owner[owner]
a|Optional name and UUID of owning Storage Virtual Machine (SVM).

|scope
|string
a|Set to "svm" for interfaces owned by an SVM. Otherwise, set to "cluster".

|snmpv3
|link:#snmpv3[snmpv3]
a|Optional parameter that can be specified only for an SNMPv3 user i.e. when 'authentication_method' is either 'usm' or 'both'. This parameter defines the SNMPv3 credentials for an SNMPv3 user.

|switch_address
|string
a|Optional remote switch address. It can be an IPv4 address or an IPv6 address. A remote switch can be queried over SNMPv3 using ONTAP SNMP client functionality. Querying such a switch requires an SNMPv3 user (remote switch user) to be configured on the switch. Since ONTAP requires remote switch user's SNMPv3 credentials (to query it), this user must be configured in ONTAP as well. This parameter is specified when configuring such a user.

* example: 10.23.34.45
* readCreate: 1

|===

```

.Example request
[%collapsible%closed]
====
[source,json,subs=+macros]
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "authentication_method": "usm",
  "comment": "This is a comment.",
  "engine_id": "80000315055415ab26d4aae811ac4d005056bb792e",
  "name": "snmpv3user2",
  "owner": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "name": "svm1",
    "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"
  },
  "scope": "svm",
  "snmpv3": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "authentication_password": "humTdumt*@t0nAwa11",
    "authentication_protocol": "sha2_256",
    "privacy_password": "p@**GOandCLCt*200",
    "privacy_protocol": "aes128"
  },
  "switch_address": "10.23.34.45"
}
====

== Response

```

Status: 201, Created

```

[cols=3*,options=header]
|===

```

```
|Name
|Type
|Description

|_links
|link:#_links[_links]
a|

|authentication_method
|string
a|Optional authentication method.

|comment
|string
a|Optional comment text.

|engine_id
|string
a|Optional SNMPv3 engine identifier. For a local SNMP user belonging to
the administrative Storage Virtual Machine (SVM), the default value of
this parameter is the SNMPv3 engine identifier for the administrative SVM.
For a local SNMP user belonging to a data SVM, the default value of this
parameter is the SNMPv3 engine identifier for that data SVM. For an
SNMPv1/SNMPv2c community, this parameter should not be specified in "POST"
method. For a remote switch SNMPv3 user, this parameter specifies the
SNMPv3 engine identifier for the remote switch. This parameter can also
optionally specify a custom engine identifier.

|name
|string
a|SNMP user name.

|owner
|link:#owner[owner]
a|Optional name and UUID of owning Storage Virtual Machine (SVM).

|scope
|string
a|Set to "svm" for interfaces owned by an SVM. Otherwise, set to
"cluster".
```

```
|snmpv3
|link:#snmpv3[snmpv3]
a|Optional parameter that can be specified only for an SNMPv3 user i.e.
when 'authentication_method' is either 'usm' or 'both'. This parameter
defines the SNMPv3 credentials for an SNMPv3 user.

|switch_address
|string
a|Optional remote switch address. It can be an IPv4 address or an IPv6
address. A remote switch can be queried over SNMPv3 using ONTAP SNMP
client functionality. Querying such a switch requires an SNMPv3 user
(remote switch user) to be configured on the switch. Since ONTAP requires
remote switch user's SNMPv3 credentials (to query it), this user must be
configured in ONTAP as well. This parameter is specified when configuring
such a user.

* example: 10.23.34.45
* readCreate: 1
```

```
|===
```

```
.Example response
```

```
[%collapsible%closed]
```

```
=====
```

```
[source,json,subs=+macros]
```

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "authentication_method": "usm",
  "comment": "This is a comment.",
  "engine_id": "80000315055415ab26d4aae811ac4d005056bb792e",
  "name": "snmpv3user2",
  "owner": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "name": "svm1",
    "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"
```

```

},
"scope": "svm",
"snmpv3": {
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "authentication_password": "humTdumt*@t0nAwa11",
  "authentication_protocol": "sha2_256",
  "privacy_password": "p@**GOandCLCt*200",
  "privacy_protocol": "aes128"
},
"switch_address": "10.23.34.45"
}
====

== Error

```

Status: Default

ONTAP Error Response Codes

Error Code	Description
2621475	This operation is not allowed on a node SVM.
2621601	This operation is not permitted on a system SVM.
5636101	One role for all applications and authentication methods is recommended for a user account.
5636106	Engine ID starting with first bit set as 1 in first octet should have a minimum of 5 or maximum of 32 octets.
5636107	Engine ID specified is based on an IP address, and must therefore be 9 octets in length.
5636108	Engine ID specified is based on an IPv6 address, and must therefore be

21 octets in length.

| 5636109

| Engine ID specified is based on a MAC address, and must therefore be 11 octets in length.

| 5636110

| Engine ID starting with first bit set as 0 in the first octet needs to be 12 octets in length.

| 5636111

| Engine ID cannot have all zeroes.

| 5636112

| Invalid Engine ID specified.

| 5636113

| Cannot enable SNMP user capability for data SVM.

| 5636116

| Cannot read SNMP user capability for data SVM.

| 5636121

| User account name is reserved for use by the system.

| 5636123

| Cannot create an SNMP user with a role other than readonly, none, or admin.

| 5636124

| Cannot create an SNMP user with a role other than vsadmin-readonly, none, or vsadmin.

| 5636126

| Cannot create a user with the user name, group name, or role "autosupport" because it is reserved by the system.

| 5636148

| Failed to discover SNMPv3 engine ID of remote SNMP agent.

| 5636150

| The switch_address parameter can be specified only for administrative SVMs.

| 5636152

| 0.0.0.0 cannot be specified as the IP Address for the switch_address parameter.


```
| 5636153
| Engine ID is already associated with user.

| 5832711
| The only application permitted for user "diag" is "console."

| 7077897
| Invalid character in username. Valid characters":" A-Z, a-z, 0-9, ".",
"_" , and "-". Note that the user name cannot start with "-".

| 7077898
| The username must contain both letters and numbers.

| 7077899
| Username does not meet length requirements.

| 7077906
| Cannot use given role with this SVM because a role with that name has
not been defined for the SVM.

| 9043995
| Failed to create SNMP community. Reason":" SNMPv1 and SNMPv2c are not
supported when cluster FIPS mode is enabled.

| 9043999
| ONTAP failed to create an SNMPv3 user because SNMPv3 is disabled in the
cluster.
|===
```

```
[cols=3*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|Description
```

```
|error
```

```
|link:#error[error]
```

```
a|
```

```
|===
```

```
.Example error
```

```
[%collapsible%closed]
```

```

====
[source,json,subs=+macros]
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
====

```

== Definitions

```

[.api-def-first-level]
.See Definitions
[%collapsible%closed]
//Start collapsible Definitions block
====

```

```

[#href]
[.api-collapsible-fifth-title]
href

```

```

[cols=3*,options=header]

```

```

|===
|Name
|Type
|Description

```

```

|href
|string
a|

```

```

|===

```

```

[#_links]
[.api-collapsible-fifth-title]
_links

```

```

[cols=3*,options=header]

```

```
|===  
|Name  
|Type  
|Description  
  
|self  
|link:#href[href]  
a|
```

```
|===
```

```
[#owner]  
[.api-collapsible-fifth-title]  
owner
```

Optional name and UUID of owning Storage Virtual Machine (SVM).

```
[cols=3*,options=header]
```

```
|===  
|Name  
|Type  
|Description
```

```
|_links  
|link:#_links[_links]  
a|
```

```
|name  
|string  
a|The name of the SVM.
```

```
|uuid  
|string  
a|The unique identifier of the SVM.
```

```
|===
```

```
[#snmpv3]  
[.api-collapsible-fifth-title]  
snmpv3
```

Optional parameter that can be specified only for an SNMPv3 user i.e. when

'authentication_method' is either 'usm' or 'both'. This parameter defines the SNMPv3 credentials for an SNMPv3 user.

```
[cols=3*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|Description
```

```
 |_links
```

```
|link:#_links[_links]
```

```
a|
```

```
|authentication_password
```

```
|string
```

```
a|Authentication protocol password.
```

```
|authentication_protocol
```

```
|string
```

```
a|Authentication protocol.
```

```
|privacy_password
```

```
|string
```

```
a|Privacy protocol password.
```

```
|privacy_protocol
```

```
|string
```

```
a|Privacy protocol.
```

```
|===
```

```
[#snmp_user]
```

```
[.api-collapsible-fifth-title]
```

```
snmp_user
```

An SNMP user can be an SNMPv1/SNMPv2c user or an SNMPv3 user.

SNMPv1/SNMPv2c user is also called a "community" user. An SNMPv3 user, also called a User-based Security Model (USM) user, can be a local SNMPv3 user or a remote SNMPv3 user. A local SNMPv3 user can be used for querying ONTAP SNMP server over SNMPv3 and/or for sending SNMPv3 traps. The local SNMPv3 user used for sending SNMPv3 traps must be configured with the same

authentication and privacy credentials on the trap host receiver as well. A remote SNMPv3 user is also configured on a remote switch and used by ONTAP SNMP client functionality to query the remote switch over SNMPv3. An SNMP user is scoped to its owning Storage Virtual Machine (SVM). Owing SVM could be a data SVM or the administrative SVM.

```
[cols=3*,options=header]
```

```
|===
```

```
|Name
```

```
|Type
```

```
|Description
```

```
 |_links
```

```
|link:#_links[_links]
```

```
a|
```

```
|authentication_method
```

```
|string
```

```
a|Optional authentication method.
```

```
|comment
```

```
|string
```

```
a|Optional comment text.
```

```
|engine_id
```

```
|string
```

```
a|Optional SNMPv3 engine identifier. For a local SNMP user belonging to the administrative Storage Virtual Machine (SVM), the default value of this parameter is the SNMPv3 engine identifier for the administrative SVM. For a local SNMP user belonging to a data SVM, the default value of this parameter is the SNMPv3 engine identifier for that data SVM. For an SNMPv1/SNMPv2c community, this parameter should not be specified in "POST" method. For a remote switch SNMPv3 user, this parameter specifies the SNMPv3 engine identifier for the remote switch. This parameter can also optionally specify a custom engine identifier.
```

```
|name
```

```
|string
```

```
a|SNMP user name.
```

```
|owner
```

```
|link:#owner[owner]
```

a|Optional name and UUID of owning Storage Virtual Machine (SVM).

|scope

|string

a|Set to "svm" for interfaces owned by an SVM. Otherwise, set to "cluster".

|snmpv3

|link:#snmpv3[snmpv3]

a|Optional parameter that can be specified only for an SNMPv3 user i.e. when 'authentication_method' is either 'usm' or 'both'. This parameter defines the SNMPv3 credentials for an SNMPv3 user.

|switch_address

|string

a|Optional remote switch address. It can be an IPv4 address or an IPv6 address. A remote switch can be queried over SNMPv3 using ONTAP SNMP client functionality. Querying such a switch requires an SNMPv3 user (remote switch user) to be configured on the switch. Since ONTAP requires remote switch user's SNMPv3 credentials (to query it), this user must be configured in ONTAP as well. This parameter is specified when configuring such a user.

* example: 10.23.34.45

* readCreate: 1

|===

[#error_arguments]

[.api-collapsible-fifth-title]

error_arguments

[cols=3*,options=header]

|===

|Name

|Type

|Description

|code

|string

a|Argument code

```

|message
|string
a|Message argument

|===

[#error]
[.api-collapsible-fifth-title]
error

[cols=3*,options=header]
|===
|Name
|Type
|Description

|arguments
|array[link:#error_arguments[error_arguments]]
a|Message arguments

|code
|string
a|Error code

|message
|string
a|Error message

|target
|string
a|The target parameter that caused the error.

|===

//end collapsible .Definitions block
=====

```

```

:leveloffset: -1

= Manage individual SNMP users

:leveloffset: +1

[[IDad7e59de2766102e99d146be3a709bd7]]
= Support SNMP users engine_id name endpoint overview

== Overview

Defines, retrieves, updates and deletes an individual SNMP user.

== Examples

=== Retrieves the details of an SNMP user

----

# The API:
GET "/api/support/snmp/users/{engine_id}/{name}"

# The call:
curl -H "accept: application/hal+json" -X GET "https://<mgmt-
ip>/api/support/snmp/users/80000315056622e52625a9e911a981005056bb1dcb/snmp
v1user2"

# The response:
{
  "engine_id": "80000315056622e52625a9e911a981005056bb1dcb",
  "name": "snmpv1user2",
  "scope": "cluster",
  "owner": {
    "name": "cluster-1",
    "uuid": "26e52266-a925-11e9-a981-005056bb1dcb"
  },
  "authentication_method": "community",
  "_links": {
    "self": {
      "href":
"/api/support/snmp/users/80000315056622e52625a9e911a981005056bb1dcb/snmpv1
user2"
    }
  }
}

```



```

    }
}

### Updates the comment parameter for an individual SNMP user
----

# The API:
  PATCH "/api/support/snmp/users/{engine_id}/{name}"

# The call:
  curl -H "accept: application/json" -H "Content-Type: application/json"
-X PATCH "https://+++<mgmt-
ip>+++/api/support/snmp/users/8000031505b67667a26975e9118a480050568e6f74/p
ublic" -d '{"comment":"Default SNMP community"}'+++</mgmt-ip>+++

# The response:
  200 OK

=== Deletes an individual SNMP user in the cluster

```

The API:

```
DELETE "/api/support/snmp/users/{engine_id}/{name}"
```

The call:

```
curl -H "accept: application/json" -H "Content-Type: application/json" -X
DELETE "https://+++<mgmt-
ip>+++/api/support/snmp/users/8000031505b67667a26975e9118a480050568e6f74/s
nmpuser"+++</mgmt-ip>+++

```

The response:

```
200 OK
```

Delete an SNMP user

```
DELETE /support/snmp/users/{engine_id}/{name}
```

Deletes an SNMP user. The engine ID can be the engine ID of the administrative SVM or a data SVM. It can

also be the SNMPv3 engine ID of a remote switch.

Related ONTAP commands

- `security login delete`
- `system snmp community delete`

Learn more

- [DOC /support/snmp/users/{engine_id}/{name}](#)

Parameters

Name	Type	In	Required	Description
engine_id	string	path	True	Engine ID of owning SVM or remote switch.
name	string	path	True	SNMP user name.
fields	array[string]	query	False	Specify the fields to return.

Name	Type	In	Required	Description
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When doing a POST, PATCH, or DELETE operation on a single record, the default is 0 seconds. This means that if an asynchronous operation is started, the server immediately returns HTTP code 202 (Accepted) along with a link to the job. If a non-zero value is specified for POST, PATCH, or DELETE operations, ONTAP waits that length of time to see if the job completes so it can return something other than 202.

Response

Status: 200, Ok

Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
2621475	This operation is not allowed on a node SVM.
2621699	This operation is not allowed on a system SVM.
5636123	Cannot create an SNMP user with a role other than readonly, none, or admin.

Error Code	Description
5636124	Cannot create an SNMP user with a role other than vsadmin-readonly, none, or vsadmin.
5832712	Cannot modify attributes for user "diag."
7077906	Cannot use given role with this SVM because a role with that name has not been defined for the SVM.
9043999	ONTAP failed to create an SNMPv3 user because SNMPv3 is disabled in the cluster.

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Retrieve SNMP user details

```
GET /support/snmp/users/{engine_id}/{name}
```

Retrieves the details of an SNMP user. The engine ID can be the engine ID of the administrative SVM or a data SVM. It can also be the SNMPv3 engine ID of a remote switch.

Related ONTAP commands

- `security snmpusers -vserver <SVM Name> -username <User Name>`
- `security login show -application snmp -vserver <SVM Name> -user-or-group-name <User Name>`

Learn more

- [DOC /support/snmp/users/{engine_id}/{name}](#)

Parameters

Name	Type	In	Required	Description
engine_id	string	path	True	Engine ID of owning SVM or remote switch.

Name	Type	In	Required	Description
name	string	path	True	SNMP user name.
fields	array[string]	query	False	Specify the fields to return.
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When iterating over a collection, the default is 15 seconds. ONTAP returns earlier if either max records or the end of the collection is reached.

Response

Status: 200, Ok

Name	Type	Description
_links	_links	
authentication_method	string	Optional authentication method.
comment	string	Optional comment text.

Name	Type	Description
engine_id	string	Optional SNMPv3 engine identifier. For a local SNMP user belonging to the administrative Storage Virtual Machine (SVM), the default value of this parameter is the SNMPv3 engine identifier for the administrative SVM. For a local SNMP user belonging to a data SVM, the default value of this parameter is the SNMPv3 engine identifier for that data SVM. For an SNMPv1/SNMPv2c community, this parameter should not be specified in "POST" method. For a remote switch SNMPv3 user, this parameter specifies the SNMPv3 engine identifier for the remote switch. This parameter can also optionally specify a custom engine identifier.
name	string	SNMP user name.
owner	owner	Optional name and UUID of owning Storage Virtual Machine (SVM).
scope	string	Set to "svm" for interfaces owned by an SVM. Otherwise, set to "cluster".
snmpv3	snmpv3	Optional parameter that can be specified only for an SNMPv3 user i.e. when 'authentication_method' is either 'usm' or 'both'. This parameter defines the SNMPv3 credentials for an SNMPv3 user.

Name	Type	Description
switch_address	string	<p>Optional remote switch address. It can be an IPv4 address or an IPv6 address. A remote switch can be queried over SNMPv3 using ONTAP SNMP client functionality. Querying such a switch requires an SNMPv3 user (remote switch user) to be configured on the switch. Since ONTAP requires remote switch user's SNMPv3 credentials (to query it), this user must be configured in ONTAP as well. This parameter is specified when configuring such a user.</p> <ul style="list-style-type: none">• example: 10.23.34.45• readCreate: 1

Example response

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "authentication_method": "usm",
  "comment": "This is a comment.",
  "engine_id": "80000315055415ab26d4aae811ac4d005056bb792e",
  "name": "snmpv3user2",
  "owner": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "name": "svm1",
    "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"
  },
  "scope": "svm",
  "snmpv3": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "authentication_password": "humTdumt*@t0nAwa11",
    "authentication_protocol": "sha2_256",
    "privacy_password": "p@**GOandCLCt*200",
    "privacy_protocol": "aes128"
  },
  "switch_address": "10.23.34.45"
}
```

Error

Status: Default, Error

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

owner

Optional name and UUID of owning Storage Virtual Machine (SVM).

Name	Type	Description
_links	_links	
name	string	The name of the SVM.
uuid	string	The unique identifier of the SVM.

snmpv3

Optional parameter that can be specified only for an SNMPv3 user i.e. when 'authentication_method' is either 'usm' or 'both'. This parameter defines the SNMPv3 credentials for an SNMPv3 user.

Name	Type	Description
_links	_links	
authentication_password	string	Authentication protocol password.
authentication_protocol	string	Authentication protocol.
privacy_password	string	Privacy protocol password.
privacy_protocol	string	Privacy protocol.

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Update the comment parameter of an SNMP user

PATCH `/support/snmp/users/{engine_id}/{name}`

Updates the comment parameter of an SNMP user.

Optional properties

- `comment` - Comment text.

Related ONTAP commands

- `security login modify`

Learn more

- [DOC /support/snmp/users/{engine_id}/{name}](#)

Parameters

Name	Type	In	Required	Description
engine_id	string	path	True	Engine ID of owning SVM or remote switch.
name	string	path	True	SNMP user name.

Name	Type	In	Required	Description
return_timeout	integer	query	False	The number of seconds to allow the call to execute before returning. When doing a POST, PATCH, or DELETE operation on a single record, the default is 0 seconds. This means that if an asynchronous operation is started, the server immediately returns HTTP code 202 (Accepted) along with a link to the job. If a non-zero value is specified for POST, PATCH, or DELETE operations, ONTAP waits that length of time to see if the job completes so it can return something other than 202.

Request Body

Name	Type	Description
_links	_links	
authentication_method	string	Optional authentication method.
comment	string	Optional comment text.

Name	Type	Description
engine_id	string	Optional SNMPv3 engine identifier. For a local SNMP user belonging to the administrative Storage Virtual Machine (SVM), the default value of this parameter is the SNMPv3 engine identifier for the administrative SVM. For a local SNMP user belonging to a data SVM, the default value of this parameter is the SNMPv3 engine identifier for that data SVM. For an SNMPv1/SNMPv2c community, this parameter should not be specified in "POST" method. For a remote switch SNMPv3 user, this parameter specifies the SNMPv3 engine identifier for the remote switch. This parameter can also optionally specify a custom engine identifier.
name	string	SNMP user name.
owner	owner	Optional name and UUID of owning Storage Virtual Machine (SVM).
scope	string	Set to "svm" for interfaces owned by an SVM. Otherwise, set to "cluster".
snmpv3	snmpv3	Optional parameter that can be specified only for an SNMPv3 user i.e. when 'authentication_method' is either 'usm' or 'both'. This parameter defines the SNMPv3 credentials for an SNMPv3 user.

Name	Type	Description
switch_address	string	<p>Optional remote switch address. It can be an IPv4 address or an IPv6 address. A remote switch can be queried over SNMPv3 using ONTAP SNMP client functionality. Querying such a switch requires an SNMPv3 user (remote switch user) to be configured on the switch. Since ONTAP requires remote switch user's SNMPv3 credentials (to query it), this user must be configured in ONTAP as well. This parameter is specified when configuring such a user.</p> <ul style="list-style-type: none">• example: 10.23.34.45• readCreate: 1

Example request

```
{
  "_links": {
    "self": {
      "href": "/api/resourcelink"
    }
  },
  "authentication_method": "usm",
  "comment": "This is a comment.",
  "engine_id": "80000315055415ab26d4aae811ac4d005056bb792e",
  "name": "snmpv3user2",
  "owner": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "name": "svm1",
    "uuid": "02c9e252-41be-11e9-81d5-00a0986138f7"
  },
  "scope": "svm",
  "snmpv3": {
    "_links": {
      "self": {
        "href": "/api/resourcelink"
      }
    },
    "authentication_password": "humTdumt*@t0nAwa11",
    "authentication_protocol": "sha2_256",
    "privacy_password": "p@**GOandCLCt*200",
    "privacy_protocol": "aes128"
  },
  "switch_address": "10.23.34.45"
}
```

Response

Status: 200, Ok

Error

Status: Default

ONTAP Error Response Codes

Error Code	Description
2621475	This operation is not allowed on a node SVM.
2621699	This operation is not allowed on a system SVM.
5636123	Cannot create an SNMP user with a role other than readonly, none, or admin.
5636124	Cannot create an SNMP user with a role other than vsadmin-readonly, none, or vsadmin.
5832712	Cannot modify attributes for user "diag."
7077906	Cannot use given role with this SVM because a role with that name has not been defined for the SVM.
9043999	ONTAP failed to create an SNMPv3 user because SNMPv3 is disabled in the cluster.

Name	Type	Description
error	error	

Example error

```
{
  "error": {
    "arguments": [
      {
        "code": "string",
        "message": "string"
      }
    ],
    "code": "4",
    "message": "entry doesn't exist",
    "target": "uuid"
  }
}
```

Definitions

See Definitions

href

Name	Type	Description
href	string	

_links

Name	Type	Description
self	href	

owner

Optional name and UUID of owning Storage Virtual Machine (SVM).

Name	Type	Description
_links	_links	
name	string	The name of the SVM.
uuid	string	The unique identifier of the SVM.

snmpv3

Optional parameter that can be specified only for an SNMPv3 user i.e. when 'authentication_method' is either 'usm' or 'both'. This parameter defines the SNMPv3 credentials for an SNMPv3 user.

Name	Type	Description
_links	_links	
authentication_password	string	Authentication protocol password.
authentication_protocol	string	Authentication protocol.
privacy_password	string	Privacy protocol password.
privacy_protocol	string	Privacy protocol.

snmp_user

An SNMP user can be an SNMPv1/SNMPv2c user or an SNMPv3 user. SNMPv1/SNMPv2c user is also called a "community" user. An SNMPv3 user, also called a User-based Security Model (USM) user, can be a local SNMPv3 user or a remote SNMPv3 user. A local SNMPv3 user can be used for querying ONTAP SNMP server over SNMPv3 and/or for sending SNMPv3 traps. The local SNMPv3 user used for sending SNMPv3 traps must be configured with the same authentication and privacy credentials on the traphost receiver as well. A remote SNMPv3 user is also configured on a remote switch and used by ONTAP SNMP client functionality to query the remote switch over SNMPv3. An SNMP user is scoped to

its owning Storage Virtual Machine (SVM). Owning SVM could be a data SVM or the administrative SVM.

Name	Type	Description
_links	_links	
authentication_method	string	Optional authentication method.
comment	string	Optional comment text.
engine_id	string	Optional SNMPv3 engine identifier. For a local SNMP user belonging to the administrative Storage Virtual Machine (SVM), the default value of this parameter is the SNMPv3 engine identifier for the administrative SVM. For a local SNMP user belonging to a data SVM, the default value of this parameter is the SNMPv3 engine identifier for that data SVM. For an SNMPv1/SNMPv2c community, this parameter should not be specified in "POST" method. For a remote switch SNMPv3 user, this parameter specifies the SNMPv3 engine identifier for the remote switch. This parameter can also optionally specify a custom engine identifier.
name	string	SNMP user name.
owner	owner	Optional name and UUID of owning Storage Virtual Machine (SVM).
scope	string	Set to "svm" for interfaces owned by an SVM. Otherwise, set to "cluster".
snmpv3	snmpv3	Optional parameter that can be specified only for an SNMPv3 user i.e. when 'authentication_method' is either 'usm' or 'both'. This parameter defines the SNMPv3 credentials for an SNMPv3 user.

Name	Type	Description
switch_address	string	<p>Optional remote switch address. It can be an IPv4 address or an IPv6 address. A remote switch can be queried over SNMPv3 using ONTAP SNMP client functionality. Querying such a switch requires an SNMPv3 user (remote switch user) to be configured on the switch. Since ONTAP requires remote switch user's SNMPv3 credentials (to query it), this user must be configured in ONTAP as well. This parameter is specified when configuring such a user.</p> <ul style="list-style-type: none"> • example: 10.23.34.45 • readCreate: 1

error_arguments

Name	Type	Description
code	string	Argument code
message	string	Message argument

error

Name	Type	Description
arguments	array[error_arguments]	Message arguments
code	string	Error code
message	string	Error message
target	string	The target parameter that caused the error.

Copyright information

Copyright © 2024 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.