



# **Transition to a two-node switchless cluster**

## **Cluster and storage switches**

NetApp  
November 15, 2022

This PDF was generated from <https://docs.netapp.com/us-en/ontap-systems-switches/other-procedures/transition-to-two-node-switchless-cluster-index.html> on November 15, 2022. Always check [docs.netapp.com](https://docs.netapp.com) for the latest.

# Table of Contents

- Transition to a two-node switchless cluster ..... 1
  - Overview ..... 1
  - Replace the switches with direct connections ..... 1

# Transition to a two-node switchless cluster

## Overview

If you have an existing two-node cluster that uses cluster interconnect switches and is running ONTAP 9.3 or later, you can replace the switches with direct, back-to-back connections between the nodes.

### About this task

You cannot use the switchless cluster interconnect feature with more than two nodes.

Transitioning to a two-node switchless cluster configuration is a nondisruptive operation. Most systems have two dedicated cluster interconnect ports on each node, but you can also use this procedure for systems with a larger number of dedicated cluster interconnect ports on each node, such as four, six or eight.

This procedure describes transitioning a cluster with a switched cluster network to one where two nodes are directly connected for ONTAP 9.3 and later.

## Replace the switches with direct connections


If you have a two-node cluster that uses cluster interconnect switches, replace the switches with direct, back-to-back connections between the nodes. This is a nondisruptive operation.

### Before you begin

- The cluster must be healthy and consist of two nodes connected by cluster switches, and the nodes must be running the same ONTAP release.
- Each node must have the required number of dedicated cluster ports that provide redundant cluster interconnect connections to support your system configuration, for example, two redundant ports for a system with two dedicated cluster interconnect ports on each node.

### About this task

The following procedure removes the cluster switches in a two-node cluster and replaces each connection to the switch with a direct connection to the partner node.

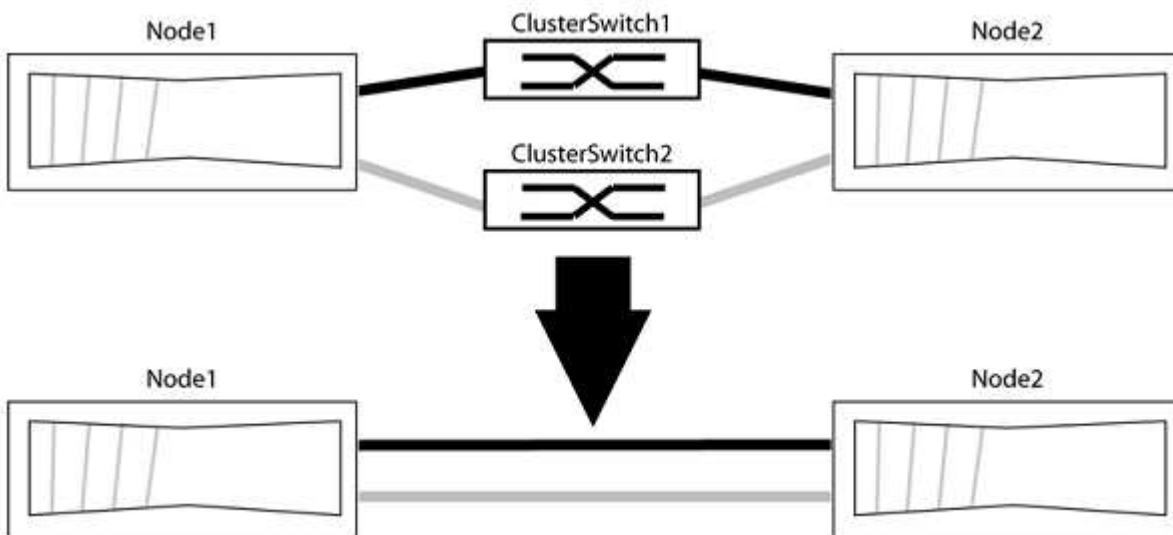

The examples in the following procedure show nodes that are using "e0a" and "e0b" as cluster ports. Your

nodes might be using different cluster ports as they vary by system.

## Steps

1. Change the privilege level to advanced, entering `y` when prompted to continue:

```
set -privilege advanced
```

The advanced prompt `*>` appears.

2. ONTAP 9.3 and later supports automatic detection of switchless clusters, which is enabled by default.

You can verify that detection of switchless clusters is enabled by running the advanced privilege command:

```
network options detect-switchless-cluster show
```

The following example output shows if the option is enabled.

```
cluster::*> network options detect-switchless-cluster show
(network options detect-switchless-cluster show)
Enable Switchless Cluster Detection: true
```

If "Enable Switchless Cluster Detection" is `false`, contact support.

3. If AutoSupport is enabled on this cluster, suppress automatic case creation by invoking an AutoSupport message:

```
system node autosupport invoke -node * -type all -message
MAINT=<number_of_hours>h
```

where `h` is the duration of the maintenance window in hours. The message notifies technical support of this maintenance task so that they can suppress automatic case creation during the maintenance window.


In the following example, the command suppresses automatic case creation for two hours:

```
cluster::*> system node autosupport invoke -node * -type all -message
MAINT=2h
```

4. Organize the cluster ports on each switch into groups so that the cluster ports in group1 go to cluster switch1 and the cluster ports in group2 go to cluster switch2. These groups are required later in the procedure.
5. Identify the cluster ports and verify link status and health:

```
network port show -ipSpace Cluster
```

In the following example for nodes with cluster ports "e0a" and "e0b", one group is identified as "node1:e0a" and "node2:e0a" and the other group as "node1:e0b" and "node2:e0b". Your nodes might be using different cluster ports because they vary by system.

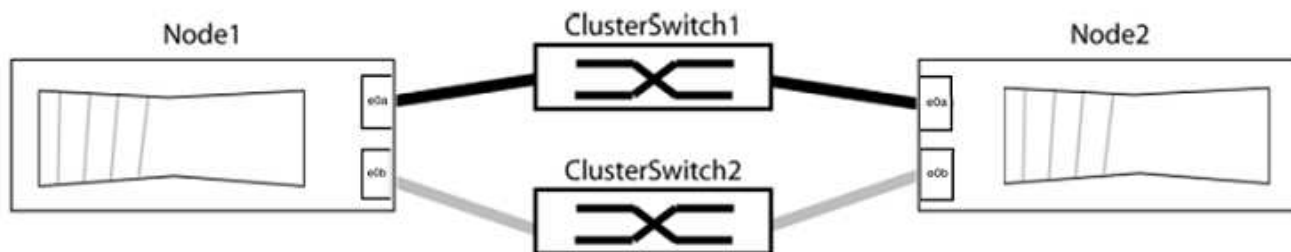

Verify that the ports have a value of `up` for the “Link” column and a value of `healthy` for the “Health Status” column, as shown in the following example:

```
cluster::> network port show -ipspace Cluster
Node: node1

```

Port	IPspace	Broadcast Domain	Link	MTU	Speed(Mbps) Admin/Oper	Health Status	Ignore Health Status
e0a	Cluster	Cluster	up	9000	auto/10000	healthy	false
e0b	Cluster	Cluster	up	9000	auto/10000	healthy	false

```
Node: node2

```

Port	IPspace	Broadcast Domain	Link	MTU	Speed(Mbps) Admin/Oper	Health Status	Ignore Health Status
e0a	Cluster	Cluster	up	9000	auto/10000	healthy	false
e0b	Cluster	Cluster	up	9000	auto/10000	healthy	false

```
4 entries were displayed.
```

6. Confirm that all the cluster LIFs are on their home ports.

Verify that the “is-home” column is `true` for each of the cluster LIFs:

```
network interface show -vserver Cluster -fields is-home
```

The system displays output similar to the following example:

```

cluster::*> net int show -vserver Cluster -fields is-home
(network interface show)
vserver  lif          is-home
-----  -
Cluster  node1_clus1  true
Cluster  node1_clus2  true
Cluster  node2_clus1  true
Cluster  node2_clus2  true
4 entries were displayed.

```

If there are cluster LIFs that are not on their home ports, revert those LIFs to their home ports:

```
network interface revert -vserver Cluster -lif *
```

7. Disable auto-revert for the cluster LIFs:

```
network interface modify -vserver Cluster -lif * -auto-revert false
```

8. Verify that all ports listed in the previous step are connected to a network switch:

```
network device-discovery show -port cluster_port
```

The “Discovered Device” column should be the name of the cluster switch that the port is connected to. The following example shows that cluster ports "e0a" and "e0b" are correctly connected to cluster switches "cs1" and "cs2".

```

cluster:::> network device-discovery show -port e0a|e0b
(network device-discovery show)
Node/      Local  Discovered
Protocol  Port   Device (LLDP: ChassisID)  Interface  Platform
-----  -
node1/cdp
          e0a    cs1                        0/11      BES-53248
          e0b    cs2                        0/12      BES-53248
node2/cdp
          e0a    cs1                        0/9       BES-53248
          e0b    cs2                        0/9       BES-53248
4 entries were displayed.

```

9. Verify the cluster connectivity:

```
cluster ping-cluster -node local
```

10. Verify that the cluster is healthy:

```
cluster ring show
```

All units must be either master or secondary.


11. Set up the switchless configuration for the ports in group 1.



To avoid potential networking issues, you must disconnect the ports from group1 and reconnect them back-to-back as quickly as possible, for example, **in less than 20 seconds**.


a. Disconnect all the cables from the ports in group1 at the same time.

In the following example, the cables are disconnected from port "e0a" on each node, and cluster traffic continues through the switch and port "e0b" on each node:

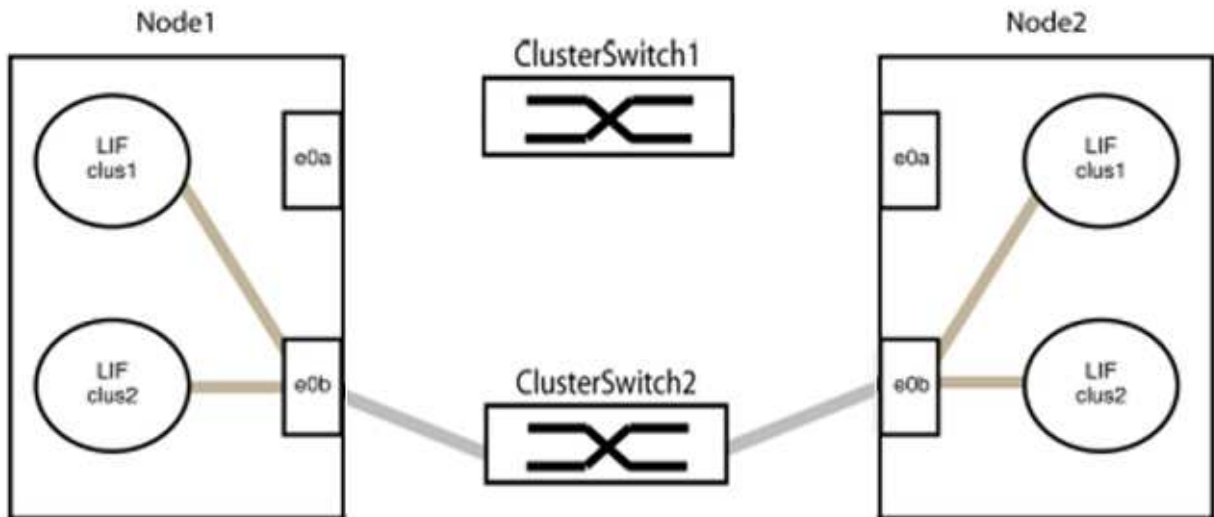

b. Cable the ports in group1 back-to-back.

In the following example, "e0a" on node1 is connected to "e0a" on node2:

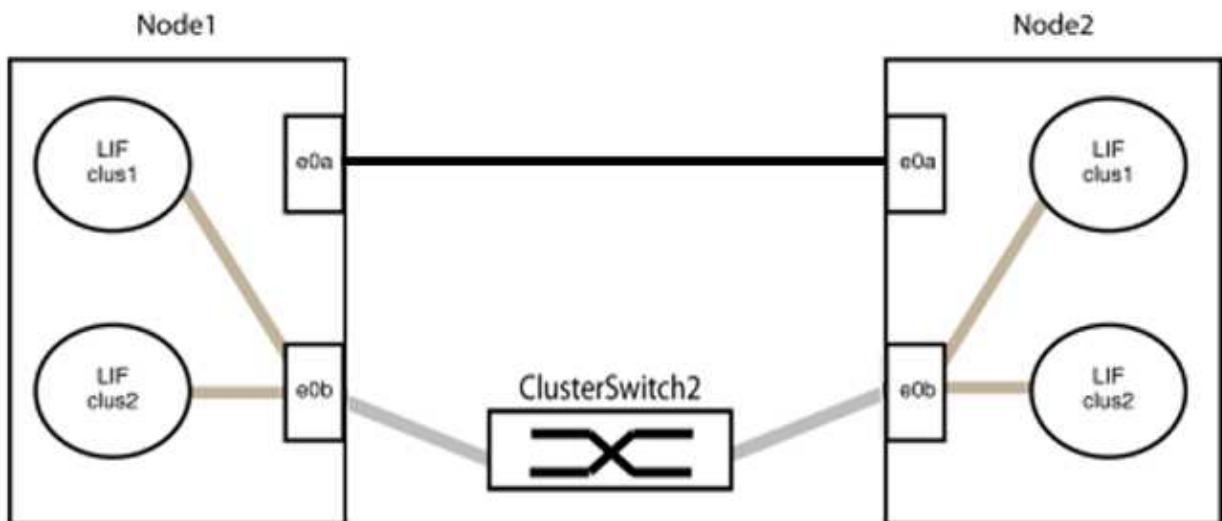

12. The switchless cluster network option transitions from `false` to `true`. This might take up to 45 seconds. Confirm that the switchless option is set to `true`:

```
network options switchless-cluster show
```

The following example shows that the switchless cluster is enabled:

```
cluster::*> network options switchless-cluster show
Enable Switchless Cluster: true
```

13. Verify that the cluster network is not disrupted:

```
cluster ping-cluster -node local
```


14. Set up the switchless configuration for the ports in group 2.



To avoid potential networking issues, you must disconnect the ports from group2 and reconnect them back-to-back as quickly as possible, for example, **in less than 20 seconds**.

a. Disconnect all the cables from the ports in group2 at the same time.

In the following example, the cables are disconnected from port "e0b" on each node, and cluster traffic continues through the direct connection between the "e0a" ports:

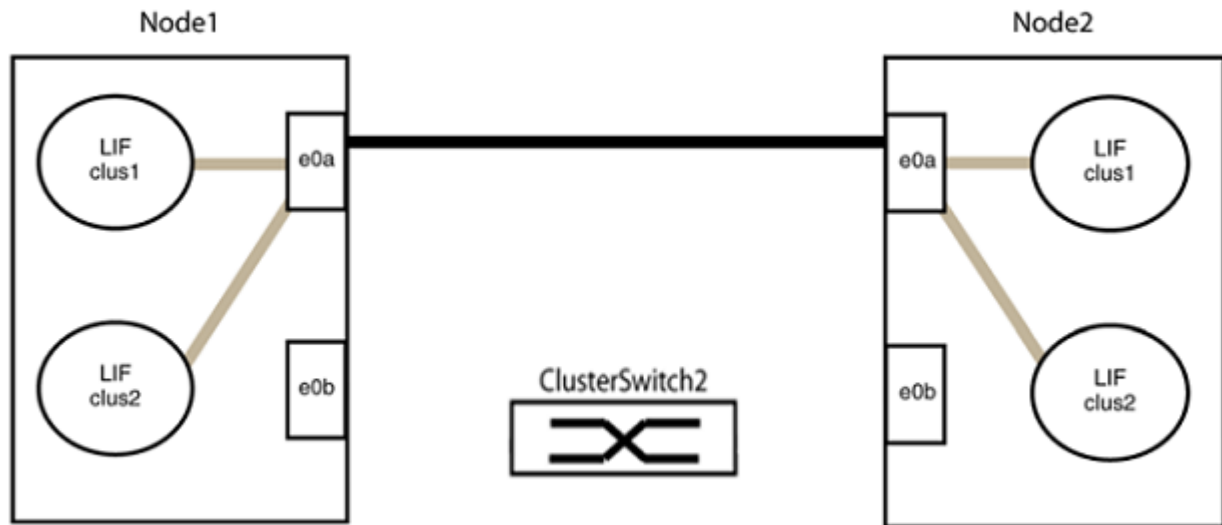

b. Cable the ports in group2 back-to-back.

In the following example, "e0a" on node1 is connected to "e0a" on node2 and "e0b" on node1 is connected to "e0b" on node2:





15. Verify that the ports on both nodes are correctly connected:

```
network device-discovery show -port cluster_port
```

The following example shows that cluster ports "e0a" and "e0b" are correctly connected to the corresponding port on the cluster partner:

```
cluster::> net device-discovery show -port e0a|e0b
(network device-discovery show)
Node/      Local  Discovered
Protocol   Port   Device (LLDP: ChassisID)  Interface  Platform
-----
node1/cdp
    e0a    node2
    e0b    node2
node1/lldp
    e0a    node2 (00:a0:98:da:16:44)
    e0b    node2 (00:a0:98:da:16:44)
node2/cdp
    e0a    node1
    e0b    node1
node2/lldp
    e0a    node1 (00:a0:98:da:87:49)
    e0b    node1 (00:a0:98:da:87:49)
8 entries were displayed.
```

16. Reenable auto-revert for the cluster LIFs:

```
network interface modify -vserver Cluster -lif * -auto-revert true
```

17. Verify that all LIFs are home. This might take a few seconds:

```
network interface show -vserver Cluster -lif lif_name
```

The LIFs have been reverted if the “Is Home” column is true, as shown for node1\_clus2 and node2\_clus2 in the following example:

```
cluster::> network interface show -vserver Cluster -fields curr-port,is-home
vserver  lif                curr-port  is-home
-----  -
Cluster  node1_clus1            e0a        true
Cluster  node1_clus2            e0b        true
Cluster  node2_clus1            e0a        true
Cluster  node2_clus2            e0b        true
4 entries were displayed.
```

If any cluster LIFS have not returned to their home ports, revert them manually:

```
network interface revert -vserver Cluster -lif lif_name
```

18. Check the cluster status of the nodes from the system console of either node:

```
cluster show
```

The following example shows epsilon on both nodes to be false:

```
Node  Health  Eligibility  Epsilon
-----
node1 true    true         false
node2 true    true         false
2 entries were displayed.
```

19. Confirm connectivity between the cluster ports:

```
cluster ping-cluster local
```

20. If you suppressed automatic case creation, reenable it by invoking an AutoSupport message:

```
system node autosupport invoke -node * -type all -message MAINT=END
```

21. Change the privilege level back to admin:

```
set -privilege admin
```

## Related information

[NetApp KB Article 1010449: How to suppress automatic case creation during scheduled maintenance windows](#)

## Copyright information

Copyright © 2022 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

## Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.