



将硬件组件安装在机架中

ONTAP MetroCluster

Ivana Devine, Megan Bock, Thom Illingworth
July 27, 2021

This PDF was generated from https://docs.netapp.com/zh-cn/ontap-metrocluster/install-fc/task_rack_the_hardware_components_mcc_fabric_and_ip.html on August 31, 2021. Always check docs.netapp.com for the latest.



将硬件□件安装在机架中..... 1

将硬件组件安装在机架中

如果尚未收到机架中已安装的组件，必须将某些组件装入机架。

必须在每个 MetroCluster 站点上执行此任务。

□□

1. □□ MetroCluster 组件的定位。

机架空□取决于控制器模块的平台型号，交换机□型以及配置中的磁□架堆□数量。

2. 正□接地。
3. 在机架或机□中安装控制器模块。

["AFF 和 FAS 文档中心"](#)

4. 在机架或机□中安装 FC 交换机。
5. 安装磁□架，打开其□源，然后设置磁□架 ID 。

- 必须重新□□□个磁□架。
- □个 MetroCluster DR □（包括□个站点）中的□个 SAS 磁□架的磁□架 ID 必须是唯一的。

6. 安装□个 FC-SAS 网□：

- a. 使用四个螺□将网□前面的 "L" 支架固定到机架前面（嵌装）。

网□ "L" 支架上的□□符合 19 英寸（482.6 毫米）机架的机架□准 ETA-310-X 。

□用于□的网□型号的 [_ATTO FibreBridge 安装和操作手册_](#) 包含□□信息和安装示意□。



要□得足□的端口空□□□和 FRU 可□□性，□必□在网□□下方保留 1U 空□，并使用免工具空白面板覆□此空□。

- b. 将□个网□□接到可提供正□接地的□源。
- c. 打□□个网□的□源。



□了□得最大的故障恢□能力，□必□将□接到同一磁□架堆□的网□□接到不同的□源。

网□就□ LED 可能需要□□ 30 秒才能亮起，表示网□已完成其□机自□序列。

Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.