



## ▯▯整个 MetroCluster IP 配置 ONTAP MetroCluster

Ivana Devine, Megan Bock  
July 27, 2021



□□ 整个 MetroCluster IP 配置 ..... 1

# 整个 MetroCluster IP 配置

必须先对整个 MetroCluster IP 配置以及所有，然后才能开始或重新定位。



从 ONTAP 9.8 开始，`storage switch` 命令将替 `system switch`。以下显示了 `storage switch` 命令，但如果行的是 ONTAP 9.8 或更高版本，首先使用 `system switch` 命令。

1. 从 MetroCluster 配置中的个站点 MetroCluster 配置。
  - a. MetroCluster 配置和操作模式正常。+ `MetroCluster show`
  - b. 行以下命令：+ `MetroCluster interconnect show`
  - c. 在任意一个 MetroCluster 点上入以下命令，以与磁的接：+ `行本地 sysconfig -v`
  - d. 行以下命令：+ `storage port show`
  - e. 行以下命令：+ `storage switch show`
  - f. 行以下命令：+ `network interface show`
  - g. 行以下命令：+ `network port show`
  - h. 行以下命令：+ `network device-discovery show`
  - i. 行 MetroCluster 行：+ `MetroCluster check run`
  - j. 示 MetroCluster 的果：+ `MetroCluster check show`
  - k. 行以下命令：+ `MetroCluster configuration-settings interface show`

2. 如有必要，将 AUSO 故障域修改以禁用 AUSO

` \* auso-disabled`

```
cluster_A_site_A::*>metrocluster modify -auto-switchover-failure-domain  
auso-disabled
```



在 MetroCluster IP 配置中，AUSO 故障域已置 "auso-disabled"，除非此配置已配置 ONTAP 解器。

3. 使用命令更改

` \* MetroCluster operation show`

```
cluster_A_site_A::*> metrocluster operation show  
Operation: modify  
State: successful  
Start Time: 4/25/2020 20:20:36  
End Time: 4/25/2020 20:20:36  
Errors: -
```

4. 停止点：

`\* 停止`

```
system node halt -node node1_SiteA -inhibit-takeover true -ignore-quorum  
-warnings true
```

5. 站点上的以下：

- 存储控制器
- MetroCluster IP 交换机
- 存储架

6. 等待 30 分钟，然后打开所有控制器的电源。

7. 打开控制器电源后，从每个站点配置 MetroCluster 配置。

要配置，重复 1。

8. 重新配置。

- 所有 sync-source SVM 均已开机：+ `\* vserver show`
- 任何未开机的 sync-source SVM：+ `\* vserver start`

## Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

## Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.