



Configure LIFs (cluster administrators only)

ONTAP 9

NetApp
June 15, 2021

Table of Contents

- Configure LIFs (cluster administrators only) 1
 - Overview 1
 - What LIFs are 1
 - LIF roles in ONTAP 9.5 and earlier 2
 - LIFs and service policies in ONTAP 9.6 and later 6
 - Configure LIF service policies 9
 - Create a LIF 13
 - Modify a LIF 15
 - Migrate a LIF 17
 - Revert a LIF to its home port 18
 - ONTAP 9.8 and later: Recover from an incorrectly configured cluster LIF 18
 - Delete a LIF 19
 - Configure virtual IP (VIP) LIFs 20

Configure LIFs (cluster administrators only)

Overview

A LIF represents a network access point to a node in the cluster. You can configure LIFs on ports over which the cluster sends and receives communications over the network.

A cluster administrator can create, view, modify, migrate, or delete LIFs. An SVM administrator can only view the LIFs associated with the SVM.

What LIFs are

A LIF (logical interface) is an IP address or WWPN with associated characteristics, such as a service policy, a home port, a home node, a list of ports to fail over to, and a firewall policy. You can configure LIFs on ports over which the cluster sends and receives communications over the network.

LIFs can be hosted on the following ports:


- Physical ports that are not part of interface groups
- Interface groups
- VLANs
- Physical ports or interface groups that host VLANs
- Virtual IP (VIP) ports

Starting with ONTAP 9.5, VIP LIFs are supported and are hosted on VIP ports.

While configuring SAN protocols such as FC on a LIF, it will be associated with a WWPN.

[SAN administration](#)

The following figure illustrates the port hierarchy in an ONTAP system:

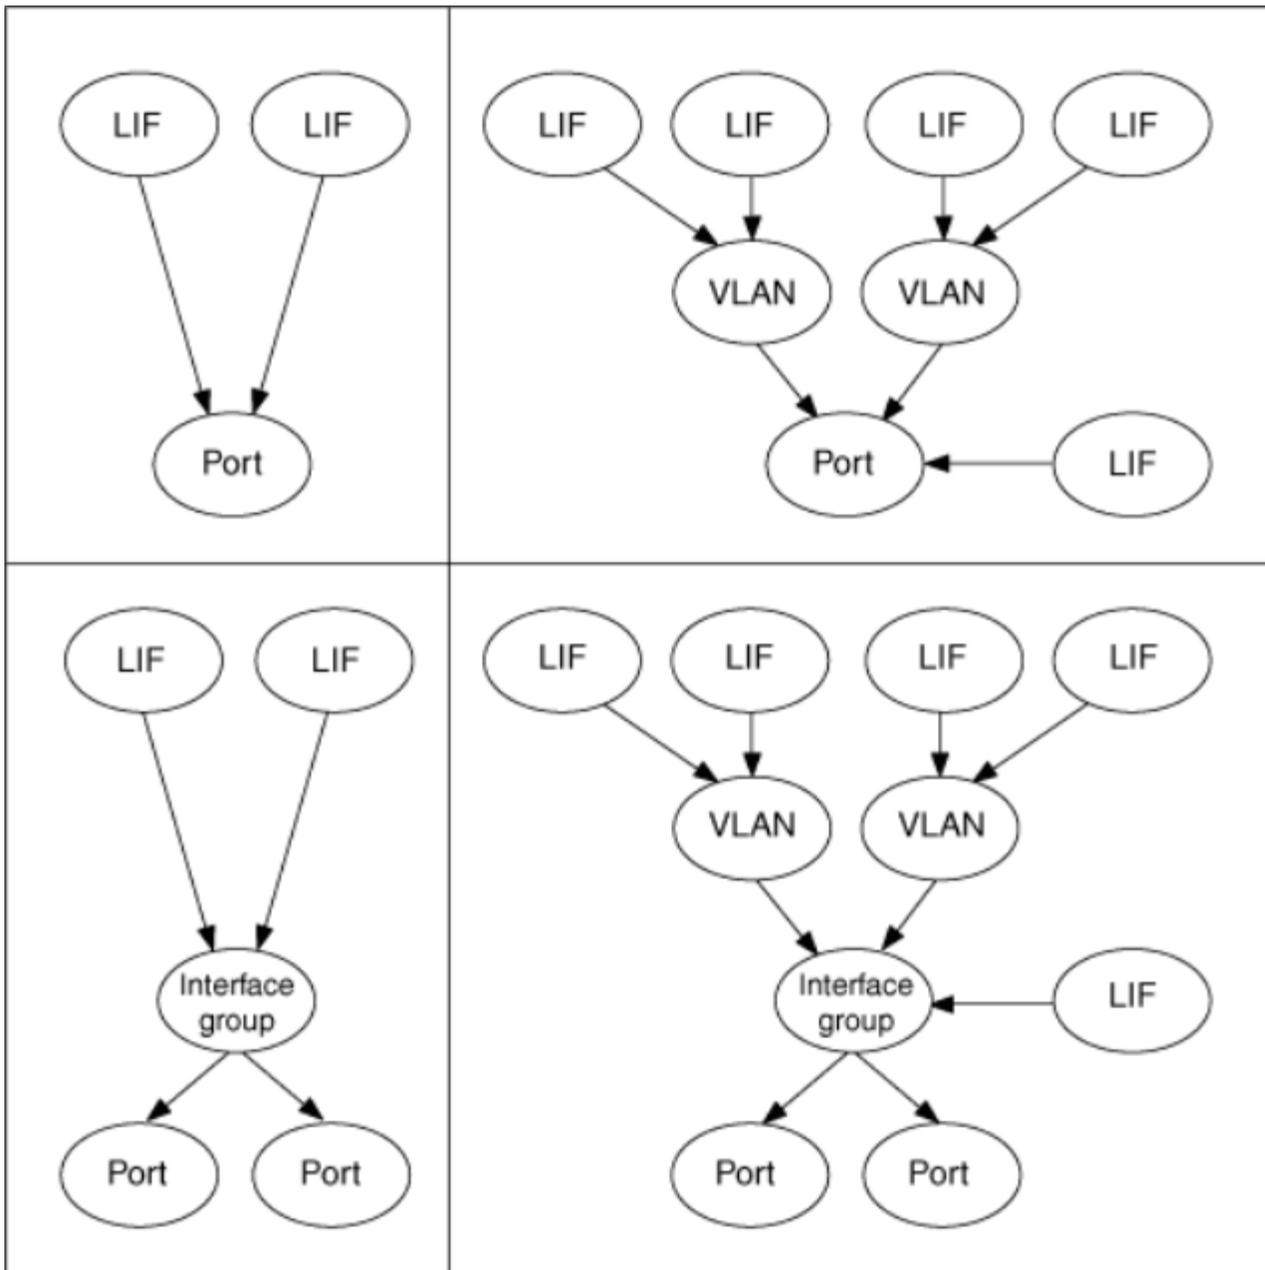

LIF roles in ONTAP 9.5 and earlier

LIFs with different roles have different characteristics. A LIF role determines the kind of traffic that is supported over the interface, along with the failover rules that apply, the firewall restrictions that are in place, the security, the load balancing, and the routing behavior for each LIF. A LIF can have any one of the five roles: node management, cluster management, cluster, intercluster, and data.

Starting with ONTAP 9.6, LIF roles are deprecated. You should specify service policies for LIFs instead of a role. It is not necessary to specify a LIF role when creating a LIF with a service policy.

LIF compatibility with port types



When intercluster and management LIFs are configured in the same subnet to associate with a static route and if the route associates with an intercluster LIF, the management traffic is blocked by an external firewall and the AutoSupport and NTP connections fail. You can recover the system by running the `network interface modify -vserver vservice_name -lif intercluster LIF -status-admin up|down` command to toggle the intercluster LIF. However, you should set the intercluster LIF and management LIF in different subnets to avoid this issue.

LIF role	Description
Data LIF	<p>A LIF that is associated with a storage virtual machine (SVM) and is used for communicating with clients. You can have multiple data LIFs on a port. These interfaces can migrate or fail over throughout the cluster. You can modify a data LIF to serve as an SVM management LIF by modifying its firewall policy to mgmt.</p> <p>Sessions established to NIS, LDAP, Active Directory, WINS, and DNS servers use data LIFs.</p>
Cluster LIF	<p>A LIF that is used to carry intracluster traffic between nodes in a cluster. Cluster LIFs must always be created on 10-GbE network ports.</p> <p>Cluster LIFs can fail over between cluster ports on the same node, but they cannot be migrated or failed over to a remote node. When a new node joins a cluster, IP addresses are generated automatically. However, if you want to assign IP addresses manually to the cluster LIFs, you must ensure that the new IP addresses are in the same subnet range as the existing cluster LIFs.</p>
Node management LIF	<p>A LIF that provides a dedicated IP address for managing a particular node in a cluster. Node management LIFs are created at the time of creating or joining the cluster. These LIFs are used for system maintenance, for example, when a node becomes inaccessible from the cluster.</p>

LIF role	Description
Cluster management LIF	<p>LIF that provides a single management interface for the entire cluster.</p> <p>A cluster management LIF can fail over to any node management or data port in the cluster. It cannot fail over to cluster or intercluster ports</p> <p>Intercluster LIF A LIF that is used for cross-cluster communication, backup, and replication. You must create an intercluster LIF on each node in the cluster before a cluster peering relationship can be established.</p> <p>These LIFs can only fail over to ports in the same node. They cannot be migrated or failed over to another node in the cluster.</p>

	Data LIF	Cluster LIF	Node management LIF	Cluster management LIF	Intercluster LIF
Primary traffic types	NFS server, CIFS server, NIS client, Active Directory, LDAP, WINS, DNS client and server, iSCSI and FC server	Intracluster	SSH server, HTTPS server, NTP client, SNMP, AutoSupport client, DNS client, loading software updates	SSH server, HTTPS server	Cross-cluster replication

LIF security

	Data LIF	Cluster LIF	Node management LIF	Cluster management LIF	Intercluster LIF
Require private IP subnet?	No	Yes	No	No	No
Require secure network?	No	Yes	No	No	Yes
Default firewall policy	Very restrictive	Completely open	Medium	Medium	Very restrictive
Is firewall customizable?	Yes	No	Yes	Yes	Yes

LIF failover

	Data LIF	Cluster LIF	Node management LIF	Cluster management LIF	Intercluster LIF
Default behavior	Only those ports in the same failover group that are on the LIF's home node and on a non-SFO partner node	Only those ports in the same failover group that are on the LIF's home node	Only those ports in the same failover group that are on the LIF's home node	Any port in the same failover group	Only those ports in the same failover group that are on the LIF's home node
Is customizable?	Yes	No	Yes	Yes	Yes

LIF routing

	Data LIF	Cluster LIF	Node management LIF	Cluster management LIF	Intercluster LIF
When is a default route needed?	When clients or domain controller are on different IP subnet	Never	When any of the primary traffic types require access to a different IP subnet	When administrator is connecting from another IP subnet	When other intercluster LIFs are on a different IP subnet
When is a static route to a specific IP subnet needed?	Rare	Never	Rare	Rare	When nodes of another cluster have their intercluster LIFs in different IP subnets
When is a static host route to a specific server needed?	To have one of the traffic types listed under node management LIF, go through a data LIF rather than a node management LIF. This requires a corresponding firewall change.	Never	Rare	Rare	Rare

LIF rebalancing

	Data LIF	Cluster LIF	Node management LIF	Cluster management LIF	Intercluster LIF
DNS: use as DNS server?	Yes	No	No	No	No

	Data LIF	Cluster LIF	Node management LIF	Cluster management LIF	Intercluster LIF
DNS: export as zone?	Yes	No	No	No	No

LIFs and service policies in ONTAP 9.6 and later

You can assign service policies (instead of LIF roles) to LIFs that determine the kind of traffic that is supported for the LIFs. Service policies define a collection of network services supported by a LIF. ONTAP provides a set of built-in service policies that can be associated with a LIF.

Service policies for system SVMs

The admin SVM and any system SVM contain service policies that can be used for LIFs in that SVM, including management and intercluster LIFs. These policies are automatically created by the system when an IPspace is created. The following table lists the built-in policies for LIFs in system SVMs:

Policy	Included services	Equivalent role	Description
default-intercluster	intercluster-core	intercluster	Used by LIFs carrying intercluster traffic. Note: Available from ONTAP 9.5 with the name net-intercluster service policy.
default-route-announce	management-bgp	-	Used by LIFs carrying BGP peer connections Note: Available from ONTAP 9.5 with the name net-route-announce service policy.
default-management	management-core, management-ems, management-ssh, management-https, management-autosupport	node-mgmt, or cluster-mgmt	Used by LIFs handling management requests. Management-ems controls which LIFs can publish EMS content.

The following table lists the services that can be used on a system SVM along with any restrictions each service imposes on a LIF's failover policy:

Service	Failover limitations	Description
intercluster-core	home-node-only	Core intercluster services

Service	Failover limitations	Description
management-core	-	Core management services
management-ssh	-	Services for SSH management access
management-https	-	Services for HTTPS management access
management-autosupport	-	Services related to posting AutoSupport payloads
management-bgp	home-port-only	Services related to BGP peer interactions

Service policies for data SVMs

All data SVMs contain service policies that can be used by LIFs in that SVM. The following table lists the built-in policies for LIFs in data SVMs:

Policy	Included services	Equivalent data protocol	Description
default-management	management-ssh, management-https	none	Used by LIFs handling management requests
default-data-blocks	data-iscsi	iscsi	Used by LIFs carrying block-oriented SAN data traffic
default-data-files	data-nfs, data-cifs, data-flexcache, data-fpolicy-client	nfs, cifs, fcache	Used by LIFs carrying file-oriented NAS data traffic.

The following table lists the services that can be used on a data SVM along with any restrictions each service imposes on a LIF's failover policy:

Policy	Included services	Equivalent data protocol	Description
management-ssh	-	-	Services for SSH management access
management-https	-	-	Services for HTTPS management access
data-core	-	data-only	Core data services (see for more details).

Policy	Included services	Equivalent data protocol	Description
data-nfs	-	data-only	Protocols related to NFS data service
data-cifs	-	data-only	Protocols related to CIFS data service
data-flexcache	-	data-only	Protocols related to FlexCache data service
data-iscsi	home-port-only	data-only	Protocols related to iSCSI data service

You should be aware of how the service policies are assigned to the LIFs in data SVMs:

- If a data SVM is created with a list of data services, the built-in "default-data-files" and "default-data-blocks" service policies in that SVM are created using the specified services.
- If a data SVM is created without specifying a list of data services, the built-in "default-data-files" and "default-data-blocks" service policies in that SVM are created using a default list of data services.

The default data services list includes the iSCSI, NFS, SMB, and FlexCache services.

- When a LIF is created with a list of data protocols, a service policy equivalent to the specified data protocols is assigned to the LIF.

If an equivalent service policy does not exist, a custom service policy is created.

- When a LIF is created without a service policy or list of data protocols, the default-data-files service policy is assigned to the LIF by default.

Data-core service

The data-core service allows components that previously used LIFs with the data role to work as expected on clusters that have been upgraded to manage LIFs using service policies instead of LIF roles (which are deprecated in ONTAP 9.6).

Specifying data-core as a service does not open any ports in the firewall, but the service should be included in any service policy in a data SVM. For example, the default-data-files service policy contains the following services by default:

- data-core
- data-nfs
- data-cifs
- data-flexcache

The data-core service should be included in the policy to ensure all applications using the LIF work as expected, but the other three services can be removed, if desired.

Configure LIF service policies

You can configure LIF service policies to identify a single service or a list of services that will use a LIF.

Create a service policy for LIFs

You can create a service policy for LIFs. You can assign a service policy to one or more LIFs; thereby allowing the LIF to carry traffic for a single service or a list of services.

About this task

Built-in services and service policies are available for managing data and management traffic on both data and system SVMs. Most use cases are satisfied using a built-in service policy rather than creating a custom service policy.

You can modify these built-in service policies, if required.

Steps

1. View the services that are available in the cluster:

```
network interface service show
```

Services represent the applications accessed by a LIF as well as the applications served by the cluster. Each service includes zero or more TCP and UDP ports on which the application is listening.

The following additional data and management services are available:

```
network interface service show
Service                               Protocol:Ports
-----                               -
cluster-core                           -
data-cifs                               -
data-core                              -
data-flexcache                         -
data-iscsi                             -
data-nfs                               -
intercluster-core                      tcp:11104-11105
management-autosupport                 -
management-bgp                        tcp:179
management-core                        -
management-https                      tcp:443
management-ssh                        tcp:22
12 entries were displayed.
```

2. Create a service policy:

```
network interface service-policy create -vserver <svm_name> -policy
<service_policy_name> -services <service_name> -allowed-addresses
<IP_address/mask,...>
```

- "service_name" specifies a list of services that should be included in the policy.
- "IP_address/mask" specifies the list of subnet masks for addresses that are allowed to access the services in the service policy. By default, all specified services are added with a default allowed address list of 0.0.0.0/0, which allows traffic from all subnets. When a non-default allowed address list is provided, LIFs using the policy are configured to block all requests with a source address that does not match any of the specified masks.

The following example shows how to create a data service policy, svm1_data_policy, for an SVM that includes NFS and SMB services:

```
network interface service-policy create -vserver svm1 -policy
svm1_data_policy - services data-nfs,data-cifs,data-core -allowed
-addresses 10.1.0.0/16
```

The following example shows how to create an intercluster service policy:

```
network interface service-policy create -vserver cluster1 -policy
intercluster1 - services intercluster-core -allowed-addresses
10.1.0.0/16
```

3. Verify that the service policy is created.

```
network interface service-policy show
```

The following output shows the service policies that are available:

```

network interface service-policy show
Vserver    Policy                               Service: Allowed Addresses
-----
cluster1
    default-intercluster               intercluster-core: 0.0.0.0/0
                                       management-https: 0.0.0.0/0

    default-management                 management-core: 0.0.0.0/0
                                       management-autosupport: 0.0.0.0/0
                                       management-ssh: 0.0.0.0/0
                                       management-https: 0.0.0.0/0

    default-route-announce             management-bgp: 0.0.0.0/0

Cluster
    default-cluster                    cluster-core: 0.0.0.0/0

vs0
    default-data-blocks                data-core: 0.0.0.0/0
                                       data-iscsi: 0.0.0.0/0

    default-data-files                 data-core: 0.0.0.0/0
                                       data-nfs: 0.0.0.0/0
                                       data-cifs: 0.0.0.0/0
                                       data-flexcache: 0.0.0.0/0

    default-management                 data-core: 0.0.0.0/0
                                       management-ssh: 0.0.0.0/0
                                       management-https: 0.0.0.0/0

7 entries were displayed.

```

After you finish

Assign the service policy to a LIF either at the time of creation or by modifying an existing LIF.

Assign a service policy to a LIF

You can assign a service policy to a LIF either at the time of creating the LIF or by modifying the LIF. A service policy defines the list of services that can be used with the LIF.

About this task

You can assign service policies for LIFs in the admin and data SVMs.

Step

Depending on when you want to assign the service policy to a LIF, perform one of the following actions:

If you are...	Assign the service policy by entering the following command...
Creating a LIF	<code>network interface create -vserver svm_name -lif <lif_name> -home-node <node_name> -home-port <port_name> {(-address <IP_address> -netmask <IP_address>) -subnet-name <subnet_name>} -service-policy <service_policy_name></code>
Modifying a LIF	<code>network interface modify -vserver <svm_name> -lif <lif_name> -service-policy <service_policy_name></code>

When you specify a service policy for a LIF, you need not specify the data protocol and role for the LIF. Creating LIFs by specifying the role and data protocols is also supported.



A service policy can only be used by LIFs in the same SVM that you specified when creating the service policy.

Examples

The following example shows how to modify the service policy of a LIF to use the default- management service policy:

```
network interface modify -vserver cluster1 -lif lif1 -service-policy
default-management
```

Commands for managing LIF service policies

Use the `network interface service-policy` commands to manage LIF service policies.

If you want to...	Use this command...
Create a service policy	<code>network interface service-policy create</code>
Add an additional service entry to an existing service policy	<code>network interface service-policy add-service</code>
Clone an existing service policy	<code>network interface service-policy clone</code>
Modify a service entry in an existing service policy	<code>network interface service-policy modify- service</code>
Remove a service entry from an existing service policy	<code>network interface service-policy remove- service</code>
Rename an existing service policy	<code>network interface service-policy rename</code>
Delete an existing service policy	<code>network interface service-policy delete</code>

If you want to...	Use this command...
Restore a built-in service-policy to its original state	<code>network interface service-policy restore- defaults</code>
Display existing service policies	<code>network interface service-policy show</code>

Create a LIF

A LIF is an IP address associated with a physical or logical port. If there is a component failure, a LIF can fail over to or be migrated to a different physical port, thereby continuing to communicate with the network.

Before you begin

- The underlying physical or logical network port must have been configured to the administrative up status.
- If you are planning to use a subnet name to allocate the IP address and network mask value for a LIF, the subnet must already exist.

Subnets contain a pool of IP addresses that belong to the same layer 3 subnet. They are created using the `network subnet create` command.

- The mechanism for specifying the type of traffic handled by a LIF has changed. For ONTAP 9.5 and earlier, LIFs used roles to specify the type of traffic it would handle. Starting in ONTAP 9.6, LIFs use service policies to specify the type of traffic it would handle.

About this task

- You cannot assign NAS and SAN protocols to the same LIF.

The supported protocols are SMB, NFS, FlexCache, iSCSI, and FC; iSCSI and FC cannot be combined with other protocols. However, NAS and Ethernet-based SAN protocols can be present on the same physical port.

- You can create both IPv4 and IPv6 LIFs on the same network port.
- All the name mapping and host-name resolution services used by an SVM, such as DNS, NIS, LDAP, and Active Directory, must be reachable from at least one LIF handling data traffic of the SVM.
- A LIF handling intracluster traffic between nodes should not be on the same subnet as a LIF handling management traffic or a LIF handling data traffic.
- Creating a LIF that does not have a valid failover target results in a warning message.
- If you have a large number of LIFs in your cluster, you can verify the LIF capacity supported on the cluster by using the `network interface capacity show` command and the LIF capacity supported on each node by using the `network interface capacity details show` command (at the advanced privilege level).
- Starting with ONTAP 9.7, if other LIFs already exist for the SVM in the same subnet, you do not need to specify the home port of the LIF. ONTAP automatically chooses a random port on the specified home node in the same broadcast domain as the other LIFs already configured in the same subnet.

Beginning in ONTAP 9.4, FC-NVMe is supported. If you are creating an FC-NVMe LIF you should be aware of the following:

- The NVMe protocol must be supported by the FC adapter on which the LIF is created.
- FC-NVMe can be the only data protocol on data LIFs.
- One LIF handling management traffic must be configured for every storage virtual machine (SVM) supporting SAN.
- NVMe LIFs and namespaces must be hosted on the same node.
- Only one NVMe LIF handling data traffic can be configured per SVM.

Steps

1. Create a LIF:

```
network interface create -vserver vservice_name -lif lif_name -service
-policy service_policy_name -home-node node_name -home-port port_name {-
address IP_address - netmask IP_address | -subnet-name subnet_name}
-firewall- policy policy -auto-revert {true|false}
```

- `-home-node` is the node to which the LIF returns when the `network interface revert` command is run on the LIF.

You can also specify whether the LIF should automatically revert to the home-node and home-port with the `-auto-revert` option.

- `-home-port` is the physical or logical port to which the LIF returns when the `network interface revert` command is run on the LIF.
- You can specify an IP address with the `-address` and `-netmask` options, or you enable allocation from a subnet with the `-subnet_name` option.
- When using a subnet to supply the IP address and network mask, if the subnet was defined with a gateway, a default route to that gateway is added automatically to the SVM when a LIF is created using that subnet.
- If you assign IP addresses manually (without using a subnet), you might need to configure a default route to a gateway if there are clients or domain controllers on a different IP subnet. The `network route create` man page contains information about creating a static route within an SVM.
- `-auto-revert` allows you to specify whether a data LIF is automatically reverted to its home node under circumstances such as startup, changes to the status of the management database, or when the network connection is made. The default setting is `false`, but you can set it to `true` depending on network management policies in your environment.
- `-service-policy` Starting with ONTAP 9.5, you can assign a service policy for the LIF with the `-service-policy` option.
When a service policy is specified for a LIF, the policy is used to construct a default role, failover policy, and data protocol list for the LIF. In ONTAP 9.5, service policies are supported only for intercluster and BGP peer services. In ONTAP 9.6, you can create service policies for several data and management services.
- `-data-protocol` allows you to create a LIF that supports the Fibre Channel Protocol (FCP) or NVMe/FC protocols. This option is not required when creating an IP LIF.

2. **Optional:** If you want to assign an IPv6 address in the `-address` option:

- a. Use the `network ndp prefix show` command to view the list of RA prefixes learned on various interfaces.

The `network ndp prefix show` command is available at the advanced privilege level.

- b. Use the format `prefix::id` to construct the IPv6 address manually.

`prefix` is the prefix learned on various interfaces.

For deriving the `id`, choose a random 64-bit hexadecimal number.

3. Verify that the LIF was created successfully by using the `network interface show` command.
4. Verify that the configured IP address is reachable:

To verify an...	Use...
IPv4 address	<code>network ping</code>
IPv6 address	<code>network ping6</code>

Examples

The following command creates a LIF and specifies the IP address and network mask values using the `-address` and `-netmask` parameters:

```
network interface create -vserver vs1.example.com -lif datalif1 -service
-policy default-data-files -home-node node-4 -home-port elc -address
192.0.2.145 -netmask 255.255.255.0 -auto-revert true
```

The following command creates a LIF and assigns IP address and network mask values from the specified subnet (named `client1_sub`):

```
network interface create -vserver vs3.example.com -lif datalif3 -service
-policy default-data-files -home-node node-3 -home-port elc -subnet-name
client1_sub - auto-revert true
```

The following command creates an NVMe/FC LIF and specifies the `nvme-fc` data protocol:

```
network interface create -vserver vs1.example.com -lif datalif1 -data
-protocol nvme-fc -home-node node-4 -home-port lc -address 192.0.2.145
-netmask 255.255.255.0 -auto-revert true
```

Modify a LIF

You can modify a LIF by changing the attributes, such as home node or current node, administrative status, IP address, netmask, failover policy, firewall policy, and service policy. You can also change the address family of a LIF from IPv4 to IPv6.

About this task

- When modifying a LIF's administrative status to down, any outstanding NFSv4 locks are held until the LIF's administrative status is returned to up.

To avoid lock conflicts that can occur when other LIFs attempt to access the locked files, you must move the NFSv4 clients to a different LIF before setting the administrative status to down.

- You cannot modify the data protocols used by an FC LIF. However, you can modify the services assigned to a service policy or change the service policy assigned to an IP LIF.

To modify the data protocols used by a FC LIF, you must delete and re-create the LIF. To make service policy changes to an IP LIF, there is a brief outage while the updates occur.

- You cannot modify either the home node or the current node of a node-scoped management LIF.
- When using a subnet to change the IP address and network mask value for a LIF, an IP address is allocated from the specified subnet; if the LIF's previous IP address is from a different subnet, the IP address is returned to that subnet.
- To modify the address family of a LIF from IPv4 to IPv6, you must use the colon notation for the IPv6 address and add a new value for the `-netmask-length` parameter.
- You cannot modify the auto-configured link-local IPv6 addresses.
- Modification of a LIF that results in the LIF having no valid failover target results in a warning message.

If a LIF that does not have a valid failover target attempts to fail over, an outage might occur.

- Starting with ONTAP 9.5, you can modify the service policy associated with a LIF.

In ONTAP 9.5, service policies are supported only for intercluster and BGP peer services. In ONTAP 9.6, you can create service policies for several data and management services.

Steps

1. Modify a LIF's attributes by using the "network interface modify" command.

The following example shows how to modify the IP address and network mask of LIF datalif2 using an IP address and the network mask value from subnet client1_sub:

```
network interface modify -vserver vs1 -lif datalif2 -subnet-name
client1_sub
```

The following example shows how to modify the service policy of a LIF.

```
network interface modify -vserver siteA -lif node1_inter1 -service
-policy example
```

2. Verify that the IP addresses are reachable.

If you are using...	Then use...
IPv4 addresses	<code>network ping</code>

If you are using...	Then use...
IPv6 addresses	<code>network ping6</code>

Migrate a LIF

You might have to migrate a LIF to a different port on the same node or a different node within the cluster, if the port is either faulty or requires maintenance. Migrating a LIF is similar to LIF failover, but LIF migration is a manual operation, while LIF failover is the automatic migration of a LIF in response to a link failure on the LIF's current network port.

Before you begin

- A failover group must have been configured for the LIFs.
- The destination node and ports must be operational and must be able to access the same network as the source port.

About this task

- You must migrate LIFs hosted on the ports belonging to a NIC to other ports in the cluster, before removing the NIC from the node.
- You must execute the command for migrating a cluster LIF from the node where the cluster LIF is hosted.
- A node-scoped LIF, such as a node-scoped management LIF, cluster LIF, intercluster LIF, cannot be migrated to a remote node.
- When an NFSv4 LIF is migrated between nodes, a delay of up to 45 seconds results before the LIF is available on a new port.

To work around this problem, use NFSv4.1 where no delay is encountered.

- You cannot migrate iSCSI LIFs from one node to another node.

To work around this restriction, you must create an iSCSI LIF on the destination node. For information about guidelines for creating an iSCSI LIF, see [SAN administration](#).

- VMware VAAI copy offload operations fail when you migrate the source or the destination LIF. For more information about VMware VAAI, see [NFS reference](#) or [SAN administration](#).

Step

Depending on whether you want to migrate a specific LIF or all the LIFs, perform the appropriate action:

If you want to migrate...	Enter the following command...
A specific LIF	<code>network interface migrate</code>
All the data and cluster- management LIFs on a node	<code>network interface migrate-all</code>
All of the LIFs off of a port	<code>network interface migrate-all -node <node> -port <port></code>

The following example shows how to migrate a LIF named `datlif1` on the SVM `vs0` to the port `e0d` on node `0b`:

```
network interface migrate -vserver vs0 -lif datlif1 -dest-node node0b
-dest-port e0d
```

The following example shows how to migrate all the data and cluster-management LIFs from the current (local) node:

```
network interface migrate-all -node local
```

Revert a LIF to its home port

You can revert a LIF to its home port after it fails over or is migrated to a different port either manually or automatically. If the home port of a particular LIF is unavailable, the LIF remains at its current port and is not reverted.

About this task

- If you administratively bring the home port of a LIF to the up state before setting the automatic revert option, the LIF is not returned to the home port.
- The node management LIF does not automatically revert unless the value of the "auto-revert" option is set to true.
- You must ensure that the "auto-revert" option is enabled for the cluster LIFs to revert to their home ports.

Step

Revert a LIF to its home port manually or automatically:

If you want to revert a LIF to its home port...	Then enter the following command...
Manually	<code>network interface revert -vserver vserver_name -lif lif_name</code>
Automatically	<code>network interface modify -vserver vserver_name -lif lif_name -auto-revert true</code>

ONTAP 9.8 and later: Recover from an incorrectly configured cluster LIF

A cluster cannot be created when the cluster network is cabled to a switch but not all of the ports configured in the Cluster IPspace can reach the other ports configured in the Cluster IPspace.

About this task

In a switched cluster, if a cluster network interface (LIF) is configured on the wrong port, or if a cluster port is wired into the wrong network, the `cluster create` command can fail with the following error:

```
Not all local cluster ports have reachability to one another.  
Use the "network port reachability show -detail" command for more details.
```

The results of the `network port show` command might show that several ports are added to the Cluster IPspace because they are connected to a port that is configured with a cluster LIF. However, the results of the `network port reachability show -detail` command reveal which ports do not have connectivity to one another.

To recover from a cluster LIF configured on a port that is not reachable to the other ports configured with cluster LIFs, perform the following steps:

Steps

1. Reset the home port of the cluster LIF to the correct port:

```
net port modify -home-port
```

2. Remove the ports that do not have cluster LIFs configured on them from the cluster broadcast domain:

```
net port broadcast-domain remove-ports
```

3. Create the cluster:

```
cluster create
```

Result

When you complete the cluster creation, the system detects the correct configuration and places the ports into the correct broadcast domains.

Delete a LIF

You can delete a network interface (LIF) that is no longer required.

Before you begin

LIFs to be deleted must not be in use.

Steps

1. Mark the LIFs you want to delete as administratively down using the following command:

```
-status-admin down
```

2. Use the `network interface delete` command to delete one or all LIFs:

If you want to delete...	Enter the command ...
A specific LIF	<code>network interface delete -lif lif_name</code>
All LIFs	<code>network interface delete -lif</code>

The following command deletes the LIF mgmtlif2:

```
network interface delete -vserver vs1 -lif mgmtlif2
```

- Use the `network interface show` command to confirm that the LIF is deleted.

Configure virtual IP (VIP) LIFs

Some next-generation data centers use Network-Layer-3 mechanisms that require LIFs to be failed over across subnets. Starting with ONTAP 9.5, VIP data LIFs and the associated routing protocol, border gateway protocol (BGP), are supported, which enable ONTAP to participate in these next-generation networks.

About this task

A VIP data LIF is a LIF that is not part of any subnet and is reachable from all ports that host a BGP LIF in the same IPspace. A VIP data LIF eliminates the dependency of a host on individual network interfaces. Because multiple physical adapters carry the data traffic, the entire load is not concentrated on a single adapter and the associated subnet. The existence of a VIP data LIF is advertised to peer routers through the routing protocol, Border Gateway Protocol (BGP).

VIP data LIFs provide the following advantages:

- LIF portability beyond a broadcast domain or subnet: VIP data LIFs can fail over to any subnet in the network by announcing the current location of each VIP data LIF to routers through BGP.
- Aggregate throughput: VIP data LIFs can support aggregate throughput that exceeds the bandwidth of any individual port because the VIP LIFs can send or receive data from multiple subnets or ports simultaneously.

Set up border gateway protocol (BGP)

Before creating VIP LIFs, you must set up BGP, which is the routing protocol used for announcing the existence of a VIP LIF to peer routers.

Starting with ONTAP 9.9.1, VIP BGP provides default route automation using BGP peer grouping to simplify configuration.

ONTAP has a simple way to learn default routes using the BGP peers as next-hop routers when the BGP peer is on the same subnet. To use the feature, set the `-use-peer-as-next-hop` attribute to `true`. By default, this attribute is `false`.

If you have static routes configured, those are still preferred over these automated default routes.

Before you begin

The peer router must be configured to accept a BGP connection from the BGP LIF for the configured

autonomous system number (ASN).



ONTAP does not process any incoming route announcements from the router; therefore, you should configure the peer router to not send any route updates to the cluster.

About this task

Setting up BGP involves optionally creating a BGP configuration, creating a BGP LIF, and creating a BGP peer group. ONTAP automatically creates a default BGP configuration with default values when the first BGP peer group is created on a given node. A BGP LIF is used to establish BGP TCP sessions with peer routers. For a peer router, a BGP LIF is the next hop to reach a VIP LIF. Failover is disabled for the BGP LIF. A BGP peer group advertises the VIP routes for all the SVMs in the peer group's IPspace.

Starting with ONTAP 9.8, these fields have been added to the `network bgp peer-group` command:

- `-asn-prepend-type`
- `-asn-prepend-count`
- `-community`

These BGP attributes allows you to configure the AS Path and community attributes for the BGP peer group.

Starting with ONTAP 9.9.1, these fields have been added:

- `-asn` or `-peer-asn` (4-byte value)
The attribute itself is not new, but it now uses a 4-byte integer.
- `-med`
- `-use-peer-as-next-hop`

You can make advanced route selections with Multi-Exit Discriminator (MED) support for path prioritization. MED is an optional attribute in the BGP update message that tells routers to select the best route for the traffic. The MED is an unsigned 32-bit integer (0 - 4294967295); lower values are preferred.



While ONTAP supports the above BGP attributes, routers need not honor them. NetApp highly recommends you confirm which attributes are supported by your router and configure BGP peer-groups accordingly. For details, refer to the BGP documentation provided by your router.

Steps

1. Log in to the advanced privilege level:

```
set -privilege advanced
```

2. Optional: Create a BGP configuration or modify the default BGP configuration of the cluster by performing one of the following actions:

- a. Create a BGP configuration:

```
network bgp config create -node {node_name | local} -asn asn_integer  
-holdtime  
hold_time -routerid local_router_IP_address
```

Sample with a 2-byte ASN:

```
network bgp config create -node node1 -asn 65502 -holdtime 180
-routerid 1.1.1.1
```

Sample with a 4-byte ASN:

```
network bgp config create -node node1 -asn 85502 -holdtime 180
-routerid 1.1.1.1
```

b. Modify the default BGP configuration:

```
network bgp defaults modify -asn asn_integer -holdtime hold_time
network bgp defaults modify -asn 65502
```

- `asn_integer` specifies the ASN. Starting in ONTAP 9.8, ASN for BGP supports a 2-byte non-negative integer. This is a 16-bit number (0 - 64511 available values). Starting in ONTAP 9.9.1, ASN for BGP supports a 4-byte non-negative integer (65536 - 4294967295). The default ASN is 65501. ASN 23456 is reserved for ONTAP session establishment with peers that do not announce 4-byte ASN capability.
- `hold_time` specifies the hold time in seconds. The default value is 180s.

3. Create a BGP LIF for the system SVM:

```
network interface create -vserver system_svm -lif lif_name -service
-policy default-route-announce -home-node home_node -home-port home_port
-address ip_address -netmask netmask
```

You can use the `default-route-announce` service policy for the BGP LIF.

```
network interface create -vserver cluster1 -lif bgp1 -service-policy
default-route-announce -home-node cluster1-01 -home-port e0c -address
10.10.10.100 -netmask 255.255.255.0
```

4. Create a BGP peer group that is used to establish BGP sessions with the remote peer routers and configure the VIP route information that is advertised to the peer routers:

Sample 1: Create a peer group without an auto default route

In this case, the admin has to create a static route to the BGP peer.

```
network bgp peer-group create -peer-group group_name -ip-space
ip-space_name -bgp-lif bgp_lif -peer-address peer-router_ip_address -peer
-asn 65502 -route-preference integer
-asn-prepend-type <ASN_prepend_type> -asn-prepend-count integer -med
integer -community BGP community list <0-65535>:<0-65535>
```

```
network bgp peer-group create -peer-group group1 -ip-space Default -bgp
-lif bgp1 -peer-address 10.10.10.1 -peer-asn 65502 -route-preference 100
-asn-prepend-type local-asn -asn-prepend-count 2 -med 100 -community
9000:900,8000:800
```

Sample 2: Create a peer group with an auto default route

```
network bgp peer-group create -peer-group group_name -ip-space
ip-space_name -bgp-lif bgp_lif -peer-address peer-router_ip_address -peer
-asn 65502 -use-peer-as-next-hop true -route-preference integer -asn
-prepend-type <ASN_prepend_type> -asn-prepend-count integer -med integer
-community BGP community list <0-65535>:<0-65535>
```

```
network bgp peer-group create -peer-group group1 -ip-space Default -bgp
-lif bgp1 -peer-address 10.10.10.1 -peer-asn 65502 -use-peer-as-next-hop
true -route-preference 100 -asn-prepend-type local-asn -asn-prepend
-count 2 -med 100 -community 9000:900,8000:800
```

Create a virtual IP (VIP) data LIF

The existence of a VIP data LIF is advertised to peer routers through the routing protocol, Border Gateway Protocol (BGP).

Before you begin

- The BGP peer group must be set up and the BGP session for the SVM on which the LIF is to be created must be active.
- A static route to the BGP router or any other router in the BGP LIF's subnet must be created for any outgoing VIP traffic for the SVM.
- You should turn on multipath routing so that the outgoing VIP traffic can utilize all the available routes.

If multipath routing is not enabled, all the outgoing VIP traffic goes from a single interface.

Steps

1. Create a VIP data LIF:

```
network interface create -vserver svm_name -lif lif_name -role data
-data-protocol
{nfs|cifs|iscsi|fcache|none|fc-nvme} -home-node home_node -address
ip_address -is-vip true
```

A VIP port is automatically selected if you do not specify the home port with the `network interface create` command.

By default, the VIP data LIF belongs to the system-created broadcast domain named 'Vip', for each IPspace. You cannot modify the VIP broadcast domain.

A VIP data LIF is reachable simultaneously on all ports hosting a BGP LIF of an IPspace. If there is no active BGP session for the VIP's SVM on the local node, the VIP data LIF fails over to the next VIP port on the node that has a BGP session established for that SVM.

2. Verify that the BGP session is in the up status for the SVM of the VIP data LIF:

```
network bgp vserver-status show

Node          Vserver  bgp status
-----
node1         vs1      up
```

If the BGP status is `down` for the SVM on a node, the VIP data LIF fails over to a different node where the BGP status is up for the SVM. If BGP status is `down` on all the nodes, the VIP data LIF cannot be hosted anywhere, and has LIF status as down.

Commands for managing the BGP

Starting with ONTAP 9.5, you use the `network bgp` commands to manage the BGP sessions in ONTAP.

Manage BGP configuration

If you want to...	Use this command...
Create a BGP configuration	<code>network bgp config create</code>
Modify BGP configuration	<code>network bgp config modify</code>
Delete BGP configuration	<code>network bgp config delete</code>
Display BGP configuration	<code>network bgp config show</code>
Displays the BGP status for the SVM of the VIP LIF	<code>network bgp vserver-status show</code>

Manage BGP default values

If you want to...	Use this command...
Modify BGP default values	<code>network bgp defaults modify</code>

If you want to...	Use this command...
Display BGP default values	network bgp defaults show

Manage BGP peer groups

If you want to...	Use this command...
Create a BGP peer group	network bgp peer-group create
Modify a BGP peer group	network bgp peer-group modify
Delete a BGP peer group	network bgp peer-group delete
Display BGP peer groups information	network bgp peer-group show
Rename a BGP peer group	network bgp peer-group rename

Related information: [ONTAP 9 commands](#)

Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.