



Controllers

E-Series storage systems

NetApp
January 20, 2026

Table of Contents

Controllers	1
Requirements to replace the controller - EF300 or EF600	1
Controller replacement requirements	1
Replacement while powered on	1
Replace the controller - EF300 and EF600	1
Step 1: Prepare to replace controller	2
Step 2: Remove failed controller	3
Step 3: Install new controller	13
Step 4: Complete controller replacement	20

Controllers

Requirements to replace the controller - EF300 or EF600

Before you replace an EF300, EF600, EF300C, or EF600C controller, review the requirements and considerations.

A controller consists of a board, firmware, and software. It controls the drives and implements the SANtricity System Manager functions.

Controller replacement requirements

Before you replace a controller, you must have:

- A replacement controller canister with the same part number as the controller canister you are replacing.
- An ESD wristband, or you have taken other antistatic precautions.
- Labels to identify each cable that is connected to the controller canister.
- A #1 Phillips screwdriver.
- A management station with a browser that can access SANtricity System Manager for the controller. (To open the System Manager interface, point the browser to the controller's domain name or IP address.)

Replacement while powered on

You can replace a controller canister while your storage array is powered on and performing host I/O operations, if the following conditions are true:

- The second controller canister in the shelf has Optimal status.
- The **OK to remove** field in the Details area of the Recovery Guru in SANtricity System Manager displays **Yes**, indicating that it is safe to remove this component.

Replace the controller - EF300 and EF600

You can replace a single controller in your EF300, EF600, EF300C, or EF600C controller shelf.

About this task

When you replace a failed controller canister, you must remove the battery, power supply, DIMMs, fans, and host interface card (HIC) from the original controller canister, and then install them in the replacement controller canister.

Before you begin

- Review [Requirements for EF300 or EF600 controller replacement](#).
- Determine if you have a failed controller canister in one of two ways:
 - The Recovery Guru in SANtricity System Manager directs you to replace the controller canister.
 - The amber Attention LED on the controller canister is on, indicating that the controller has a fault.



The controller's amber Attention LED will be turned off whenever the following replacement conditions exist:

- Alt power supply failed
- Alt drive path failed
- Drawer is open/missing
- Fan is failed/missing
- Power supply missing

- Make sure you have the following:

- A replacement controller canister with the same part number as the controller canister you are replacing.
- An ESD wristband, or you have taken other antistatic precautions.
- A flat, static free work area.
- A #1 Phillips screwdriver
- Labels to identify each cable that is connected to the controller canister.
- A management station with a browser that can access SANtricity System Manager for the controller. (To open the System Manager interface, point the browser to the controller's domain name or IP address.)

Step 1: Prepare to replace controller

Prepare to replace a failed controller canister by verifying that the replacement controller canister has the correct FRU part number, backing up the configuration, and collecting support data.

Steps

1. Unpack the new controller canister, and set it on a flat, static-free surface.

Save the packing materials to use when shipping the failed controller canister.

2. Locate the MAC address and FRU part number labels on the back of the controller canister.
3. From SANtricity System Manager, locate the replacement part number for the controller canister you are replacing.

When a controller has a fault and needs to be replaced, the replacement part number is displayed in the Details area of the Recovery Guru. If you need to find this number manually, follow these steps:

- a. Select **Hardware**.
- b. Locate the controller shelf, which is marked with the controller icon .
- c. Click the controller icon.
- d. Select the controller, and click **Next**.
- e. On the **Base** tab, make a note of the **Replacement Part Number** for the controller.

4. Confirm that the replacement part number for the failed controller is the same as the FRU part number for the replacement controller.



Possible loss of data access — If the two-part numbers are not the same, do not attempt this procedure. In addition, if the failed controller canister includes a host interface card (HIC), you must install that HIC into the new controller canister. The presence of mismatched controllers or HICs causes the new controller to lock down when you bring it online.

5. Back up the storage array's configuration database using SANtricity System Manager.

If a problem occurs when you remove a controller, you can use the saved file to restore your configuration. The system will save the current state of the RAID configuration database, which includes all data for volume groups and disk pools on the controller.

- From System Manager:
 - a. Select **Support** > **Support Center** > **Diagnostics**.
 - b. Select **Collect Configuration Data**.
 - c. Click **Collect**.

The file is saved in the Downloads folder for your browser with the name, **configurationData-<arrayName>-<dateTime>.7z**.

6. If the controller is not already offline, take it offline now using SANtricity System Manager.

- a. Select **Hardware**.
- b. If the graphic shows the drives, select **Show back of shelf** to show the controllers.
- c. Select the controller that you want to place offline.
- d. From the context menu, select **Place offline**, and confirm that you want to perform the operation.



If you are accessing SANtricity System Manager using the controller you are attempting to take offline, a SANtricity System Manager Unavailable message is displayed. Select **Connect to an alternate network connection** to automatically access SANtricity System Manager using the other controller.

7. Wait for SANtricity System Manager to update the controller's status to offline.



Do not begin any other operations until after the status has been updated.

8. Select **Recheck** from the Recovery Guru, and confirm that the **OK to remove** field in the Details area displays **Yes**, indicating that it is safe to remove this component.

Step 2: Remove failed controller

Remove a controller canister to replace the failed canister with a new one.

This is a multi-step procedure that requires you to remove the following components: battery, host interface card, power supply, DIMMs, and fans.

Step 2a: Remove controller canister

Remove the failed controller canister so you can replace it with a new one.

Steps

1. Put on an ESD wristband or take other antistatic precautions.
2. Label each cable that is attached to the controller canister.
3. Disconnect all the cables from the controller canister.



To prevent degraded performance, do not twist, fold, pinch, or step on the cables.

4. If the controller canister has a HIC that uses SFP+ transceivers, remove the SFPs.

Because you must remove the HIC from the failed controller canister, you must remove any SFPs from the HIC ports. When you reconnect the cables, you can move those SFPs to the new controller canister.

5. Squeeze the handles on either side of the controller, and pull back until it releases from the shelf.



6. Using two hands and the handles, slide the controller canister out of the shelf. When the front of the controller is free of the enclosure, use two hands to pull it out completely.



Always use two hands to support the weight of a controller canister.




7. Place the controller canister on a flat, static-free surface.

Step 2b: Remove battery

Remove the battery from the failed controller canister so you can install it in the new controller canister.

Steps


1. Remove the controller canister's cover by unscrewing the single thumbscrew and lifting the lid open.
2. Locate the 'press' tab on the side of the controller.
3. Unlatch the battery by pressing the tab and squeezing the battery casing.

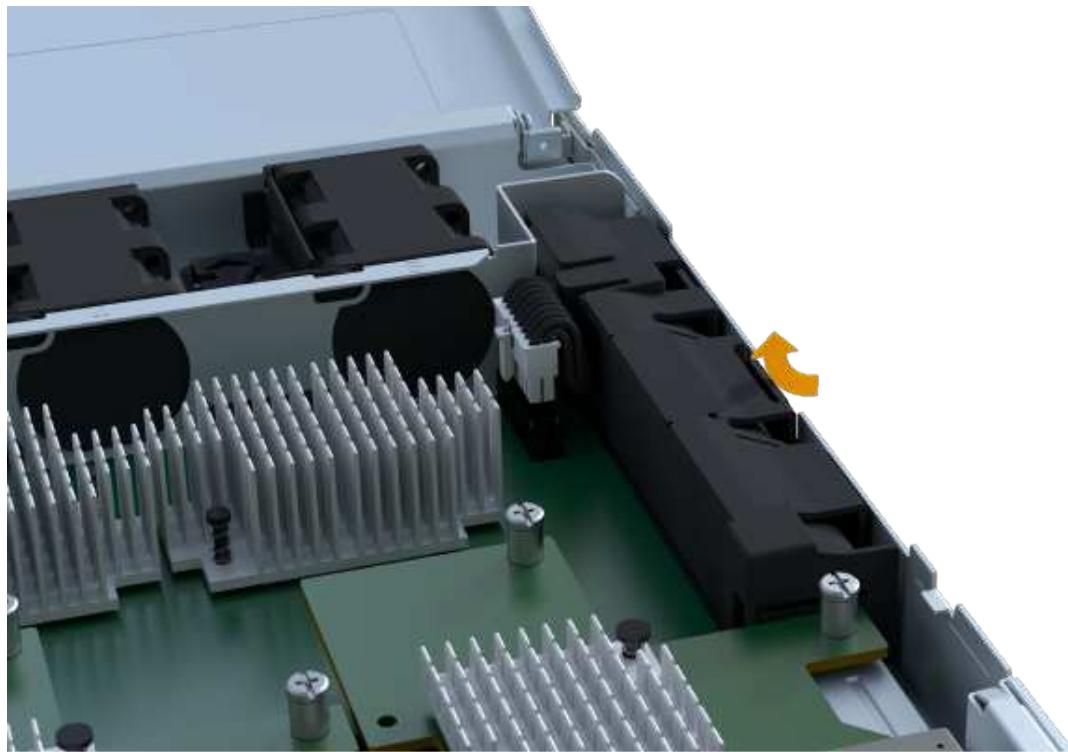

4. Gently squeeze the connector housing the battery wiring. Pull up, disconnecting the battery from the board.



5. Lift the battery out of the controller and place on a flat, static-free surface.

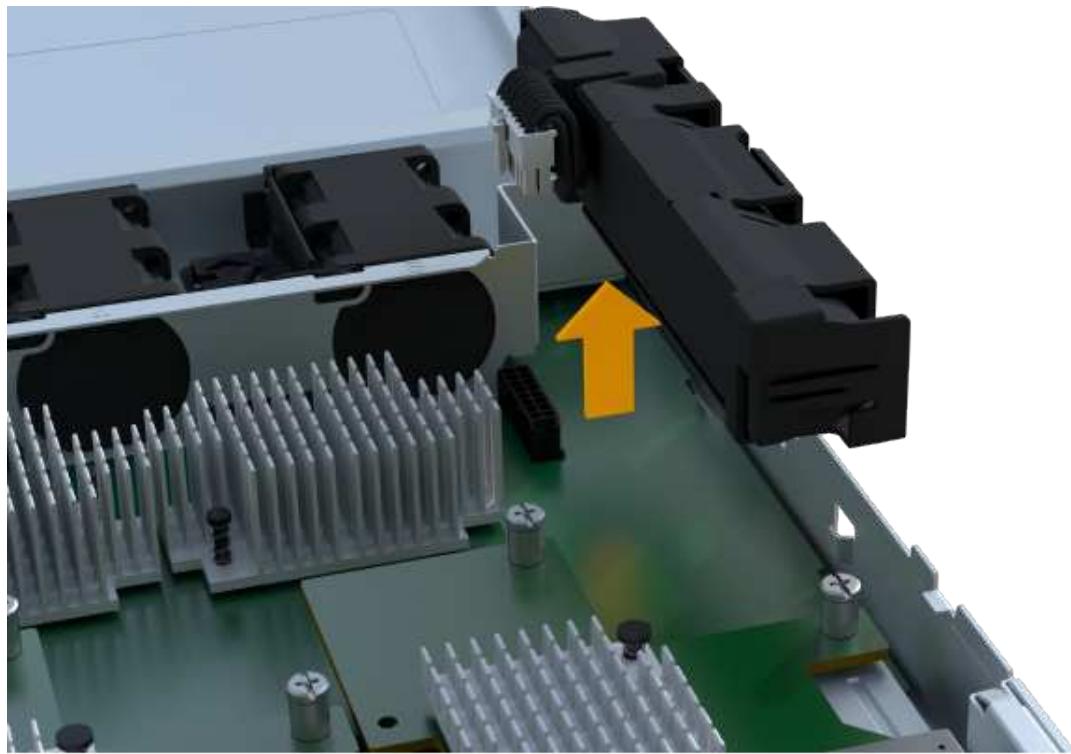


Step 2c: Remove the HIC

If the controller canister includes a HIC, you must remove the HIC from the original controller canister. Otherwise, you can skip this step.

Steps


1. Using a Phillips screwdriver, remove the two screws that attach the HIC faceplate to the controller canister.

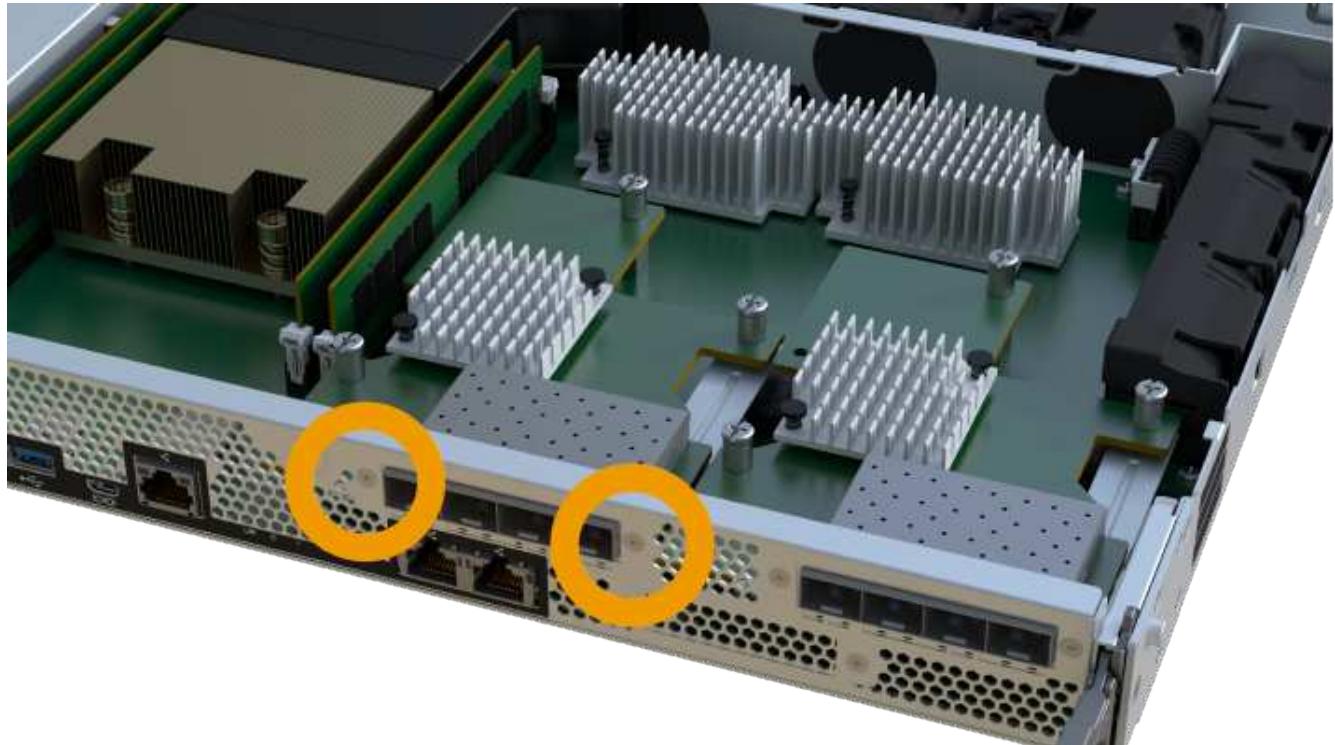



The image above is an example, the appearance of your HIC may differ.

2. Remove the HIC faceplate.
3. Using your fingers or a Phillips screwdriver, loosen the single thumbscrew that secure the HIC to the controller card.

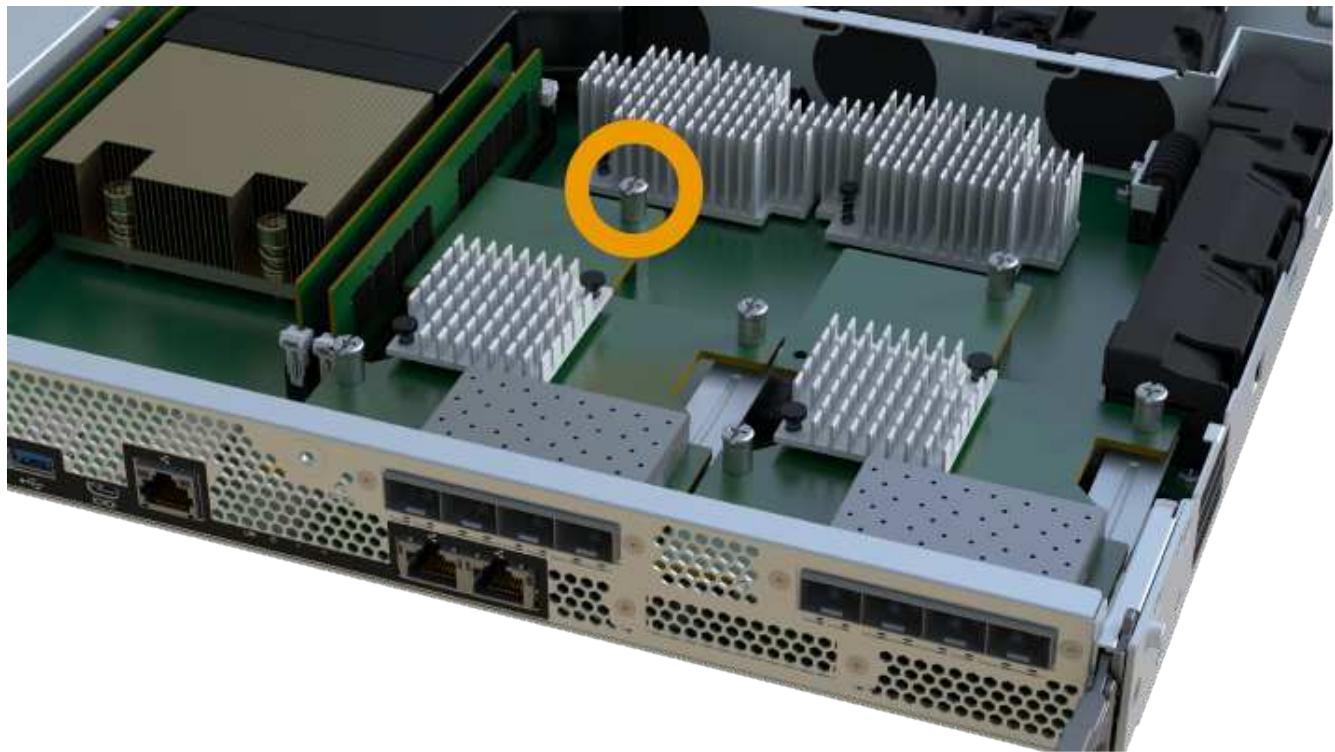


The HIC comes with three screw locations on the top but is secured with only one.

4. Carefully detach the HIC from the controller card by lifting the card up and out of the controller.



Be careful not to scratch or bump the components on the bottom of the HIC or on the top of the controller card.

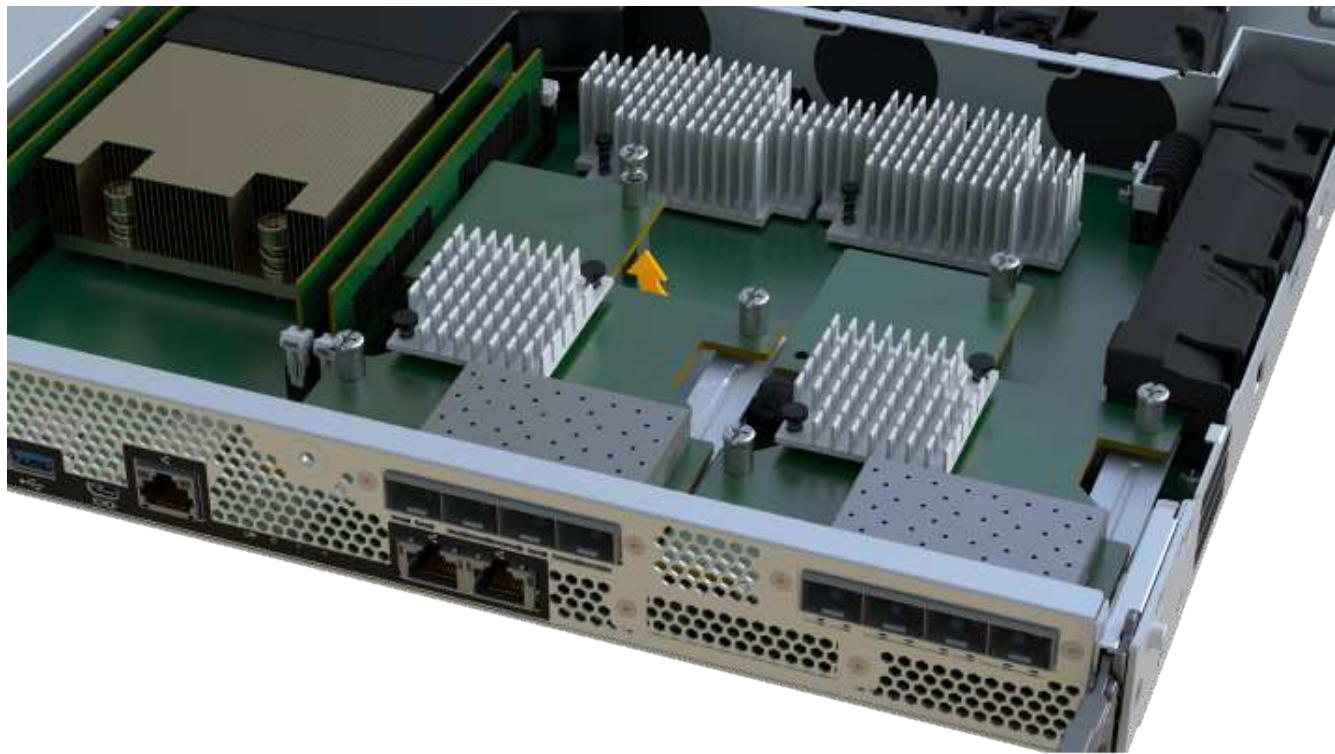


5. Place the HIC on a flat, static-free surface.

Step 2d: Remove power supply


Remove the power supply so you can install it in the new controller.

Steps

1. Disconnect the power cables:
 - a. Open the power cord retainer, and then unplug the power cord from the power supply.
 - b. Unplug the power cord from the power source.
2. Locate the tab to the right of the power supply and press it towards the power supply unit.

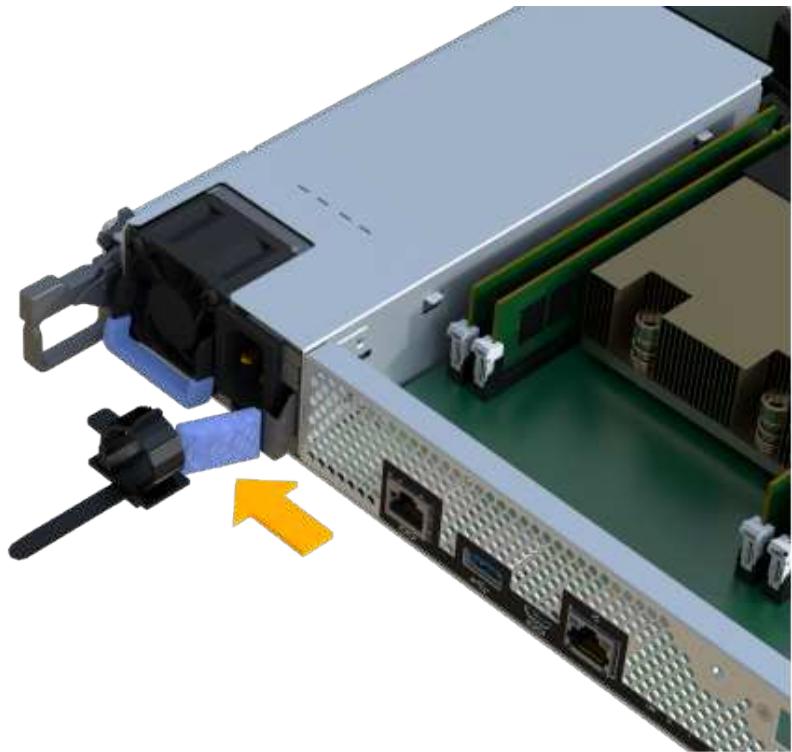

3. Locate the handle on the front of the power supply.
4. Use the handle to slide the power supply straight out of the system.

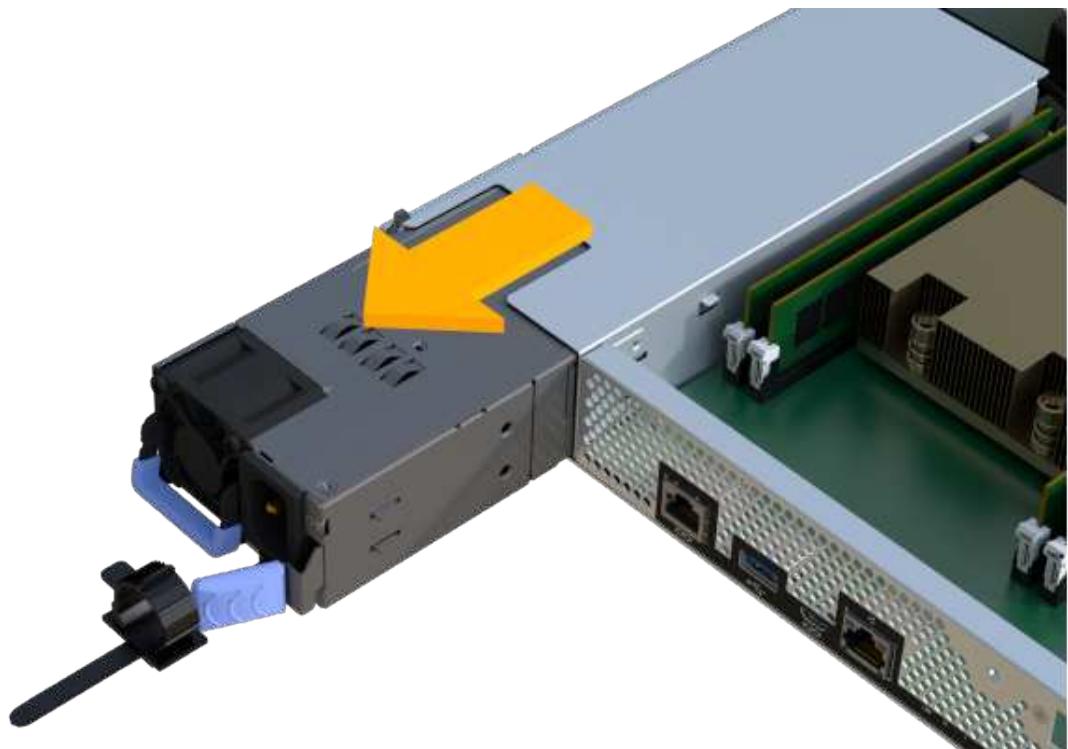

When removing a power supply, always use two hands to support its weight.

Step 2e: Remove DIMMs

Remove the DIMMs so you can install them in the new controller.

Steps


1. Locate the DIMMs on your controller.
2. Note the orientation of the DIMM in the socket so that you can insert the replacement DIMM in the proper orientation.
3. Slowly push apart on the two DIMM ejector tabs on either side of the DIMM to eject the DIMM from its slot, and then slide it out of the slot.




A notch at the bottom of the DIMM helps you align the DIMM during installation.



Carefully hold the DIMM by the edges to avoid pressure on the components on the DIMM circuit board.

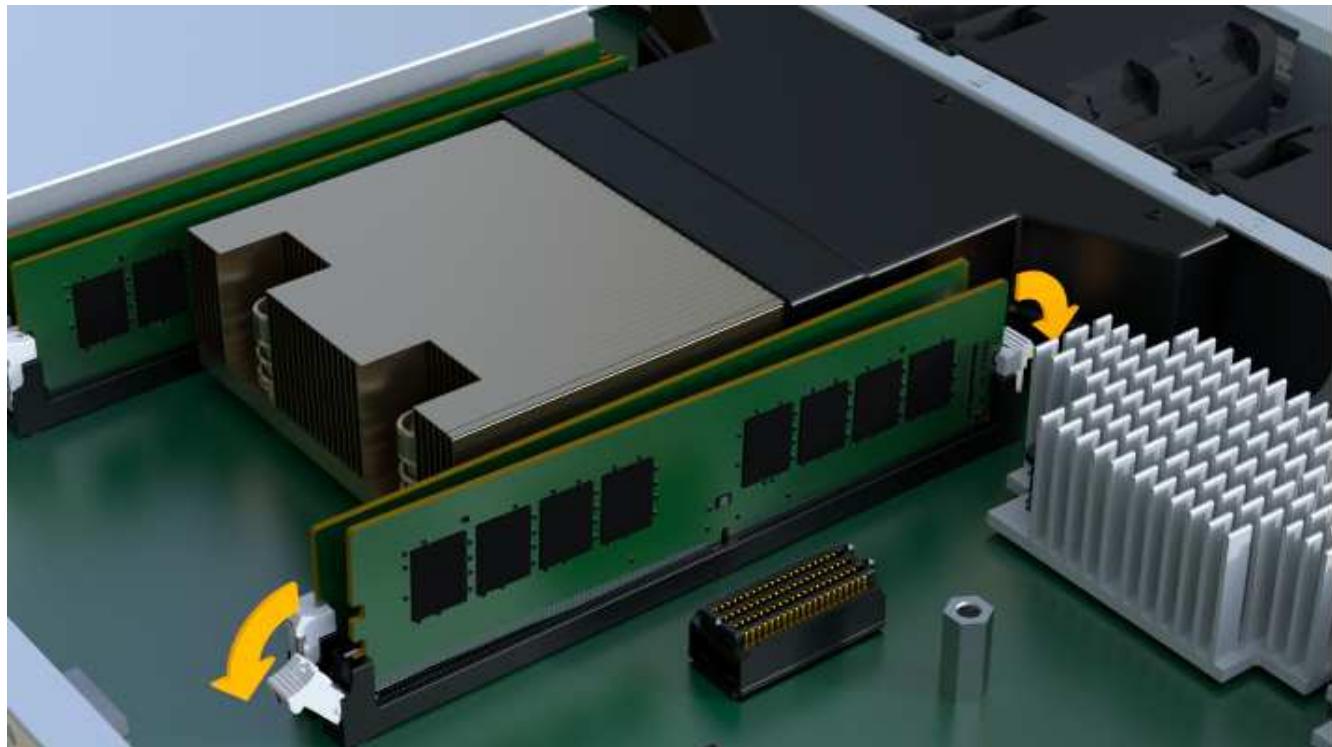

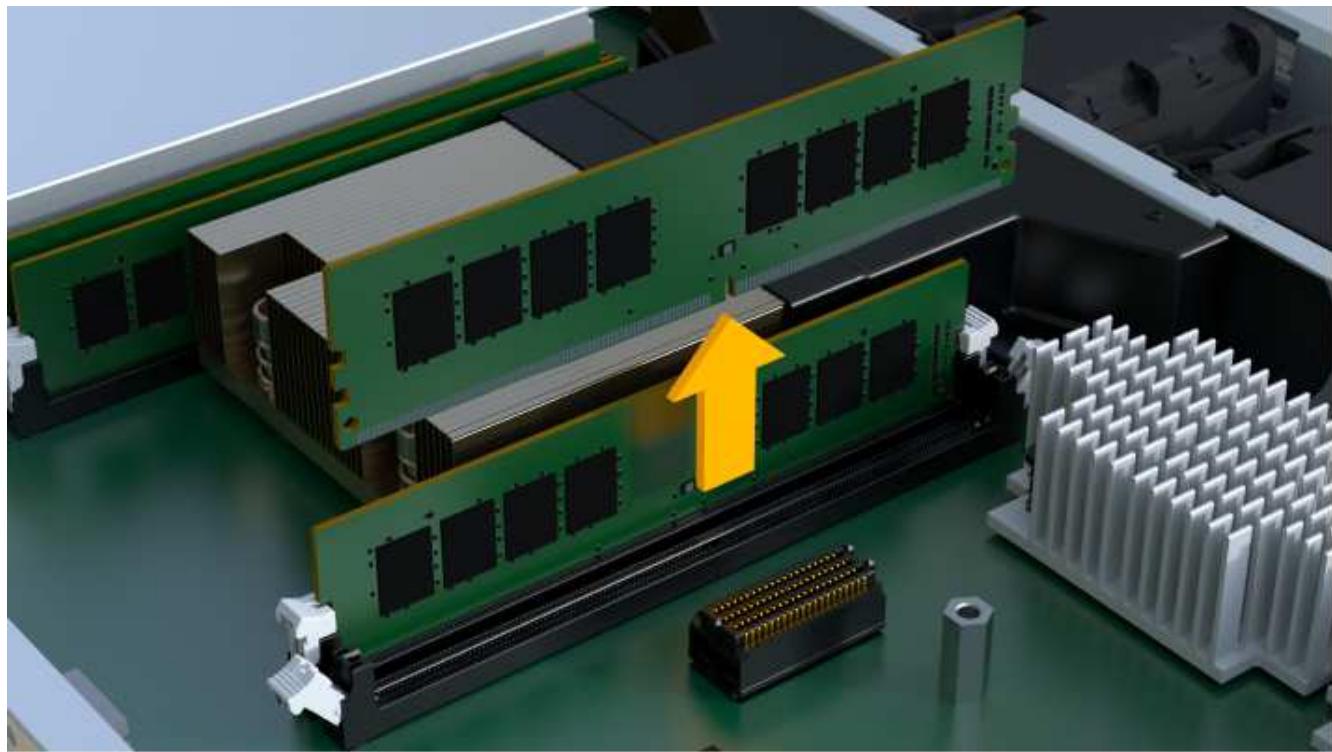


Step 2f: Remove fans

Remove the fans so you can install them in the new controller.

Steps

1. Gently lift the fan from the controller.

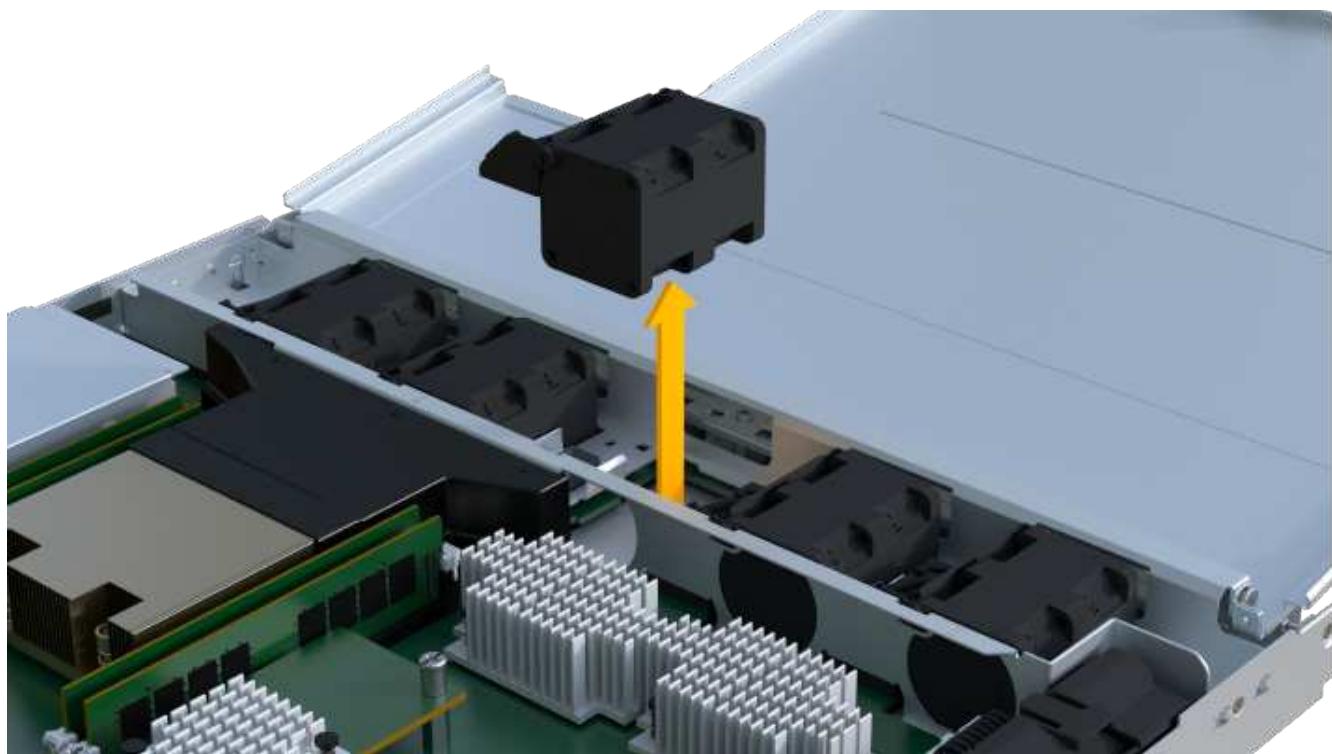

2. Repeat until all fans are removed.

Step 3: Install new controller

Install a new controller canister to replace the failed one.


This is a multi-step procedure that requires you to install the following components from the original controller: battery, host interface card, power supply, DIMMs, and fans.

Step 3a: Install battery

Install the battery into the replacement controller canister.

Steps

1. Make sure that you have:
 - The battery from the original controller canister, or a new battery that you ordered.
 - The replacement controller canister.
2. Insert the battery into the controller by lining up the battery casing with the metal latches on the side of the controller.

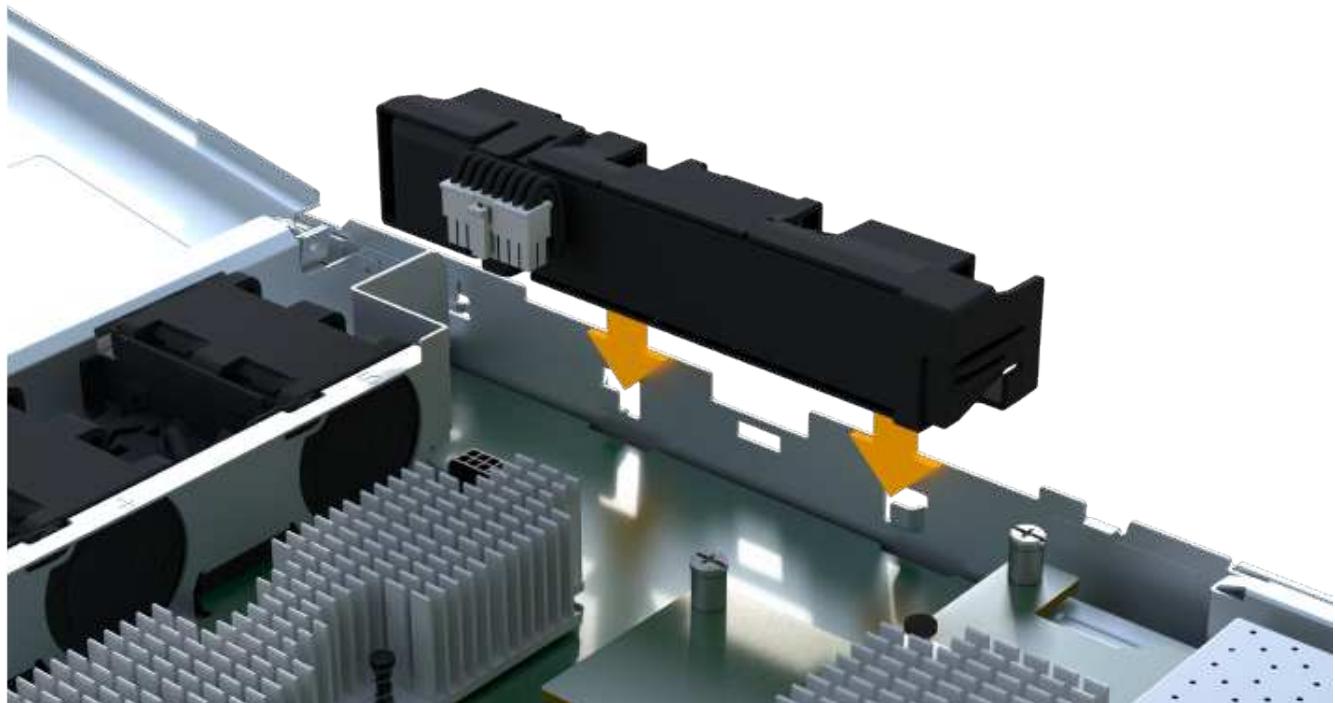

The battery clicks into place.

3. Plug the battery connector back into the board.

Step 3b: Install the HIC


If you removed a HIC from the original controller canister, you must install that HIC in the new controller canister. Otherwise, you can skip this step.

Steps

1. Using a #1 Phillips screwdriver, remove the two screws that attach the blank faceplate to the replacement controller canister, and remove the faceplate.

2. Align the single thumbscrew on the HIC with the corresponding hole on the controller, and align the connector on the bottom of the HIC with the HIC interface connector on the controller card.

Be careful not to scratch or bump the components on the bottom of the HIC or on the top of the controller card.

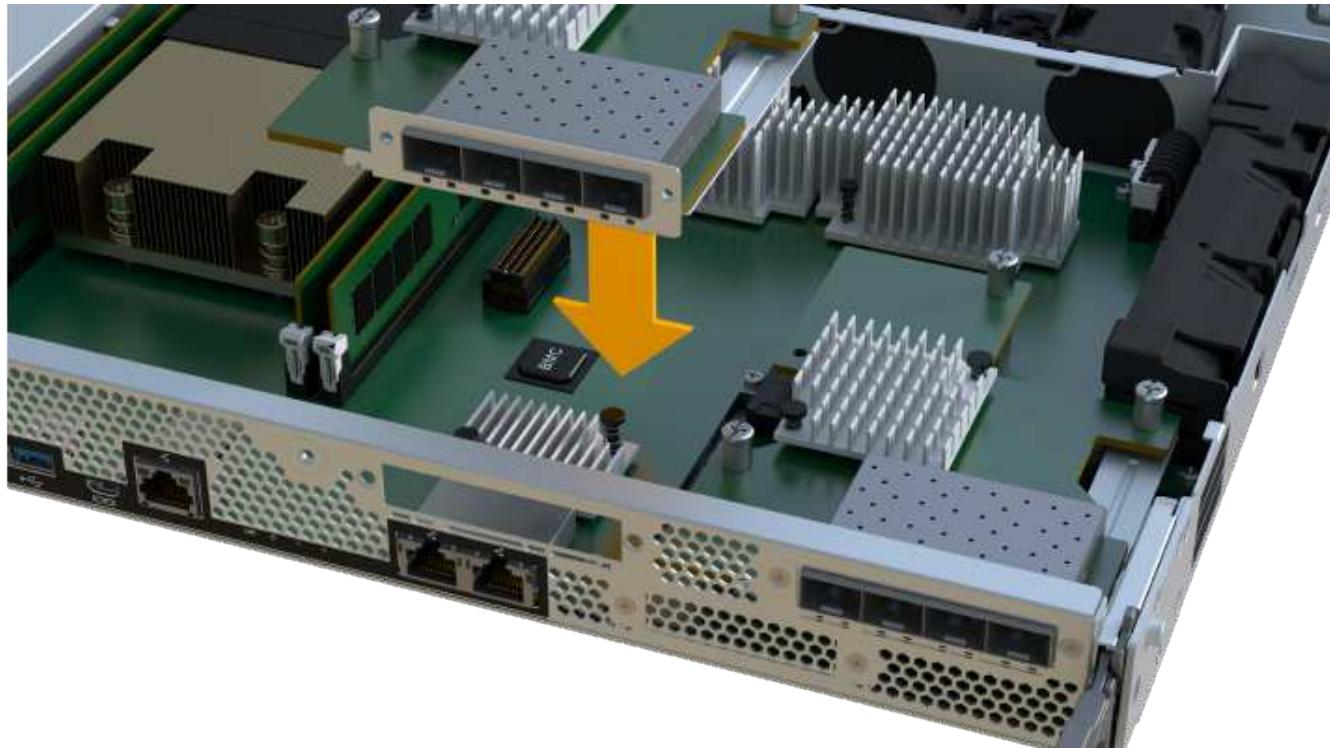

The image above is an example; the appearance of your HIC may differ.


3. Carefully lower the HIC into place, and seat the HIC connector by pressing gently on the HIC.



Possible equipment damage—Be very careful not to pinch the gold ribbon connector for the controller LEDs between the HIC and the thumbscrew.

4. Hand-tighten the HIC thumbscrew.

Do not use a screwdriver, or you might over tighten the screw.

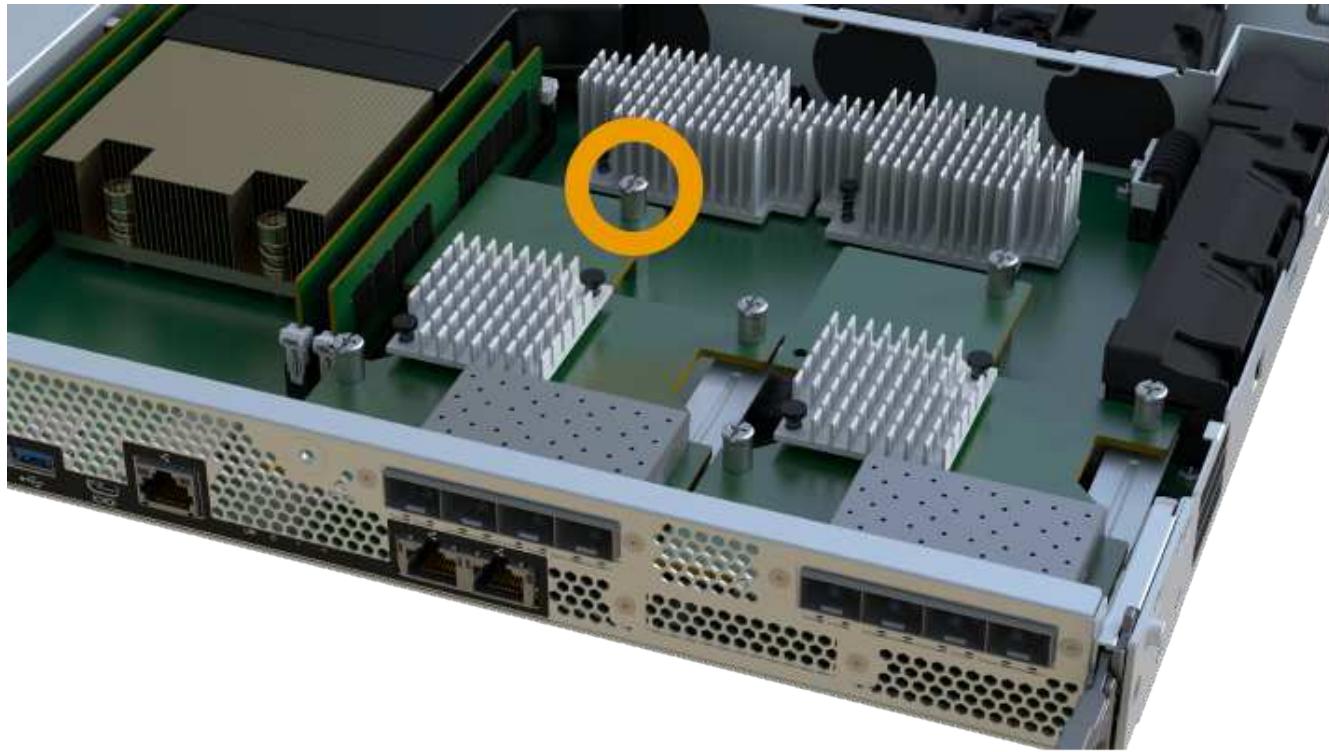

The image above is an example; the appearance of your HIC may differ.

5. Using a #1 Phillips screwdriver, attach the HIC faceplate you removed from the original controller canister to the new controller canister with the two screws.

Step 3c: Install power supply

Install the power supply into the replacement controller canister.


Steps

1. Using both hands, support and align the edges of the power supply with the opening in the system chassis, and then gently push the power supply into the chassis using the cam handle.

The power supplies are keyed and can only be installed one way.



Do not use excessive force when sliding the power supply into the system; you can damage the connector.

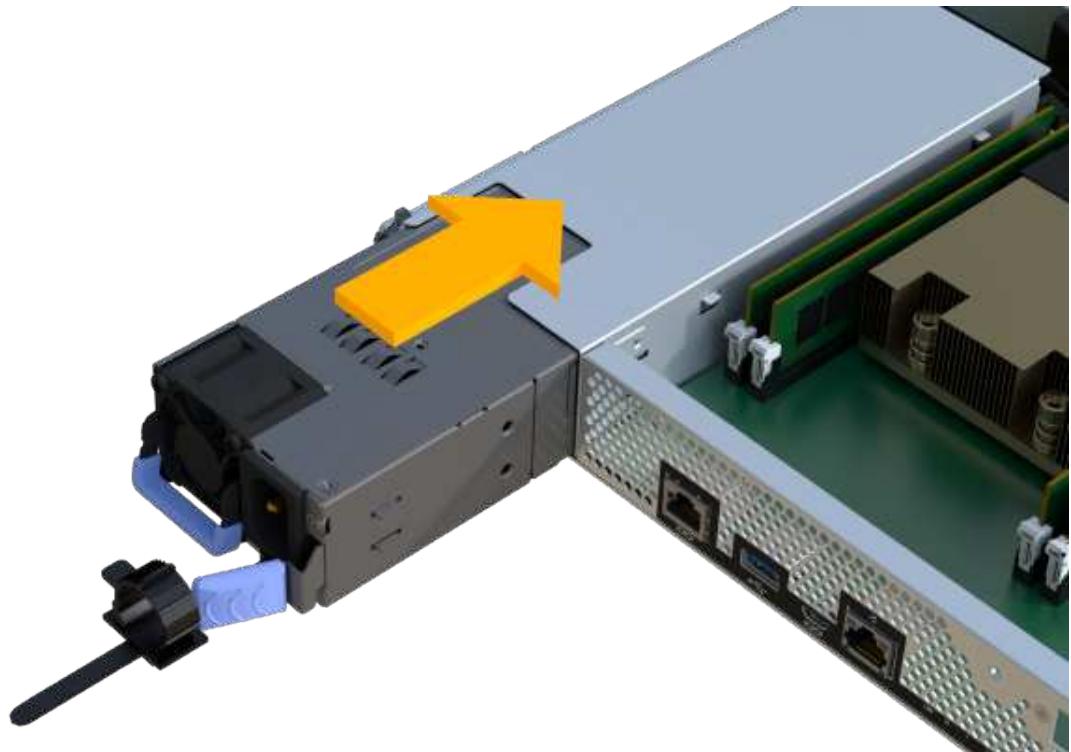

Step 3d: Install DIMMs


Install the DIMMs into the new controller canister.

Steps

1. Hold the DIMM by the corners, and align it to the slot.

The notch among the pins on the DIMM should line up with the tab in the socket.

2. Insert the DIMM squarely into the slot.

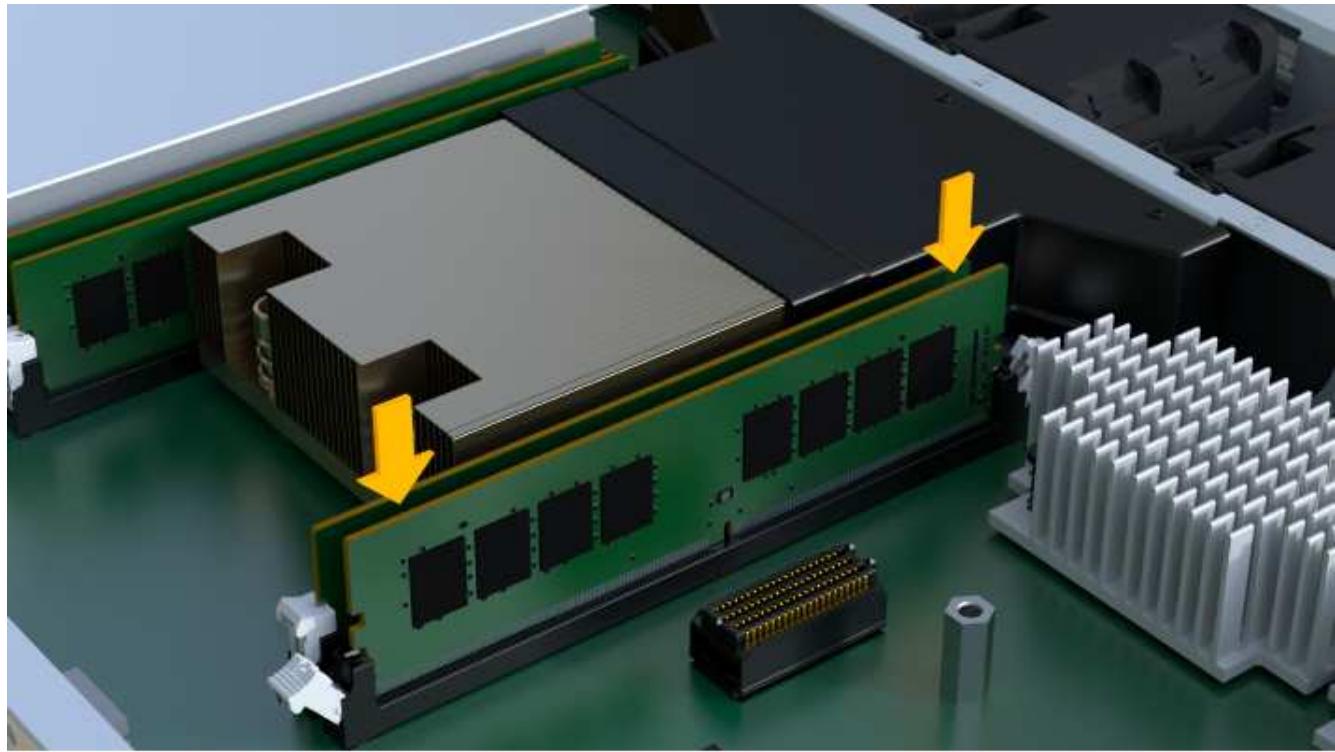

The DIMM fits tightly in the slot, but should go in easily. If not, realign the DIMM with the slot and reinsert it.




Visually inspect the DIMM to verify that it is evenly aligned and fully inserted into the slot.

3. Push carefully, but firmly, on the top edge of the DIMM until the latches snap into place over the notches at the ends of the DIMM.



DIMMs fit tightly. You might need to gently press on one side at a time and secure with each tab individually.

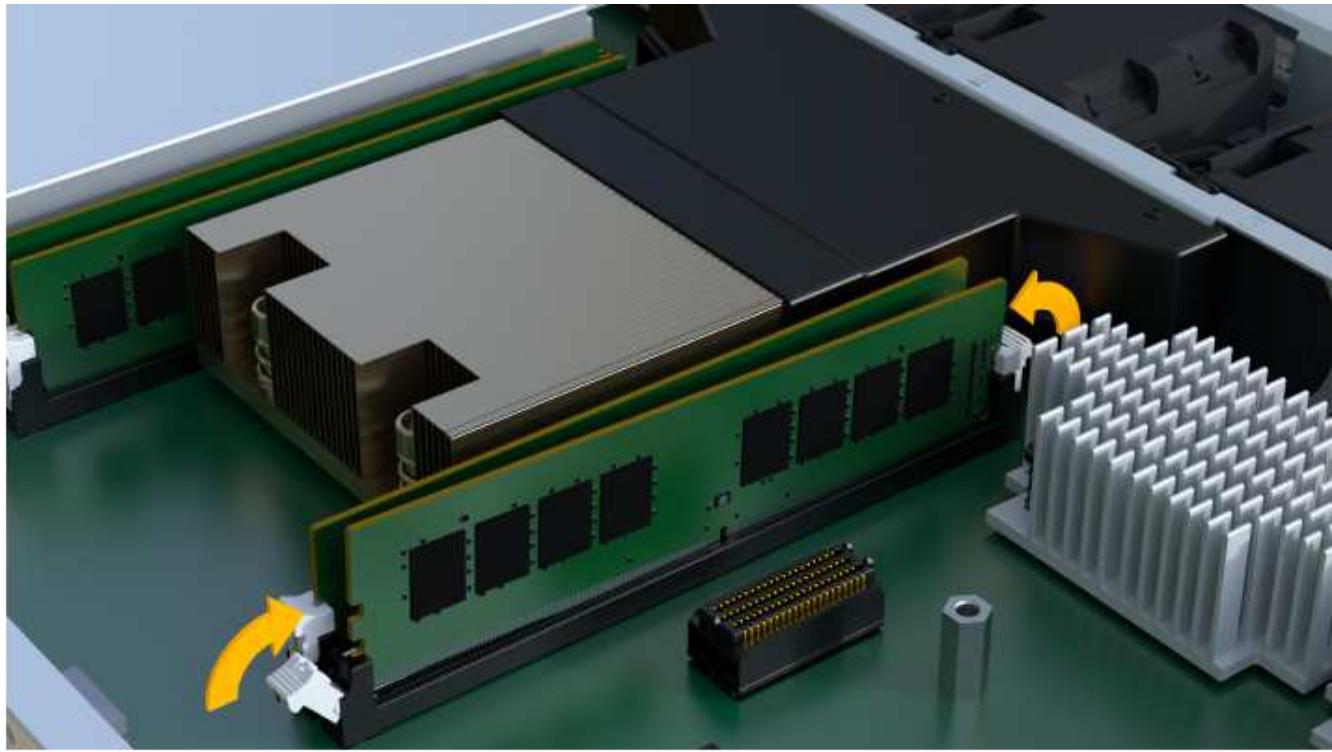



Step 3e: Install fans

Install the fans into the replacement controller canister.

Steps

1. Slide the fan all the way into the replacement controller.

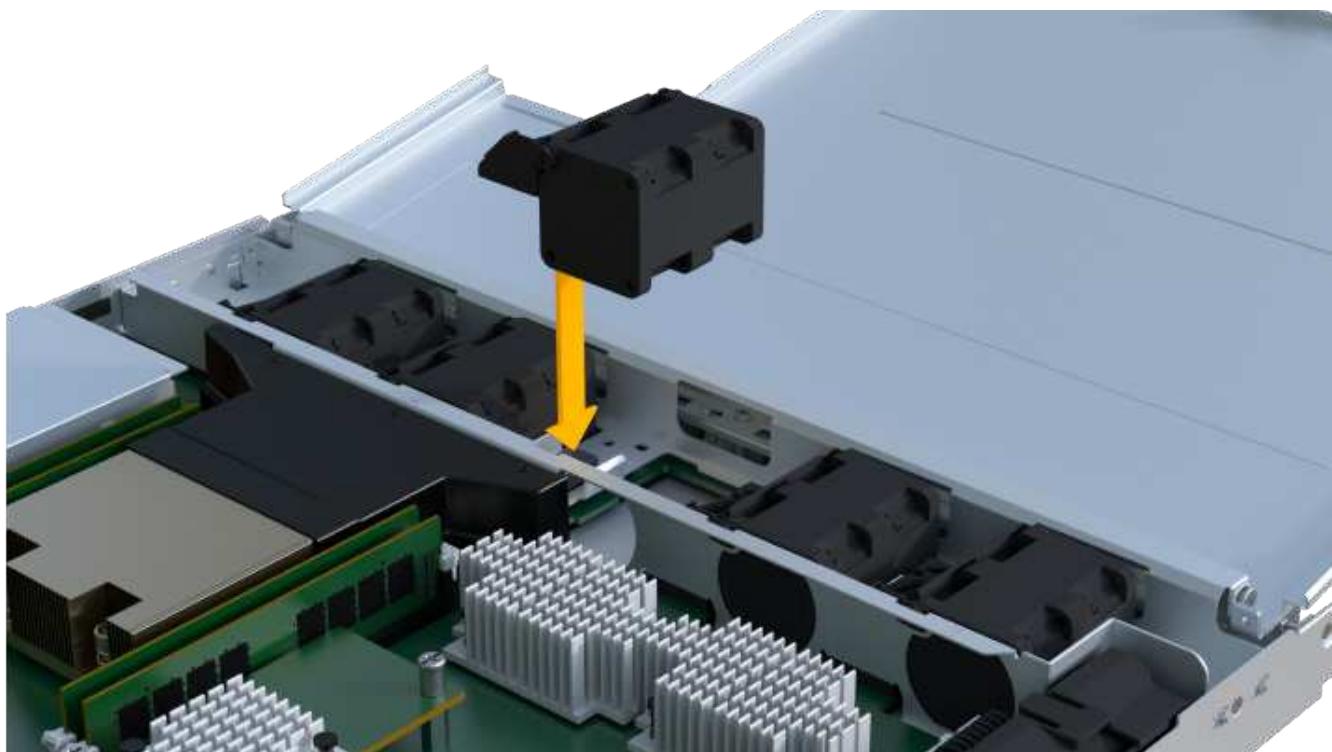

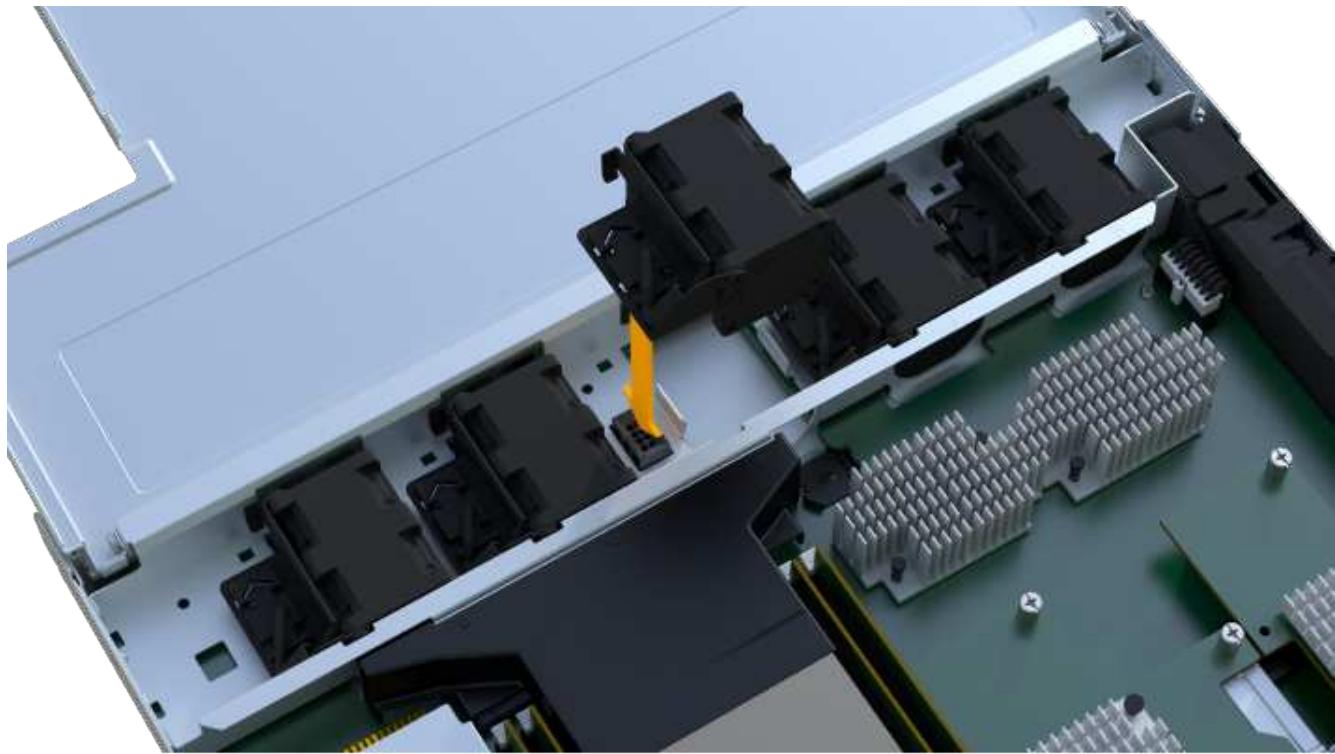

2. Repeat until all fans are installed.

Step 3f: Install new controller canister

Last, install the new controller canister into the controller shelf.

Steps

1. Lower the cover on the controller canister and secure the thumbscrew.
2. While squeezing the controller handles, gently slide the controller canister all the way into the controller shelf.



The controller audibly clicks when correctly installed into the shelf.



3. Install the SFPs from the original controller in the host ports on the new controller, if they were installed in the original controller, and reconnect all the cables.

If you are using more than one host protocol, be sure to install the SFPs in the correct host ports.

4. If the original controller used DHCP for the IP address, locate the MAC address on the label on the back of the replacement controller. Ask your network administrator to associate the DNS/network and IP address for the controller you removed with the MAC address for the replacement controller.



If the original controller did not use DHCP for the IP address, the new controller adopts the IP address of the controller you removed.

Step 4: Complete controller replacement

Place the controller online, collect support data, and resume operations.

Steps

1. Place controller online.
 - a. In System Manager, navigate to the Hardware page.
 - b. Select **Show back of controller**.
 - c. Select the replaced controller.
 - d. Select **Place online** from the drop-down list.
2. As the controller boots, check the controller LEDs.

When communication with the other controller is reestablished:

- The amber Attention LED remains on.
- The Host Link LEDs might be on, blinking, or off, depending on the host interface.

3. When the controller is back online, check whether an NVSRAM mismatch is reported in Recovery Guru.

a. If an NVSRAM mismatch is reported, upgrade NVSRAM using the following SMcli command:

```
SMcli <controller A IP> <controller B IP> -u admin -p <password> -k  
-c "download storageArray NVSRAM  
file=\"C:\Users\testuser\Downloads\NVSRAM .dlp file>\"  
forceDownload=TRUE;"
```

The **-k** parameter is needed if the array is not https secure.



If the SMcli command cannot be completed, contact [NetApp Technical Support](#) or log in to the [NetApp Support Site](#) to create a case.

4. Confirm the status of the system is Optimal and check the controller shelf's Attention LEDs.

If the status is not Optimal or if any of the Attention LEDs are on, confirm that all cables are correctly seated and the controller canister is installed correctly. If necessary, remove and reinstall the controller canister.



If you cannot resolve the problem, contact technical support.

5. Click **Hardware > Support > Upgrade Center** to ensure that the firmware and NVSRAM versions on the system are at the desired levels.

As needed, install the latest version.

6. Verify that all volumes have been returned to the preferred owner.

- a. Select **Storage > Volumes**. From the **All Volumes** page, verify that volumes are distributed to their preferred owners. Select **More > Change ownership** to view volume owners.
- b. If volumes are all owned by preferred owner continue to Step 6.
- c. If none of the volumes are returned, you must manually return the volumes. Go to **More > Redistribute volumes**.
- d. If only some of the volumes are returned to their preferred owners after auto-distribution or manual distribution you must check the Recovery Guru for host connectivity issues.
- e. If there is no Recovery Guru present or if following the recovery guru steps the volumes are still not returned to their preferred owners contact support.

7. Collect support data for your storage array using SANtricity System Manager.

- a. Select **Support > Support Center > Diagnostics**.
- b. Select **Collect Support Data**.
- c. Click **Collect**.

The file is saved in the Downloads folder for your browser with the name, **support-data.7z**.

What's next?

Your controller replacement is complete. You can resume normal operations.

Copyright information

Copyright © 2026 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.