



# **Chassis**

Install and maintain

NetApp

February 01, 2026

This PDF was generated from <https://docs.netapp.com/us-en/ontap-systems/a70-90/chassis-replace-workflow.html> on February 01, 2026. Always check [docs.netapp.com](https://docs.netapp.com) for the latest.

# Table of Contents

Chassis .....	1
Chassis replacement workflow - AFF A70 and AFF A90 .....	1
Requirements to replace the chassis - AFF A70 and AFF A90 .....	1
Prepare to replace the chassis - AFF A70 and AFF A90 .....	2
Shut down the controllers to replace the chassis - AFF A70 and AFF A90 .....	3
Replace the chassis - AFF A70 and AFF A90 .....	4
Step 1: Remove the PSUs and cables .....	4
Step 2: Remove the controller modules and drives .....	5
Step 3: Replace the chassis and install components .....	7
Complete the chassis replacement - AFF A70 and AFF A90 .....	8
Step 1: Boot the controllers and perform giveback .....	8
Step 2: Verify storage system health .....	8
Step 3: Return the failed part to NetApp .....	8

# Chassis

## Chassis replacement workflow - AFF A70 and AFF A90

Get started with replacing the chassis of your AFF A70 or AFF A90 storage system by reviewing the replacement requirements, shutting down the controllers, replacing the chassis, and verifying system operations.

1

### Review the chassis replacement requirements

Review the chassis replacement requirements, including system compatibility, required tools, ONTAP credentials, and component functionality verification.

2

### Prepare for the chassis replacement

Prepare for the chassis replacement by locating the system, gathering credentials and tools, verifying the replacement chassis, and labeling cables.

3

### Shut down the controllers

Shut down the controllers to perform chassis maintenance safely.

4

### Replace the chassis

Move the components from the impaired chassis to the replacement chassis.

5

### Complete the chassis replacement

Complete the replacement by booting the controllers, performing giveback, and returning the failed chassis to NetApp.

## Requirements to replace the chassis - AFF A70 and AFF A90

Before replacing the chassis in your AFF A70 or AFF A90 system, ensure you meet the necessary requirements for a successful replacement. This includes verifying all other components in the system are functioning properly, verifying that you have local administrator credentials for ONTAP, the correct replacement chassis, and the necessary tools.

The chassis is the physical enclosure housing all the controller components such as the controller/CPU unit, power supply, and I/O.

Review the following requirements.

- Make sure all other components in the system are functioning properly; if not, contact [NetApp support](#) for assistance.
- Obtain local administrator credentials for ONTAP if you don't have them.
- Make sure that you have the necessary tools and equipment for the replacement.
- You can use the chassis replacement procedure with all versions of ONTAP supported by your system.
- The chassis replacement procedure is written with the assumption that you are moving the bezel, NVMe drives, and controller modules to the new chassis, and that the replacement chassis is a new component from NetApp.
- The chassis replacement procedure is disruptive. For a two-node cluster, you will have a complete service outage and a partial outage in a multi-node cluster.

#### What's next?

After reviewing the requirements, [prepare to replace the chassis](#).

## Prepare to replace the chassis - AFF A70 and AFF A90

Prepare to replace the impaired chassis in your AFF A70 or AFF A90 system by identifying the impaired chassis, verifying the replacement components, and labeling the cables and controller modules.

#### Steps

1. Connect to the serial console port to interface with and monitor the system.
2. Turn on the controller's Location LED:
  - a. Use the `system controller location-led show` command to display the current state of the Location LED.
  - b. Turn on the Location LED:
 

```
system controller location-led modify -node node1 -state on
```

 The Location LED remains lit for 30 minutes.
3. Before opening the packaging, examine the packaging label and verify the following:
  - Component part number
  - Part description
  - Quantity in the box
4. Remove the contents from the packaging and save the packaging for returning the failed component to NetApp.
5. Label all cables connected to the storage system. This ensures proper recabling later in this procedure.
6. Ground yourself if not already grounded.

#### What's next?

After you've prepared to replace your AFF A70 or AFF A90 chassis hardware, you need to [shut down the controllers](#).

# Shut down the controllers to replace the chassis - AFF A70 and AFF A90

Shut down the controllers in your AFF A70 or AFF A90 storage system to prevent data loss and ensure system stability when replacing the chassis.

This procedure is for systems with two node configurations. For more information about graceful shutdown when servicing a cluster, see [Gracefully shutdown and power up your storage system Resolution Guide - NetApp Knowledge Base](#).

## Before you begin

- Make sure you have the necessary permissions and credentials:
  - Local administrator credentials for ONTAP.
  - BMC accessibility for each controller.
- Make sure you have the necessary tools and equipment for the replacement.
- As a best practice before shutdown, you should:
  - Perform additional [system health checks](#).
  - Upgrade ONTAP to a recommended release for the system.
  - Resolve any [Active IQ Wellness Alerts and Risks](#). Make note of any faults presently on the system, such as LEDs on the system components.

## Steps

1. Log into the cluster through SSH or log in from any node in the cluster using a local console cable and a laptop/console.
2. Stop all clients/host from accessing data on the NetApp system.
3. Suspend external backup jobs.
4. If AutoSupport is enabled, suppress case creation and indicate how long you expect the system to be offline:

```
system node autosupport invoke -node * -type all -message "MAINT=2h Replace chassis"
```

5. Identify the SP/BMC address of all cluster nodes:

```
system service-processor show -node * -fields address
```

6. Exit the cluster shell:

```
exit
```

7. Log into SP/BMC over SSH using the IP address of any of the nodes listed in the output from the previous step to monitor progress.

If you are using a console/laptop, log into the controller using the same cluster administrator credentials.

8. Halt the two nodes located in the impaired chassis:

```
system node halt -node <node1>,<node2> -skip-lif-migration-before-shutdown
```

```
true -ignore-quorum-warnings true -inhibit-takeover true
```



For clusters using SnapMirror synchronous operating in StrictSync mode: system node halt -node <node1>,<node2> -skip-lif-migration-before-shutdown true -ignore-quorum-warnings true -inhibit-takeover true -ignore-strict -sync-warnings true

9. Enter **y** for each controller in the cluster when you see:

Warning: Are you sure you want to halt node <node\_name>? {y|n}:

10. Wait for each controller to halt and display the LOADER prompt.

#### What's next?

After shutting down the controllers, [replace the chassis](#).

## Replace the chassis - AFF A70 and AFF A90

Replace the chassis in your AFF A70 or AFF A90 system when a hardware failure requires it. The replacement process involves removing the controllers and power supply units (PSUs), removing the drives, installing the replacement chassis, and reinstalling the chassis components.

### Step 1: Remove the PSUs and cables

You need to remove all four power supply units (PSUs), two per controller, before removing the controller. Removing them lightens the overall weight of each controller.

#### Steps


1. Remove the four PSUs:
  - a. If you are not already grounded, properly ground yourself.
  - b. Unplug power cords from the controller module PSU.

If your system has DC power, disconnect the power block from the PSUs.

  - c. Remove the PSU from the controller by rotating the PSU handle up so that you can pull the PSU out, press the PSU locking tab, and then pull PSU out of the controller module.



The PSU is short. Always use two hands to support it when removing it from the controller module so that it does not suddenly swing free from the controller module and injure you.

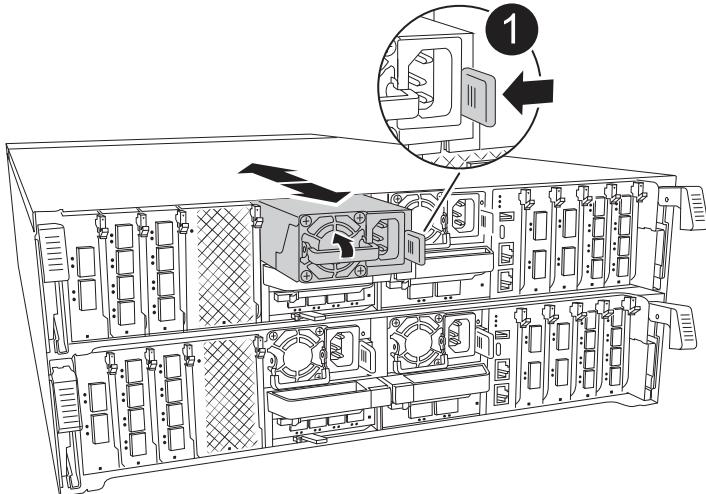

1

Terracotta PSU locking tab

d. Repeat these steps for the remaining PSUs.

2. Remove the cables:

a. Unplug the system cables and any SFP and QSFP modules (if needed) from the controller module, but leave them in the cable management device to keep them organized.



Cables should have been labeled at the beginning of this procedure.


b. Remove the cable management device from the controller modules and set them aside.

## Step 2: Remove the controller modules and drives

Remove the controllers from the chassis and then remove the drives from the chassis.

### Steps

1. Check the that amber NVRAM status LED located in slot 4/5 on the back of each controller module is off. Look for the NV icon.

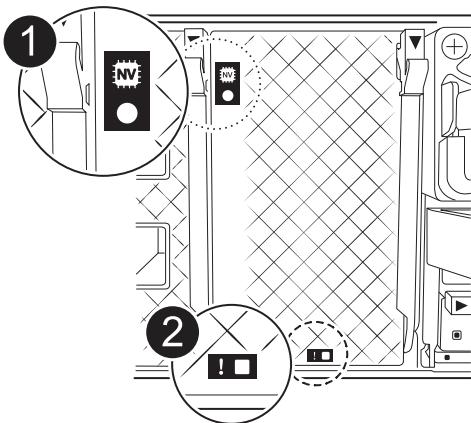


1	NVRAM status LED
2	NVRAM attention LED

- If the NVRAM LED is off, go to the next step.
- If the NVRAM LED is flashing, wait for the flashing to stop. If flashing continues for longer than 5 minutes, contact [NetApp Support Site](#) for assistance.

2. Remove the controller modules:

- Press down on both of the locking latches on the controller, and then rotate both latches downward at the same time.

The controller module moves slightly out of the chassis.

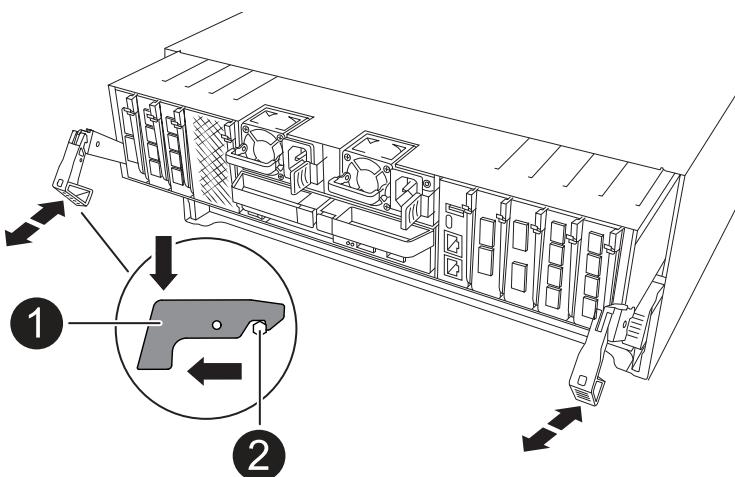

1	Locking latch
2	Locking pin

- Slide the controller module out of the chassis by the locking latches, and place it on a flat, stable surface.

Make sure that you support the bottom of the controller module as you slide it out of the chassis.

- Repeat these steps for the second controller module.

3. Remove the drives:

- Gently remove the bezel from the front of the system.
- Press the release button at the top of the drive carrier face below the LEDs.
- Pull the cam handle to its fully open position to unseat the drive from the midplane, and then gently slide the drive out of the chassis.

The drive should disengage from the chassis, allowing it to slide free of the chassis.



Drives are fragile. Always use two hands to support the drive weight when removing a drive to prevent damage to them.

- d. Keep track of which drive bay each drive was in and set the drive aside on a static-free cart or table.
- e. Repeat this step for the remaining drives in the chassis.

## Step 3: Replace the chassis and install components

Remove the impaired chassis, install the replacement chassis, and reinstall all components.

### Steps

1. Remove the impaired chassis:
  - a. Remove the screws from the chassis mount points.
  - b. Using two people or a lift, slide the impaired chassis off the rack rails in a system cabinet or equipment rack, and then set it aside.
2. Install the replacement chassis:
  - a. Using two people or a lift, install the replacement chassis into the equipment rack or system cabinet by guiding the chassis onto the rack rails in a system cabinet or equipment rack.
  - b. Slide the chassis all the way into the equipment rack or system cabinet.
  - c. Secure the front of the chassis to the equipment rack or system cabinet, using the screws you removed from the impaired chassis.
3. Beginning with the bottom controller module, install the controller modules in the replacement chassis:
  - a. Align the end of the controller module with the opening in the chassis, and then gently push the controller all the way into the chassis.
  - b. Rotate the locking latches upward into the locked position.
  - c. If you have not already done so, reinstall the cable management device and recable the controller.

If you removed the media converters (QSFPs or SFPs), remember to reinstall them.

Make sure that the cables are connected referencing the cable labels.

4. Reinstall the drives into their corresponding drive bays in the front of the chassis.
5. Install all four of the PSUs:
  - a. Using both hands, support and align the edges of the PSU with the opening in the controller module.
  - b. Gently push the PSU into the controller module until the locking tab clicks into place.

The power supplies will only properly engage with the internal connector and lock in place one way.



To avoid damaging the internal connector, do not use excessive force when sliding the PSU into the system.

6. Reconnect the PSU power cables to all four of the PSUs:
  - a. Secure the power cable to the PSU using the power cable retainer.

If you have DC power supplies, reconnect the power block to the power supplies after the controller module is fully seated in the chassis and secure the power cable to the PSU with the thumbscrews.

The controller modules begin to boot as soon as PSUs are installed and power is restored.

#### What's next?

After you've replaced the impaired AFF A70 or AFF A90 chassis and reinstalled the components into it, you need to [complete the chassis replacement](#).

## Complete the chassis replacement - AFF A70 and AFF A90

Reboot the controllers, verify system health, and return the failed part to NetApp to complete the final step in the AFF A70 and AFF A90 chassis replacement procedure.

### Step 1: Boot the controllers and perform giveback

Boot ONTAP on the controllers and perform controller giveback to return storage ownership.

#### Steps

1. Check the console output:
  - a. If the controller boots to the LOADER prompt, reboot the controller with the `boot_ontap` command.
  - b. If the console displays `waiting for giveback` after the reboot, log into the partner controller and check that the replaced controller is ready for giveback with the `storage failover show` command.
2. Perform the giveback:
  - a. Connect the console cable to the partner controller.
  - b. Give back the controller with the `storage failover giveback -fromnode local` command.

### Step 2: Verify storage system health

After the controller giveback completes, verify system health using [Active IQ Config Advisor](#). Address any issues found.

### Step 3: Return the failed part to NetApp

Return the failed part to NetApp, as described in the RMA instructions shipped with the kit. See the [Part Return and Replacements](#) page for further information.

## Copyright information

Copyright © 2026 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

**LIMITED RIGHTS LEGEND:** Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

## Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.