



I/O module

Install and maintain

NetApp
August 30, 2024

Table of Contents

- I/O module 1
 - Overview of add and replace I/O module - AFF A70, AFF A90 1
 - Add I/O module - AFF A70, AFF A90 1
 - Replace I/O module - AFF A70, AFF A90 9

I/O module

Overview of add and replace I/O module - AFF A70, AFF A90

You can replace a failed I/O module in your storage system with the same type of I/O module, or with a different kind of I/O module. You can also add an I/O module into a system with empty slots.

- [Add an I/O module](#)

Adding additional modules can improve redundancy, helping to ensure that the system remains operational even if one module fails.

- [Replace an I/O module](#)

Replacing a failing I/O module can restore the system to its optimal operating state.

Add I/O module - AFF A70, AFF A90

You can add an I/O module to your storage system by either adding a new I/O module into a storage system with empty slots or by replacing an I/O module with a new one in a fully-populated storage system.

Before you begin

- Check the [NetApp Hardware Universe](#) to make sure that the new I/O module is compatible with your storage system and version of ONTAP you're running.
- If multiple slots are available, check the slot priorities in [NetApp Hardware Universe](#) and use the best one available for your I/O module.
- Make sure that all other components are functioning properly.

Option 1: Add an I/O module to a storage system with empty slots

You can add an I/O module into an empty module slot in your storage system.

Step 1: Shut down the impaired controller module

Shut down or take over the impaired controller module using one of the following options.

Option 1: Most systems

To shut down the impaired controller, you must determine the status of the controller and, if necessary, take over the controller so that the healthy controller continues to serve data from the impaired controller storage.

About this task

If you have a cluster with more than two nodes, it must be in quorum. If the cluster is not in quorum or a healthy controller shows false for eligibility and health, you must correct the issue before shutting down the impaired controller; see [Synchronize a node with the cluster](#).

Steps

1. If AutoSupport is enabled, suppress automatic case creation by invoking an AutoSupport message command: `system node autosupport invoke -node * -type all -message MAINT=number_of_hours_downh`

The following AutoSupport command suppresses automatic case creation for two hours:

```
cluster1:*> system node autosupport invoke -node * -type all -message MAINT=2h
```

2. Disable automatic giveback from the console of the healthy controller: `storage failover modify -node local -auto-giveback false`
3. Take the impaired controller to the LOADER prompt:

If the impaired controller is displaying...	Then...
The LOADER prompt	Go to the next step.
Waiting for giveback...	Press Ctrl-C, and then respond <code>y</code> when prompted.
System prompt or password prompt (enter system password)	Halt or take over the impaired controller from the healthy controller: <code>storage failover takeover -ofnode <i>impaired_node_name</i></code> When the impaired controller shows Waiting for giveback..., press Ctrl-C, and then respond <code>y</code> .

Option 2: Controller is in a MetroCluster



Do not use this procedure if your system is in a two-node MetroCluster configuration.

To shut down the impaired controller, you must determine the status of the controller and, if necessary, take over the controller so that the healthy controller continues to serve data from the impaired controller storage.

- If you have a cluster with more than two nodes, it must be in quorum. If the cluster is not in quorum or a healthy controller shows false for eligibility and health, you must correct the issue before shutting down the impaired controller; see [Synchronize a node with the cluster](#).
- If you have a MetroCluster configuration, you must have confirmed that the MetroCluster

Configuration State is configured and that the nodes are in an enabled and normal state (metrocluster node show).

Steps

1. If AutoSupport is enabled, suppress automatic case creation by invoking an AutoSupport command:

```
system node autosupport invoke -node * -type all -message  
MAINT=number_of_hours_downh
```

The following AutoSupport command suppresses automatic case creation for two hours:

```
cluster1:*> system node autosupport invoke -node * -type all -message  
MAINT=2h
```

2. Disable automatic giveback from the console of the healthy controller:

```
storage failover modify  
-node local -auto-giveback false
```
3. Take the impaired controller to the LOADER prompt:


If the impaired controller is displaying...	Then...
The LOADER prompt	Go to the next Step.
Waiting for giveback...	Press Ctrl-C, and then respond <i>y</i> when prompted.
System prompt or password prompt (enter system password)	Halt or take over the impaired controller from the healthy controller: <pre>storage failover takeover -ofnode impaired_node_name</pre> When the impaired controller shows Waiting for giveback..., press Ctrl-C, and then respond <i>y</i> .

Step 2: Add I/O modules

1. If you are not already grounded, properly ground yourself.
2. Rotate the cable management tray down by pulling the buttons on both sides on the inside of the cable management tray and then rotate the tray down.
3. Remove the target slot blanking module from the chassis:



The following illustration shows removing a horizontal and vertical I/O module. Typically, you will only remove one I/O module.

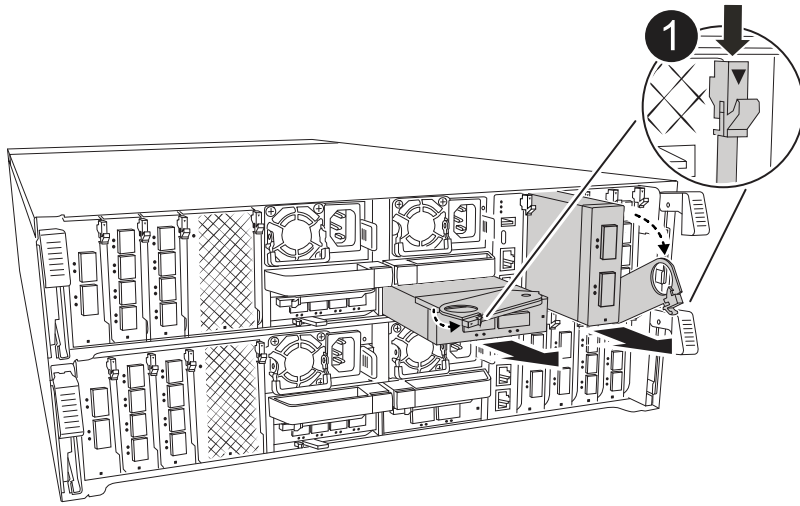

1	Cam locking button
----------	--------------------

- a. Depress the cam latch on the blanking module in the target slot.
 - b. Rotate the cam latch down as far as it will go. For horizontal modules, rotate the cam away from the module as far as it will go.
 - c. Remove the blanking module.
4. Install the I/O module:
- a. Align the I/O module with the edges of the controller module slot opening.
 - b. Gently slide the module all the way into the into the slot, and then rotate the cam latch all the way up to lock the module in place.
5. Cable the I/O module.

If the I/O module is a NIC, cable the module to the data switches.

If the I/O module is a storage module, cable it to the NS224 shelf.



Make sure that any unused I/O slots have blanks installed to prevent possible thermal issues.

6. Rotate the cable management tray up to the closed position.
7. Reboot the controller from the LOADER prompt: `bye`



This reinitializes the PCIe cards and other components and reboots the node.

8. Give back the controller from the partner controller: `storage failover giveback -ofnode target_node_name`
9. Repeat these steps for controller B.
10. Restore automatic giveback if you disabled it by using the `storage failover modify -node local -auto-giveback true` command.
11. If AutoSupport is enabled, restore/unsuppress automatic case creation by using the `system node autosupport invoke -node * -type all -message MAINT=END` command.

12. If you installed a storage I/O module, install and cable your NS224 shelves, as described in [Hot-add workflow](#).

Option 2: Add an I/O module in a storage system with no empty slots

You can change an I/O module in an I/O slot in a fully-populated system by removing an existing I/O module and replacing it with a different I/O module.

1. If you are:

Replacing a...	Then...
NIC I/O module with the same the same number of ports	The LIFs will automatically migrate when its controller module is shut down.
NIC I/O module with fewer ports	Permanently reassign the ASAected LIFs to a different home port. See Migrating a LIF for information about using System Manager to permanently move the LIFs.
NIC I/O module with a storage I/O module	Use System Manager to permanently migrate the LIFs to different home ports, as described in Migrating a LIF .

Step 1: Shut down the impaired controller module

Shut down or take over the impaired controller module using one of the following options.

Option 1: Most systems

To shut down the impaired controller, you must determine the status of the controller and, if necessary, take over the controller so that the healthy controller continues to serve data from the impaired controller storage.

About this task

If you have a cluster with more than two nodes, it must be in quorum. If the cluster is not in quorum or a healthy controller shows false for eligibility and health, you must correct the issue before shutting down the impaired controller; see [Synchronize a node with the cluster](#).

Steps

1. If AutoSupport is enabled, suppress automatic case creation by invoking an AutoSupport message command: `system node autosupport invoke -node * -type all -message MAINT=number_of_hours_downh`

The following AutoSupport command suppresses automatic case creation for two hours:

```
cluster1:*> system node autosupport invoke -node * -type all -message MAINT=2h
```

2. Disable automatic giveback from the console of the healthy controller: `storage failover modify -node local -auto-giveback false`
3. Take the impaired controller to the LOADER prompt:

If the impaired controller is displaying...	Then...
The LOADER prompt	Go to the next step.
Waiting for giveback...	Press Ctrl-C, and then respond <i>y</i> when prompted.
System prompt or password prompt (enter system password)	Halt or take over the impaired controller from the healthy controller: <code>storage failover takeover -ofnode <i>impaired_node_name</i></code> When the impaired controller shows Waiting for giveback..., press Ctrl-C, and then respond <i>y</i> .

Option 2: Controller is in a MetroCluster



Do not use this procedure if your system is in a two-node MetroCluster configuration.

To shut down the impaired controller, you must determine the status of the controller and, if necessary, take over the controller so that the healthy controller continues to serve data from the impaired controller storage.

- If you have a cluster with more than two nodes, it must be in quorum. If the cluster is not in quorum or a healthy controller shows false for eligibility and health, you must correct the issue before shutting down the impaired controller; see [Synchronize a node with the cluster](#).
- If you have a MetroCluster configuration, you must have confirmed that the MetroCluster

Configuration State is configured and that the nodes are in an enabled and normal state (metrocluster node show).

Steps

1. If AutoSupport is enabled, suppress automatic case creation by invoking an AutoSupport command:

```
system node autosupport invoke -node * -type all -message  
MAINT=number_of_hours_downh
```

The following AutoSupport command suppresses automatic case creation for two hours:

```
cluster1:*> system node autosupport invoke -node * -type all -message  
MAINT=2h
```

2. Disable automatic giveback from the console of the healthy controller:

```
storage failover modify  
-node local -auto-giveback false
```
3. Take the impaired controller to the LOADER prompt:

If the impaired controller is displaying...	Then...
The LOADER prompt	Go to the next Step.
Waiting for giveback...	Press Ctrl-C, and then respond <i>y</i> when prompted.
System prompt or password prompt (enter system password)	Halt or take over the impaired controller from the healthy controller: <pre>storage failover takeover -ofnode impaired_node_name</pre> When the impaired controller shows Waiting for giveback..., press Ctrl-C, and then respond <i>y</i> .


Step 2: Replace an I/O module

To replace an I/O module, locate it within the controller module and follow the specific sequence of steps.

1. If you are not already grounded, properly ground yourself.
2. Unplug any cabling on the target I/O module.
3. Rotate the cable management tray down by pulling the buttons on the inside of the cable management tray and rotating it down.
4. Remove the target I/O module from the chassis:



The following illustration shows removing a horizontal and vertical I/O module. Typically, you will only remove one I/O module.

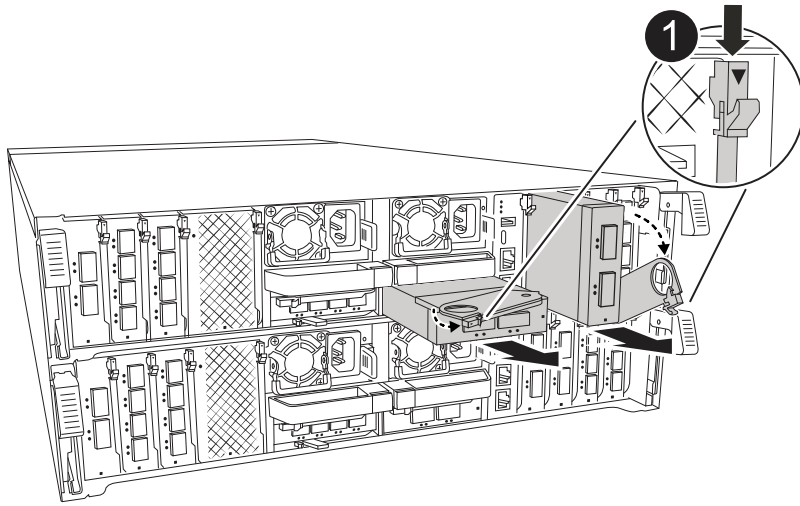

1	Cam locking button
----------	--------------------

a. Depress the cam latch button.

The cam latch moves away from the chassis.

b. Rotate the cam latch down as far as it will go. For horizontal modules, rotate the cam away from the module as far as it will go.

c. Remove the module from the chassis by hooking your finger into the cam lever opening and pulling the module out of the chassis.

Make sure that you keep track of which slot the I/O module was in.

5. Install the I/O module into the target slot:

a. Align the I/O module with the edges of the slot.

b. Gently slide the module into the slot all the way into the chassis, and then rotate the cam latch all the way up to lock the module in place.

6. Cable the I/O module.

7. Repeat the remove and install steps to replace additional modules for the controller module.

8. Rotate the cable management tray into the locked position.

9. Reboot the controller module from the LOADER prompt: `_bye_`

a. Check the version of BMC on the controller: `system service-processor show`

b. Update the BMC firmware if needed: `system service-processor image update`

c. Reboot the node: `bye`



This reinitializes the PCIe cards and other components and reboots the node.



If you encounter an issue during reboot, see [BURT 1494308 - Environment shutdown might be triggered during I/O module replacement](#)

10. Give back the controller module from the partner controller module. `storage failover giveback -ofnode target_node_name`

11. Enable automatic giveback if it was disabled: `storage failover modify -node local -auto-giveback true`

12. If you added:

If I/O module is a...	Then...
NIC module	Use the <code>storage port modify -node *<node name> -port *<port name> -mode network</code> command for each port.
Storage module	Install and cable your NS224 shelves, as described in Hot-add workflow .

13. Repeat these steps for controller B.

Replace I/O module - AFF A70, AFF A90

Use this procedure to replace a failed I/O module.

- You can use this procedure with all versions of ONTAP supported by your storage system.
- All other components in the storage system must be functioning properly; if not, you must contact technical support.

Step 1: Shut down the impaired controller

Shut down or take over the impaired controller using one of the following options.

Option 1: Most systems

To shut down the impaired controller, you must determine the status of the controller and, if necessary, take over the controller so that the healthy controller continues to serve data from the impaired controller storage.

About this task

- If you have a SAN system, you must have checked event messages (`cluster kernel-service show`) for the impaired controller SCSI blade. The `cluster kernel-service show` command (from `priv advanced` mode) displays the node name, quorum status of that node, availability status of that node, and operational status of that node.

Each SCSI-blade process should be in quorum with the other nodes in the cluster. Any issues must be resolved before you proceed with the replacement.

- If you have a cluster with more than two nodes, it must be in quorum. If the cluster is not in quorum or a healthy controller shows false for eligibility and health, you must correct the issue before shutting down the impaired controller; see [Synchronize a node with the cluster](#).

Steps

1. If AutoSupport is enabled, suppress automatic case creation by invoking an AutoSupport message:

```
system node autosupport invoke -node * -type all -message MAINT=<# of hours>h
```

The following AutoSupport message suppresses automatic case creation for two hours: `cluster1:>`

```
system node autosupport invoke -node * -type all -message MAINT=2h
```

2. Disable automatic giveback from the console of the healthy controller: `storage failover modify -node local -auto-giveback false`



When you see *Do you want to disable auto-giveback?*, enter *y*.

3. Take the impaired controller to the LOADER prompt:

If the impaired controller is displaying...	Then...
The LOADER prompt	Go to the next step.
Waiting for giveback...	Press Ctrl-C, and then respond <i>y</i> when prompted.
System prompt or password prompt	Take over or halt the impaired controller from the healthy controller: <code>storage failover takeover -ofnode <i>impaired_node_name</i></code> When the impaired controller shows Waiting for giveback..., press Ctrl-C, and then respond <i>y</i> .

Option 2: Controller is in a MetroCluster

To shut down the impaired controller, you must determine the status of the controller and, if necessary,

take over the controller so that the healthy controller continues to serve data from the impaired controller storage.

- If you have a cluster with more than two nodes, it must be in quorum. If the cluster is not in quorum or a healthy controller shows false for eligibility and health, you must correct the issue before shutting down the impaired controller; see [Synchronize a node with the cluster](#).
- If you have a MetroCluster configuration, you must have confirmed that the MetroCluster Configuration State is configured and that the nodes are in an enabled and normal state (`metrocluster node show`).

Steps

1. If AutoSupport is enabled, suppress automatic case creation by invoking an AutoSupport message:
`system node autosupport invoke -node * -type all -message MAINT=number_of_hours_downh`

The following AutoSupport message suppresses automatic case creation for two hours:

```
cluster1:*> system node autosupport invoke -node * -type all -message MAINT=2h
```

2. Disable automatic giveback from the console of the healthy controller: `storage failover modify -node local -auto-giveback false`
3. Take the impaired controller to the LOADER prompt:

If the impaired controller is displaying...	Then...
The LOADER prompt	Go to the next step.
Waiting for giveback...	Press Ctrl-C, and then respond <code>y</code> when prompted.
System prompt or password prompt (enter system password)	Take over or halt the impaired controller from the healthy controller: <code>storage failover takeover -ofnode <i>impaired_node_name</i></code> When the impaired controller shows Waiting for giveback..., press Ctrl-C, and then respond <code>y</code> .

Step 2: Replace a failed I/O module

To replace an I/O module, locate it within the controller module and follow the specific sequence of steps.

1. If you are not already grounded, properly ground yourself.
2. Unplug any cabling on the target I/O module.


Make sure to label the cables so that you know where they came from.

3. Rotate the cable management tray down by pulling the buttons on the inside of the cable management tray and rotating it down.

4. Remove the I/O module from the controller module:



This following illustration shows removing a horizontal and vertical I/O module. Typically, you will only remove one I/O module.

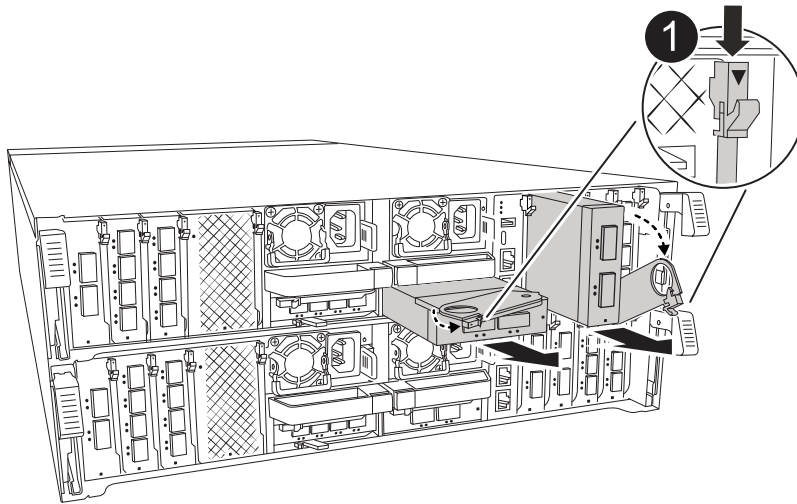

1	Cam locking button
----------	--------------------

- a. Depress the cam latch button.

The cam latch moves away from the controller module.

- b. Rotate the cam latch down as far as it will go. For horizontal modules, rotate the cam away from the module as far as it will go.
- c. Remove the module from the controller module by hooking your finger into the cam lever opening and pulling the module out of the controller module.

Make sure that you keep track of which slot the I/O module was in.

5. Set the I/O module aside.

6. Install the replacement I/O module into the target slot:

- a. Align the I/O module with the edges of the slot.
- b. Gently slide the module into the slot all the way into the controller module, and then rotate the cam latch all the way up to lock the module in place.

7. Cable the I/O module.

8. Repeat the remove and install steps to replace additional modules for the controller.

9. Rotate the cable management tray into the locked position.

Step 3: Reboot the controller

After you replace an I/O module, you must reboot the controller module.



If the new I/O module is not the same model as the failed module, you must first reboot the BMC.

Steps

1. Reboot the BMC if the replacement module is not the same model as the old module:
 - a. From the LOADER prompt, change to advanced privilege mode: *set privilege advanced*
 - b. Reboot the BMC: *sp reboot*
2. From the LOADER prompt, reboot the node: *bye*



This reinitializes the I/O cards and other components and reboots the node.



Be sure to exit Maintenance mode after completing the conversion.

3. Return the node to normal operation: *storage failover giveback -ofnode impaired_node_name*
4. If automatic giveback was disabled, reenable it: *storage failover modify -node local -auto-giveback true*

Step 4: Return the failed part to NetApp

Return the failed part to NetApp, as described in the RMA instructions shipped with the kit. See the [Part Return & Replacements](#) page for further information.

Copyright information

Copyright © 2024 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.