



Install and setup

ONTAP Systems

NetApp
January 18, 2022

Table of Contents

- Install and setup 1
 - Start here: Choose your installation and setup experience 1
 - Quick steps - AFF A800 1
 - Videos - AFF A800 1
 - Detailed steps - AFF A800 1

Install and setup

Start here: Choose your installation and setup experience

For most configurations (including ASA configurations), you can choose from different content formats.

- [Quick steps](#)

A printable PDF of step-by-step instructions with live links to additional content.

- [Video steps](#)

Video step-by-step instructions.

- [Detailed steps](#)

Online step-by-step instructions with live links to additional content.

If your system is in a MetroCluster IP configuration, see the [Install MetroCluster IP Configuration](#) instructions.

Quick steps - AFF A800

This guide gives graphic instructions for a typical installation of your system from racking and cabling, through initial system bring-up. Use the [AFF A800 Systems Installation and Setup Instructions](#) if you are familiar with installing NetApp systems.

Videos - AFF A800

There are two videos - one showing how to rack and cable your system and one showing an example of using the System Manager Guided Setup to perform initial system configuration.

Video one of two: Hardware installation and cabling

The following video shows how to install and cable your new system.

[Installation and Setup of an AFF A800](#)

Video two of two: Perform end-to-end software configuration

The following video shows end-to-end software configuration for systems running ONTAP 9.2 and later.

[NetApp video: Software configuration for vSphere NAS datastores for FAS/AFF systems running ONTAP 9.2](#)

Detailed steps - AFF A800

This section gives detailed step-by-step instructions for installing an AFF A800 system.

Step 1: Prepare for installation

To install your AFF A800 system, you need to create an account and register the system. You also need to inventory the appropriate number and type of cables for your system and collect specific network information.

You need to have access to the [NetApp Hardware Universe](#) (HWU) for information about site requirements as well as additional information on your configured system. You might also want to have access to the [Release Notes for your version of ONTAP](#) for more information about this system.

You need to provide the following at your site:

- Rack space for the storage system
- Phillips #2 screwdriver
- Additional networking cables to connect your system to your network switch and laptop or console with a Web browser
 1. Unpack the contents of all boxes.
 2. Record the system serial number from the controllers.









3. Set up your account:
 - a. Log in to your existing account or create an account.
 - b. Register your system.

[NetApp Product Registration](#)

4. Inventory and make a note of the number and types of cables you received.

The following table identifies the types of cables you might receive. If you receive a cable not listed in the table, see the [NetApp Hardware Universe](#) to locate the cable and identify its use.

Connector type	Part number and length	Type of cable...	For...		
100 GbE cable	X66211A-05 (112-00595), 0.5m		HA interconnect		
	X66211A-05 (112-00595), 0.5m; X66211-1 (112-00573), 1m		Cluster interconnect network		
	X66211-2 (112-00574), 2m; X66211-5 (112-00576), 5m		Storage, Data		
10 GbE cable	X6566B-3-R6 (112-00300), 3m; X6566B-5-R6 (112-00301), 5m		Data		
	25 GbE cable		X66240A-2 (112-00598), 2m; X66240A-5 (112-00600), 5m	Data	
RJ-45 (order dependent)			Not applicable		Management
Fibre Channel	X66250-2 (112-00342) 2m; X66250-5 (112-00344) 5m; X66250-15 (112-00346) 15m; X66250-30 (112-00347) 30m				
	Micro-USB console cable		Not applicable		Console connection during software setup
	Power cables		Not applicable		Powering up the system

5. Download and complete the [Cluster Configuration Worksheet](#).

Step 2: Install the hardware

You need to install your system in a 4-post rack or NetApp system cabinet, as applicable.

1. Install the rail kits, as needed.

[Installing SuperRail into a four-post rack](#)

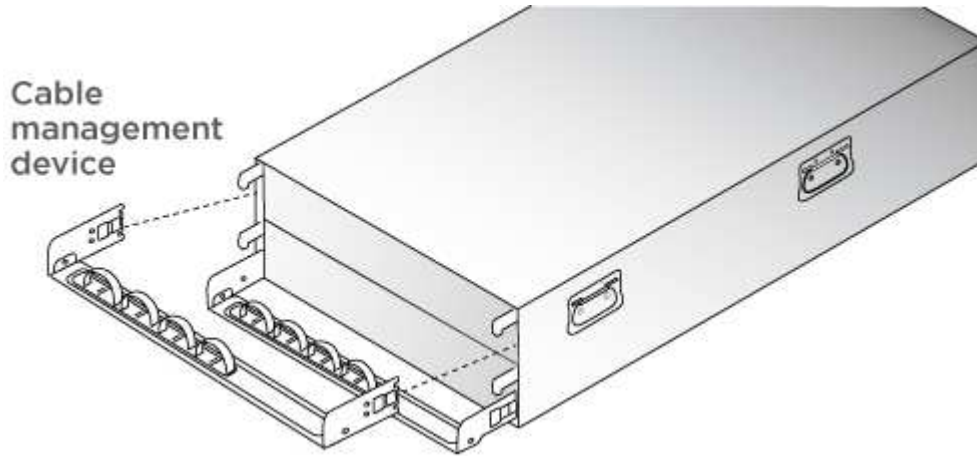
2. Install and secure your system using the instructions included with the rail kit.



You need to be aware of the safety concerns associated with the weight of the system.



3. Attach cable management devices (as shown).



4. Place the bezel on the front of the system.

Step 3: Cable controllers

There is required cabling for your platform's cluster using the two-node switchless cluster method or the cluster interconnect network method. There is optional cabling to the Fibre Channel or iSCSI host networks or direct-attached storage. This cabling is not exclusive; you can have cable to a host network and storage.

Required cabling: Cable controllers to a cluster

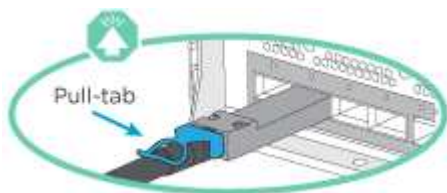
Cable the controllers to a cluster by using the two-node switchless cluster method or by using the cluster interconnect network.

Option 1: Cable a two-node switchless cluster

Management network ports on the controllers are connected to switches. The HA interconnect and cluster interconnect ports are cabled on both controllers.

Contact your network administrator for information about connecting the system to the switches.

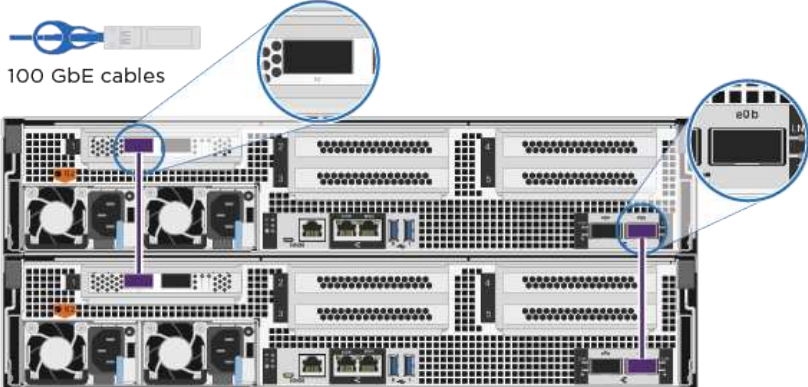
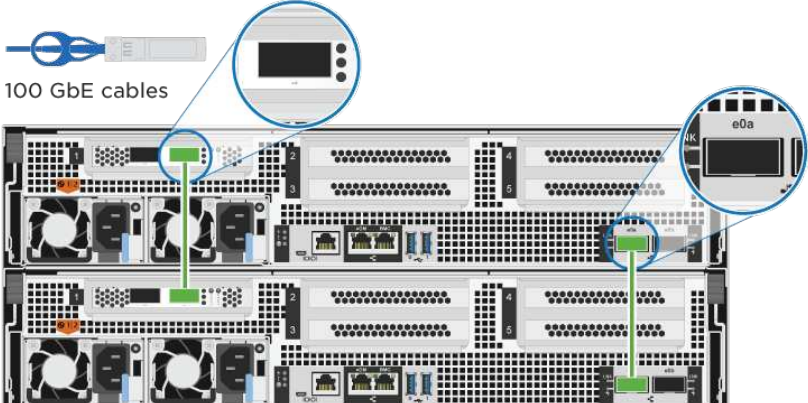
Be sure to check the illustration arrow for the proper cable connector pull-tab orientation.


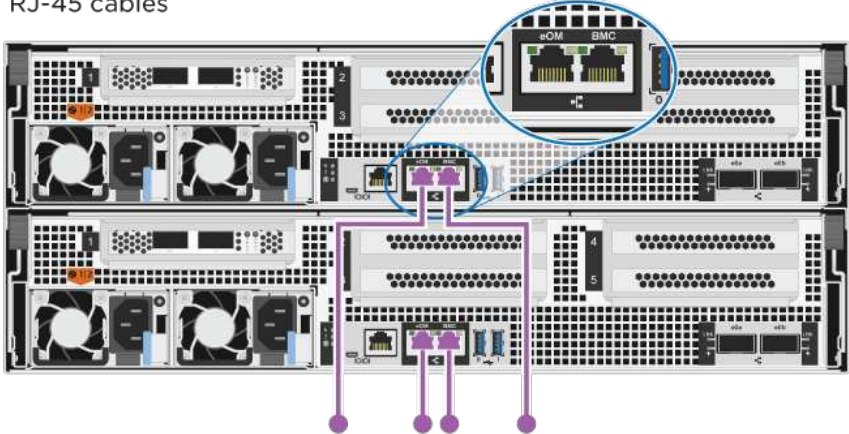



As you insert the connector, you should feel it click into place; if you do not feel it click, remove it, turn it around and try again.

1. Use the animation or the step-by-step instructions to complete the cabling between the controllers and to the switches:

Cable a two-node switchless cluster

Step	Perform on each controller module
1	<p>Cable the HA interconnect ports:</p> <ul style="list-style-type: none">• e0b to e0b• e1b to e1b  <p>100 GbE cables</p>
2	<p>Cable the cluster interconnect ports:</p> <ul style="list-style-type: none">• e0a to e0a• e1a to e1a  <p>100 GbE cables</p>

Step	Perform on each controller module
<p>3</p>	<p>Cable the management ports to the management network switches</p> <p></p> <p>RJ-45 cables</p> 
<p></p>	<p>DO NOT plug in the power cords at this point.</p>

2. To perform optional cabling, see:

- [\[Option 1: Connect to a Fibre Channel host\]](#)
- [\[Option 2: Connect to a 10GbE host\]](#)
- [\[Option 3: Connect to a single direct-attached NS224 drive shelf\]](#)
- [\[Option 4: Connect to two direct-attached NS224 drive shelves\]](#)

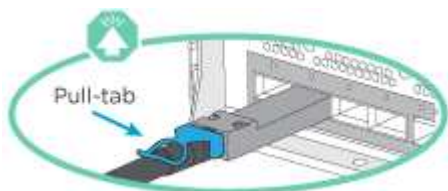
3. To complete setting up your system, see [Step 4: Complete system setup and configuration](#).

Option 2: Cable a switched cluster

Cluster interconnect and management network ports on the controllers are connected to switches while the HA interconnect ports are cabled on both controllers.

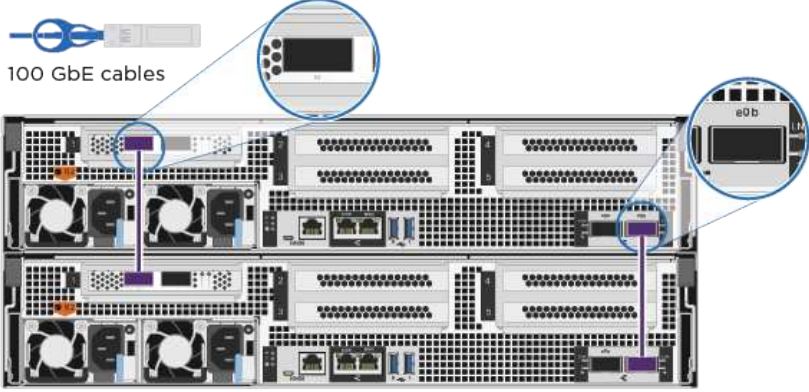
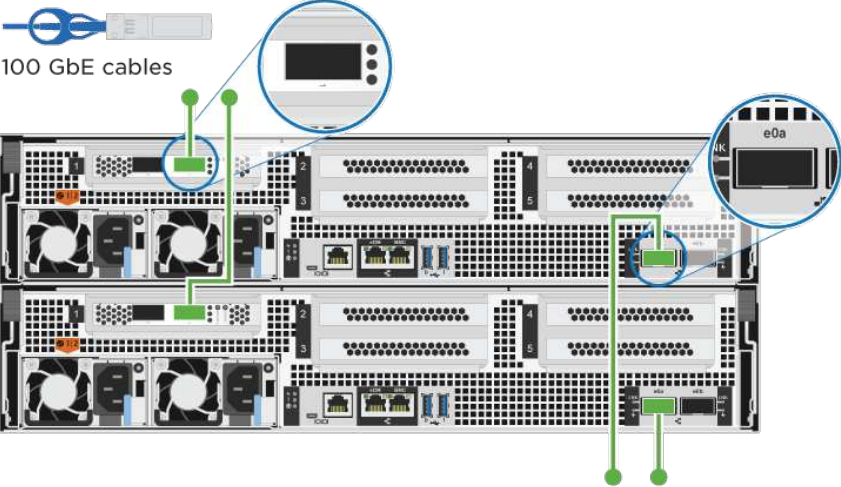
Contact your network administrator for information about connecting the system to the switches.


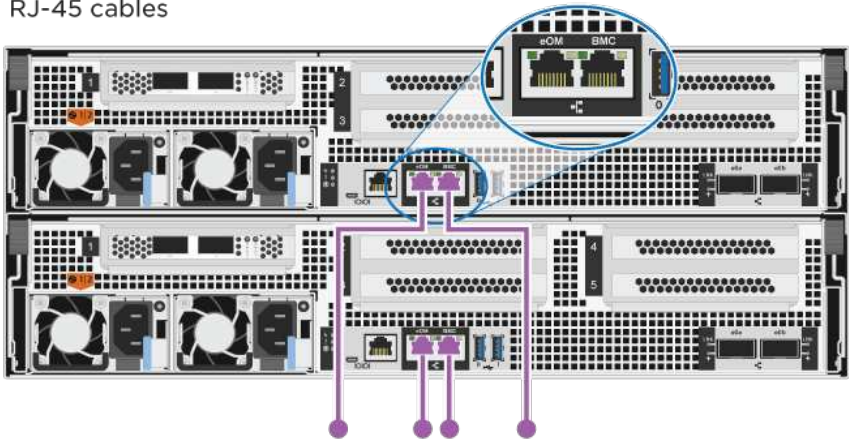

Be sure to check the illustration arrow for the proper cable connector pull-tab orientation.



As you insert the connector, you should feel it click into place; if you do not feel it click, remove it, turn it around and try again.

1. Use the animation or the step-by-step instructions to complete the cabling between the controllers and to the switches:

Step	Perform on each controller module
1	<p>Cable the HA interconnect ports:</p> <ul style="list-style-type: none">• e0b to e0b• e1b to e1b  <p>100 GbE cables</p>
2	<p>Cable the cluster interconnect ports to the 100 GbE cluster interconnect switches. e0a e1a</p>  <p>100 GbE cables</p>

Step	Perform on each controller module
<p>3</p>	<p>Cable the management ports to the management network switches</p> <p></p> <p>RJ-45 cables</p> 
	<p>DO NOT plug in the power cords at this point.</p>

2. To perform optional cabling, see:

- [\[Option 1: Connect to a Fibre Channel host\]](#)
- [\[Option 2: Connect to a 10GbE host\]](#)
- [\[Option 3: Connect to a single direct-attached NS224 drive shelf\]](#)
- [\[Option 4: Connect to two direct-attached NS224 drive shelves\]](#)

3. To complete setting up your system, see [Step 4: Complete system setup and configuration](#).

Optional cabling: Cable configuration-dependent options

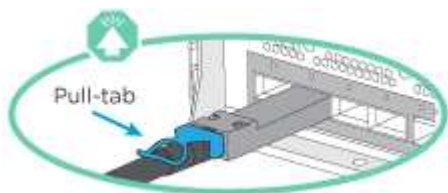
You have configuration-dependent optional cabling to the Fibre Channel or iSCSI host networks or direct-attached storage. This cabling is not exclusive; you can have cabling to a host network and storage.

Option 1: Cable to a Fibre Channel host network

Fibre Channel ports on the controllers are connected to Fibre Channel host network switches.

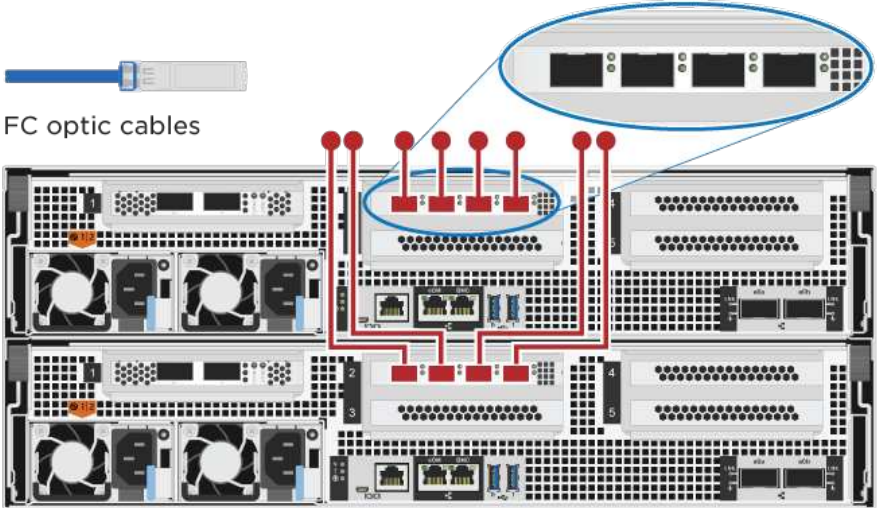
Contact your network administrator for information about connecting the system to the switches.

Be sure to check the illustration arrow for the proper cable connector pull-tab orientation.





As you insert the connector, you should feel it click into place; if you do not feel it click, remove it, turn it around and try again.

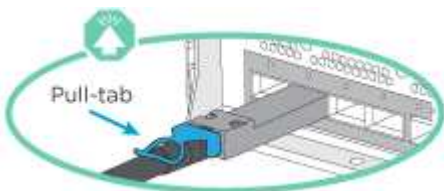
Step	Perform on each controller module
1	<p>Cable ports 2a through 2d to the FC host switches.</p>  <p>FC optic cables</p>
2	<p>To perform other optional cabling, choose from:</p> <ul style="list-style-type: none"> • [Option 3: Connect to a single direct-attached NS224 drive shelf] • [Option 4: Connect to two direct-attached NS224 drive shelves]
3	<p>To complete setting up your system, see Step 4: Complete system setup and configuration.</p>

Option 2: Cable to a 10GbE host network

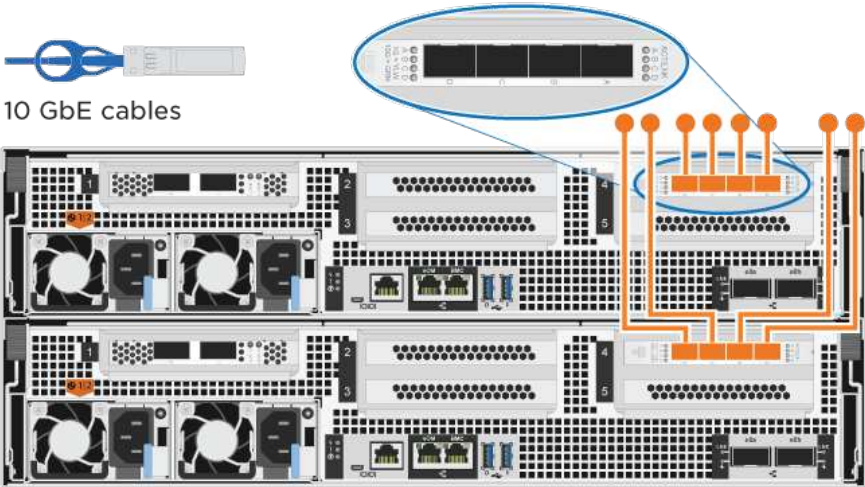
10GbE ports on the controllers are connected to 10GbE host network switches.

Contact your network administrator for information about connecting the system to the switches.

Be sure to check the illustration arrow for the proper cable connector pull-tab orientation.



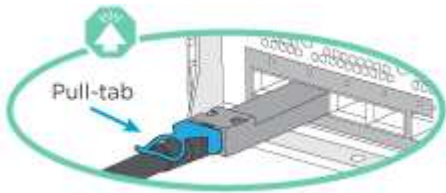
As you insert the connector, you should feel it click into place; if you do not feel it click, remove it, turn it around and try again.

Step	Perform on each controller module
1	<p>Cable ports e4a through e4d to the 10GbE host network switches.</p>  <p>10 GbE cables</p>
2	<p>To perform other optional cabling, choose from:</p> <ul style="list-style-type: none"> • [Option 3: Connect to a single direct-attached NS224 drive shelf] • [Option 4: Connect to two direct-attached NS224 drive shelves]
3	<p>To complete setting up your system, see Step 4: Complete system setup and configuration.</p>

Option 3: Cable the controllers to a single drive shelf

You must cable each controller to the NSM modules on the NS224 drive shelf.

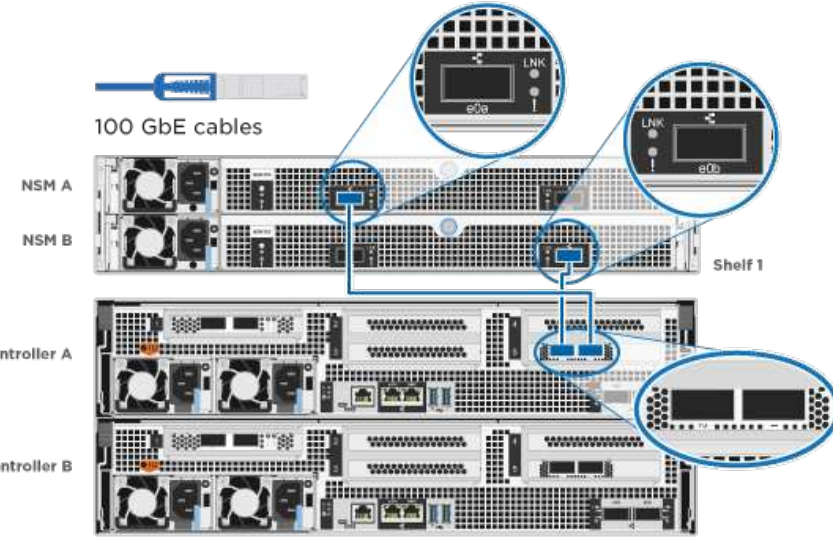
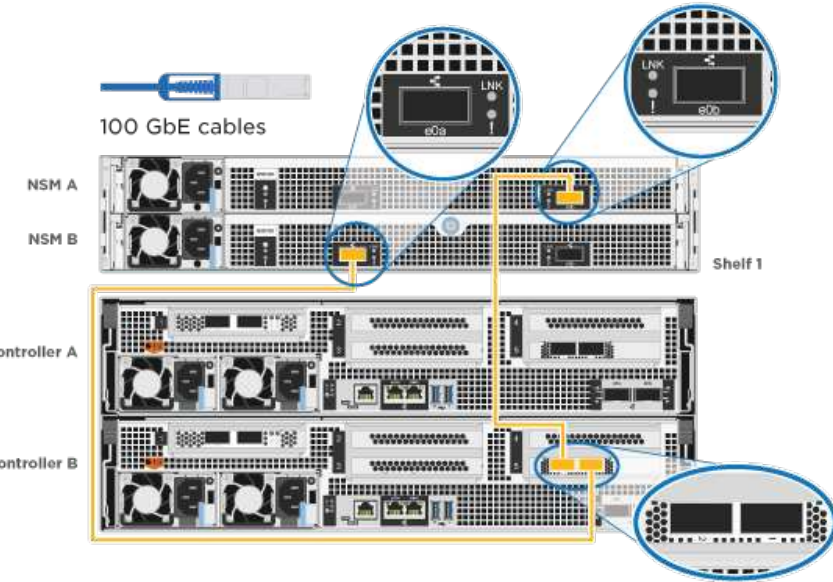
Be sure to check the illustration arrow for the proper cable connector pull-tab orientation.



As you insert the connector, you should feel it click into place; if you do not feel it click, remove it, turn it around and try again.

1. Use the animation or the step-by-step instructions to cable your controller modules to a single shelf.

[Cabling the controllers to a single drive shelf](#)

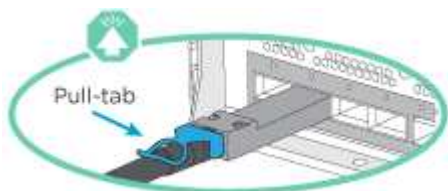
Step	Perform on each controller module
<p>1</p>	<p>Cable controller A to the shelf:</p>  <p>100 GbE cables</p> <p>NSM A</p> <p>NSM B</p> <p>Shelf 1</p> <p>Controller A</p> <p>Controller B</p>
<p>2</p>	<p>Cable controller B to the shelf:</p>  <p>100 GbE cables</p> <p>NSM A</p> <p>NSM B</p> <p>Shelf 1</p> <p>Controller A</p> <p>Controller B</p>

2. To complete setting up your system, see [Step 4: Complete system setup and configuration](#).

Option 4: Cable the controllers to two drive shelves

You must cable each controller to the NSM modules on both NS224 drive shelves.

Be sure to check the illustration arrow for the proper cable connector pull-tab orientation.

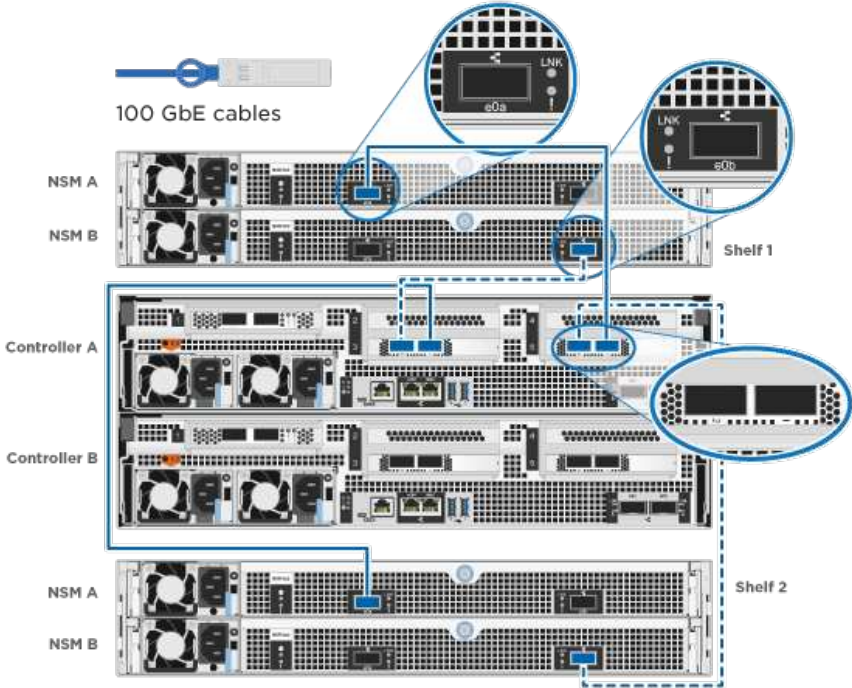


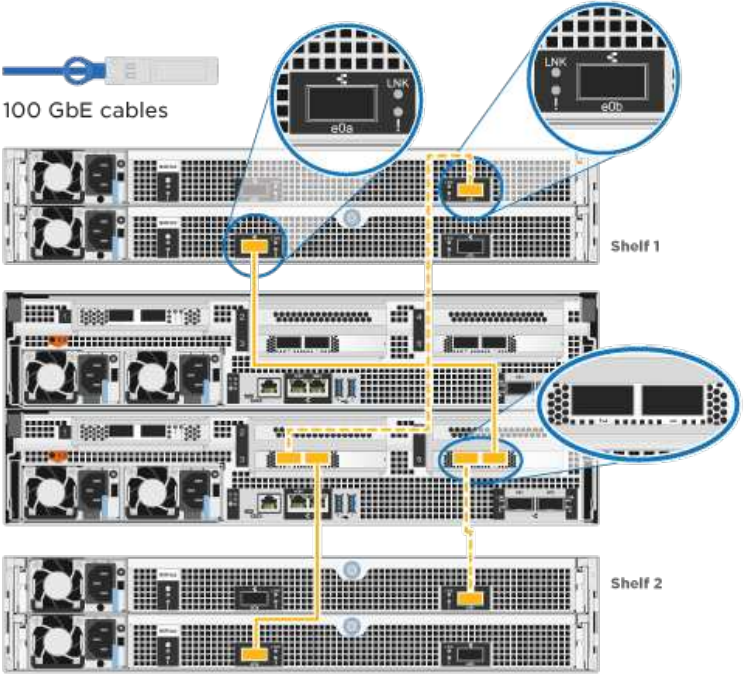


As you insert the connector, you should feel it click into place; if you do not feel it click, remove it, turn it around and try again.

1. Use the following animation or the written steps to cable your controllers to two drive shelves.

Cabling the controllers to two drive shelves

Step	Perform on each controller module
1	<p>Cable controller A to the shelves:</p>  <p>100 GbE cables</p> <p>NSM A</p> <p>NSM B</p> <p>Shelf 1</p> <p>Controller A</p> <p>Controller B</p> <p>NSM A</p> <p>NSM B</p> <p>Shelf 2</p>

Step	Perform on each controller module
<p>2</p>	<p>Cable controller B to the shelves:</p>  <p>100 GbE cables</p> <p>NSM A NSM B Shelf 1</p> <p>Controller A Controller B</p> <p>NSM A NSM B Shelf 2</p>

2. To complete setting up your system, see [Step 4: Complete system setup and configuration](#).

Step 4: Complete system setup and configuration

Complete the system setup and configuration using cluster discovery with only a connection to the switch and laptop, or by connecting directly to a controller in the system and then connecting to the management switch.

Option 1: Complete system setup and configuration if network discovery is enabled

If you have network discovery enabled on your laptop, you can complete system setup and configuration using automatic cluster discovery.

1. Plug the power cords into the controller power supplies, and then connect them to power sources on different circuits.

The system begins to boot. Initial booting may take up to eight minutes.

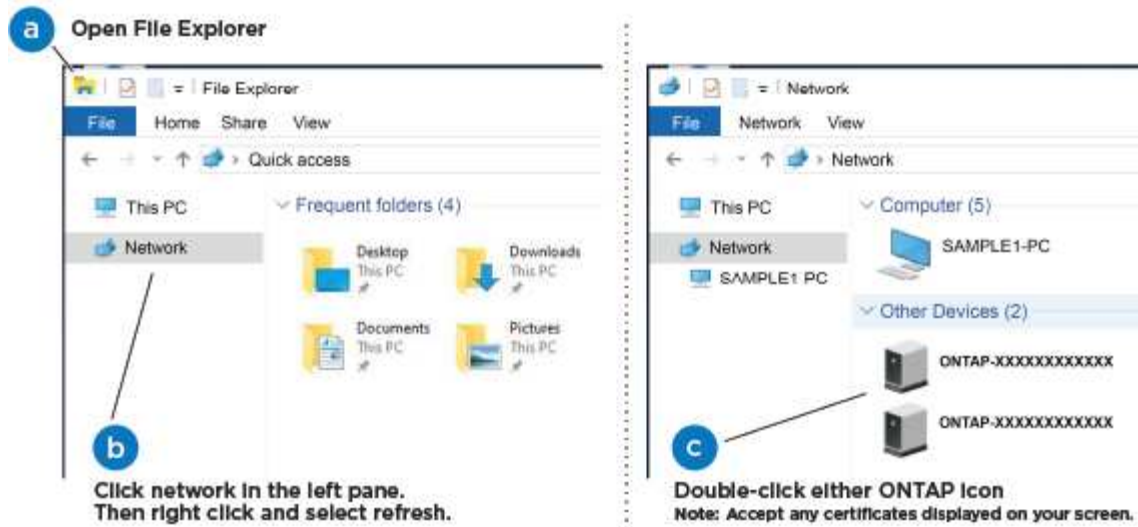
2. Make sure that your laptop has network discovery enabled.

See your laptop's online help for more information.


3. Use the following animation to connect your laptop to the Management switch.

[Connecting your laptop to the Management switch](#)

4. Select an ONTAP icon listed to discover:



- a. Open File Explorer.
- b. Click **Network** in the left pane.
- c. Right-click and select **refresh**.
- d. Double-click either ONTAP icon and accept any certificates displayed on your screen.

 XXXXX is the system serial number for the target node.


System Manager opens.

5. Use System Manager guided setup to configure your system using the data you collected in the [ONTAP Configuration Guide](#).
6. Verify the health of your system by running Config Advisor.
7. After you have completed the initial configuration, go to the [ONTAP & ONTAP System Manager Documentation Resources](#) page for information about configuring additional features in ONTAP.

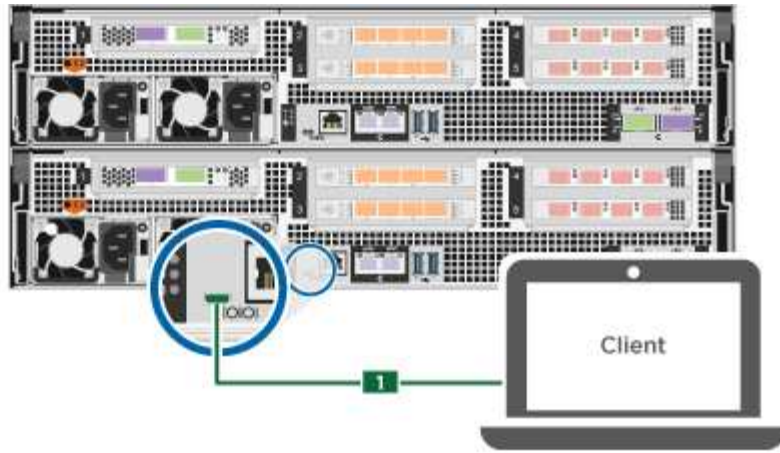
Option 2: Complete system setup and configuration if network discovery is not enabled

If network discovery is not enabled on your laptop, you must complete the configuration and setup using this task.

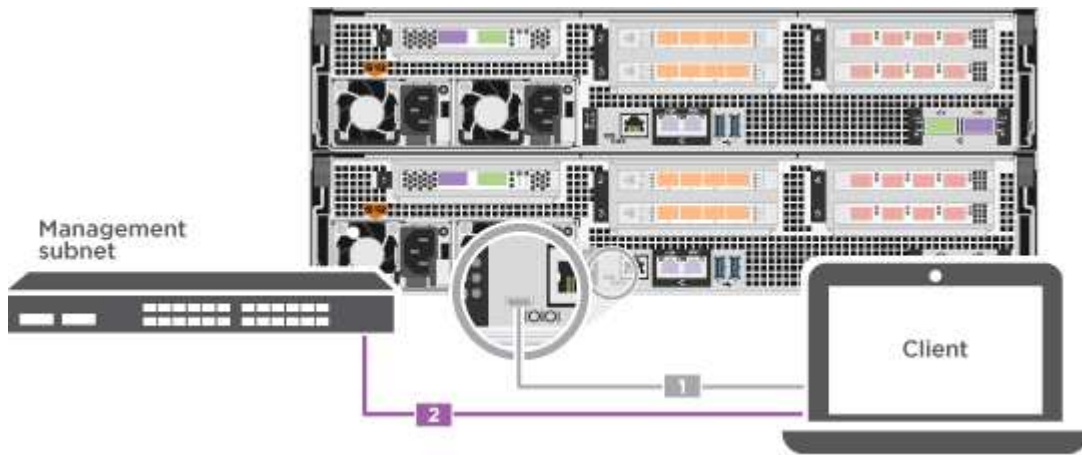
1. Cable and configure your laptop or console:
 - a. Set the console port on the laptop or console to 115,200 baud with N-8-1.

 See your laptop or console's online help for how to configure the console port.

- b. Connect the console cable to the laptop or console, and connect the console port on the controller using the console cable that came with your system.



c. Connect the laptop or console to the switch on the management subnet.



d. Assign a TCP/IP address to the laptop or console, using one that is on the management subnet.

2. Plug the power cords into the controller power supplies, and then connect them to power sources on different circuits.

The system begins to boot. Initial booting may take up to eight minutes.

3. Assign an initial node management IP address to one of the nodes.

If the management network has DHCP...	Then...
Configured	Record the IP address assigned to the new controllers.
Not configured	<p>a. Open a console session using PuTTY, a terminal server, or the equivalent for your environment.</p> <div style="display: flex; align-items: center; margin: 10px 0;"> <div style="border: 1px solid black; border-radius: 50%; width: 30px; height: 30px; display: flex; align-items: center; justify-content: center; margin-right: 10px;"> i </div> <div> <p>Check your laptop or console's online help if you do not know how to configure PuTTY.</p> </div> </div> <p>b. Enter the management IP address when prompted by the script.</p>

4. Using System Manager on your laptop or console, configure your cluster:

a. Point your browser to the node management IP address.



The format for the address is `https://x.x.x.x`.

b. Configure the system using the data you collected in the [ONTAP Configuration Guide](#).

5. Verify the health of your system by running Config Advisor.

6. After you have completed the initial configuration, go to the [ONTAP & ONTAP System Manager Documentation Resources](#) page for information about configuring additional features in ONTAP.

Copyright Information

Copyright © 2022 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.