



# **Manage nodes remotely using the SP/BMC**

## **ONTAP 9**

NetApp  
January 23, 2026

This PDF was generated from <https://docs.netapp.com/us-en/ontap/system-admin/manage-node-remotely-sp-bmc-concept.html> on January 23, 2026. Always check [docs.netapp.com](https://docs.netapp.com) for the latest.

# Table of Contents

Manage nodes remotely using the SP/BMC . . . . .	1
Manage an ONTAP node remotely using the SP/BMC . . . . .	1
Remote node management with the ONTAP Service Processor . . . . .	1
Use the ONTAP Baseboard Management Controller to remotely manage a node . . . . .	3
Manage ONTAP SP/BMC firmware updates . . . . .	3
ONTAP SP/BMC and network interface use for firmware updates . . . . .	5
Access the ONTAP Service Processor using a cluster user account . . . . .	5
Access the ONTAP SP/BMC of a node from an administration host . . . . .	6
Access the ONTAP SP/BMC of a node from the system console . . . . .	7
Learn how the ONTAP SP CLI, SP console, and system console sessions are related . . . . .	8
Add the administration host IP address to access the ONTAP Service Processor . . . . .	9
View the help information in the ONTAP SP/BMC CLI . . . . .	10
ONTAP commands for remote node management . . . . .	12
ONTAP node health monitoring using threshold-based SP sensor readings and status . . . . .	18
ONTAP SP sensor status values in the system sensor command output . . . . .	20
System_FW_Status . . . . .	21
System_Watchdog . . . . .	22
PSU1_Input_Type and PSU2_Input_Type . . . . .	23
ONTAP commands for Service Processor management . . . . .	23
Commands for managing the SP network configuration . . . . .	23
Commands for managing the SP firmware image . . . . .	25
Commands for managing SSH access to the SP . . . . .	26
Commands for general SP administration . . . . .	26
ONTAP commands for BMC management . . . . .	27
Supported CLI commands for the ONTAP Baseboard Management Controller . . . . .	28

# Manage nodes remotely using the SP/BMC

## Manage an ONTAP node remotely using the SP/BMC

You can manage a node remotely using an onboard controller, called a Service Processor (SP) or Baseboard Management Controller (BMC). This remote management controller is included in all current platform models. The controller stays operational regardless of the operating state of the node.

For a full breakdown of platform SP and BMC support, refer to the [Support Matrix](#) on the NetApp Support site.

## Remote node management with the ONTAP Service Processor

The Service Processor (SP) is a remote management device that enables you to access, monitor, and troubleshoot a node remotely.

The key capabilities of the SP include the following:

- The SP enables you to access a node remotely to diagnose, shut down, power-cycle, or reboot the node, regardless of the state of the node controller.

The SP is powered by a standby voltage, which is available as long as the node has input power from at least one of its power supplies.

You can log in to the SP by using a Secure Shell client application from an administration host. You can then use the SP CLI to monitor and troubleshoot the node remotely. In addition, you can use the SP to access the serial console and run ONTAP commands remotely.

You can access the SP from the serial console or access the serial console from the SP. The SP enables you to open both an SP CLI session and a separate console session simultaneously.

For instance, when a temperature sensor becomes critically high or low, ONTAP triggers the SP to shut down the motherboard gracefully. The serial console becomes unresponsive, but you can still press Ctrl-G on the console to access the SP CLI. You can then use the `system power on` or `system power cycle` command from the SP to power on or power-cycle the node.

- The SP monitors environmental sensors and logs events to help you take timely and effective service actions.

The SP monitors environmental sensors such as the node temperatures, voltages, currents, and fan speeds. When an environmental sensor has reached an abnormal condition, the SP logs the abnormal readings, notifies ONTAP of the issue, and sends alerts and “down system” notifications as necessary through an AutoSupport message, regardless of whether the node can send AutoSupport messages.

The SP also logs events such as boot progress, Field Replaceable Unit (FRU) changes, events generated by ONTAP, and SP command history. You can manually invoke an AutoSupport message to include the SP log files that are collected from a specified node.

Other than generating these messages on behalf of a node that is down and attaching additional diagnostic information to AutoSupport messages, the SP has no effect on the AutoSupport functionality. The

AutoSupport configuration settings and message content behavior are inherited from ONTAP.



The SP does not rely on the `-transport` parameter setting of the `system node autosupport modify` command to send notifications. The SP only uses the Simple Mail Transport Protocol (SMTP) and requires its host's AutoSupport configuration to include mail host information.

If SNMP is enabled, the SP generates SNMP traps to configured trap hosts for all “down system” events.

- The SP has a nonvolatile memory buffer that stores up to 4,000 events in a system event log (SEL) to help you diagnose issues.

The SEL stores each audit log entry as an audit event. It is stored in onboard flash memory on the SP. The event list from the SEL is automatically sent by the SP to specified recipients through an AutoSupport message.

The SEL contains the following information:

- Hardware events detected by the SP—for example, sensor status about power supplies, voltage, or other components
- Errors detected by the SP—for example, a communication error, a fan failure, or a memory or CPU error
- Critical software events sent to the SP by the node—for example, a panic, a communication failure, a boot failure, or a user-triggered “down system” as a result of issuing the `SP system reset` or `system power cycle` command
- The SP monitors the serial console regardless of whether administrators are logged in or connected to the console.


When messages are sent to the console, the SP stores them in the console log. The console log persists as long as the SP has power from either of the node power supplies. Because the SP operates with standby power, it remains available even when the node is power-cycled or turned off.

- Hardware-assisted takeover is available if the SP is configured.
- The SP API service enables ONTAP to communicate with the SP over the network.

The service enhances ONTAP management of the SP by supporting network-based functionality such as using the network interface for the SP firmware update, enabling a node to access another node's SP functionality or system console, and uploading the SP log from another node.

You can modify the configuration of the SP API service by changing the port the service uses, renewing the SSL and SSH certificates that are used by the service for internal communication, or disabling the service entirely.

The following diagram illustrates access to ONTAP and the SP of a node. The SP interface is accessed through the Ethernet port (indicated by a wrench icon on the rear of the chassis):

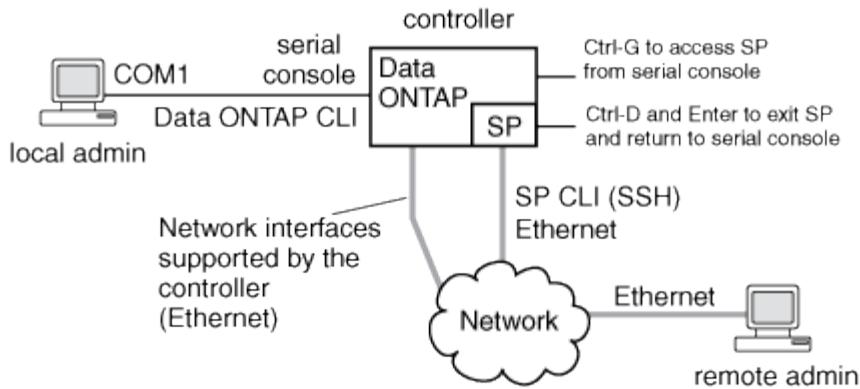

## Use the ONTAP Baseboard Management Controller to remotely manage a node

On certain hardware platforms, software is customized to support a new onboard controller in the Baseboard Management Controller (BMC). The BMC has command-line interface (CLI) commands you can use to manage the device remotely.

The BMC works similarly to the Service Processor (SP) and uses many of the same commands. The BMC allows you to do the following:

- Configure the BMC network settings.
- Access a node remotely and perform node management tasks such as diagnose, shut down, power-cycle, or reboot the node.

There are some differences between the SP and BMC:

- The BMC completely controls the environmental monitoring of power supply elements, cooling elements, temperature sensors, voltage sensors, and current sensors. The BMC reports sensor information to ONTAP through IPMI.
- Some of the high-availability (HA) and storage commands are different.
- The BMC does not send AutoSupport messages.

Automatic firmware updates are also available when running ONTAP with the following requirements:

- BMC firmware revision 1.15 or later must be installed.



A manual update is required to upgrade BMC firmware from 1.12 to 1.15 or later.

- BMC automatically reboots after a firmware update is completed.



Node operations are not impacted during a BMC reboot.

## Manage ONTAP SP/BMC firmware updates

ONTAP includes an SP firmware image that is called the *baseline image*. If a new version

of the SP firmware becomes subsequently available, you have the option to download it and update the SP firmware to the downloaded version without upgrading the ONTAP version.



This topic applies to both the SP and the BMC.

ONTAP offers the following methods for managing SP firmware updates:

- The SP automatic update functionality is enabled by default, allowing the SP firmware to be automatically updated in the following scenarios:
  - When you upgrade to a new version of ONTAP

The ONTAP upgrade process automatically includes the SP firmware update, provided that the SP firmware version bundled with ONTAP is newer than the SP version running on the node.



ONTAP detects a failed SP automatic update and triggers a corrective action to retry the SP automatic update up to three times. If all three retries fail, see the [NetApp Knowledge Base: Health Monitor SPAutoUpgradeFailedMajorAlert SP upgrade fails - AutoSupport Message](#).

- When you download a version of the SP firmware from the NetApp Support Site and the downloaded version is newer than the one that the SP is currently running
- When you downgrade or revert to an earlier version of ONTAP

The SP firmware is automatically updated to the newest compatible version that is supported by the ONTAP version you reverted or downgraded to. A manual SP firmware update is not required.

You have the option to disable the SP automatic update functionality by using the `system service-processor image modify` command. However, it is recommended that you leave the functionality enabled. Disabling the functionality can result in suboptimal or nonqualified combinations between the ONTAP image and the SP firmware image.

- ONTAP enables you to trigger an SP update manually and specify how the update should take place by using the `system service-processor image update` command.

You can specify the following options:

- The SP firmware package to use (`-package`)

You can update the SP firmware to a downloaded package by specifying the package file name. The `advance system image package show` command displays all package files (including the files for the SP firmware package) that are available on a node.

- Whether to use the baseline SP firmware package for the SP update (`-baseline`)

You can update the SP firmware to the baseline version that is bundled with the currently running version of ONTAP.



If you use some of the more advanced update options or parameters, the BMC's configuration settings may be temporarily cleared. After reboot, it can take up to 10 minutes for ONTAP to restore the BMC configuration.

- ONTAP enables you to display the status for the latest SP firmware update triggered from ONTAP by using the `system service-processor image update-progress show` command.

Any existing connection to the SP is terminated when the SP firmware is being updated. This is the case whether the SP firmware update is automatically or manually triggered.

#### Related information

[NetApp Downloads: System Firmware and Diagnostics](#)

## ONTAP SP/BMC and network interface use for firmware updates

An SP firmware update that is triggered from ONTAP with the SP running version 1.5, 2.5, 3.1, or later supports using an IP-based file transfer mechanism over the SP network interface.



This topic applies to both the SP and the BMC.

An SP firmware update over the network interface is faster than an update over the serial interface. It reduces the maintenance window during which the SP firmware is being updated, and it is also nondisruptive to ONTAP operation. The SP versions that support this capability are included with ONTAP. They are also available on the NetApp Support Site and can be installed on controllers that are running a compatible version of ONTAP.

When you are running SP version 1.5, 2.5, 3.1, or later, the following firmware upgrade behaviors apply:

- An SP firmware update that is *automatically* triggered by ONTAP defaults to using the network interface for the update; however, the SP automatic update switches to using the serial interface for the firmware update if one of the following conditions occurs:
  - The SP network interface is not configured or not available.
  - The IP-based file transfer fails.
  - The SP API service is disabled.

Regardless of the SP version you are running, an SP firmware update triggered from the SP CLI always uses the SP network interface for the update.

#### Related information

[NetApp Downloads: System Firmware and Diagnostics](#)

## Access the ONTAP Service Processor using a cluster user account

When you try to access the SP, you are prompted for credential. Cluster user accounts that are created with the `service-processor` application type have access to the SP CLI on any node of the cluster. SP user accounts are managed from ONTAP and authenticated by password. Beginning with ONTAP 9.9.1, SP user accounts must have the `admin` role.

User accounts for accessing the SP are managed from ONTAP instead of the SP CLI. A cluster user account

can access the SP if it is created with the `-application` parameter of the `security login create` command set to `service-processor` and the `-authmethod` parameter set to `password`. The SP supports only password authentication.

You must specify the `-role` parameter when creating an SP user account.

- In ONTAP 9.9.1 and later releases, you must specify `admin` for the `-role` parameter, and any modifications to an account require the `admin` role. Other roles are no longer permitted for security reasons.
  - If you are upgrading to ONTAP 9.9.1 or later releases, see [Change in user accounts that can access the Service Processor](#).
  - If you are reverting to ONTAP 9.8 or earlier releases, see [Verify user accounts that can access the Service Processor](#).
- In ONTAP 9.8 and earlier releases, any role can access the SP, but `admin` is recommended.

By default, the cluster user account named “admin” includes the `service-processor` application type and has access to the SP.

ONTAP prevents you from creating user accounts with names that are reserved for the system (such as “root” and “naroot”). You cannot use a system-reserved name to access the cluster or the SP.

You can display current SP user accounts by using the `-application` `service-processor` parameter of the `security login show` command.

Learn more about `security login show` in the [ONTAP command reference](#).

## Access the ONTAP SP/BMC of a node from an administration host

You can log in to the SP of a node from an administration host to perform node management tasks remotely.

### Before you begin

The following conditions must be met:

- The administration host you use to access the SP must support SSHv2.
- Your user account must already be set up for accessing the SP.

To access the SP, your user account must have been created with the `-application` parameter of the `security login create` command set to `service-processor` and the `-authmethod` parameter set to `password`.



This task applies to both the SP and the BMC.

If the SP is configured to use an IPv4 or IPv6 address, and if five SSH login attempts from a host fail consecutively within 10 minutes, the SP rejects SSH login requests and suspends the communication with the IP address of the host for 15 minutes. The communication resumes after 15 minutes, and you can try to log in to the SP again.

ONTAP prevents you from creating or using system-reserved names (such as “root” and “naroot”) to access the cluster or the SP.

### Steps

1. From the administration host, log in to the SP:

```
ssh username@SP_IP_address
```

2. When you are prompted, enter the password for `username`.

The SP prompt appears, indicating that you have access to the SP CLI.

### Examples of SP access from an administration host

The following example shows how to log in to the SP with a user account `joe`, which has been set up to access the SP.

```
[admin_host]$ ssh joe@192.168.123.98
joe@192.168.123.98's password:
SP>
```

The following examples show how to use the IPv6 global address or IPv6 router-advertised address to log in to the SP on a node that has SSH set up for IPv6 and the SP configured for IPv6.

```
[admin_host]$ ssh joe@fd22:8b1e:b255:202::1234
joe@fd22:8b1e:b255:202::1234's password:
SP>
```

```
[admin_host]$ ssh joe@fd22:8b1e:b255:202:2a0:98ff:fe01:7d5b
joe@fd22:8b1e:b255:202:2a0:98ff:fe01:7d5b's password:
SP>
```

## Access the ONTAP SP/BMC of a node from the system console

You can access the SP from the system console (also called *serial console*) to perform monitoring or troubleshooting tasks.

### About this task

This task applies to both the SP and the BMC.

### Steps

1. Access the SP CLI from the system console by pressing Ctrl-G at the prompt.
2. Log in to the SP CLI when you are prompted.

The SP prompt appears, indicating that you have access to the SP CLI.

3. Exit the SP CLI and return to the system console by pressing Ctrl-D, and then press Enter.

#### **Example of accessing the SP CLI from the system console**

The following example shows the result of pressing Ctrl-G from the system console to access the SP CLI. The `help system power` command is entered at the SP prompt, followed by pressing Ctrl-D and then Enter to return to the system console.

```
cluster1::>
```

(Press Ctrl-G to access the SP CLI.)

```
Switching console to Service Processor
Service Processor Login:
Password:
SP>
SP> help system power
system power cycle - power the system off, then on
system power off - power the system off
system power on - power the system on
system power status - print system power status
SP>
```

(Press Ctrl-D and then Enter to return to the system console.)

```
cluster1::>
```

## **Learn how the ONTAP SP CLI, SP console, and system console sessions are related**

You can open an SP CLI session to manage a node remotely and open a separate SP console session to access the console of the node. The SP console session mirrors output displayed in a concurrent system console session. The SP and the system console have independent shell environments with independent login authentication.

Understanding how the SP CLI, SP console, and system console sessions are related helps you manage a node remotely. The following describes the relationship among the sessions:

- Only one administrator can log in to the SP CLI session at a time; however, the SP enables you to open both an SP CLI session and a separate SP console session simultaneously.

The SP CLI is indicated with the SP prompt (`SP>`). From an SP CLI session, you can use the `SP system console` command to initiate an SP console session. At the same time, you can start a separate SP CLI session through SSH. If you press Ctrl-D to exit from the SP console session, you automatically return to the SP CLI session. If an SP CLI session already exists, a message asks you whether to terminate the existing SP CLI session. If you enter “y”, the existing SP CLI session is terminated, enabling you to return

from the SP console to the SP CLI. This action is recorded in the SP event log.

In an ONTAP CLI session that is connected through SSH, you can switch to the system console of a node by running the ONTAP `system node run-console` command from another node.

- For security reasons, the SP CLI session and the system console session have independent login authentication.

When you initiate an SP console session from the SP CLI (by using the SP `system console` command), you are prompted for the system console credential. When you access the SP CLI from a system console session (by pressing Ctrl-G), you are prompted for the SP CLI credential.

- The SP console session and the system console session have independent shell environments.

The SP console session mirrors output that is displayed in a concurrent system console session. However, the concurrent system console session does not mirror the SP console session.

The SP console session does not mirror output of concurrent SSH sessions.

## Add the administration host IP address to access the ONTAP Service Processor

By default, the SP accepts SSH connection requests from administration hosts of any IP addresses. You can configure the SP to accept SSH connection requests from only the administration hosts that have the IP addresses you specify. The changes you make apply to SSH access to the SP of any nodes in the cluster.

### Steps

1. Grant SP access to only the IP addresses you specify by using the `system service-processor ssh add-allowed-addresses` command with the `-allowed-addresses` parameter.
  - The value of the `-allowed-addresses` parameter must be specified in the format of address /netmask, and multiple address/netmask pairs must be separated by commas, for example, `10.98.150.10/24, fd20:8b1e:b255:c09b::/64`.

Setting the `-allowed-addresses` parameter to `0.0.0.0/0, ::/0` enables all IP addresses to access the SP (the default).

  - When you change the default by limiting SP access to only the IP addresses you specify, ONTAP prompts you to confirm that you want the specified IP addresses to replace the “allow all” default setting (`0.0.0.0/0, ::/0`).
  - The `system service-processor ssh show` command displays the IP addresses that can access the SP.
2. If you want to block a specified IP address from accessing the SP, use the `system service-processor ssh remove-allowed-addresses` command with the `-allowed-addresses` parameter.

If you block all IP addresses from accessing the SP, the SP becomes inaccessible from any administration hosts.

### Examples of managing the IP addresses that can access the SP

The following examples show the default setting for SSH access to the SP, change the default by limiting SP access to only the specified IP addresses, remove the specified IP addresses from the access list, and then restore SP access for all IP addresses:

```
cluster1::> system service-processor ssh show
  Allowed Addresses: 0.0.0.0/0, ::/0

cluster1::> system service-processor ssh add-allowed-addresses -allowed
  -addresses 192.168.1.202/24, 192.168.10.201/24

Warning: The default "allow all" setting (0.0.0.0/0, ::/0) will be
replaced
  with your changes. Do you want to continue? {y|n}: y

cluster1::> system service-processor ssh show
  Allowed Addresses: 192.168.1.202/24, 192.168.10.201/24

cluster1::> system service-processor ssh remove-allowed-addresses -allowed
  -addresses 192.168.1.202/24, 192.168.10.201/24

Warning: If all IP addresses are removed from the allowed address list,
all IP
  addresses will be denied access. To restore the "allow all"
default,
  use the "system service-processor ssh add-allowed-addresses
  -allowed-addresses 0.0.0.0/0, ::/0" command. Do you want to
continue?
  {y|n}: y

cluster1::> system service-processor ssh show
  Allowed Addresses: -

cluster1::> system service-processor ssh add-allowed-addresses -allowed
  -addresses 0.0.0.0/0, ::/0

cluster1::> system service-processor ssh show
  Allowed Addresses: 0.0.0.0/0, ::/0
```

## View the help information in the ONTAP SP/BMC CLI

The online help displays the SP/BMC CLI commands and options.

### About this task

This task applies to both the SP and the BMC.

### Steps

1. To display help information for the SP/BMC commands, enter the following:

To access SP help...	To access BMC help...
Type <code>help</code> at the SP prompt.	Type <code>system</code> at the BMC prompt.

The following example shows the SP CLI online help.

```
SP> help
date - print date and time
exit - exit from the SP command line interface
events - print system events and event information
help - print command help
priv - show and set user mode
sp - commands to control the SP
system - commands to control the system
version - print SP version
```

The following example shows the BMC CLI online help.

```
BMC> system
system acp - acp related commands
system battery - battery related commands
system console - connect to the system console
system core - dump the system core and reset
system cpld - cpld commands
system log - print system console logs
system power - commands controlling system power
system reset - reset the system using the selected firmware
system sensors - print environmental sensors status
system service-event - print service-event status
system fru - fru related commands
system watchdog - system watchdog commands

BMC>
```

2. To display help information for the option of an SP/BMC command, enter `help` before or after the SP/BMC command.

The following example shows the SP CLI online help for the `SP events` command.

```
SP> help events
events all - print all system events
events info - print system event log information
events newest - print newest system events
events oldest - print oldest system events
events search - search for and print system events
```

The following example shows the BMC CLI online help for the BMC system power command.

```
BMC> system power help
system power cycle - power the system off, then on
system power off - power the system off
system power on - power the system on
system power status - print system power status

BMC>
```

Learn more about the commands described in this procedure in the [ONTAP command reference](#).

#### Related information

- [events](#)
- [system power](#)

## ONTAP commands for remote node management

You can remotely perform node-management tasks by either accessing its SP and running SP CLI commands, or accessing the BMC and running BMC CLI commands. For several commonly performed remote node-management tasks, you can also use ONTAP commands from another node in the cluster. Some SP and BMC commands are platform-specific and might not be available on your platform.

Certain command types can be used in both SP and BMC command sets. The differences between them will be shown when entering the command line.

#### Examples

- The `help` command in SP: `SP> help`
- The `help` command in BMC: `BMC> help`

Learn more about the `help` command options available for SP and BMC in [View the help information in the ONTAP SP/BMC CLI](#).

Learn more about corresponding ONTAP BMC CLI in [Supported CLI commands for the ONTAP Baseboard Management Controller](#).

If you want to...	Use this SP command...	Use this BMC command...	Use this ONTAP command...
Display available commands or subcommands of a specified command for SP/BMC/ONTAP	help [command]	help [command]	N/A
Display the current privilege level for the SP/BMC/ONTAP CLI	priv show	priv show	N/A
Set the privilege level to access the specified mode for the SP/BMC/ONTAP CLI	priv set {admin   advanced   diag}	priv set {admin   advanced   diag   test}	N/A
Display system date and time	date	date	date
Display events that are logged by the SP/BMC/ONTAP	events {all   info   newest number   oldest number   search keyword}	events {all  info   newest   oldest   search }	N/A
Display SP/BMC/ONTAP status and network configuration information	sp status [-v   -d] <ul style="list-style-type: none"><li>• The -v option displays SP statistics in verbose form.</li><li>• The -d option adds the SP debug log to the display.</li></ul>	bmc status [-v   -d] <ul style="list-style-type: none"><li>• The -v option displays SP statistics in verbose form.</li><li>• The -d option adds the SP debug log to the display.</li></ul>	system service-processor show
Display the length of time the SP/BMC/ONTAP has been up and the average number of jobs in the run queue over the last 1, 5, and 15 minutes	sp uptime	bmc uptime	N/A

If you want to...	Use this SP command...	Use this BMC command...	Use this ONTAP command...
Display system console logs	system log	system log [-a]	system log (prints system console logs)
Display the SP/BMC/ONTAP log archives or the files in an archive	sp log history show [-archive {latest   all   archive-name}] [ -dump {all   file-name}]	bmc log history show [-archive {latest   all   archive-name}] [ -dump {all   file-name}]	N/A
Display the power status for the controller of a node	system power status	system power status	system node power show
Display battery information	system battery show	system battery show	N/A
Display ACP information or the status for expander sensors	system acp [show   sensors show]	N/A	N/A
List all system FRUs and their IDs	system fru list	system fru list	N/A
Display product information for the specified FRU	system fru show fru_id	system fru show [ show <id> ]	N/A
Display the FRU data history log	system fru log show (advanced privilege level)	system fru log show	N/A
Display the status for the environmental sensors, including their states and current values	system sensors or system sensors show	system sensors {show   filter <sensor_string> }	system node environment sensors show

If you want to...	Use this SP command...	Use this BMC command...	Use this ONTAP command...
Display the status and details for the specified sensor	<pre>system sensors get sensor_name</pre> <p>You can obtain <code>sensor_name</code> by using the <code>system sensors</code> or the <code>system sensors show</code> command.</p>	<pre>system sensors [get]</pre>	N/A
Display the SP/BMC/ONTAP firmware version information	<code>version</code>	<code>version</code>	<code>system service-processor image show</code>
Display the SP/BMC/ONTAP command history	<code>sp log audit</code> (advanced privilege level)	<code>bmc log audit</code> (advanced privilege level)	N/A
Display the SP/BMC/ONTAP debug information	<code>sp log debug</code> (advanced privilege level)	<code>bmc log debug</code> (advanced privilege level)	N/A
Display the SP/BMC/ONTAP messages file	<code>sp log messages</code> (advanced privilege level)	<code>bmc log messages</code> (advanced privilege level)	N/A
Display the settings for collecting system forensics on a watchdog reset event, display system forensics information collected during a watchdog reset event, or clear the collected system forensics information	<code>system forensics</code> <code>[show   log dump   log clear]</code>	N/A	N/A
Log in to the system console	<code>system console</code> <p>You should press Ctrl-D to exit the system console session.</p>	<code>system console</code>	<code>system node run-console</code>

If you want to...	Use this SP command...	Use this BMC command...	Use this ONTAP command...
Turn the node on or off, or perform a power-cycle (turning the power off and then back on)	system power on	system power on	system node power on (advanced privilege level)
	system power off	system power off	N/A
	system power cycle	system power cycle	N/A
The standby power stays on to keep the SP running without interruption. During the power-cycle, a brief pause occurs before power is turned back on.			 Using these commands to turn off or power-cycle the node might cause an improper shutdown of the node (also called a <i>dirty shutdown</i> ) and is not a substitute for a graceful shutdown using the ONTAP system node halt command.
Create a core dump and reset the node	system core [-f]  The -f option forces the creation of a core dump and the reset of the node.	system core	system node coredump trigger (advanced privilege level)
These commands have the same effect as pressing the Non-maskable Interrupt (NMI) button on a node, causing a dirty shutdown of the node and forcing a dump of the core files when halting the node. These commands are helpful when ONTAP on the node is hung or does not respond to commands such as system node shutdown. The generated core dump files are displayed in the output of the system node coredump show command. The SP stays operational as long as the input power to the node is not interrupted.			
Reboot the node with an optionally specified BIOS firmware image (primary, backup, or current) to recover from issues such as a corrupted image of the node's boot device	system reset  {primary   backup   current}	system reset  { current   primary   backup }	system node reset with the -firmware {primary   backup   current} parameter (advanced privilege level)
 This operation causes a dirty shutdown of the node.  If no BIOS firmware image is specified, the current image is used for the reboot. The SP stays operational as long as the input power to the node is not interrupted.			

If you want to...	Use this SP command...	Use this BMC command...	Use this ONTAP command...
Compare the current battery firmware image against a specified firmware image	<pre>system battery verify [image_URL]</pre> (advanced privilege level)  If <code>image_URL</code> is not specified, the default battery firmware image is used for comparison.	<pre>system battery verify [image_URL]</pre> (advanced privilege level)  If <code>image_URL</code> is not specified, the default battery firmware image is used for comparison.	N/A
Update the battery firmware from the image at the specified location	<pre>system battery flash [image_URL]</pre> (advanced privilege level)  You use this command if the automatic battery firmware upgrade process has failed for some reason.	N/A	N/A
Update the SP/BMC/ONTAP firmware by using the image at the specified location	<pre>sp update</pre> <code>image_URL</code> <code>image_URL</code> must not exceed 200 characters.	<pre>bmc update</pre> <code>image_URL</code> <code>image_URL</code> must not exceed 200 characters.	<pre>system service-processor image update</pre>
Reboot the SP/BMC/ONTAP	<pre>sp reboot</pre>	<pre>bmc reboot</pre>	<pre>system service-processor reboot-sp</pre>
Erase the NVRAM flash content	<pre>system nvram flash clear</pre> (advanced privilege level)  This command cannot be initiated when the controller power is off (system power off).	N/A	N/A
Exit the SP/BMC/ONTAP CLI	<pre>exit</pre>	<pre>exit</pre>	N/A

## Related information

- [ONTAP command reference](#)

# ONTAP node health monitoring using threshold-based SP sensor readings and status

Threshold-based sensors take periodic readings of a variety of system components. The SP compares the reading of a threshold-based sensor against its preset threshold limits that define a component's acceptable operating conditions.

Based on the sensor reading, the SP displays the sensor state to help you monitor the condition of the component.

Examples of threshold-based sensors include sensors for the system temperatures, voltages, currents, and fan speeds. The specific list of threshold-based sensors depends on the platform.

Threshold-based sensors have the following thresholds, displayed in the output of the `SP system sensors` command:

- Lower critical (LCR)
- Lower noncritical (LNC)
- Upper noncritical (UNC)
- Upper critical (UCR)

A sensor reading between LNC and LCR or between UNC and UCR means that the component is showing signs of a problem and a system failure might occur as a result. Therefore, you should plan for component service soon.

A sensor reading below LCR or above UCR means that the component is malfunctioning and a system failure is about to occur. Therefore, the component requires immediate attention.

The following diagram illustrates the severity ranges that are specified by the thresholds:



You can find the reading of a threshold-based sensor under the `Current` column in the `system sensors` command output. The `system sensors get sensor_name` command displays additional details for the specified sensor. As the reading of a threshold-based sensor crosses the noncritical and critical threshold ranges, the sensor reports a problem of increasing severity. When the reading exceeds a threshold limit, the sensor's status in the `system sensors` command output changes from `ok` to `nc` (noncritical) or `cr` (critical) depending on the exceeded threshold, and an event message is logged in the SEL event log.

Some threshold-based sensors do not have all four threshold levels. For those sensors, the missing thresholds show `na` as their limits in the `system sensors` command output, indicating that the particular sensor has no limit or severity concern for the given threshold and the SP does not monitor the sensor for that threshold.

## Example of the `system sensors` command output

The following example shows some of the information displayed by the `system sensors` command in the SP CLI:

```
SP node1> system sensors
```

Sensor Name	Current	Unit	Status	LCR	LNC
UNC	UCR				
CPU0_Temp_Margin	-55.000	degrees C	ok	na	na
-5.000	0.000				
CPU1_Temp_Margin	-56.000	degrees C	ok	na	na
-5.000	0.000				
In_Flow_Temp	32.000	degrees C	ok	0.000	10.000
42.000	52.000				
Out_Flow_Temp	38.000	degrees C	ok	0.000	10.000
59.000	68.000				
CPU1_Error	0x0	discrete	0x0180	na	na
na	na				
CPU1_Therm_Trip	0x0	discrete	0x0180	na	na
na	na				
CPU1_Hot	0x0	discrete	0x0180	na	na
na	na				
IO_Mid1_Temp	30.000	degrees C	ok	0.000	10.000
55.000	64.000				
IO_Mid2_Temp	30.000	degrees C	ok	0.000	10.000
55.000	64.000				
CPU_VTT	1.106	Volts	ok	1.028	1.048
1.154	1.174				
CPU0_VCC	1.154	Volts	ok	0.834	0.844
1.348	1.368				
3.3V	3.323	Volts	ok	3.053	3.116
3.466	3.546				
5V	5.002	Volts	ok	4.368	4.465
5.490	5.636				
STBY_1.8V	1.794	Volts	ok	1.678	1.707
1.892	1.911				
...					

#### **Example of the system sensors sensor\_name command output for a threshold-based sensor**

The following example shows the result of entering `system sensors get sensor_name` in the SP CLI for the threshold-based sensor 5V:

```
SP node1> system sensors get 5V

Locating sensor record...
Sensor ID          : 5V (0x13)
Entity ID          : 7.97
Sensor Type (Analog) : Voltage
Sensor Reading     : 5.002 (+/- 0) Volts
Status             : ok
Lower Non-Recoverable : na
Lower Critical     : 4.246
Lower Non-Critical : 4.490
Upper Non-Critical : 5.490
Upper Critical     : 5.758
Upper Non-Recoverable : na
Assertion Events   :
Assertions Enabled : lnc- lcr- ucr+
Deassertions Enabled : lnc- lcr- ucr+
```

## ONTAP SP sensor status values in the system sensor command output

Discrete sensors do not have thresholds. Their readings, displayed under the Current column in the SP CLI system sensors command output, do not carry actual meanings and thus are ignored by the SP. The Status column in the system sensors command output displays the status values of discrete sensors in hexadecimal format.

Examples of discrete sensors include sensors for the fan, power supply unit (PSU) fault, and system fault. The specific list of discrete sensors depends on the platform.

You can use the SP CLI system sensors get `sensor_name` command for help with interpreting the status values for most discrete sensors. The following examples show the results of entering `system sensors get sensor_name` for the discrete sensors `CPU0_Error` and `IO_Slot1_Present`:

```
SP node1> system sensors get CPU0_Error
Locating sensor record...
Sensor ID          : CPU0_Error (0x67)
Entity ID          : 7.97
Sensor Type (Discrete): Temperature
States Asserted    : Digital State
                           [State Deasserted]
```

```
SP node1> system sensors get IO_Slot1_Present
Locating sensor record...
Sensor ID           : IO_Slot1_Present (0x74)
Entity ID          : 11.97
Sensor Type (Discrete): Add-in Card
States Asserted    : Availability State
                      [Device Present]
```

Although the `system sensors get sensor_name` command displays the status information for most discrete sensors, it does not provide status information for the `System_FW_Status`, `System_Watchdog`, `PSU1_Input_Type`, and `PSU2_Input_Type` discrete sensors. You can use the following information to interpret these sensors' status values.

## System\_FW\_Status

The `System_FW_Status` sensor's condition appears in the form of `0xAABB`. You can combine the information of `AA` and `BB` to determine the condition of the sensor.

`AA` can have one of the following values:

Values	Condition of the sensor
01	System firmware error
02	System firmware hang
04	System firmware progress

`BB` can have one of the following values:

Values	Condition of the sensor
00	System software has properly shut down
01	Memory initialization in progress
02	NVMEM initialization in progress (when NVMEM is present)
04	Restoring memory controller hub (MCH) values (when NVMEM is present)
05	User has entered Setup
13	Booting the operating system or LOADER

Values	Condition of the sensor
1F	BIOS is starting up
20	LOADER is running
21	LOADER is programming the primary BIOS firmware. You must not power down the system.
22	LOADER is programming the alternate BIOS firmware. You must not power down the system.
2F	ONTAP is running
60	SP has powered off the system
61	SP has powered on the system
62	SP has reset the system
63	SP watchdog power cycle
64	SP watchdog cold reset

For instance, the System\_FW\_Status sensor status 0x042F means "system firmware progress (04), ONTAP is running (2F)."

## System\_Watchdog

The System\_Watchdog sensor can have one of the following conditions:

- **0x0080**

The state of this sensor has not changed

Values	Condition of the sensor
0x0081	Timer interrupt
0x0180	Timer expired
0x0280	Hard reset
0x0480	Power down
0x0880	Power cycle

For instance, the System\_Watchdog sensor status 0x0880 means a watchdog timeout occurs and causes a system power cycle.

## **PSU1\_Input\_Type and PSU2\_Input\_Type**

For direct current (DC) power supplies, the PSU1\_Input\_Type and PSU2\_Input\_Type sensors do not apply. For alternating current (AC) power supplies, the sensors' status can have one of the following values:

<b>Values</b>	<b>Condition of the sensor</b>
0x01 xx	220V PSU type
0x02 xx	110V PSU type

For instance, the PSU1\_Input\_Type sensor status 0x0280 means that the sensor reports that the PSU type is 110V.

## **ONTAP commands for Service Processor management**

ONTAP provides commands for managing the SP, including the SP network configuration, SP firmware image, SSH access to the SP, and general SP administration.

### **Commands for managing the SP network configuration**

<b>If you want to...</b>	<b>Run this ONTAP command...</b>
Enable the SP automatic network configuration for the SP to use the IPv4 or IPv6 address family of the specified subnet	<code>system service-processor network auto-configuration enable</code>
Disable the SP automatic network configuration for the IPv4 or IPv6 address family of the subnet specified for the SP	<code>system service-processor network auto-configuration disable</code>
Display the SP automatic network configuration	<code>system service-processor network auto-configuration show</code>

If you want to...	Run this ONTAP command...
<p>Manually configure the SP network for a node, including the following:</p> <ul style="list-style-type: none"> <li>• The IP address family (IPv4 or IPv6)</li> <li>• Whether the network interface of the specified IP address family should be enabled</li> <li>• If you are using IPv4, whether to use the network configuration from the DHCP server or the network address that you specify</li> <li>• The public IP address for the SP</li> <li>• The netmask for the SP (if using IPv4)</li> <li>• The network prefix-length of the subnet mask for the SP (if using IPv6)</li> <li>• The gateway IP address for the SP</li> </ul>	<pre>system service-processor network modify</pre>
<p>Display the SP network configuration, including the following:</p> <ul style="list-style-type: none"> <li>• The configured address family (IPv4 or IPv6) and whether it is enabled</li> <li>• The remote management device type</li> <li>• The current SP status and link status</li> <li>• Network configuration, such as IP address, MAC address, netmask, prefix-length of subnet mask, router-assigned IP address, link local IP address, and gateway IP address</li> <li>• The time the SP was last updated</li> <li>• The name of the subnet used for SP automatic configuration</li> <li>• Whether the IPv6 router-assigned IP address is enabled</li> <li>• SP network setup status</li> <li>• Reason for the SP network setup failure</li> </ul>	<pre>system service-processor network show</pre> <p>Displaying complete SP network details requires the <code>-instance</code> parameter.</p>
<p>Modify the SP API service configuration, including the following:</p> <ul style="list-style-type: none"> <li>• Changing the port used by the SP API service</li> <li>• Enabling or disabling the SP API service</li> </ul>	<pre>system service-processor api-service modify</pre> <p>(advanced privilege level)</p>

If you want to...	Run this ONTAP command...
Display the SP API service configuration	<pre>system service-processor api-service show</pre> <p>(advanced privilege level)</p>
Renew the SSL and SSH certificates used by the SP API service for internal communication	<ul style="list-style-type: none"> <li>For ONTAP 9.5 or later: <code>system service-processor api-service renew-internal-certificates</code></li> <li>For ONTAP 9.4 or earlier: <code>system service-processor api-service renew-certificates</code></li> </ul> <p>(advanced privilege level)</p>

## Commands for managing the SP firmware image

If you want to...	Run this ONTAP command...
Display the details of the currently installed SP firmware image, including the following: <ul style="list-style-type: none"> <li>The remote management device type</li> <li>The image (primary or backup) that the SP is booted from, its status, and firmware version</li> <li>Whether the firmware automatic update is enabled and the last update status</li> </ul>	<pre>system service-processor image show</pre> <p>The <code>-is-current</code> parameter indicates the image (primary or backup) that the SP is currently booted from, not if the installed firmware version is most current.</p>
Enable or disable the SP automatic firmware update	<pre>system service-processor image modify</pre> <p>By default, the SP firmware is automatically updated with the update of ONTAP or when a new version of the SP firmware is manually downloaded. Disabling the automatic update is not recommended because doing so can result in suboptimal or nonqualified combinations between the ONTAP image and the SP firmware image.</p>

If you want to...	Run this ONTAP command...
Manually download an SP firmware image on a node	<pre>system node image get</pre> <p> Before you run the <code>system node image</code> commands, you must set the privilege level to advanced (<code>set -privilege advanced</code>), entering <code>y</code> when prompted to continue.</p> <p>The SP firmware image is packaged with ONTAP. You do not need to download the SP firmware manually, unless you want to use an SP firmware version that is different from the one packaged with ONTAP.</p>
Display the status for the latest SP firmware update triggered from ONTAP, including the following information:	<pre>system service-processor image update-progress show</pre> <ul style="list-style-type: none"> <li>• The start and end time for the latest SP firmware update</li> <li>• Whether an update is in progress and the percentage that is complete</li> </ul>

## Commands for managing SSH access to the SP

If you want to...	Run this ONTAP command...
Grant SP access to only the specified IP addresses	<pre>system service-processor ssh add-allowed-addresses</pre>
Block the specified IP addresses from accessing the SP	<pre>system service-processor ssh remove-allowed-addresses</pre>
Display the IP addresses that can access the SP	<pre>system service-processor ssh show</pre>

## Commands for general SP administration

If you want to...	Run this ONTAP command...
Display general SP information, including the following: <ul style="list-style-type: none"> <li>• The remote management device type</li> <li>• The current SP status</li> <li>• Whether the SP network is configured</li> <li>• Network information, such as the public IP address and the MAC address</li> <li>• The SP firmware version and Intelligent Platform Management Interface (IPMI) version</li> <li>• Whether the SP firmware automatic update is enabled</li> </ul>	system service-processor show Displaying complete SP information requires the <b>-instance</b> parameter.
Reboot the SP on a node	system service-processor reboot-sp
Generate and send an AutoSupport message that includes the SP log files collected from a specified node	system node autosupport invoke-splog
Display the allocation map of the collected SP log files in the cluster, including the sequence numbers for the SP log files that reside in each collecting node	system service-processor log show-allocations

#### Related information

[ONTAP command reference](#)

## ONTAP commands for BMC management

These ONTAP commands are supported on the Baseboard Management Controller (BMC).

The BMC uses some of the same commands as the Service Processor (SP). The following SP commands are supported on the BMC.

If you want to...	Use this command
Display the BMC information	<b>system service-processor show</b>
Display/modify the BMC network configuration	<b>system service-processor network show/modify</b>
Reset the BMC	<b>system service-processor reboot-sp</b>

If you want to...	Use this command
Display/modify the details of the currently installed BMC firmware image	<b>system service-processor image show/modify</b>
Update BMC firmware	<b>system service-processor image update</b>
Display the status for the latest BMC firmware update	<b>system service-processor image update-progress show</b>
Enable the automatic network configuration for the BMC to use an IPv4 or IPv6 address on the specified subnet	<b>system service-processor network auto-configuration enable</b>
Disable the automatic network configuration for an IPv4 or IPv6 address on the subnet specified for the BMC	<b>system service-processor network auto-configuration disable</b>
Display the BMC automatic network configuration	<b>system service-processor network auto-configuration show</b>

For commands that are not supported by the BMC firmware, the following error message is returned.

```
::> Error: Command not supported on this platform.
```

#### Related information

- [system service-processor](#)

## Supported CLI commands for the ONTAP Baseboard Management Controller

You can log into the BMC using SSH. The following commands are supported from the BMC command line.

Command	Function
system	Display a list of all commands.
system console	Connect to the system's console. Use <b>Ctrl+D</b> to exit the session.
system core	Dump the system core and reset.
system power cycle	Power the system off, then on.

Command	Function
system power off	Power the system off.
system power on	Power the system on.
system power status	Print system power status.
system reset	Reset the system.
system log	Print system console logs
system fru show [id]	Dump all/selected field replaceable unit (FRU) info.

## Copyright information

Copyright © 2026 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—with prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

**LIMITED RIGHTS LEGEND:** Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

## Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.