



# **TR-4907: Configure StorageGRID with veritas Enterprise Vault**

How to enable StorageGRID in your environment

NetApp  
October 09, 2024

# Table of Contents

- TR-4907: Configure StorageGRID with veritas Enterprise Vault ..... 1
  - Introduction to configuring StorageGRID for site failover..... 1
  - Configure StorageGRID and veritas Enterprise Vault ..... 2
  - Configure StorageGRID S3 Object Lock for WORM storage..... 7
  - Configure StorageGRID site failover for disaster recovery ..... 11

# TR-4907: Configure StorageGRID with veritas Enterprise Vault


## Introduction to configuring StorageGRID for site failover

Learn how veritas Enterprise Vault uses StorageGRID as a primary storage target for disaster recovery.

This configuration guide provides the steps to configure NetApp® StorageGRID® as a primary storage target with veritas Enterprise Vault. It also describes how to configure StorageGRID for site failover in a disaster recovery (DR) scenario.

### Reference architecture

StorageGRID provides an on-premises, S3-compatible cloud backup target for veritas Enterprise Vault. The following figure illustrates the veritas Enterprise Vault and StorageGRID architecture.

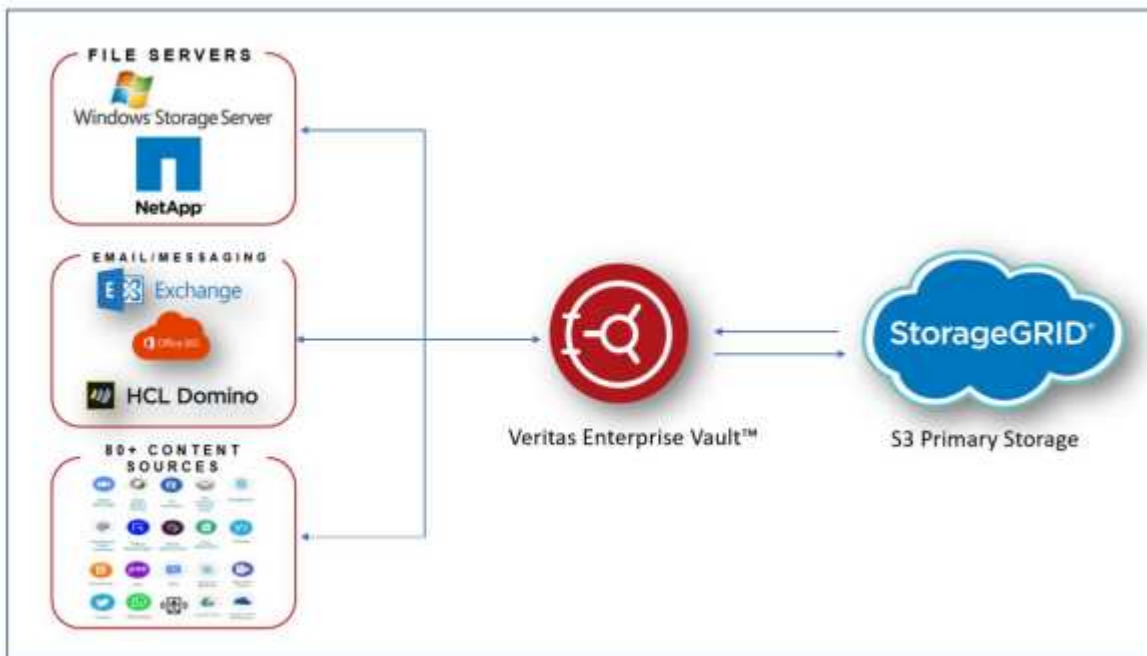

### Where to find additional information

To learn more about the information that is described in this document, review the following documents and/or websites:

- NetApp StorageGRID Documentation Center  
<https://docs.netapp.com/us-en/storagegrid-118/>
- NetApp StorageGRID Enablement  
<https://docs.netapp.com/us-en/storagegrid-enable/>
- StorageGRID Documentation Resources page  
<https://www.netapp.com/data-storage/storagegrid/documentation/>
- NetApp Product Documentation

## Configure StorageGRID and veritas Enterprise Vault

Learn how to implement basic configurations for StorageGRID 11.5 or higher and veritas Enterprise Vault 14.1 or higher.

This configuration guide is based on StorageGRID 11.5 and Enterprise Vault 14.1. For write once, read many (WORM) mode storage using S3 Object Lock, StorageGRID 11.6 and Enterprise Vault 14.2.2 was used. For more detailed information about these guidelines, see the [StorageGRID Documentation](#) page or contact a StorageGRID expert.

### Prerequisites to configure StorageGRID and veritas Enterprise Vault

- Before you configure StorageGRID with veritas Enterprise Vault, verify the following prerequisites:



For WORM storage (Object Lock), StorageGRID 11.6 or higher is required.

- veritas Enterprise Vault 14.1 or higher is installed.



For WORM storage (Object Lock), Enterprise Vault version 14.2.2 or higher is required.


- Vault store groups and a vault store has been created.  
For more information, see the veritas Enterprise Vault Administration Guide.
- A StorageGRID tenant, access key, secret key and bucket have been created.
- A StorageGRID load balancer endpoint has been created (either HTTP or HTTPS).
- If using a self-signed certificate, add the StorageGRID self-signed CA certificate to the Enterprise Vault Servers. For more information, see this [veritas Knowledge Base article](#).
- Update and apply the latest Enterprise Vault configuration file to enable supported storage solutions such as NetApp StorageGRID. For more information, see this [veritas Knowledge Base article](#).

### Configure StorageGRID with veritas Enterprise Vault


To configure StorageGRID with veritas Enterprise Vault, complete the following steps:

#### Steps


1. Launch the Enterprise Vault Administration console.

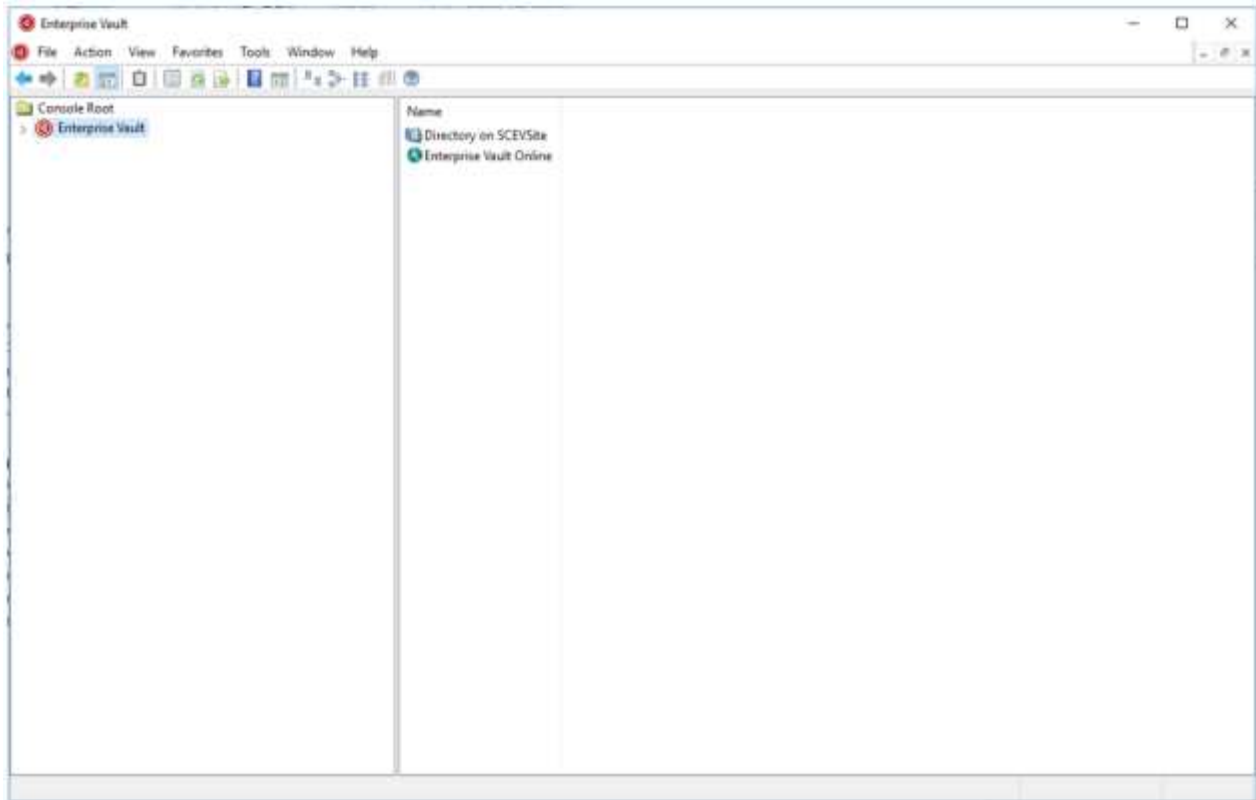


2. Create a new vault store partition in the appropriate vault store. Expand the Vault Store Groups folder and then the appropriate vault store. Right-click Partition and select **New > Partition**.

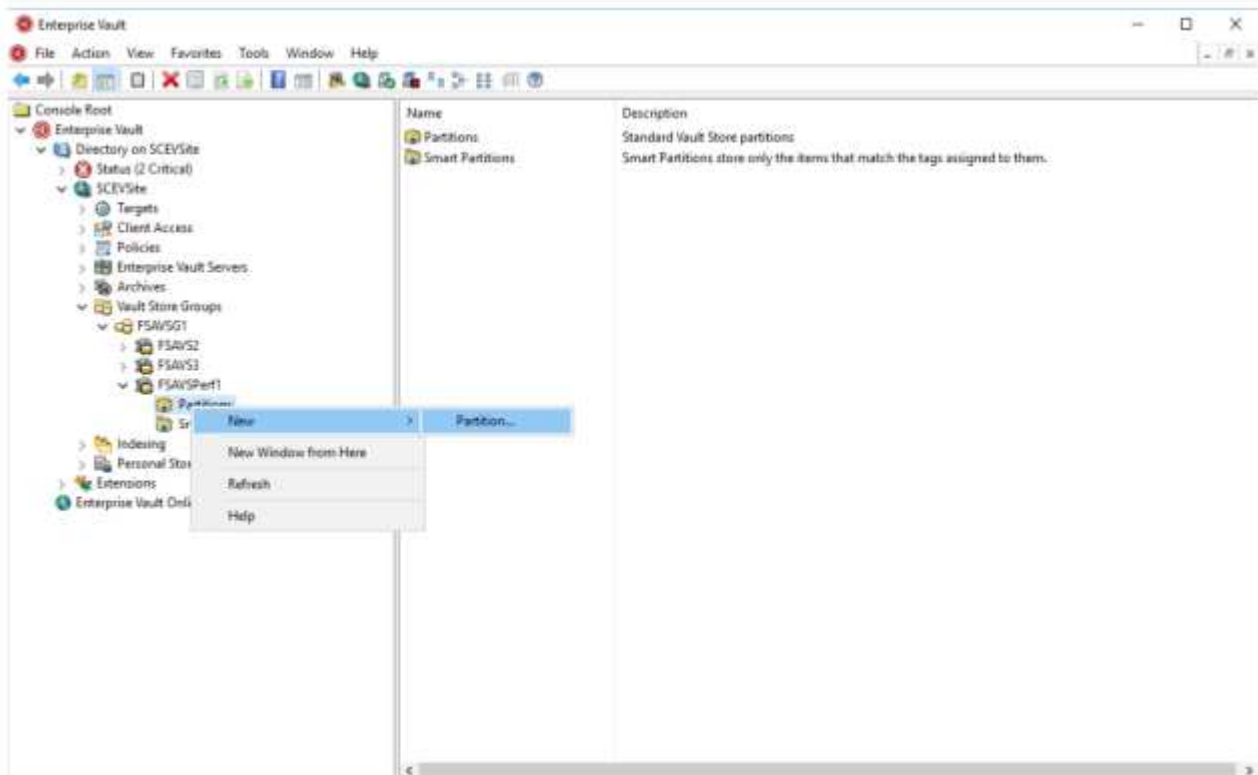

3. Follow the New Partition creation wizard. From the Storage Type drop-down menu, select NetApp StorageGRID (S3). Click Next.

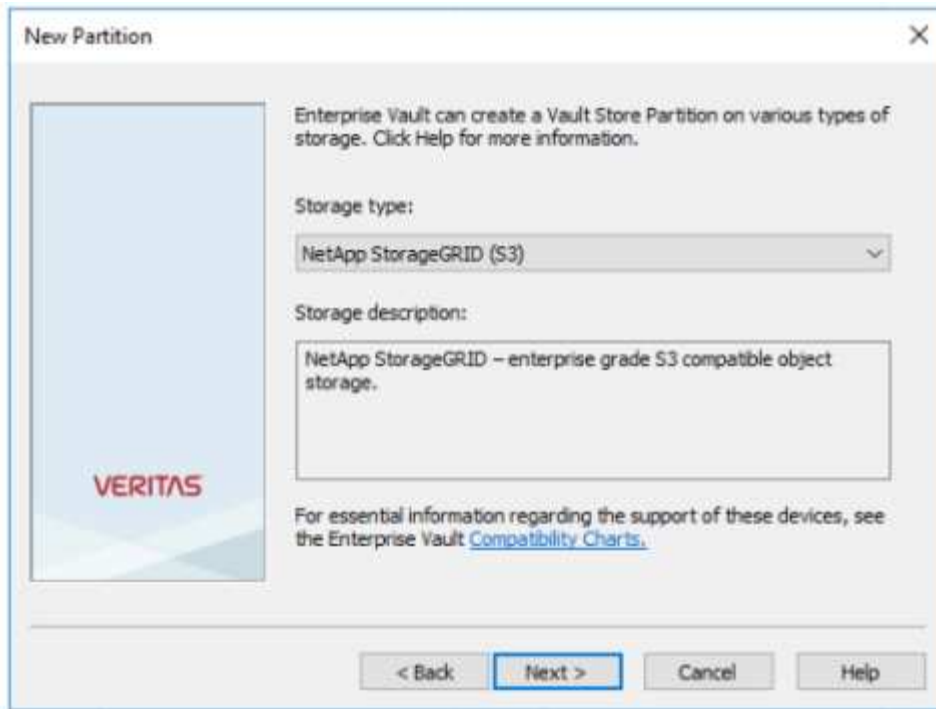

4. Leave the Store Data in WORM Mode Using S3 Object Lock option unchecked. Click Next.

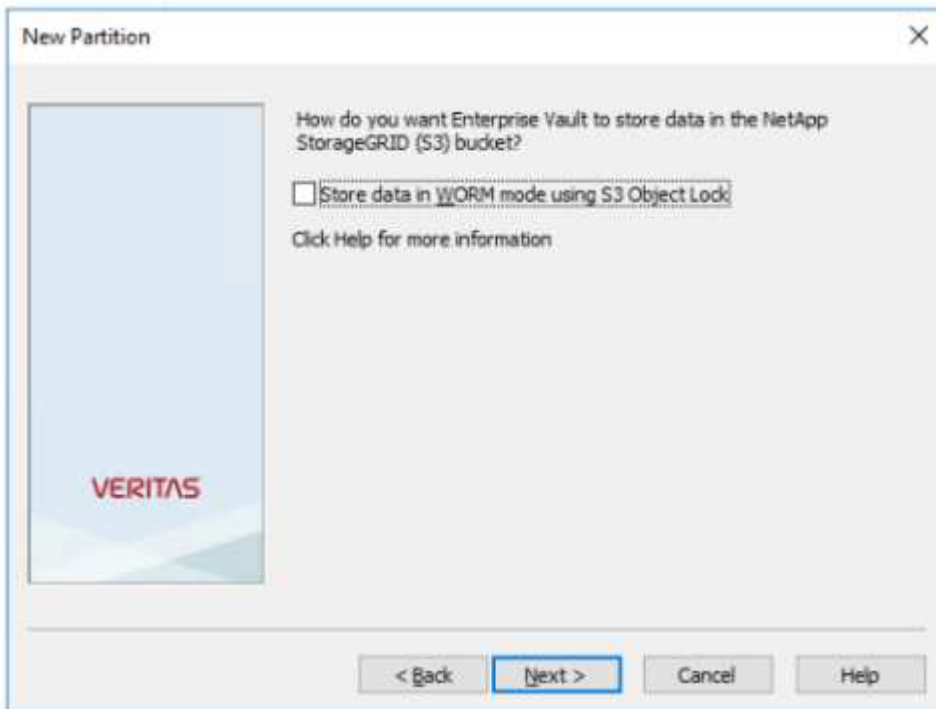


5. On the connection settings page, provide the following information:

- Access key ID
- Secret access key
- Service host name: Ensure to include the load balancer endpoint (LBE) port configured in StorageGRID (such as `https://<hostname>:<LBE_port>`)
- Bucket name: Name of the pre created target bucket. veritas Enterprise Vault does not create the

bucket.


- Bucket region: `us-east-1` is the default value.

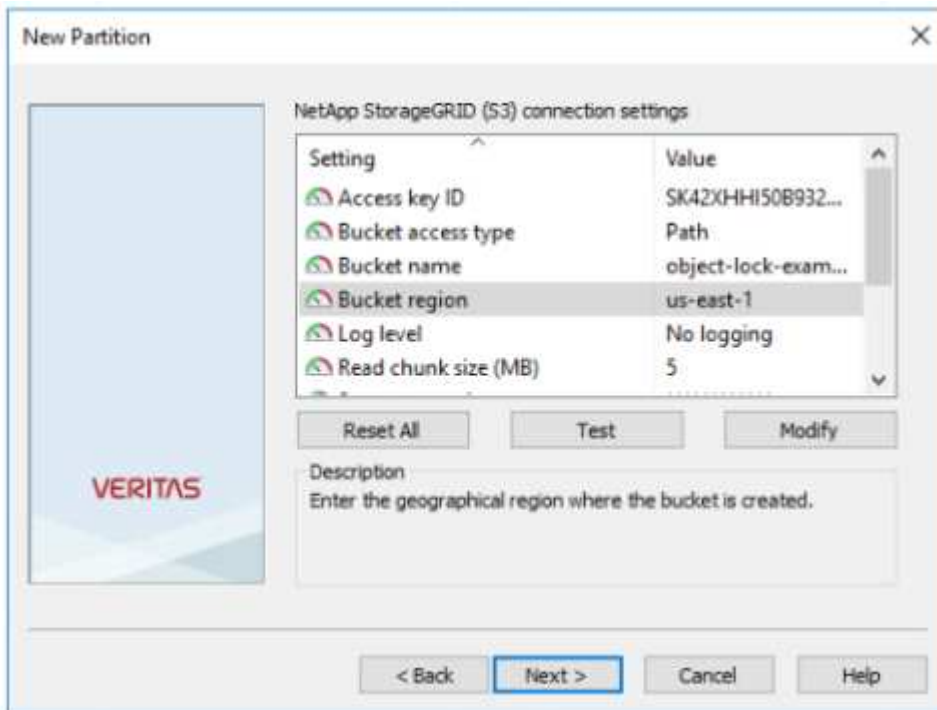


6. To verify the connection to the StorageGRID bucket, click Test. Verify that the connection test was successful. Click OK and then Next.



7. StorageGRID does not support the S3 replication parameter. To protect your objects, StorageGRID uses Information Lifecycle Management (ILM) rules to specify data protection schemes - multiple copies or erasure coding. Select the When Archived Files Exist on the Storage Option and click Next.

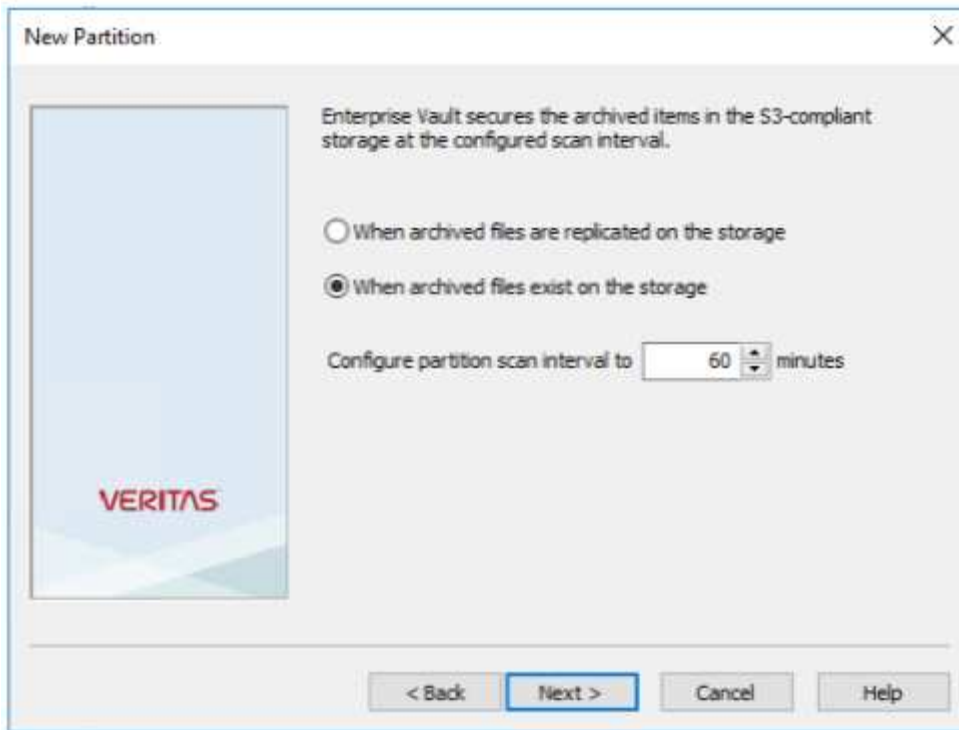


8. Verify the information on the summary page and click Finish.

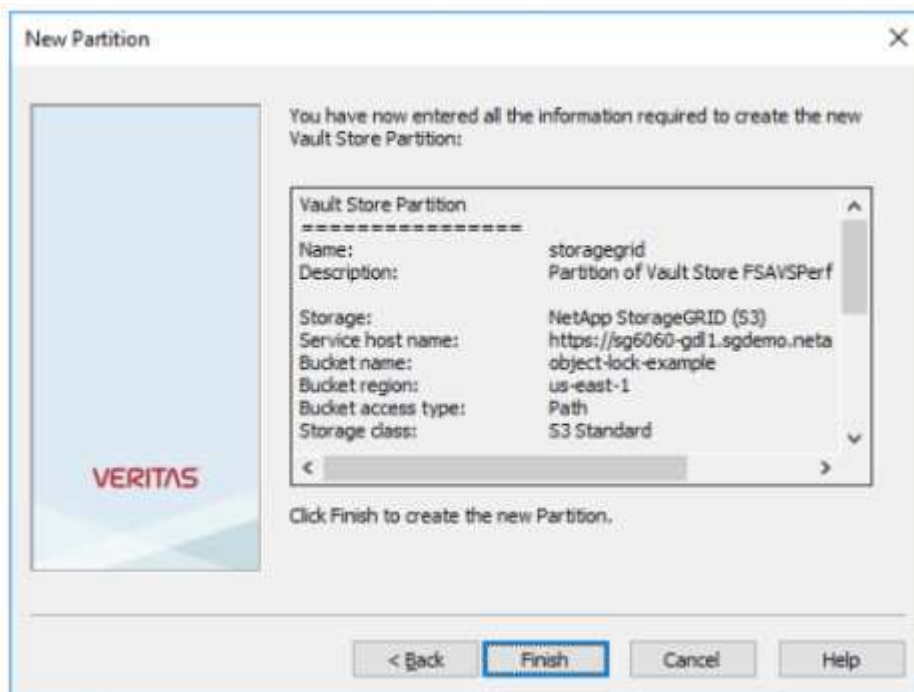

9. After the new vault store partition has been successfully created, you can archive, restore, and search data in Enterprise Vault with StorageGRID as the primary storage.



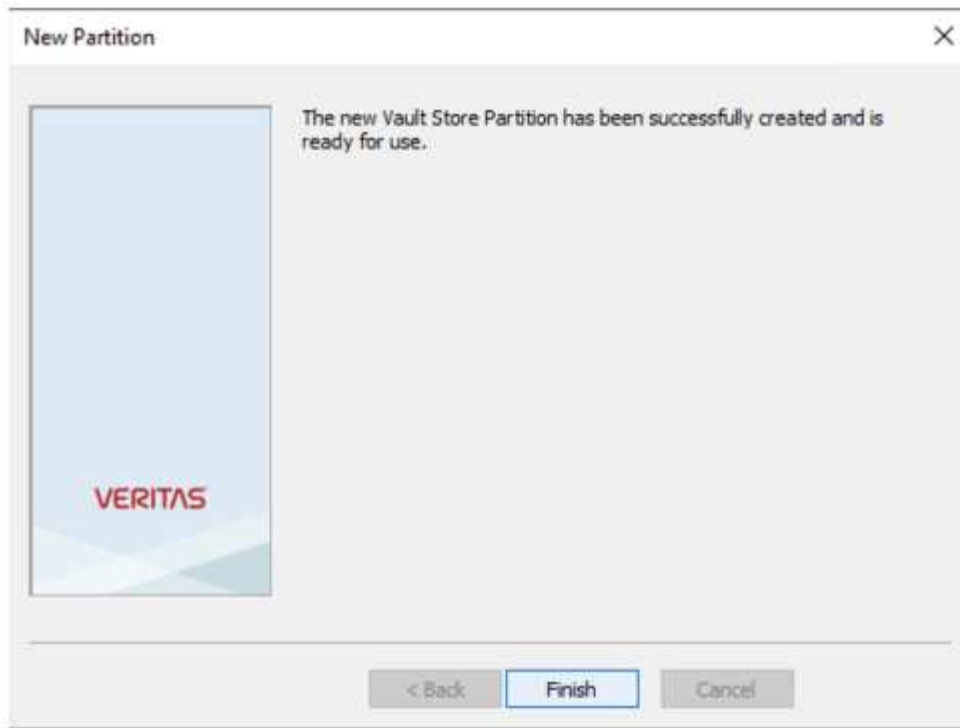

## Configure StorageGRID S3 Object Lock for WORM storage

Learn how to configure StorageGRID for WORM storage using S3 Object Lock.

### Prerequisites to configure StorageGRID for WORM storage

For WORM storage, StorageGRID uses S3 Object Lock to retain objects for compliance. This requires StorageGRID 11.6 or higher, where S3 Object Lock default bucket retention was introduced. Enterprise Vault also requires version 14.2.2 or higher.

### Configure StorageGRID S3 Object Lock default bucket retention

To configure the StorageGRID S3 Object Lock default bucket retention, complete the following steps:

#### Steps

1. In StorageGRID Tenant Manager, create a bucket and click Continue

**Create bucket**

1 Enter details ————— 2 Manage object settings  
Optional

**Enter bucket details**

Enter the bucket's name and select the bucket's region.

Bucket name ⓘ

object-lock-example

Region ⓘ

us-east-1

Cancel Continue

2. Select the Enable S3 Object Lock option and click Create Bucket.

# Create bucket

✕

1 Enter details — 2 Manage object settings Optional

## Manage object settings Optional

### Object versioning

Enable object versioning if you want to store every version of each object in this bucket. You can then retrieve previous versions of an object as needed.

**i** Object versioning has been enabled automatically because this bucket has S3 Object Lock enabled.

Enable object versioning

### S3 Object Lock

S3 Object Lock allows you to specify retention and legal hold settings for the objects ingested into a bucket. If you want to use S3 Object Lock, you must enable this setting when you create the bucket. You cannot add or disable S3 Object Lock after a bucket is created.

If S3 Object Lock is enabled, object versioning is enabled for the bucket automatically and cannot be suspended.

Enable S3 Object Lock

[Previous](#) [Create bucket](#)

3. After the bucket is created, select the bucket to view the bucket options. Expand the S3 Object Lock drop-down option.

**Overview**

Name: **object-lock-example**  
 Region: **us-east-1**  
 S3 Object Lock: **Enabled**  
 Date created: **2022-06-24 14:44:54 PDT**

[View bucket contents in Experimental S3 Console](#)

**Bucket options** | **Bucket access** | **Platform services**

Consistency level: **Read-after-new-write (default)**

Last access time updates: **Disabled**

Object versioning: **Enabled**

**S3 Object Lock** **Enabled**

S3 Object Lock allows you to specify retention and legal hold settings for the objects ingested into a bucket. If you want to use S3 Object Lock, you must enable this setting when you create the bucket. You cannot enable or disable S3 Object Lock after a bucket is created.

After S3 Object Lock is enabled for a bucket, you can't disable it. You also can't suspend object versioning for the bucket.

S3 Object Lock: Enabled

Default retention

Disable

Enable

**Save changes**

4. Under Default Retention, select Enable and set a default retention period of 1 day. Click Save Changes.

**S3 Object Lock** **Enabled**

S3 Object Lock allows you to specify retention and legal hold settings for the objects ingested into a bucket. If you want to use S3 Object Lock, you must enable this setting when you create the bucket. You cannot enable or disable S3 Object Lock after a bucket is created.

After S3 Object Lock is enabled for a bucket, you can't disable it. You also can't suspend object versioning for the bucket.

S3 Object Lock: Enabled

Default retention

Disable

Enable

Default retention mode

Compliance

No users can overwrite or delete protected object versions during the retention period.

Default retention period

1 Days

**Save changes**


The bucket is now ready to be used by Enterprise Vault to store WORM data.

## Configure Enterprise Vault

To configure Enterprise Vault, complete the following steps:

### Steps

1. Repeat steps 1-3 in the [Basic configuration](#) section, but this time select the Store data in WORM Mode Using S3 Object Lock option. Click Next.

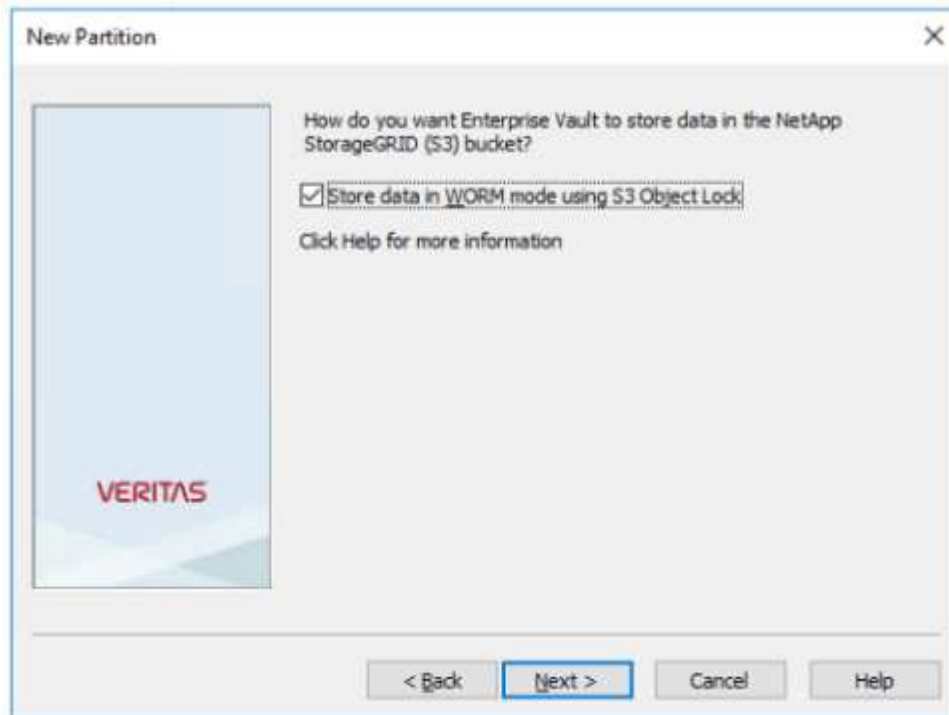

2. When entering your S3 Bucket connection settings, make sure you are entering the name of an S3 bucket that has the S3 Object Lock Default retention enabled.
3. Test the connection to verify the settings.

## Configure StorageGRID site failover for disaster recovery

Learn how to configure StorageGRID site failover in a disaster recovery scenario.

It is a common for a StorageGRID architecture deployment to be multisite. Sites can either be active-active or active-passive for DR. In a DR scenario, make sure that veritas Enterprise Vault can maintain connection to its primary storage (StorageGRID) and continue to ingest and retrieve data during a site failure. This section provides high-level configuration guidance for a two-site, active-passive deployment. For detailed information about these guidelines, see the [StorageGRID Documentation](#) page or contact a StorageGRID expert.

### Prerequisites to configure StorageGRID with veritas Enterprise Vault

Before you configure StorageGRID site failover, verify the following prerequisites:

- There is a two-site StorageGRID deployment; for example, SITE1 and SITE2.

- An admin node running the load balancer service or a gateway node, at each site, for load balancing has been created.
- A StorageGRID load balancer endpoint has been created.

## Configure StorageGRID site failover

To configure StorageGRID site failover, complete the followings steps:

### Steps

1. To ensure connectivity to StorageGRID during site failures, configure a high-availability (HA) group. From StorageGRID Grid Manager Interface (GMI), click Configuration, High Availability Groups, and + Create.

[vertias/veritas-create-high-availability-group]

2. Enter the required information. Click Select Interfaces and include both SITE1 and SITE2's network interfaces where SITE1 (the primary site) is the preferred master. Assign a virtual IP address within the same subnet. Click Save.

**Edit High Availability Group 'site1-HA'**

**High Availability Group**

Name:

Description:

**Interfaces**

Select interfaces to include in the HA group. All interfaces must be in the same network subnet.

Node Name	Interface	IPv4 Subnet	Preferred Master
SITE1-ADM1	eth2	10.193.205.0/24	<input checked="" type="radio"/>
SITE2-ADM1	eth2	10.193.205.0/24	<input type="radio"/>

Displaying 2 interfaces.

**Virtual IP Addresses**

Virtual IP Subnet: 10.193.205.0/24. All virtual IP addresses must be within this subnet. There must be at least 1 and no more than 10 virtual IP addresses.


Virtual IP Address 1:

3. This virtual IP (VIP) address should be associated to the S3 host name used during veritas Enterprise Vault's partition configuration. The VIP address resolves traffic to SITE1—and during SITE1 failure, the VIP address transparently reroutes traffic to SITE2.
4. Make sure the data is replicated to both SITE1 and SITE2. That way if SITE1 fails, the object data is still available from SITE2. This is done by first configuring the storage pools.

From StorageGRID GMI, click ILM, Storage Pools, and then + Create. Follow the wizard to create two

storage pools: one for SITE1 and another for SITE2.

Storage pools are logical groupings of nodes used to define object placement

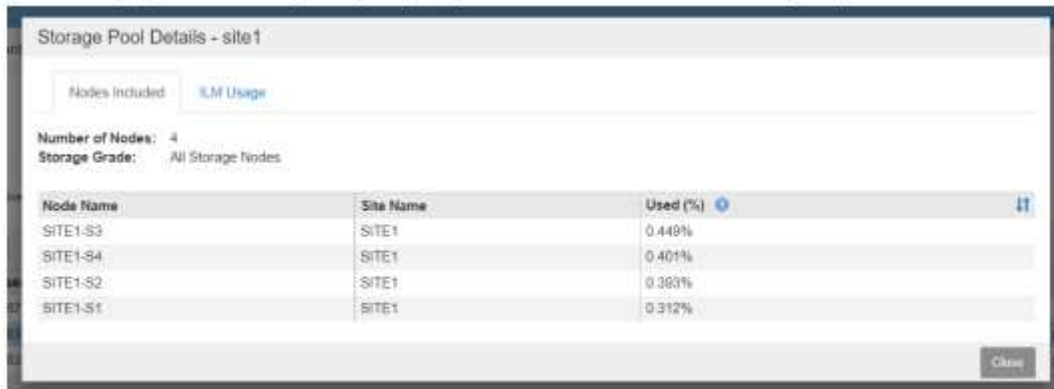


Storage Pool Details - site1

Nodes Included | ILM Usage

Number of Nodes: 4  
Storage Grade: All Storage Nodes

Node Name	Site Name	Used (%)
SITE1-S3	SITE1	0.448%
SITE1-S4	SITE1	0.401%
SITE1-S2	SITE1	0.383%
SITE1-S1	SITE1	0.312%

Close

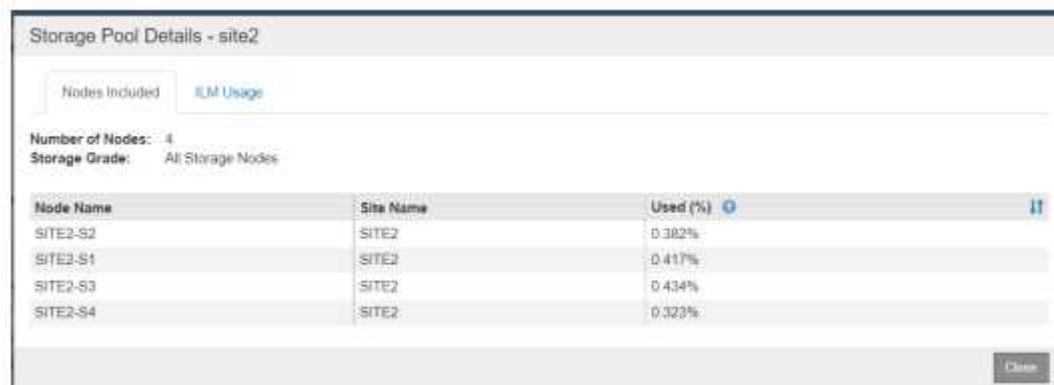

Storage Pool Details - site2

Nodes Included | ILM Usage

Number of Nodes: 4  
Storage Grade: All Storage Nodes

Node Name	Site Name	Used (%)
SITE2-S2	SITE2	0.382%
SITE2-S1	SITE2	0.417%
SITE2-S3	SITE2	0.434%
SITE2-S4	SITE2	0.323%

Close

- From StorageGRID GMI, click ILM, Rules, and then + Create. Follow the wizard to create an ILM rule specifying one copy to be stored per site with an ingest behavior of Balanced.



1 copy per site

Description: 1 copy per site  
Ingest Behavior: Balanced  
Retention Class: Ingest Time  
Filtering Criteria: Matches all objects

Retention Diagram:

Triggers: Rule 1

Retention: Rule 1

- Add the ILM rule into an ILM policy and activate the policy.

This configuration results in the following outcome:

- A virtual S3 endpoint IP where SITE1 is the primary and SITE2 is the secondary endpoint. If SITE1 fails, the VIP fails over to SITE2.
- When archived data is sent from veritas Enterprise Vault, StorageGRID ensures one copy is stored in SITE1 and another DR copy is stored in SITE2. If SITE1 fails, Enterprise Vault continues to ingest and retrieve from SITE2.



Both of these configurations are transparent to veritas Enterprise Vault. The S3 endpoint, bucket name, access keys, and so on are the same. There is no need to reconfigure the S3 connection settings on the veritas Enterprise Vault partition.



## Copyright information

Copyright © 2024 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

## Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.