



Power off and power on a single MetroCluster site

ONTAP MetroCluster

NetApp
April 12, 2024

This PDF was generated from https://docs.netapp.com/us-en/ontap-metrocluster/maintain/task_power_on_and_power_off_a_data_center.html on April 12, 2024. Always check docs.netapp.com for the latest.

Table of Contents

- Power off and power on a single MetroCluster site 1
- Power off and power on a single site in a MetroCluster IP configuration 1
- Power off and power on a single site in a MetroCluster FC configuration 7


Power off and power on a single MetroCluster site

Power off and power on a single site in a MetroCluster IP configuration

If you need to perform site maintenance or relocate a single site in a MetroCluster IP configuration, you must know how to power off and power on the site.

If you need to relocate and reconfigure a site (for example, if you need to expand from a four-node to an eight-node cluster), you cannot complete these tasks at the same time. This procedure only covers the steps that are required to perform site maintenance or to relocate a site without changing its configuration.

The following diagram shows a MetroCluster configuration. Cluster_B is powered off for maintenance.

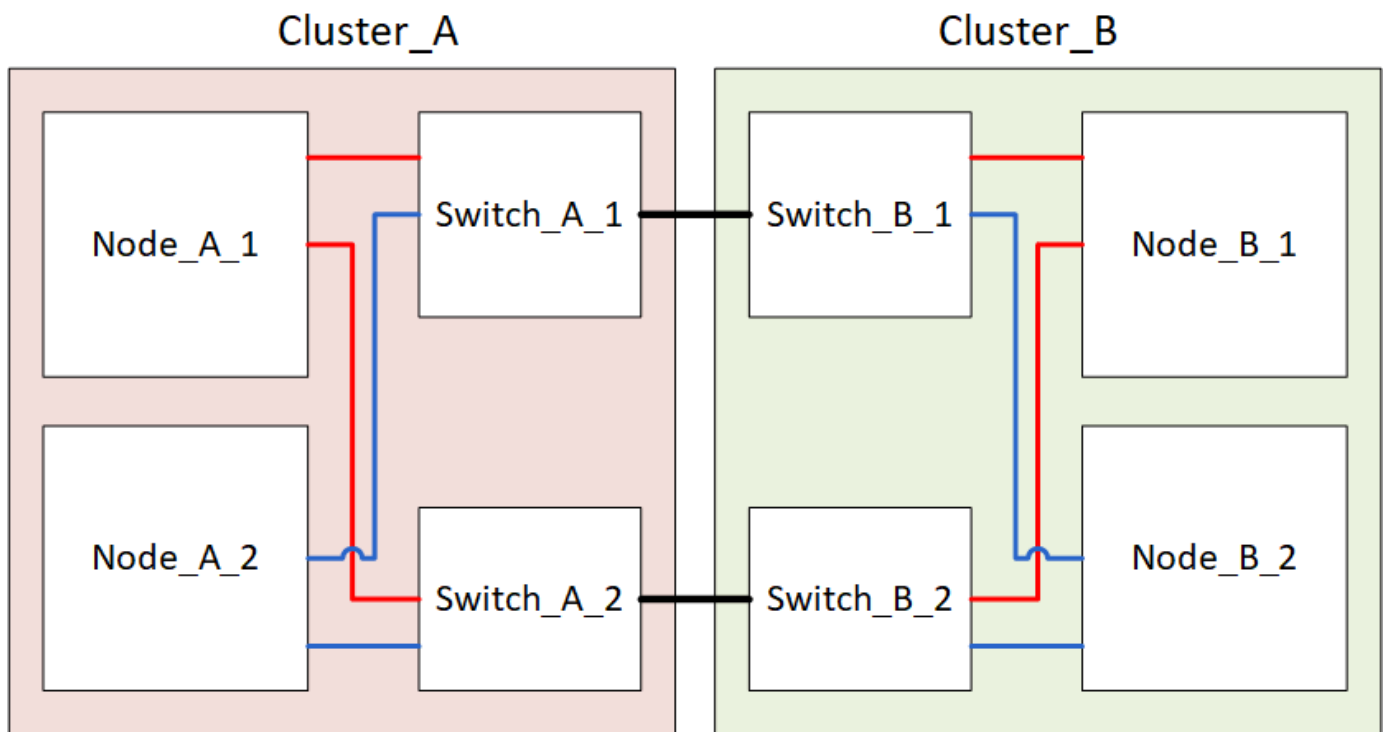

Power off a MetroCluster site

You must power off a site and all of the equipment before site maintenance or relocation can begin.

About this task

All the commands in the following steps are issued from the site that remains powered on.

Steps

1. Before you begin, check that any non-mirrored aggregates at the site are offline.
2. Verify the operation of the MetroCluster configuration in ONTAP:
 - a. Check whether the system is multipathed:

```
node run -node node-name sysconfig -a
```

- b. Check for any health alerts on both clusters:

```
system health alert show
```

- c. Confirm the MetroCluster configuration and that the operational mode is normal:

```
metrocluster show
```

- d. Perform a MetroCluster check:

```
metrocluster check run
```

- e. Display the results of the MetroCluster check:

```
metrocluster check show
```

- f. Check for any health alerts on the switches (if present):

```
storage switch show
```

- g. Run Config Advisor.

[NetApp Downloads: Config Advisor](#)

- h. After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.

3. From the site you want to remain up, implement the switchover:

```
metrocluster switchover
```

```
cluster_A::*> metrocluster switchover
```

The operation can take several minutes to complete.

4. Monitor and verify the completion of the switchover:

```
metrocluster operation show
```

```
cluster_A::*> metrocluster operation show
  Operation: Switchover
  Start time: 10/4/2012 19:04:13
  State: in-progress
  End time: -
  Errors:
```

```
cluster_A::*> metrocluster operation show
  Operation: Switchover
  Start time: 10/4/2012 19:04:13
  State: successful
  End time: 10/4/2012 19:04:22
  Errors: -
```

5. If you have a MetroCluster IP configuration running ONTAP 9.6 or later, wait for the disaster site plexes to come online and the healing operations to automatically complete.

In MetroCluster IP configurations running ONTAP 9.5 or earlier, the disaster site nodes do not automatically boot to ONTAP and the plexes remain offline.

6. Move any volumes and LUNs that belong to unmirrored aggregates offline.
 - a. Move the volumes offline.

```
cluster_A::* volume offline <volume name>
```

- b. Move the LUNs offline.

```
cluster_A::* lun offline lun_path <lun_path>
```

7. Move unmirrored aggregates offline: storage aggregate offline

```
cluster_A*::> storage aggregate offline -aggregate <aggregate-name>
```

8. Depending on your configuration and ONTAP version, identify and move offline affected plexes that are located at the disaster site (Cluster_B).

You should move the following plexes offline:

- Non-mirrored plexes residing on disks located at the disaster site.

If you do not move the non-mirrored plexes at the disaster site offline, an outage might occur when the disaster site is later powered off.

- Mirrored plexes residing on disks located at the disaster site for aggregate mirroring. After they are moved offline, the plexes are inaccessible.

a. Identify the affected plexes.

Plexes that are owned by nodes at the surviving site consist of Pool1 disks. Plexes that are owned by nodes at the disaster site consist of Pool0 disks.

```
Cluster_A::> storage aggregate plex show -fields aggregate,status,is-
online,Plex,pool
aggregate      plex  status          is-online  pool
-----
Node_B_1_aggr0 plex0 normal,active  true       0
Node_B_1_aggr0 plex1 normal,active  true       1

Node_B_2_aggr0 plex0 normal,active  true       0
Node_B_2_aggr0 plex5 normal,active  true       1

Node_B_1_aggr1 plex0 normal,active  true       0
Node_B_1_aggr1 plex3 normal,active  true       1

Node_B_2_aggr1 plex0 normal,active  true       0
Node_B_2_aggr1 plex1 normal,active  true       1

Node_A_1_aggr0 plex0 normal,active  true       0
Node_A_1_aggr0 plex4 normal,active  true       1

Node_A_1_aggr1 plex0 normal,active  true       0
Node_A_1_aggr1 plex1 normal,active  true       1

Node_A_2_aggr0 plex0 normal,active  true       0
Node_A_2_aggr0 plex4 normal,active  true       1

Node_A_2_aggr1 plex0 normal,active  true       0
Node_A_2_aggr1 plex1 normal,active  true       1
14 entries were displayed.

Cluster_A::>
```

The affected plexes are those that are remote to cluster A. The following table shows whether the disks are local or remote relative to cluster A:

Node	Disks in pool	Should the disks be set offline?	Example of plexes to be moved offline
------	---------------	----------------------------------	---------------------------------------

Node_A_1 and Node_A_2	Disks in pool 0	No. Disks are local to cluster A.	-
	Disks in pool 1	Yes. Disks are remote to cluster A.	Node_A_1_aggr0/plex4 Node_A_1_aggr1/plex1 Node_A_2_aggr0/plex4 Node_A_2_aggr1/plex1
Node_B_1 and Node_B_2	Disks in pool 0	Yes. Disks are remote to cluster A.	Node_B_1_aggr1/plex0 Node_B_1_aggr0/plex0 Node_B_2_aggr0/plex0 Node_B_2_aggr1/plex0
	Disks in pool 1	No. Disks are local to cluster A.	-

b. Move the affected plexes offline:

```
storage aggregate plex offline
```

```
storage aggregate plex offline -aggregate Node_B_1_aggr0 -plex plex0
```



Perform this step for all plexes that have disks that are remote to Cluster_A.

9. Persistently offline the ISL switch ports according to the switch type.

10. Halt the nodes by running the following command on each node:

```
node halt -inhibit-takeover true -skip-lif-migration true -node <node-name>
```

11. Power off the equipment at the disaster site.

You must power off the following equipment in the order shown:

- MetroCluster IP switches
- Storage controllers
- Storage shelves

Relocating the powered-off site of the MetroCluster

After the site is powered off, you can begin maintenance work. The procedure is the same whether the MetroCluster components are relocated within the same data center or relocated to a different data center.

- The hardware should be cabled in the same way as the previous site.
- If the Inter-Switch Link (ISL) speed, length, or number has changed, they all need to be reconfigured.

Steps

1. Verify that the cabling for all components is carefully recorded so that it can be correctly reconnected at the new location.
2. Physically relocate all the hardware, storage controllers, IP switches, FibreBridges, and storage shelves.
3. Configure the ISL ports and verify the intersite connectivity.
 - a. Power on the IP switches.



Do **not** power up any other equipment.

4. Use tools on the switches (as they are available) to verify the intersite connectivity.



You should only proceed if the links are correctly configured and stable.

5. Disable the links again if they are found to be stable.

Powering on the MetroCluster configuration and returning to normal operation

After maintenance has been completed or the site has been moved, you must power on the site and reestablish the MetroCluster configuration.

About this task

All the commands in the following steps are issued from the site that you power on.

Steps

1. Power on the switches.

You should power on the switches first. They might have been powered on during the previous step if the site was relocated.

- a. Reconfigure the Inter-Switch Link (ISL) if required or if this was not completed as part of the relocation.
 - b. Enable the ISL if fencing was completed.
 - c. Verify the ISL.
2. Power on the storage controllers and wait until you see the `LOADER` prompt. The controllers must not be fully booted.

If auto boot is enabled, press `Ctrl+C` to stop the controllers from automatically booting.

3. Power on the shelves, allowing enough time for them to power on completely.
 - a. Verify that the shelves and disks on the bridges are clearly visible.

You can use a command such as `sastargets` on the ATTO CLI.

4. Verify that the local storage is visible from the node in Maintenance mode:

```
disk show -v
```


5. Reestablish the MetroCluster configuration.


Follow the instructions in [Verifying that your system is ready for a switchback](#) to perform healing and switchback operations according to your MetroCluster configuration.

Power off and power on a single site in a MetroCluster FC configuration

If you need to perform site maintenance or relocate a single site in a MetroCluster FC configuration, you must know how to power off and power on the site.

If you need to relocate and reconfigure a site (for example, if you need to expand from a four-node to an eight-node cluster), you cannot complete these tasks at the same time. This procedure only covers the steps that are required to perform site maintenance or to relocate a site without changing its configuration.

The following diagram shows a MetroCluster configuration. Cluster_B is powered off for maintenance.

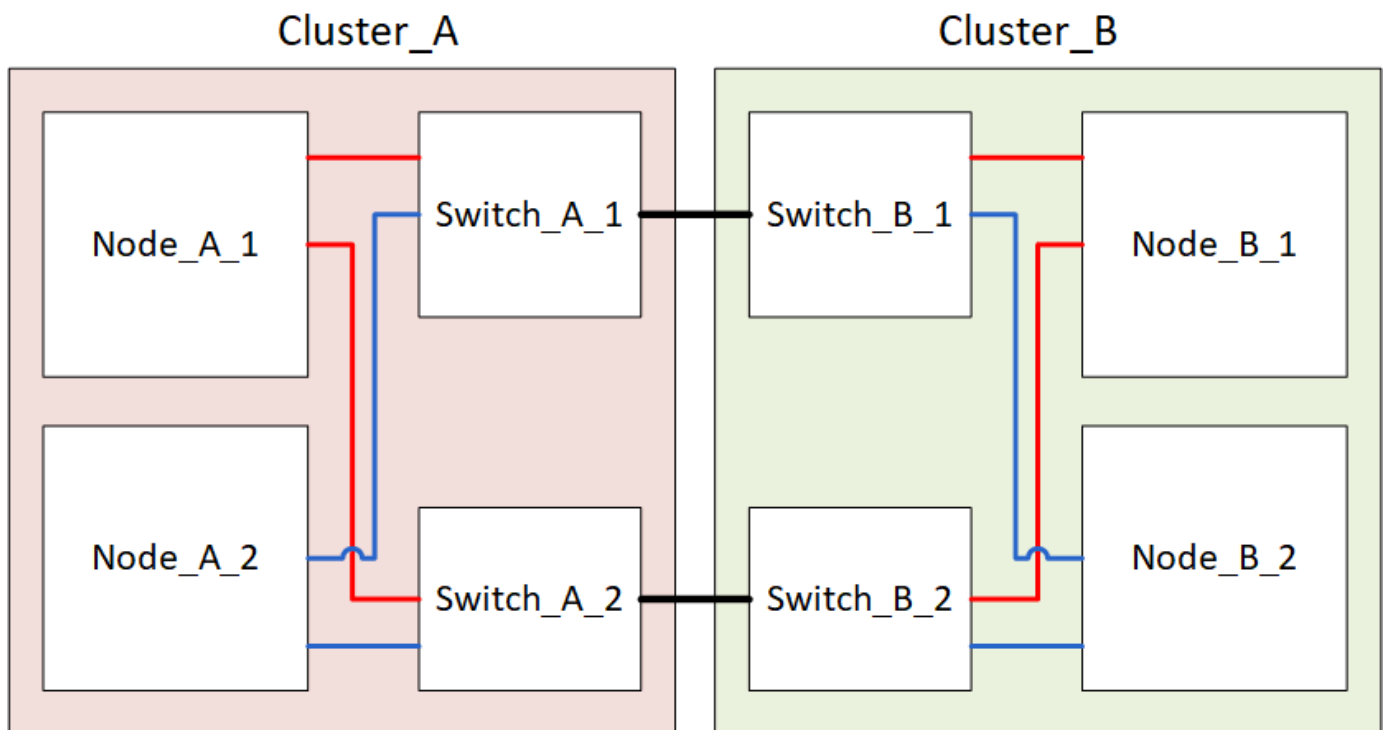

Power off a MetroCluster site

You must power off a site and all of the equipment before site maintenance or relocation can begin.

About this task

All the commands in the following steps are issued from the site that remains powered on.

Steps

1. Before you begin, check that any non-mirrored aggregates at the site are offline.
2. Verify the operation of the MetroCluster configuration in ONTAP:
 - a. Check whether the system is multipathed:

```
node run -node node-name sysconfig -a
```

- b. Check for any health alerts on both clusters:

```
system health alert show
```

- c. Confirm the MetroCluster configuration and that the operational mode is normal:

```
metrocluster show
```

- d. Perform a MetroCluster check:

```
metrocluster check run
```

- e. Display the results of the MetroCluster check:

```
metrocluster check show
```

- f. Check for any health alerts on the switches (if present):

```
storage switch show
```

- g. Run Config Advisor.

[NetApp Downloads: Config Advisor](#)

- h. After running Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.

3. From the site you want to remain up, implement the switchover:

```
metrocluster switchover
```

```
cluster_A::*> metrocluster switchover
```

The operation can take several minutes to complete.

The unmirrored aggregates will only be online after a switchover if the remote disks in the aggregate are accessible. If the ISLs fail, the local node might be unable to access the data in the unmirrored remote disks. The failure of an aggregate can lead to a reboot of the local node.

4. Monitor and verify the completion of the switchover:

```
metrocluster operation show
```

```
cluster_A::*> metrocluster operation show
  Operation: Switchover
  Start time: 10/4/2012 19:04:13
  State: in-progress
  End time: -
  Errors:
```

```
cluster_A::*> metrocluster operation show
  Operation: Switchover
  Start time: 10/4/2012 19:04:13
  State: successful
  End time: 10/4/2012 19:04:22
  Errors: -
```

5. Move any volumes and LUNs that belong to unmirrored aggregates offline.

a. Move the volumes offline.

```
cluster_A::* volume offline <volume name>
```

b. Move the LUNs offline.

```
cluster_A::* lun offline lun_path <lun_path>
```

6. Move unmirrored aggregates offline: storage aggregate offline

```
cluster_A*::> storage aggregate offline -aggregate <aggregate-name>
```

7. Depending on your configuration and ONTAP version, identify and move offline affected plexes that are located at the disaster site (Cluster_B).

You should move the following plexes offline:

- Non-mirrored plexes residing on disks located at the disaster site.

If you do not move the non-mirrored plexes at the disaster site offline, an outage might occur when the disaster site is later powered off.

- Mirrored plexes residing on disks located at the disaster site for aggregate mirroring. After they are moved offline, the plexes are inaccessible.

a. Identify the affected plexes.

Plexes that are owned by nodes at the surviving site consist of Pool1 disks. Plexes that are owned by nodes at the disaster site consist of Pool0 disks.

```

Cluster_A::> storage aggregate plex show -fields aggregate,status,is-
online,Plex,pool
aggregate      plex  status          is-online pool
-----
Node_B_1_aggr0 plex0 normal,active true      0
Node_B_1_aggr0 plex1 normal,active true      1

Node_B_2_aggr0 plex0 normal,active true      0
Node_B_2_aggr0 plex5 normal,active true      1

Node_B_1_aggr1 plex0 normal,active true      0
Node_B_1_aggr1 plex3 normal,active true      1

Node_B_2_aggr1 plex0 normal,active true      0
Node_B_2_aggr1 plex1 normal,active true      1

Node_A_1_aggr0 plex0 normal,active true      0
Node_A_1_aggr0 plex4 normal,active true      1

Node_A_1_aggr1 plex0 normal,active true      0
Node_A_1_aggr1 plex1 normal,active true      1

Node_A_2_aggr0 plex0 normal,active true      0
Node_A_2_aggr0 plex4 normal,active true      1

Node_A_2_aggr1 plex0 normal,active true      0
Node_A_2_aggr1 plex1 normal,active true      1
14 entries were displayed.

Cluster_A::>

```

The affected plexes are those that are remote to cluster A. The following table shows whether the disks are local or remote relative to cluster A:

Node	Disks in pool	Should the disks be set offline?	Example of plexes to be moved offline
Node_A_1 and Node_A_2	Disks in pool 0	No. Disks are local to cluster A.	-
	Disks in pool 1	Yes. Disks are remote to cluster A.	Node_A_1_aggr0/plex4 Node_A_1_aggr1/plex1 Node_A_2_aggr0/plex4 Node_A_2_aggr1/plex1

Node_B_1 and Node_B_2	Disks in pool 0	Yes. Disks are remote to cluster A.	Node_B_1_aggr1/plex0 Node_B_1_aggr0/plex0 Node_B_2_aggr0/plex0 Node_B_2_aggr1/plex0
	Disks in pool 1	No. Disks are local to cluster A.	-

b. Move the affected plexes offline:

```
storage aggregate plex offline
```

```
storage aggregate plex offline -aggregate Node_B_1_aggr0 -plex plex0
```



Perform this step for all plexes that have disks that are remote to Cluster_A.

8. Persistently offline the ISL switch ports according to the switch type.

Switch type	Action
-------------	--------

For Brocade FC switches...

- a. Use the `portcfgpersistentdisable <port>` command to persistently disable the ports as shown in the following example. This must be done on both switches at the surviving site.

```
Switch_A_1:admin> portcfgpersistentdisable 14
Switch_A_1:admin> portcfgpersistentdisable 15
Switch_A_1:admin>
```

- b. Verify that the ports are disabled using the `switchshow` command shown in the following example:

```
Switch_A_1:admin> switchshow
switchName:      Switch_A_1
switchType:      109.1
switchState:     Online
switchMode:      Native
switchRole:      Principal
switchDomain:    2
switchId:        fffc02
switchWwn:       10:00:00:05:33:88:9c:68
zoning:          ON (T5_T6)
switchBeacon:    OFF
FC Router:       OFF
FC Router BB Fabric ID: 128
Address Mode:    0

  Index Port Address Media Speed State      Proto
  =====
  ...
  14  14  020e00  id   16G  No_Light  FC
Disabled (Persistent)
  15  15  020f00  id   16G  No_Light  FC
Disabled (Persistent)
  ...
Switch_A_1:admin>
```

For Cisco FC switches...

- a. Use the `interface` command to persistently disable the ports. The following example shows ports 14 and 15 being disabled:

```
Switch_A_1# conf t
Switch_A_1(config)# interface fc1/14-15
Switch_A_1(config)# shut

Switch_A_1(config-if)# end
Switch_A_1# copy running-config startup-config
```

- b. Verify that the switch port is disabled using the `show interface brief` command as shown in the following example:

```
Switch_A_1# show interface brief
Switch_A_1
```

9. Power off the equipment at the disaster site.

The following equipment must be turned off in the order shown:

- MetroCluster FC switches
- Storage controllers - the storage controllers should currently be at the `LOADER` prompt, you must power them off completely.
- Storage shelves
- ATTO FibreBridges (if present)

Relocating the powered-off site of the MetroCluster

After the site is powered off, you can begin maintenance work. The procedure is the same whether the MetroCluster components are relocated within the same data center or relocated to a different data center.

- The hardware should be cabled in the same way as the previous site.
- If the Inter-Switch Link (ISL) speed, length, or number has changed, they all need to be reconfigured.

Steps

1. Verify that the cabling for all components is carefully recorded so that it can be correctly reconnected at the new location.
2. Physically relocate all the hardware, storage controllers, FC switches, FibreBridges, and storage shelves.
3. Configure the ISL ports and verify the intersite connectivity.
 - a. Power on the FC switches.



Do **not** power up any other equipment.

b. Enable the ports.

Enable the ports according to the correct switch types in the following table:

Switch type	Command
-------------	---------

For Brocade FC switches...

- a. Use the `portcfgpersistentenable <port number>` command to persistently enable the port. This must be done on both switches at the surviving site.

The following example shows ports 14 and 15 being enabled on Switch_A_1.

```
switch_A_1:admin>
portcfgpersistentenable 14
switch_A_1:admin>
portcfgpersistentenable 15
switch_A_1:admin>
```

- b. Verify that the switch port is enabled: `switchshow`

The following example shows that ports 14 and 15 are enabled:

```
switch_A_1:admin> switchshow
switchName: Switch_A_1
switchType: 109.1

switchState:    Online
switchMode: Native
switchRole: Principal
switchDomain:    2
switchId:    fffc02
switchWwn:    10:00:00:05:33:88:9c:68
zoning:    ON (T5_T6)
switchBeacon:    OFF
FC Router:    OFF
FC Router BB Fabric ID: 128
Address Mode:    0

Index Port Address Media Speed State
Proto
=====
=====
...
14 14 020e00 id 16G Online
FC E-Port 10:00:00:05:33:86:89:cb
"Switch_A_1"
15 15 020f00 id 16G Online
FC E-Port 10:00:00:05:33:86:89:cb
"Switch_A_1" (downstream)
...
switch_A_1:admin>
```

For Cisco FC switches...

a. Enter the `interface` command to enable the port.

The following example shows ports 14 and 15 being enabled on Switch_A_1.

```
switch_A_1# conf t
switch_A_1(config)# interface fc1/14-15
switch_A_1(config)# no shut
switch_A_1(config-if)# end
switch_A_1# copy running-config
startup-config
```

b. Verify that the switch port is enabled: `show interface brief`

```
switch_A_1# show interface brief
switch_A_1#
```

4. Use tools on the switches (as they are available) to verify the intersite connectivity.



You should only proceed if the links are correctly configured and stable.

5. Disable the links again if they are found to be stable.

Disable the ports based on whether you are using Brocade or Cisco switches as shown in the following table:

Switch type	Command
-------------	---------

For Brocade FC switches...

- a. Enter the `portcfgpersistentdisable <port_number>` command to persistently disable the port.

This must be done on both switches at the surviving site. The following example shows ports 14 and 15 being disabled on Switch_A_1:

```
switch_A_1:admin> portpersistentdisable
14
switch_A_1:admin> portpersistentdisable
15
switch_A_1:admin>
```

- b. Verify that the switch port is disabled: `switchshow`

The following example shows that ports 14 and 15 are disabled:

```
switch_A_1:admin> switchshow
switchName: Switch_A_1
switchType: 109.1
switchState: Online
switchMode: Native
switchRole: Principal
switchDomain: 2
switchId: fffc02
switchWwn: 10:00:00:05:33:88:9c:68
zoning: ON (T5_T6)
switchBeacon: OFF
FC Router: OFF
FC Router BB Fabric ID: 128
Address Mode: 0

Index Port Address Media Speed State
Proto
=====
=====
...
14 14 020e00 id 16G No_Light
FC Disabled (Persistent)
15 15 020f00 id 16G No_Light
FC Disabled (Persistent)
...
switch_A_1:admin>
```

For Cisco FC switches...

a. Disable the port using the `interface` command.

The following example shows ports fc1/14 and fc1/15 being disabled on Switch A_1:

```
switch_A_1# conf t

switch_A_1(config)# interface fc1/14-15
switch_A_1(config)# shut
switch_A_1(config-if)# end
switch_A_1# copy running-config startup-
config
```

b. Verify that the switch port is disabled using the `show interface brief` command.

```
switch_A_1# show interface brief
switch_A_1#
```

Powering on the MetroCluster configuration and returning to normal operation

After maintenance has been completed or the site has been moved, you must power on the site and reestablish the MetroCluster configuration.

About this task

All the commands in the following steps are issued from the site that you power on.

Steps

1. Power on the switches.

You should power on the switches first. They might have been powered on during the previous step if the site was relocated.

- a. Reconfigure the Inter-Switch Link (ISL) if required or if this was not completed as part of the relocation.
- b. Enable the ISL if fencing was completed.
- c. Verify the ISL.

2. Disable the ISLs on the FC switches.

3. Power on the storage controllers and wait until you see the `LOADER` prompt. The controllers must not be fully booted.

If auto boot is enabled, press `Ctrl+C` to stop the controllers from automatically booting.

4. Power on the shelves and allow enough time for them to power on completely.

5. Power on the FibreBridge bridges.

a. On the FC switches, verify that the ports connecting the bridges are coming online.

You can use a command such as `switchshow` for Brocade switches, and `show interface brief` for Cisco switches.

b. Verify that the shelves and disks on the bridges are clearly visible.

You can use a command such as `sastargets` on the ATTO CLI.

6. Enable the ISLs on the FC switches.

Enable the ports based on whether you are using Brocade or Cisco switches as shown in the following table:

Switch type	Command
-------------	---------

For Brocade FC switches...

- a. Enter the `portcfgpersistentenable <port>` command to persistently enable the ports. This must be done on both switches at the surviving site.

The following example shows ports 14 and 15 being enabled on Switch_A_1:

```
Switch_A_1:admin> portcfgpersistentenable 14
Switch_A_1:admin> portcfgpersistentenable 15
Switch_A_1:admin>
```

- b. Verify that the switch port is enabled using the `switchshow` command:

```
switch_A_1:admin> switchshow
switchName:      Switch_A_1
switchType:      109.1
switchState:     Online
switchMode:      Native
switchRole:      Principal
switchDomain:    2
switchId:        fffc02
switchWwn:       10:00:00:05:33:88:9c:68
zoning:          ON (T5_T6)
switchBeacon:    OFF
FC Router:       OFF
FC Router BB Fabric ID: 128
Address Mode:    0

  Index Port Address Media Speed State      Proto
  =====
  ...
  14  14   020e00   id   16G   Online   FC
E-Port 10:00:00:05:33:86:89:cb "Switch_A_1"
  15  15   020f00   id   16G   Online   FC
E-Port 10:00:00:05:33:86:89:cb "Switch_A_1"
(downstream)
  ...
switch_A_1:admin>
```

For Cisco FC switches...

- a. Use the `interface` command to enable the ports.

The following example shows port fc1/14 and fc1/15 being enabled on Switch A_1:

```
switch_A_1# conf t
switch_A_1(config)# interface fc1/14-15
switch_A_1(config)# no shut
switch_A_1(config-if)# end
switch_A_1# copy running-config startup-config
```

- b. Verify that the switch port is disabled:

```
switch_A_1# show interface brief
switch_A_1#
```

7. Verify that the storage is visible from the surviving site. Bring the offline plexes back online. This restarts the resync operations and reestablishes the SyncMirror.
8. Reestablish the MetroCluster configuration.

Follow the instructions in [Verifying that your system is ready for a switchback](#) to perform healing and switchback operations according to your MetroCluster configuration.

Copyright information

Copyright © 2024 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.