



Concepts

ONTAP tools for VMware vSphere 9.12

NetApp
April 02, 2025

This PDF was generated from https://docs.netapp.com/us-en/ontap-tools-vmware-vsphere-912/concepts/concept_virtual_storage_console_overview.html on April 02, 2025. Always check docs.netapp.com for the latest.

Table of Contents

Concepts	1
ONTAP tools Overview	1
Virtual Storage Console (VSC)	1
VASA Provider	2
Storage Replication Adapter (SRA)	2
VASA Provider configurations for vVols	2
Configure disaster recovery setup	3
Role based access control	4
Overview of role-based access control in ONTAP tools	4
Components of vCenter Server permissions	4
Key points about assigning and modifying permissions for vCenter Server	6
Standard roles packaged with ONTAP tools	7
Privileges required for ONTAP tools tasks	9
Permissions for ONTAP storage systems and vSphere objects	9
How to configure ONTAP role-based access control for ONTAP tools for VMware vSphere	11
Configure high availability for ONTAP tools	12
VMware vSphere HA	13
VMware vSphere Fault Tolerance	13
MetroCluster configurations supported by ONTAP tools	14
MetroCluster configurations and ONTAP tools	14
MetroCluster configurations and VASA Provider	14
MetroCluster configurations and SRA	14

Concepts

ONTAP tools Overview

The ONTAP tools for VMware vSphere provides end-to-end life cycle management for virtual machines in VMware environments that use NetApp storage systems. It enables the administrators to manage the storage within the vCenter Server directly and hence simplifies the storage and data management for VMware environments.

The ONTAP tools integrates with vSphere Client and enables you to use single sign-on (SSO) services. In an environment with multiple vCenter Server instances, each vCenter Server instance that you want to manage must have its own registered instance of ONTAP tools.

Each component in ONTAP tools provides capabilities to help manage your storage more efficiently.

The VMware vSphere Client remote plug-in tool is designed to integrate plug-in functionality into the vSphere Client without the need to run inside vCenter Server. This provides plug-in isolation and enables scale-out of plug-ins that operate in large vSphere environments.

Virtual Storage Console (VSC)

VSC enables you to perform the following tasks:

- Add storage controllers, assign credentials, and set up permissions for storage controllers of VSC, that both SRA and VASA Provider can leverage
- Provision datastores
- Monitor the performance of the datastores and virtual machines in your vCenter Server environment
- Control administrator access to the vCenter Server objects by using role-based access control (RBAC) at two levels:
 - vSphere objects, such as virtual machines and datastores

These objects are managed by using the vCenter Server RBAC.

- ONTAP storage

The storage systems are managed by using ONTAP RBAC.

- View and update the host settings of the ESXi hosts that are connected to NetApp storage

VSC provisioning operations benefit from using the NFS Plug-in for VMware vStorage APIs for Array Integration (VAAI). The NFS Plug-in for VAAI is a software library that integrates the VMware Virtual Disk Libraries that are installed on the ESXi host. The VMware VAAI package enables the offloading of certain tasks from the physical hosts to the storage array. You can perform tasks such as thin provisioning and hardware acceleration at the array level to reduce the workload on the ESXi hosts. The copy offload feature and space reservation feature improve the performance of VSC operations.

The NetApp NFS Plug-in for VAAI is not shipped with VSC. But you can download the plug-in installation package and obtain the instructions for installing the plug-in from the NetApp Support Site.

VASA Provider

VASA Provider for ONTAP uses VMware vSphere APIs for Storage Awareness (VASA) to send information about storage used by VMware vSphere to the vCenter Server. ONTAP tools has VASA Provider integrated with VSC. VASA Provider enables you to perform the following tasks:

- Provision VMware Virtual Volumes (vVols) datastores
- Create and use storage capability profiles that define different storage service level objectives (SLOs) for your environment
- Verify for compliance between the datastores and the storage capability profiles
- Set alarms to warn you when volumes and aggregates are approaching the threshold limits
- Monitor the performance of virtual machine disks (VMDKs) and the virtual machines that are created on vVols datastores

Storage Replication Adapter (SRA)

When SRA is enabled and used in conjunction with VMware Site Recovery Manager (SRM), you can recover the vCenter Server datastores and virtual machines in the event of a failure. SRA enables you to use array based replication (ABR) for protected sites and recovery sites for disaster recovery in the event of a failure.

Related information

[NetApp Support](#)

VASA Provider configurations for vVols

You can use VASA Provider for ONTAP to create and manage VMware Virtual Volumes (vVols). You can provision, edit, mount, and delete a vVols datastore. You can also add storage to the vVols datastore or remove storage from the vVols datastore. to provide greater flexibility. You can provision and manage every virtual machine and the related VMDK.

A vVols datastore consists of one or more FlexVol volumes within a storage container (also called backing storage). A virtual machine can be spread across one vVols datastore or multiple vVols datastores.

While you can create a vVols datastore that has multiple FlexVol volumes, all of the FlexVol volumes within the storage container must use the same protocol (NFS, iSCSI, FCP, or NVMe/FC) and the same storage virtual machines (SVMs).

You do not require detailed knowledge of the underlying storage. For example, you do not have to identify a specific FlexVol volume to contain the storage. After you add FlexVol volumes to the vVols datastore, the storage container manages the storage requirements and prevents any situations during VM provisioning where VMware provisioned to a backing volume with no capacity.

 It is a good practice to include multiple FlexVol volumes in a vVols datastore for performance and flexibility. Because FlexVol volumes have LUN count restrictions that limit the number of virtual machines, including multiple FlexVol volumes allows you to store more virtual machines in your vVols datastore.

As part of the setup process, you must specify a storage capability profile for the vVols datastore that you are

creating. You can select one or more VASA Provider storage capability profiles for a vVols datastore. You can also specify a default storage capability profile for any vVols datastores that are automatically created in that storage container.

VASA Provider creates different types of vVols during virtual machine provisioning or VMDK creation, as required.

- **Config**

VMware vSphere uses this vVols datastore to store configuration information.

In SAN (block) implementations, the storage is a 4 GB LUN.

In an NFS implementation, this is a directory containing VM config files such as the vmx file and pointers to other vVols datastores.

- **Data**

This vVols contains operating system information and user files.

In SAN implementations, this is a LUN that is the size of the virtual disk.

In an NFS implementation, this is a file that is the size of the virtual disk.

For every NFS data vVols that is provisioned on ONTAP clusters 9.8 and above, all the VMDK files are registered for monitoring performance metrics like IOPS, Throughput, and Latency.

- **Swap**

This vVols is created when the virtual machine is powered on and is deleted when the virtual machine is powered off.

In SAN implementations, this is a LUN that is the size of the virtual memory.

In an NFS implementation, this is a file that is the size of the virtual memory.

- **Memory**

This vVols is created if the memory snapshots option is selected when creating VM snapshot.

In SAN implementations, this is a LUN that is the size of the virtual memory.

In an NFS implementation, this is a file that is the size of the virtual memory.

Configure disaster recovery setup

You can create and manage the disaster recovery setup in your vCenter Server along with VMware's Site Recovery Manager (SRM).

VASA Provider now comes built-in with the capabilities of Storage Replication Adapter (SRA). If you have configured vVols datastores in your datacenter, then for recovery of vVols datastores, you do not need to install SRA separately for disaster recovery. In Site Recovery Manager (SRM), you must pair the protected and recovery sites. After the site pairing has occurred, the next part of the SRM configuration involves setting up an array pair which enables SRM to communicate with storage system to discover devices and device replication.

Before you can configure the array pair, you must first create a site pair in SRM.

This release of ONTAP tools provides you with an option to use synchronous SnapMirror configuration for disaster recovery.



VMware Site Recovery Manager (SRM) does not use SRA for managing disaster recovery of vVols datastores. Instead VASA Provider is used for replication and failover control of vVols datastores on ONTAP 9.7 and later clusters.

See [Enable Storage Replication Adapter](#) section for the procedure.

quick_resync feature activation

You can enable quick_resync flag to perform the Reprotect and Restore operation in SRA. This is applicable only for datastores backed by volumes with asynchronous SnapMirror relationship. quick_resync flag enables faster resync time of the destination volume because resync does not incur storage efficiency overhead before the transfer of new data. The quick_resync is not enabled by default. It is recommended to enable the quick_resync flag:

- When the source of the resync does not have volume efficiency enabled.
- When reducing resync time is more important than preserving all possible storage efficiency on the network.

Follow the below steps to enable the quick_resync flag:

Steps

1. Log into the control panel at <https://<IP address>:9083> and click Web based CLI interface.
2. Run the command `vp updateconfig -key=snapmirror.quick.resync.enabled -value=true`.
3. Run the command `vp reloadconfig`.

Role based access control

Overview of role-based access control in ONTAP tools

vCenter Server provides role-based access control (RBAC) that enables you to control access to vSphere objects. In ONTAP® tools for VMware vSphere, vCenter Server RBAC works with ONTAP RBAC to determine which ONTAP tools tasks a specific user can perform on objects on a specific storage system.

To successfully complete a task, you must have the appropriate vCenter Server RBAC permissions. During a task, ONTAP tools checks a user's vCenter Server permissions before checking the user's ONTAP privileges.

You can set the vCenter Server permissions on the root object (also known as the root folder). You can then refine the security by restricting child entities that do not need those permissions.

Components of vCenter Server permissions

The vCenter Server recognizes permissions, not privileges. Each vCenter Server permission consists of three components.

The vCenter Server has the following components:

- One or more privileges (the role)

The privileges define the tasks that a user can perform.

- A vSphere object

The object is the target for the tasks.


- A user or group

The user or group defines who can perform the task.

As the following diagram illustrates, you must have all three elements in order to have a permission.



In this diagram, the gray boxes indicate components that exist in the vCenter Server, and the white boxes indicate components that exist in the operating system where the vCenter Server is running.

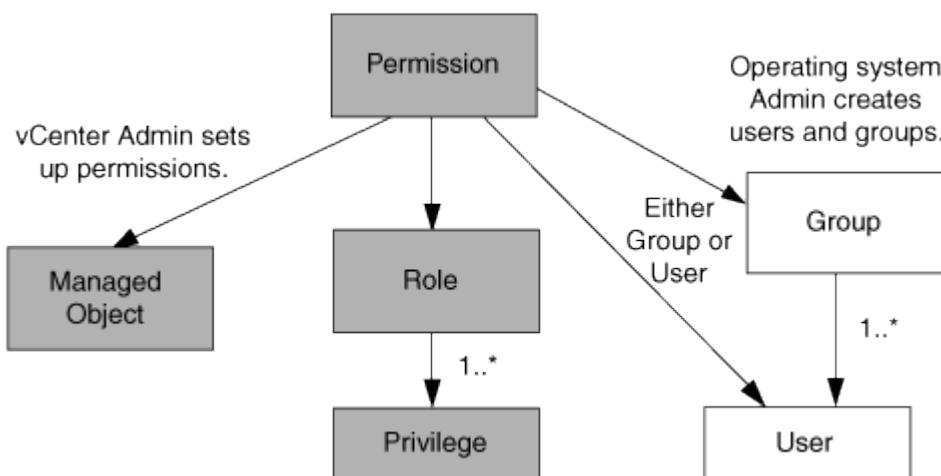

Privileges

Two kinds of privileges are associated with ONTAP tools for VMware vSphere:

- Native vCenter Server privileges

These privileges come with the vCenter Server.

- ONTAP tools-specific privileges

These privileges are defined for specific ONTAP tools tasks. They are unique to ONTAP tools.

ONTAP tools tasks require both ONTAP tools-specific privileges and vCenter Server native privileges. These privileges constitute the “role” for the user. A permission can have multiple privileges. These privileges are for a user that is logged into the vCenter Server.



To simplify working with vCenter Server RBAC, ONTAP tools provides several standard roles that contain all the ONTAP tools-specific and native privileges that are required to perform ONTAP tools tasks.

If you change the privileges within a permission, the user that is associated with that permission should log out, and then log in to enable the updated permission.

Privilege	Roles	Tasks
NetApp ONTAP tools Console > View	<ul style="list-style-type: none">• VSC Administrator• VSC Provision• VSC Read-Only	All the ONTAP tools and VASA Provider specific tasks require the View Privilege.
NetApp Virtual Storage Console > Policy Based Management > Management or privilege.nvpfVSC.VASAGroup.com.netapp.nvpf.label > Management	VSC Administrator	VSC and VASA Provider tasks related to storage capability profiles and threshold settings.

vSphere objects

Permissions are associated with vSphere objects, such as the vCenter Server, ESXi hosts, virtual machines, datastores, datacenters, and folders. You can assign permissions to any vSphere object. Based on the permission that is assigned to a vSphere object, the vCenter Server determines who can perform which tasks on that object. For ONTAP tools specific tasks, permissions are assigned and validated only at the root-folder level (vCenter Server) and not on any other entity. Except for VAAI plugin operation, where permissions are validated against the concerned ESXi .

Users and groups

You can use Active Directory (or the local vCenter Server machine) to set up users and groups of users. You can then use vCenter Server permissions to grant access to these users or groups to enable them to perform specific ONTAP tools tasks.



These vCenter Server permissions apply to ONTAP tools vCenter users, not to ONTAP tools administrators. By default, ONTAP tools administrators have full access to the product and do not require permissions assigned to them.

Users and groups do not have roles assigned to them. They gain access to a role by being part of a vCenter Server permission.

Key points about assigning and modifying permissions for vCenter Server

There are several key points to keep in mind when you are working with vCenter Server permissions. Whether a ONTAP tools for VMware vSphere task succeeds can depend on where you assigned a permission, or what actions a user took after a permission was modified.

Assigning permissions

You only need to set up vCenter Server permissions if you want to limit access to vSphere objects and tasks. Otherwise, you can log in as an administrator. This login automatically allows you to access all vSphere objects.

Where you assign a permission determines the ONTAP tools tasks that a user can perform.

Sometimes, to ensure the completion of a task, you must assign the permission at a higher level, such as the root object. This is the case when a task requires a privilege that does not apply to a specific vSphere object (for example, tracking the task) or when a required privilege applies to a non-vSphere object (for example, a storage system).

In these cases, you can set up a permission so that it is inherited by the child entities. You can also assign other permissions to the child entities. The permission assigned to a child entity always overrides the permission inherited from the parent entity. This means that you can permissions to a child entity as a way to restrict the scope of a permission that was assigned to a root object and inherited by the child entity.



Unless your company's security policies require more restrictive permissions, it is a good practice to assign permissions to the root object (also referred to as the root folder).

Permissions and non-vSphere objects

The permission that you create are applied to a non-vSphere object. For example, a storage system is not a vSphere object. If a privilege applies to a storage system, you must assign the permission containing that privilege to the ONTAP tools root object because there is no vSphere object to which you can assign it.

For example, any permission that includes a privilege such as the ONTAP tools privilege "Add/Modify/Skip storage systems" must be assigned at the root object level.

Modifying permissions

You can modify one permission at any time.

If you change the privileges within a permission, the user associated with that permission should log out and then log back in to enable the updated permission.

Standard roles packaged with ONTAP tools

To simplify working with vCenter Server privileges and role-based access control (RBAC), ONTAP tools provide standard ONTAP tools roles that enable you to perform key ONTAP tools tasks. There is also a read-only role that enables you to view the information, but not perform any tasks.

The standard ONTAP tools roles have both the required ONTAP tools-specific privileges and the native vCenter Server privileges that are required for users to perform ONTAP tools tasks. In addition, the roles are set up so that they have the required privileges across all supported versions of the vCenter Server.

As an administrator, you can assign these roles to users as required.



When you upgrade ONTAP tools to the latest version, the standard roles are automatically upgraded to work with the new version of the tool.

You can view the ONTAP tools standard roles by clicking **Roles** on the vSphere Client Home page.

The roles that ONTAP tools provides enable you to perform the following tasks:

Role	Description
------	-------------

VSC Administrator	Provides all of the native vCenter Server privileges and ONTAP tools-specific privileges that are required to perform all ONTAP tools tasks.
VSC Read-only	Provides read-only access to ONTAP tools. These users cannot perform any ONTAP tools actions that are access-controlled.
VSC Provision	Provides all of the native vCenter Server privileges and ONTAP tools-specific privileges that are required to provision storage. You can perform the following tasks: <ul style="list-style-type: none"> • Create new datastores • Destroy datastores • View information about storage capability profiles

Guidelines for using ONTAP tools standard roles

When you work with standard ONTAP tools for VMware vSphere roles, there are certain guidelines you should follow.

You should not directly modify the standard roles. If you do, ONTAP tools will overwrite your changes each time you upgrade. The installer updates the standard role definitions each time you upgrade ONTAP tools. Doing this ensures that the roles are current for your version of ONTAP tools as well as for all supported versions of the vCenter Server.

You can, however, use the standard roles to create roles that are tailored to your environment. To do this, you should copy the ONTAP tools standard role and then edit the copied role. By creating a new role, you can maintain this role even when you restart or upgrade the ONTAP tools Windows service.

Some of the ways that you might use the ONTAP tools standard roles include the following:

- Use the standard ONTAP tools roles for all ONTAP tools tasks.

In this scenario, the standard roles provide all the privileges a user needs to perform the ONTAP tools tasks.

- Combine roles to expand the tasks a user can perform.

If the standard ONTAP tools roles provide too much granularity for your environment, you can expand the roles by creating higher-level groups that contain multiple roles.

If a user needs to perform other, non-ONTAP tools tasks that require additional native vCenter Server privileges, you can create a role that provides those privileges and add it to the group also.

- Create more fine-grained roles.

If your company requires that you implement roles that are more restrictive than the standard ONTAP tools roles, you can use the ONTAP tools roles to create new roles.

In this case, you would clone the necessary ONTAP tools roles and then edit the cloned role so that it has

only the privileges your user requires.

Privileges required for ONTAP tools tasks

Different ONTAP tools for VMware vSphere tasks require different combinations of privileges specific to ONTAP tools and native vCenter Server privileges.

Information about the privileges required for ONTAP tools tasks is available in the NetApp Knowledgebase article 1032542.

[How to configure RBAC for Virtual Storage Console](#)

Product-level privilege required by ONTAP tools for VMware vSphere

To access the ONTAP tools for VMware vSphere GUI, you must have the product-level, ONTAP tools-specific View privilege assigned at the correct vSphere object level. If you log in without this privilege, ONTAP tools displays an error message when you click the NetApp icon and prevents you from accessing ONTAP tools.

In **View** privilege, you can access the ONTAP tools GUI. This privilege does not enable you to perform tasks within ONTAP tools. To perform any ONTAP tools tasks, you must have the correct ONTAP tools-specific and native vCenter Server privileges for those tasks.

The assignment level determines which portions of the UI you can see. Assigning the View privilege at the root object (folder) enables you to enter ONTAP tools by clicking the NetApp icon.

You can assign the View privilege to another vSphere object level; however, doing that limits the ONTAP tools menus that you can see and use.

The root object is the recommended place to assign any permission containing the View privilege.

Permissions for ONTAP storage systems and vSphere objects

ONTAP role-based access control (RBAC) enables you to control access to specific storage systems and to control the actions that a user can perform on those storage systems. In ONTAP® tools for VMware vSphere, ONTAP RBAC works with vCenter Server RBAC to determine which ONTAP tools tasks a specific user can perform on the objects on a specific storage system.

ONTAP tools uses the credentials (user name and password) that you set up within ONTAP tools to authenticate each storage system and to determine which storage operations can be performed on that storage system. ONTAP tools uses one set of credentials for each storage system. These credentials determine which ONTAP tools tasks can be performed on that storage system; in other words, the credentials are for ONTAP tools, not for an individual ONTAP tools user.

ONTAP RBAC applies only to accessing storage systems and performing ONTAP tools tasks that are related to storage, such as provisioning virtual machines. If you do not have the appropriate ONTAP RBAC privileges for a specific storage system, you cannot perform any tasks on a vSphere object that is hosted on that storage system. You can use ONTAP RBAC in conjunction with the ONTAP tools-specific privileges to control which ONTAP tools tasks a user can perform:

- Monitoring and configuring storage or vCenter Server objects residing on a storage system
- Provisioning vSphere objects residing on a storage system

Using ONTAP RBAC with the ONTAP tools-specific privileges provides a storage-oriented layer of security that the storage administrator can manage. As a result, you have more fine-grained access control than what either ONTAP RBAC alone or vCenter Server RBAC alone supports. For example, with vCenter Server RBAC, you can allow vCenterUserB to provision a datastore on NetApp storage while preventing vCenterUserA from provisioning datastores. If the storage system credentials for a specific storage system do not support the creation of storage, then neither vCenterUserB nor vCenterUserA can provision a datastore on that storage system.

When you initiate a ONTAP tools task, ONTAP tools first verifies whether you have the correct vCenter Server permission for that task. If the vCenter Server permission is not sufficient to allow you to perform the task, ONTAP tools does not have to check the ONTAP privileges for that storage system because you did not pass the initial vCenter Server security check. As a result, you cannot access the storage system.

If the vCenter Server permission is sufficient, ONTAP tools then checks the ONTAP RBAC privileges (your ONTAP role) that are associated with the storage system credentials (the user name and password) to determine whether you have sufficient privileges to perform the storage operations that are required by that ONTAP tools task on that storage system. If you have the correct ONTAP privileges, you can access the storage system and perform the ONTAP tools task. The ONTAP roles determine the ONTAP tools tasks that you can perform on the storage system.

Each storage system has one set of ONTAP privileges associated with it.

Using both ONTAP RBAC and vCenter Server RBAC provides the following benefits:

- Security

The administrator can control which users can perform which tasks at a fine-grained vCenter Server object level and at a storage system level.

- Audit information

In many cases, ONTAP tools provide an audit trail on the storage system that enables you to track events back to the vCenter Server user who performed the storage modifications.

- Usability

You can maintain all of the controller credentials in one place.

Recommended ONTAP roles when using ONTAP tools for VMware vSphere

You can set up several recommended ONTAP roles for working with ONTAP® tools for VMware vSphere and role-based access control (RBAC). These roles contain the ONTAP privileges that are required to perform the required storage operations that are executed by the ONTAP tools tasks.

To create new user roles, you must log in as an administrator on storage systems running ONTAP. You can create ONTAP roles using ONTAP System Manager 9.8P1 or later. See [Configure user roles and privileges](#) for more information.

Each ONTAP role has an associated user name and password pair, which constitute the credentials of the role. If you do not log in by using these credentials, you cannot access the storage operations that are associated with the role.

As a security measure, the ONTAP tools-specific ONTAP roles are ordered hierarchically. This means that the first role is the most restrictive role and has only the privileges that are associated with the most basic set of ONTAP tools storage operations. The next role includes both its own privileges and all of the privileges that are

associated with the previous role. Each additional role is less restrictive with regard to the supported storage operations.

The following are some of the recommended ONTAP RBAC roles when using ONTAP tools. After you create these roles, you can assign the roles to users who have to perform tasks related to storage, such as provisioning virtual machines.

1. Discovery

This role enables you to add storage systems.

2. Create Storage

This role enables you to create storage. This role also includes all of the privileges that are associated with the Discovery role.

3. Modify Storage

This role enables you to modify storage. This role also includes all of the privileges that are associated with the Discovery role and the Create Storage role.

4. Destroy Storage

This role enables you to destroy storage. This role also includes all of the privileges that are associated with the Discovery role, the Create Storage role, and the Modify Storage role.

If you are using VASA Provider for ONTAP, you should also set up a policy-based management (PBM) role. This role enables you to manage storage by using storage policies. This role requires that you also set up the “Discovery” role.

How to configure ONTAP role-based access control for ONTAP tools for VMware vSphere

You must configure ONTAP role-based access control (RBAC) on the storage system if you want to use role-based access control with ONTAP tools for VMware vSphere. You can create one or more custom user accounts with limited access privileges with the ONTAP RBAC feature.

ONTAP tools and SRA can access storage systems at either the cluster level or the storage virtual machine (SVM)SVM level. If you are adding storage systems at the cluster level, then you must provide the credentials of the admin user to provide all of the required capabilities. If you are adding storage systems by directly adding SVM details, you must be aware that the “vsadmin” user does not have all of the required roles and capabilities to perform certain tasks.

VASA Provider can access storage systems only at the cluster level. If VASA Provider is required for a particular storage controller, then the storage system must be added to ONTAP tools at the cluster level even if you are using ONTAP tools or SRA.

To create a new user and to connect a cluster or an SVM to ONTAP tools, you should perform the following:

- Create a cluster administrator or an SVM administrator role using ONTAP System Manager 9.8P1 or later. See [Configure user roles and privileges](#) for more information.
- Create users with the role assigned and the appropriate application set using ONTAP

You require these storage system credentials to configure the storage systems for ONTAP tools. You can configure storage systems for ONTAP tools by entering the credentials in ONTAP tools. Each time you log in to a storage system with these credentials, you will have permissions to the ONTAP tools functions that you had set up in ONTAP while creating the credentials.

- Add the storage system to ONTAP tools and provide the credentials of the user that you just created

ONTAP tools roles

ONTAP tools classifies the ONTAP privileges into the following set of ONTAP tools roles:

- Discovery
Enables the discovery of all of the connected storage controllers
- Create Storage
Enables the creation of volumes and logical unit number (LUNs)
- Modify Storage
Enables the resizing and deduplication of storage systems
- Destroy Storage
Enables the destruction of volumes and LUNs

VASA Provider roles

You can create only Policy Based Management at the cluster level. This role enables policy-based management of storage using storage capabilities profiles.

SRA roles

SRA classifies the ONTAP privileges into a SAN or NAS role at either the cluster level or the SVM level. This enables users to run SRM operations.

ONTAP tools perform an initial privilege validation of ONTAP RBAC roles when you add the cluster to ONTAP tools. If you have added a direct SVM storage IP, then ONTAP tools does not perform the initial validation. ONTAP tools checks and enforces the privileges later in the task workflow.

Configure high availability for ONTAP tools

The ONTAP tools supports a high-availability (HA) configuration to help provide uninterrupted functionality of ONTAP tools during failure.

The ONTAP tools relies on the VMware vSphere High-availability (HA) feature and vSphere fault tolerance (FT) feature to provide high availability. High-availability (HA) solution provides for rapid recovery from outages caused by:

- Host failure
- Network failure

- Virtual machine failure (Guest OS failure)
- Application (ONTAP tools) crash

No additional configuration is required for ONTAP tools to provide high availability. Only the vCenter Server and ESXi hosts must be configured with the VMware vSphere HA feature or the vSphere FT feature based on their requirements. Both HA and FT require clustered hosts together with shared storage. FT has additional requirements and limitations.

In addition to the VMware vSphere HA solution and vSphere FT solution, ONTAP tools also helps keep the ONTAP tools services running at all times. The ONTAP tools watchdog process periodically monitors all three services, and restarts them automatically when any kind of failure is detected. This helps to prevent application failures.



vCenter HA is not supported by ONTAP tools.

VMware vSphere HA

You can configure your vSphere environment where ONTAP tools for VMware vSphere is deployed for high availability (HA). The VMware HA feature provides failover protection from hardware failures and operating system failures in virtual environments.

The VMware HA feature monitors virtual machines to detect operating system failures and hardware failures. When a failure is detected, the VMware HA feature restarts the virtual machines on the other physical servers in the resource pool. Manual intervention is not required when a server failure is detected.

The procedure to configure VMware HA depend on the version of your vCenter Server. For example, you can use the following reference link and select the required vCenter Server version to view the steps to configure VMware HA.

[VMware vSphere Documentation: Creating and Using vSphere HA Clusters](#)

VMware vSphere Fault Tolerance

The VMware vSphere Fault Tolerance (FT) feature provides high availability (HA) at a higher level and enables you to protect virtual machines without any loss of data or connections. You must enable or disable vSphere FT for ONTAP tools from your vCenter Server.

Ensure your vSphere license supports FT with the number of vCPUs needed for ONTAP tools in your environment (at least 2 vCPUs; 4 vCPUs for large scale environments).

vSphere FT enables virtual machines to operate continuously even during server failures. When vSphere FT is enabled on a virtual machine, a copy of the primary virtual machine is automatically created on another host (the secondary virtual machine) that is selected by Distributed Resource Scheduler (DRS). If DRS is not enabled, the target host is selected from the available hosts. vSphere FT operates the primary virtual machine and secondary virtual machine in lockstep mode, with each mirroring the execution state of the primary virtual machine to the secondary virtual machine.

When there is a hardware failure that causes the primary virtual machine to fail, the secondary virtual machine immediately picks up where the primary virtual machine stopped. The secondary virtual machine continues to run without any loss of network connections, transactions, or data.

Your system must meet the CPU requirements, virtual machine limit requirements, and licensing requirements for configuring vSphere FT for your vCenter Server instance.

The procedure to configure HA depend on the version of your vCenter Server. For example, you can use the following reference link and select the required vCenter Server version to view the steps to configure HA.

[VMware vSphere Documentation: Fault Tolerance Requirements, Limits, and Licensing](#)

MetroCluster configurations supported by ONTAP tools

The ONTAP tools for VMware vSphere supports environments that use MetroCluster IP and FC configurations for ONTAP. Most of this support is automatic. However, you might notice a few differences when you use a MetroCluster environment with ONTAP tools and VASA Provider.



SRA does not support MetroCluster configurations.

MetroCluster configurations and ONTAP tools

You must ensure that ONTAP tools discovers the storage system controllers at the primary site and the secondary site. Typically, ONTAP tools automatically discovers storage controllers. If you are using a cluster management LIF, then it is a good practice to verify that ONTAP tools has discovered the clusters at both sites. Otherwise, you can manually add the storage controllers to ONTAP tools. You can also modify the user name and password pairs that ONTAP tools uses to connect to the storage controllers.

When a switchover occurs, the SVMs on the secondary site take over. These SVMs have the “-mc” suffix appended to their names. If a switchover operation occurs while you are performing operations such as provisioning a datastore, the name of the SVM where the datastore resides is changed to include the “-mc” suffix. This suffix is dropped when the switchback occurs, and the SVMs on the primary site resume control.



If you have added direct SVMs with MetroCluster configuration to ONTAP tools, then after switchover, the change in the SVM name (the addition of the “-mc” suffix) is not reflected. All other switchover operations continue to execute normally.

When a switchover or switchback occurs, ONTAP tools might take a few minutes to automatically detect and discover the clusters. If this happens while you are performing a ONTAP tools operation such as provisioning a datastore, you might experience a delay.

MetroCluster configurations and VASA Provider

VASA Provider automatically supports environments that use MetroCluster configurations. The switchover is transparent in VASA Provider environments. You cannot add direct SVMs to VASA Provider.



VASA Provider does not append the “-mc” suffix to the names of the SVMs on the secondary site after a switchover.

MetroCluster configurations and SRA

The Storage Replication Adapter(SRA) supports environments that use MetroCluster configurations (MCC) with NFS, iSCSI, and FCP protocol.

As a pre-requisite for MCC SRA Configuration, all the storage virtual machine (SVM) names should be unique on the MCC clusters. If the names are not unique, it causes conflicts and the SRA workflows fail.

Required Actions:

1. After performing a MCC switchover or a switchback, ensure that the *snapmirror list-destinations* command on the source cluster shows the proper output with the new SVM name(<vserver_name>-mc). The command could take up to 30 mins to run.
2. Perform *discoverDevices* operation from the SRM UI before proceeding with other SRA workflows. This operation ensures that the SRM is aware of the changes in the SVM names after a switchover or a switchback.

Copyright information

Copyright © 2025 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.