



Update firmware

ONTAP 9

Thom Illingworth, Amanda Stroman
May 04, 2021


Table of Contents

- Update firmware 1
 - View firmware update alerts from Active IQ 1
 - Download the cluster firmware 1
 - Update the cluster firmware 2

Update firmware

You can apply a firmware update to supported devices in your cluster, such as disks, disk shelves, the Disk Qualification Package (DQP) the service processor (SP), or the Baseboard Management Controller (BMC).

Starting with ONTAP 9.9.1, you can receive alerts from Active IQ that inform you when firmware updates are pending on the cluster. Then, you can download the firmware image and upload it using System Manager.

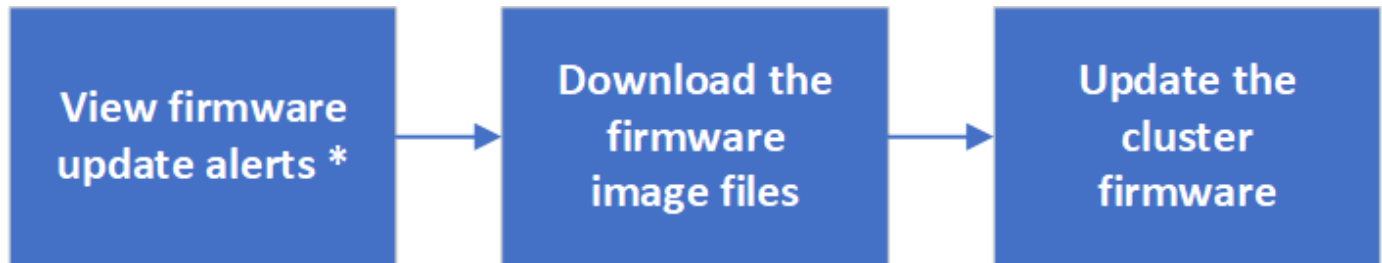

* Starting with ONTAP 9.9.1

View firmware update alerts from Active IQ

Starting with ONTAP 9.9.1, you can receive alerts from Active IQ Unified Manager that inform you when firmware updates are pending on the cluster.



When working with ONTAP 9.9.1, to receive alerts about firmware updates, you must be registered with Active IQ Unified Manager. Refer to [Active IQ Unified Manager documentation resources](#).

Steps

1. Go to **Dashboard**.

In the **Health** section, a message displays if there are any recommended firmware updates for the cluster.

2. Click on the alert message.

The **Firmware Update** tab is displayed in the **Update** page.

Download the cluster firmware



For ONTAP 9.8, you must navigate to the NetApp Support Site to download an updated firmware image package.

Starting with ONTAP 9.9.1, you can download firmware updates from the **Update** page when you view firmware alerts (see [View firmware update alerts from Active IQ](#)).

Steps


Perform the procedure that is appropriate for the version of ONTAP that is installed on the cluster.

<p>For ONTAP 9.8 and ONTAP 9.9.1, if you are not registered with Active IQ Unified Manager, then perform these steps...</p>	<p>Starting with ONTAP 9.9.1, if you are registered with Active IQ Unified Manager, then perform these steps...</p>
<ol style="list-style-type: none"> 1. Navigate to the NetApp Support Site. 2. Log into the NetApp Support Site. 3. Select the firmware package that you want to use to update your cluster firmware. 4. Copy the files to an HTTP or FTP server on your network or to a local folder. 	<ol style="list-style-type: none"> 1. On the Update page, for the firmware update that you want to perform, click on the link that says "Download from NetApp Support Site". The NetApp Support Site is displayed. 2. Log into the NetApp Support Site. 3. Download the firmware image package you want to update with. 4. Copy the files to an HTTP or FTP server on your network or to a local folder.

Update the cluster firmware

After the firmware package files are downloaded, you can update the cluster firmware.

Steps

1. In ONTAP System Manager, click **Cluster > Overview**.
2. In the right corner of the **Overview** pane, click  and select **ONTAP Update**.
3. Click **Firmware Update**, select **From Server** or **Local Client** and provide the server URL or the file location.

You can monitor or verify the update under **Firmware Update Summary**.

Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.