


# AFF A250 Systems Installation and Setup Instructions

1 Prepare for installation    2 Install hardware    3 Cable configuration-dependent options    4 Complete system setup and configuration



## Prepare for installation | Stage 1

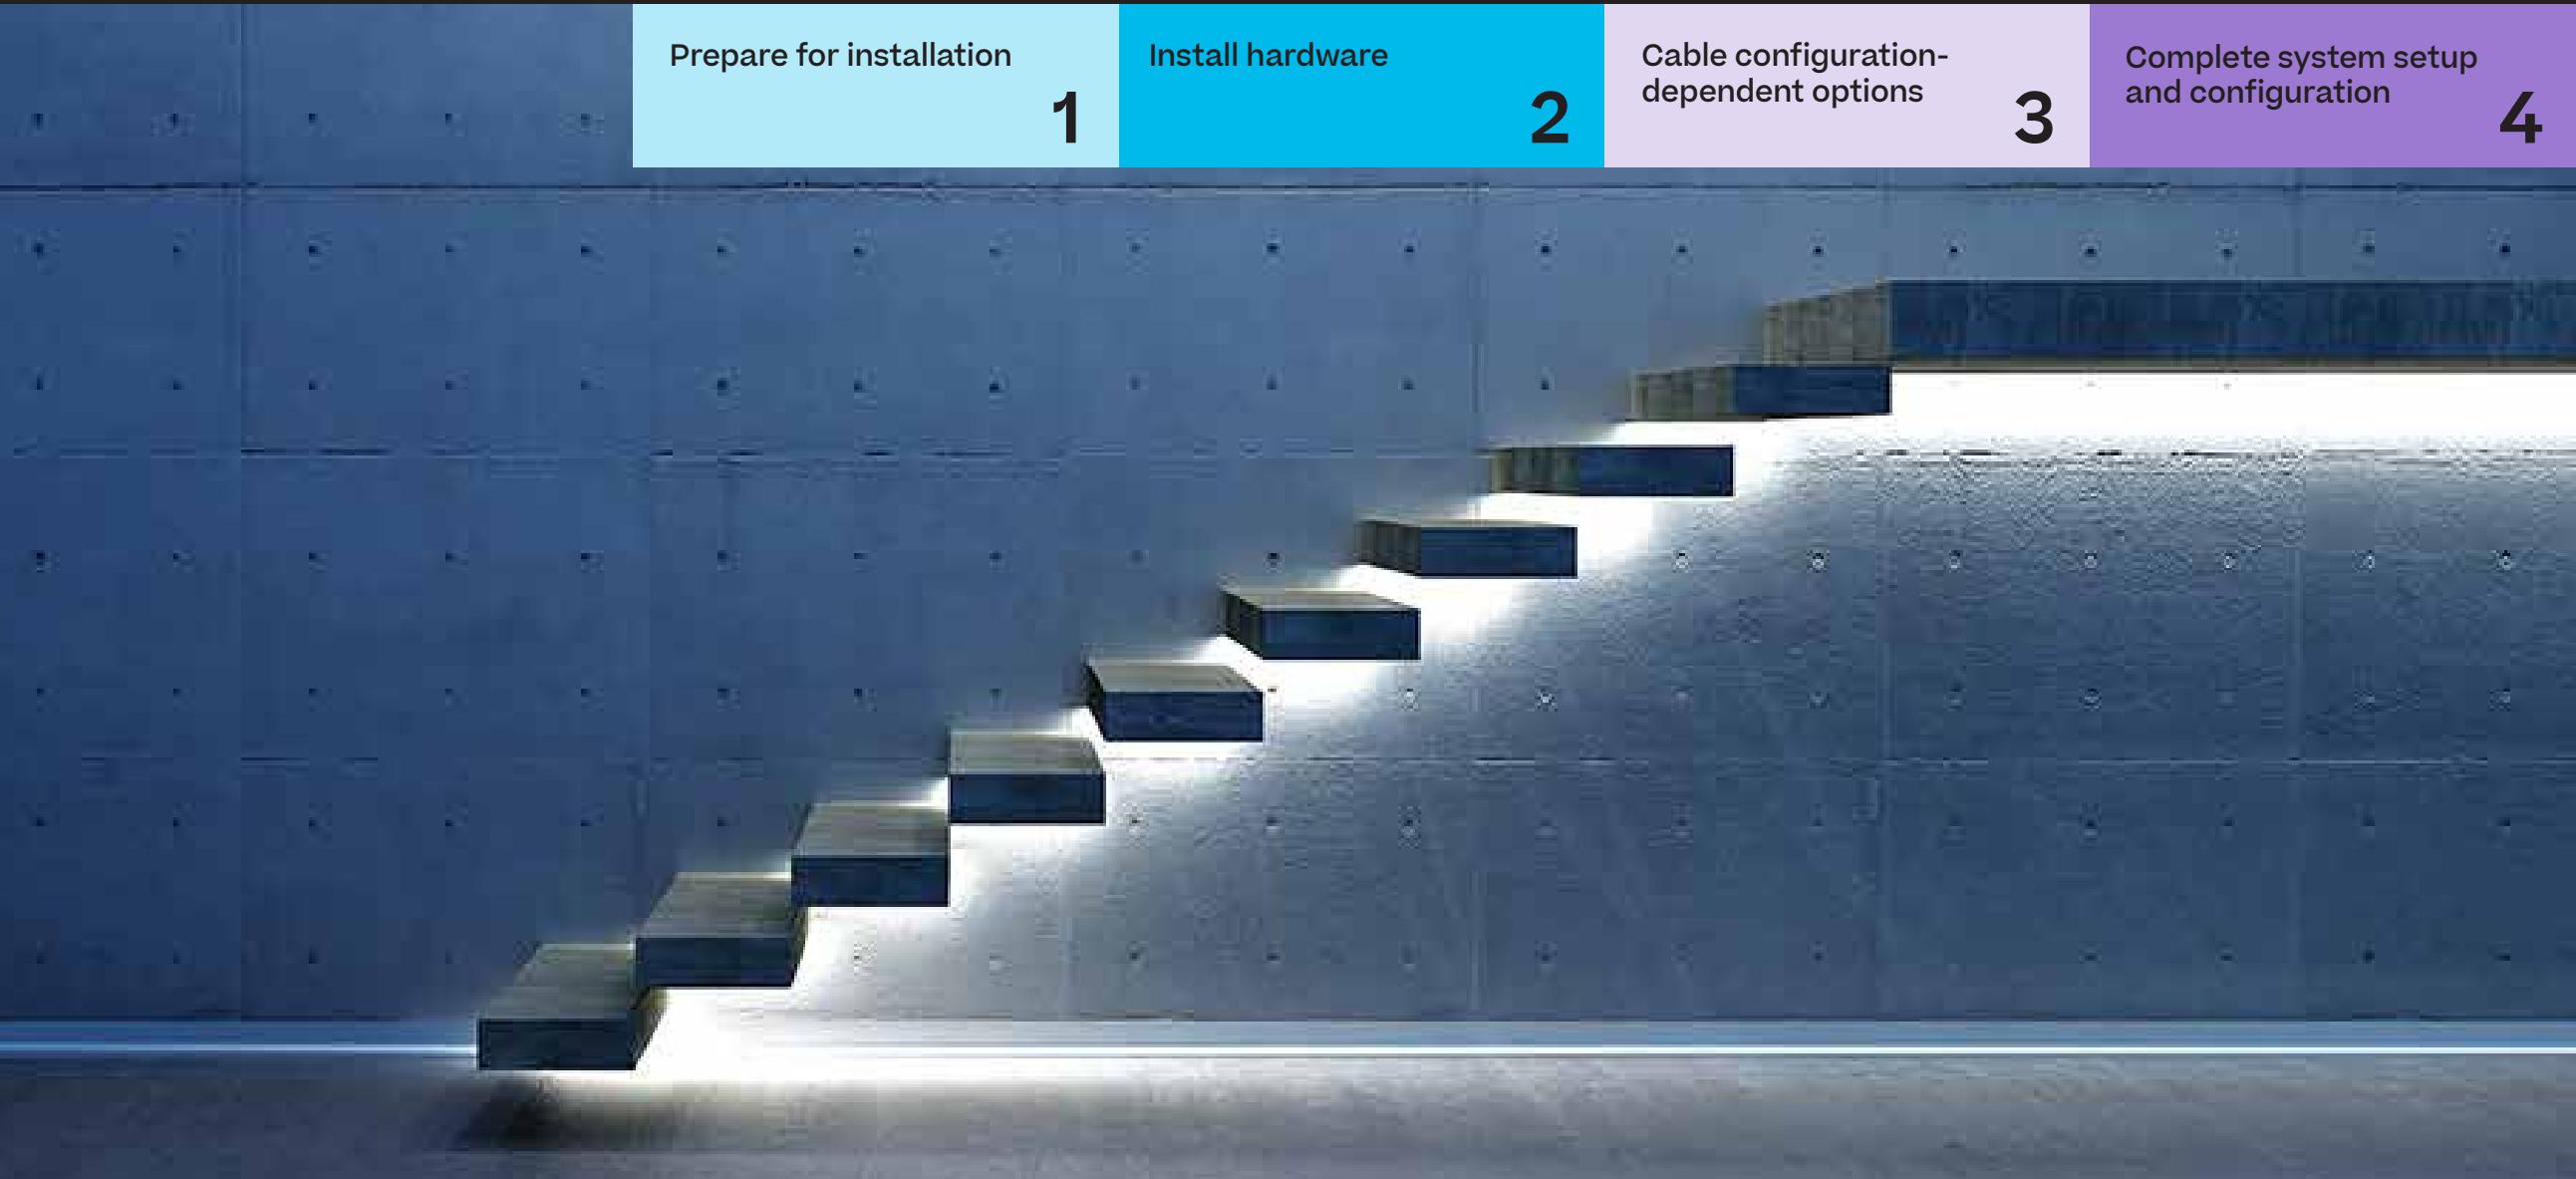

### Pre-setup

1. Unpack all boxes and inventory contents.  
**Attention:** Customers with specific power requirements must check [Hardware Universe](#) for their configuration options.
2. Watch the [Setup Videos](#).
3. Review the [NetApp ONTAP Configuration Guide](#).



### Contents In the box

Cables in your shipment are order-dependent. Not all cables shown may be in your shipment.

#### 25 GbE cable (SFP28) HA and cluster interconnect



Part numbers:  
X6566B-05-R6 (112-00639), 0.5m  
X6566B-2-R6 (112-00598), 2m  
X6566B-5-R6 (112-00600), 5m

#### 32 Gb FC (SFP+ Op) FC optical network cable



Part numbers:  
X66250-2 (112-00342), 2m  
X66250-5 (112-00344), 5m  
X66250-15 (112-00346), 15m

#### RJ-45 cables Wrench port (e0M/BMC) Data port (e0a/e0b) (order-dependent)



Part numbers:  
X5585-R6 (112-00291), 3m  
X6562-R6 (112-00196), 5m

#### Additional cables



Ethernet cables

Power cables



micro USB console cable


#### Slide rail kit



**Note:** For more cable information and part numbers, see the [Hardware Universe](#).




### You provide

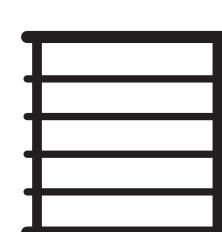

#### Rack space 2U for AFF A250




#### Screwdriver Phillips #2

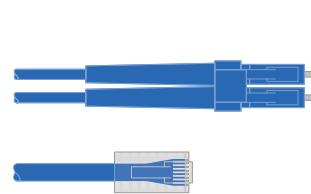

#### Additional network cables

For connecting your storage system to your network switch and laptop or console.

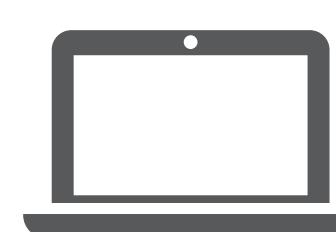

#### Laptop or console

With a USB/serial connection and access to a Web browser to configure your storage system


# Install hardware | Stage 2



Rear view of AFF A250 system


## 1 Install system in a rack or cabinet:

- Install the rail or telco tray kits, as needed, and then install and secure your system using the instructions included with the kit.
- Use cable identification and management system of your choice. The system does not have a cable management device.
- Place the bezel on the front of the system.

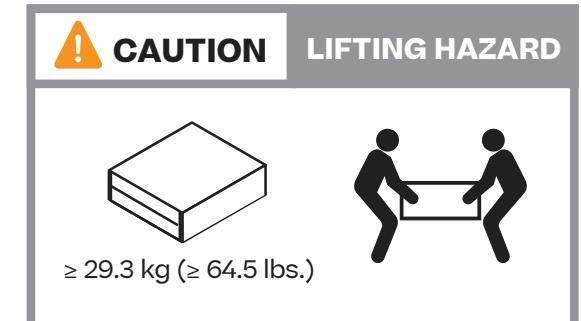

## 2 Cable the controller for a switchless or switched cluster:


See your network administrator for help connecting to your switches.

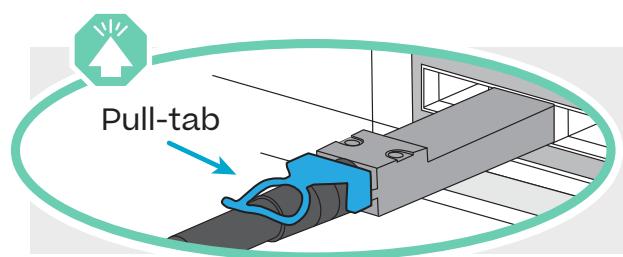

**Attention:** Be sure to check the illustration arrow for the proper cable connector pull-tab orientation.  
**Note:** To unplug a cable, gently pull the tab to release the locking mechanism.

### Switchless cluster


- 25 GbE cables
- Cable the e0c port to the e0c port and then cable the e0d port to the e0d port.
- Ethernet cables
- Connect the wrench port (e0M/BMC) to the management switches.

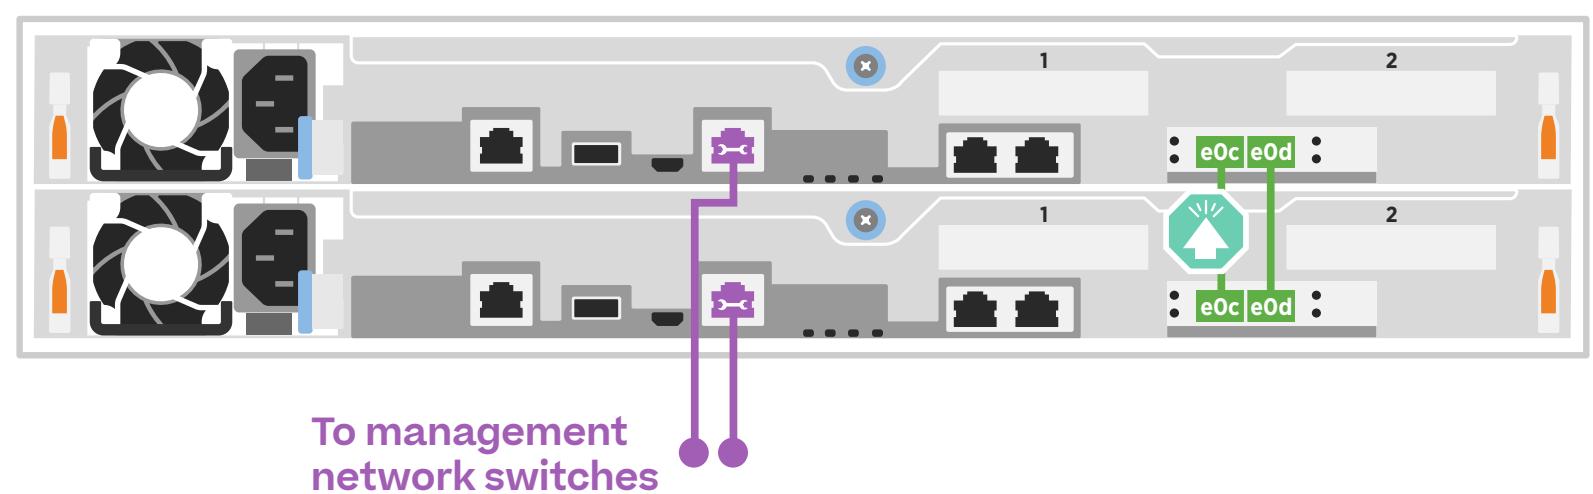

To management network switches

### Switched cluster


- 25 GbE cables
- Cable port e0c and port e0d on each controller to the cluster interconnect switches.
- Ethernet cables
- Connect the wrench port (e0M/BMC) to the management switches.

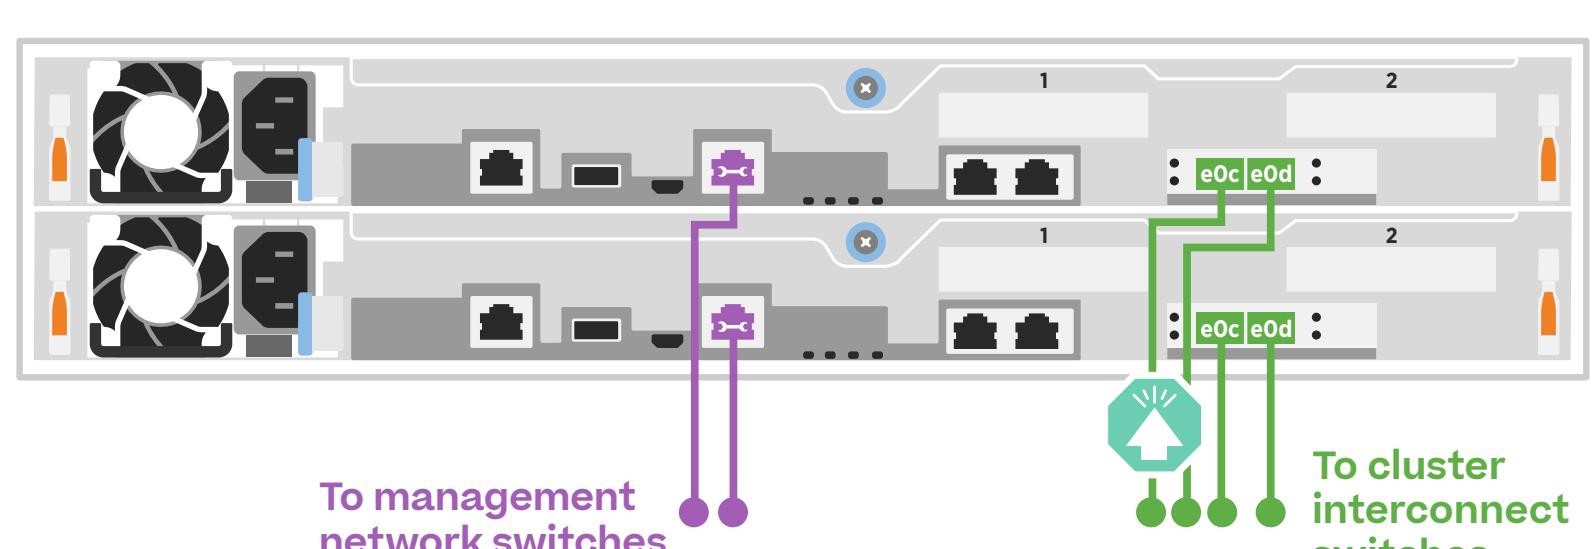

To management network switches

To cluster interconnect switches

# Cable configuration-dependent options | Stage 3

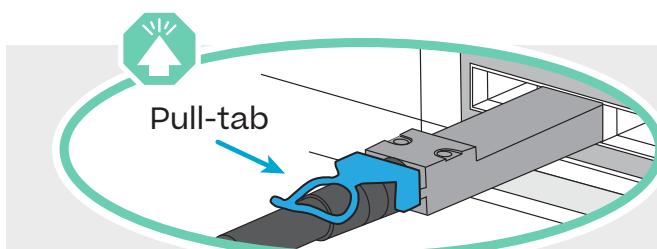


**Attention:** Be sure to check the illustration arrow for the proper cable connector pull-tab orientation.  
**Note:** To unplug a cable, gently pull the tab to release the locking mechanism.

## A | 25 GbE host network




Cable ports 1a through 1d to data or host network switches.

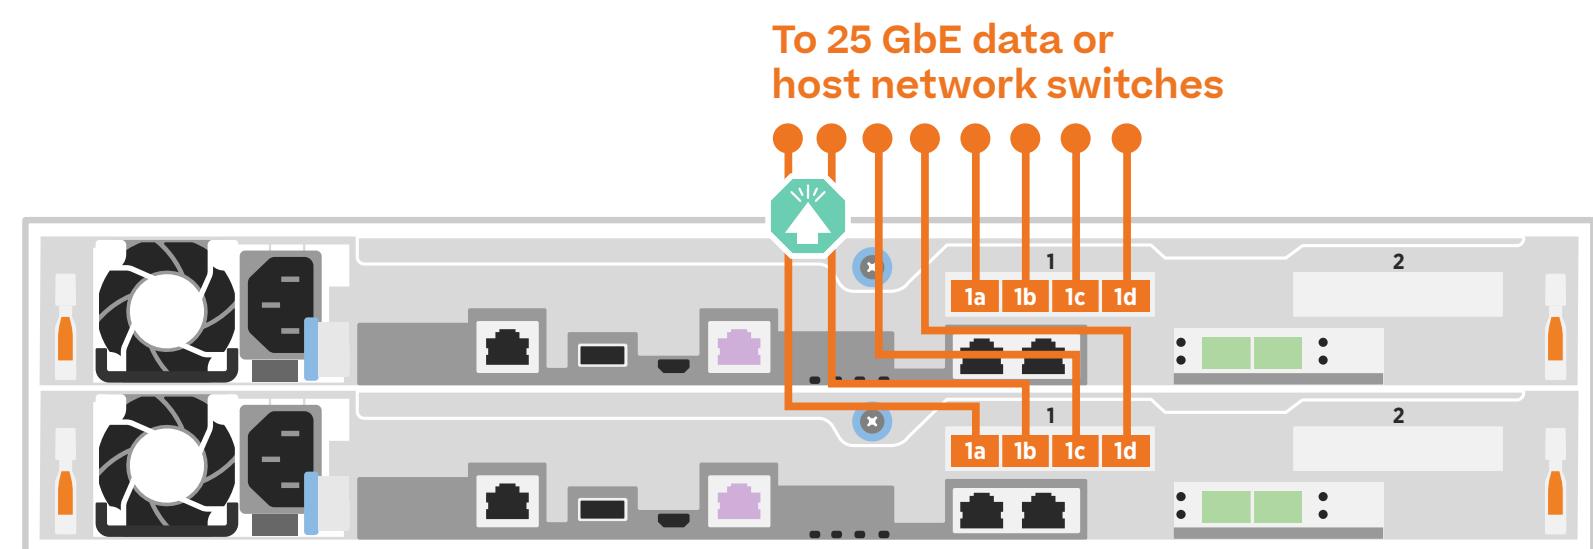

## B | FC host network



Cable ports 2a through 2d to the FC host network switches.

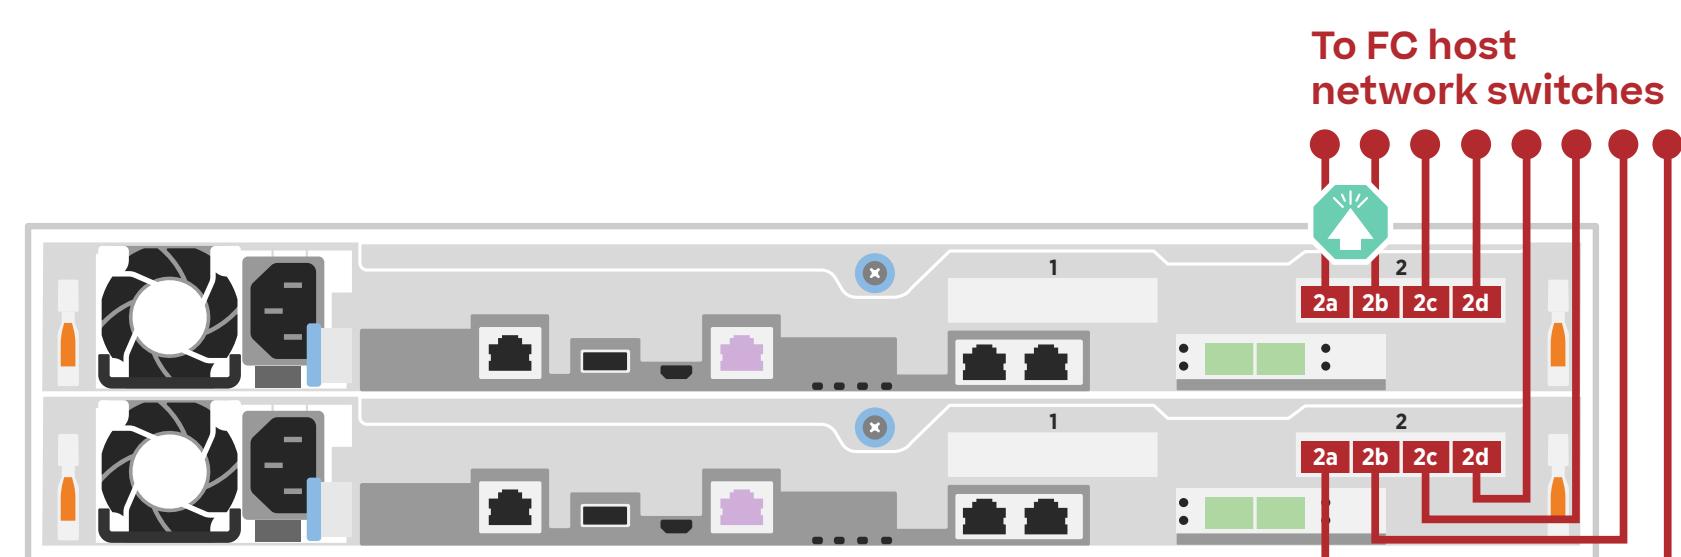


## C | External storage

Cabling an AFF A250 system to one NS224 shelf



- 1** Cable e1a on controller 1 to the e0a on NSM A on the NS224.  
Cable e1b on controller 1 to the e0b on NSM B on the NS224.
- 2** Cable e1a on controller 2 to the e0a on NSM B on the NS224.  
Cable e1b on controller 2 to the e0b on NSM A on the NS224.

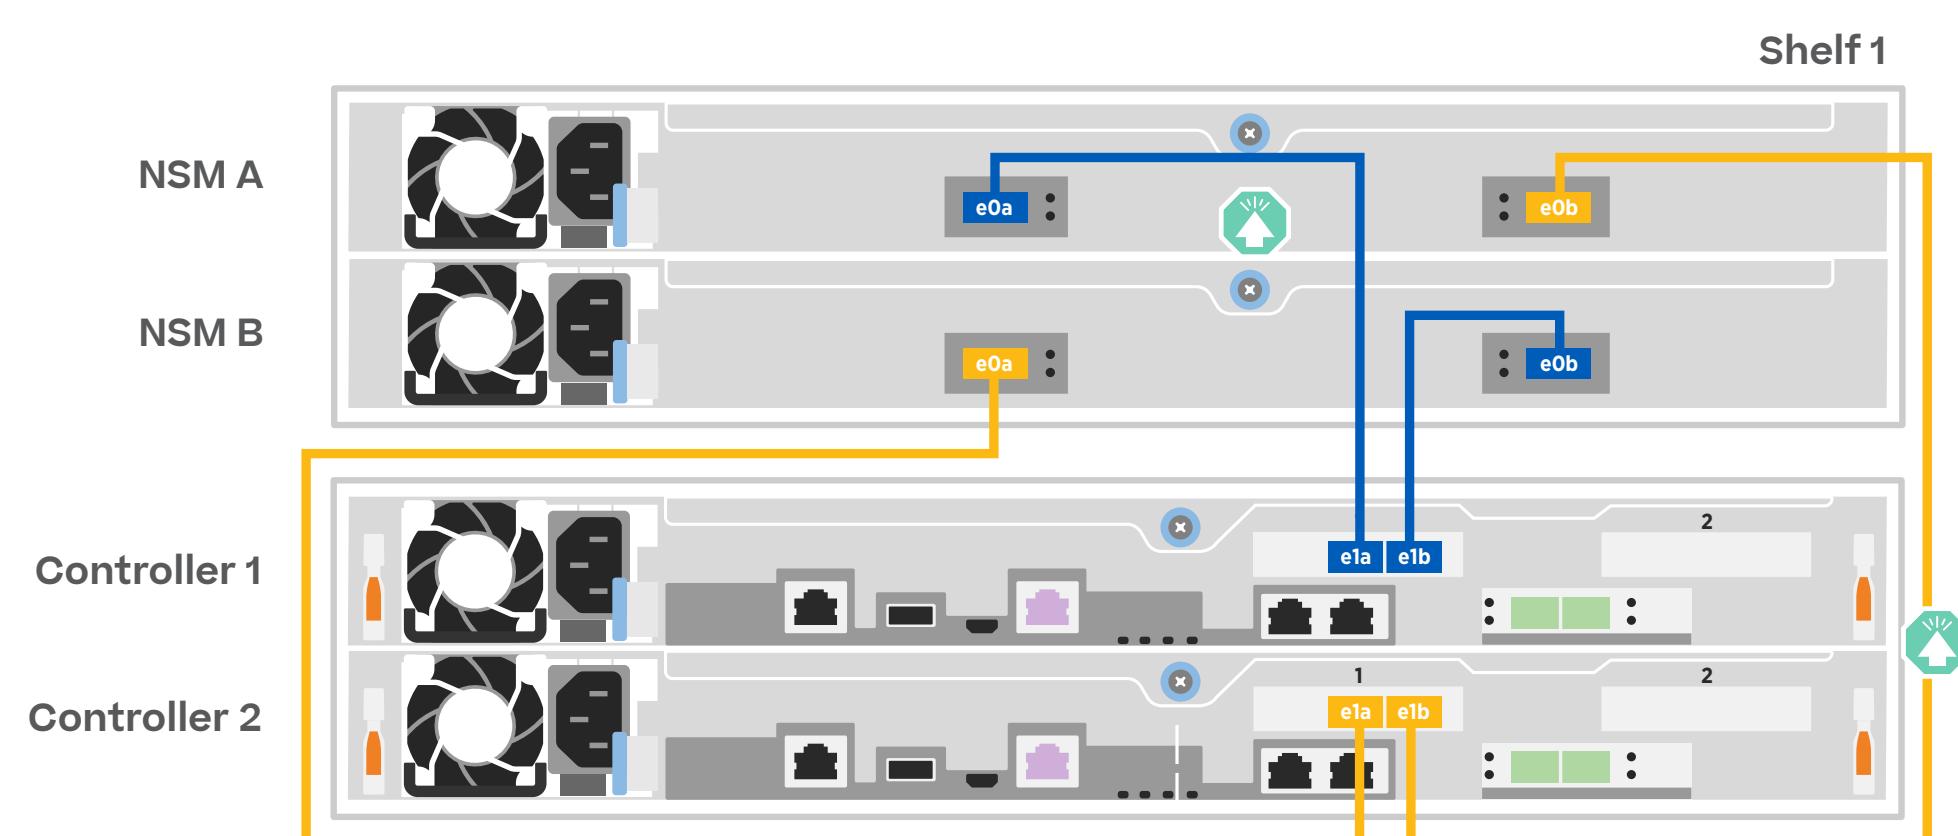


# Complete system setup and configuration | Stage 4

## 1 Power on the controllers:

Connect the controllers to different power sources.


**Note:** The system begins to boot as soon as the power supplies are connected to the power sources. **Booting may take up to 8 minutes.**

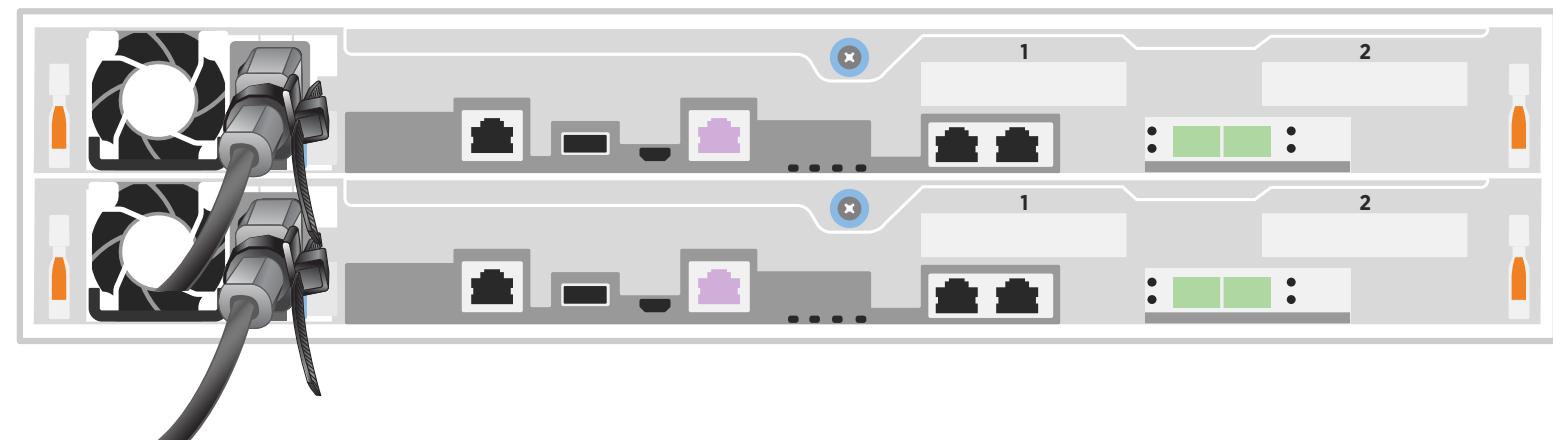

## 2 Complete initial cluster setup with network discovery:

**Note:** If your laptop does not support network discovery, see the [Detailed guide](#).

Connect your laptop to the management switch and access the network computers and devices.

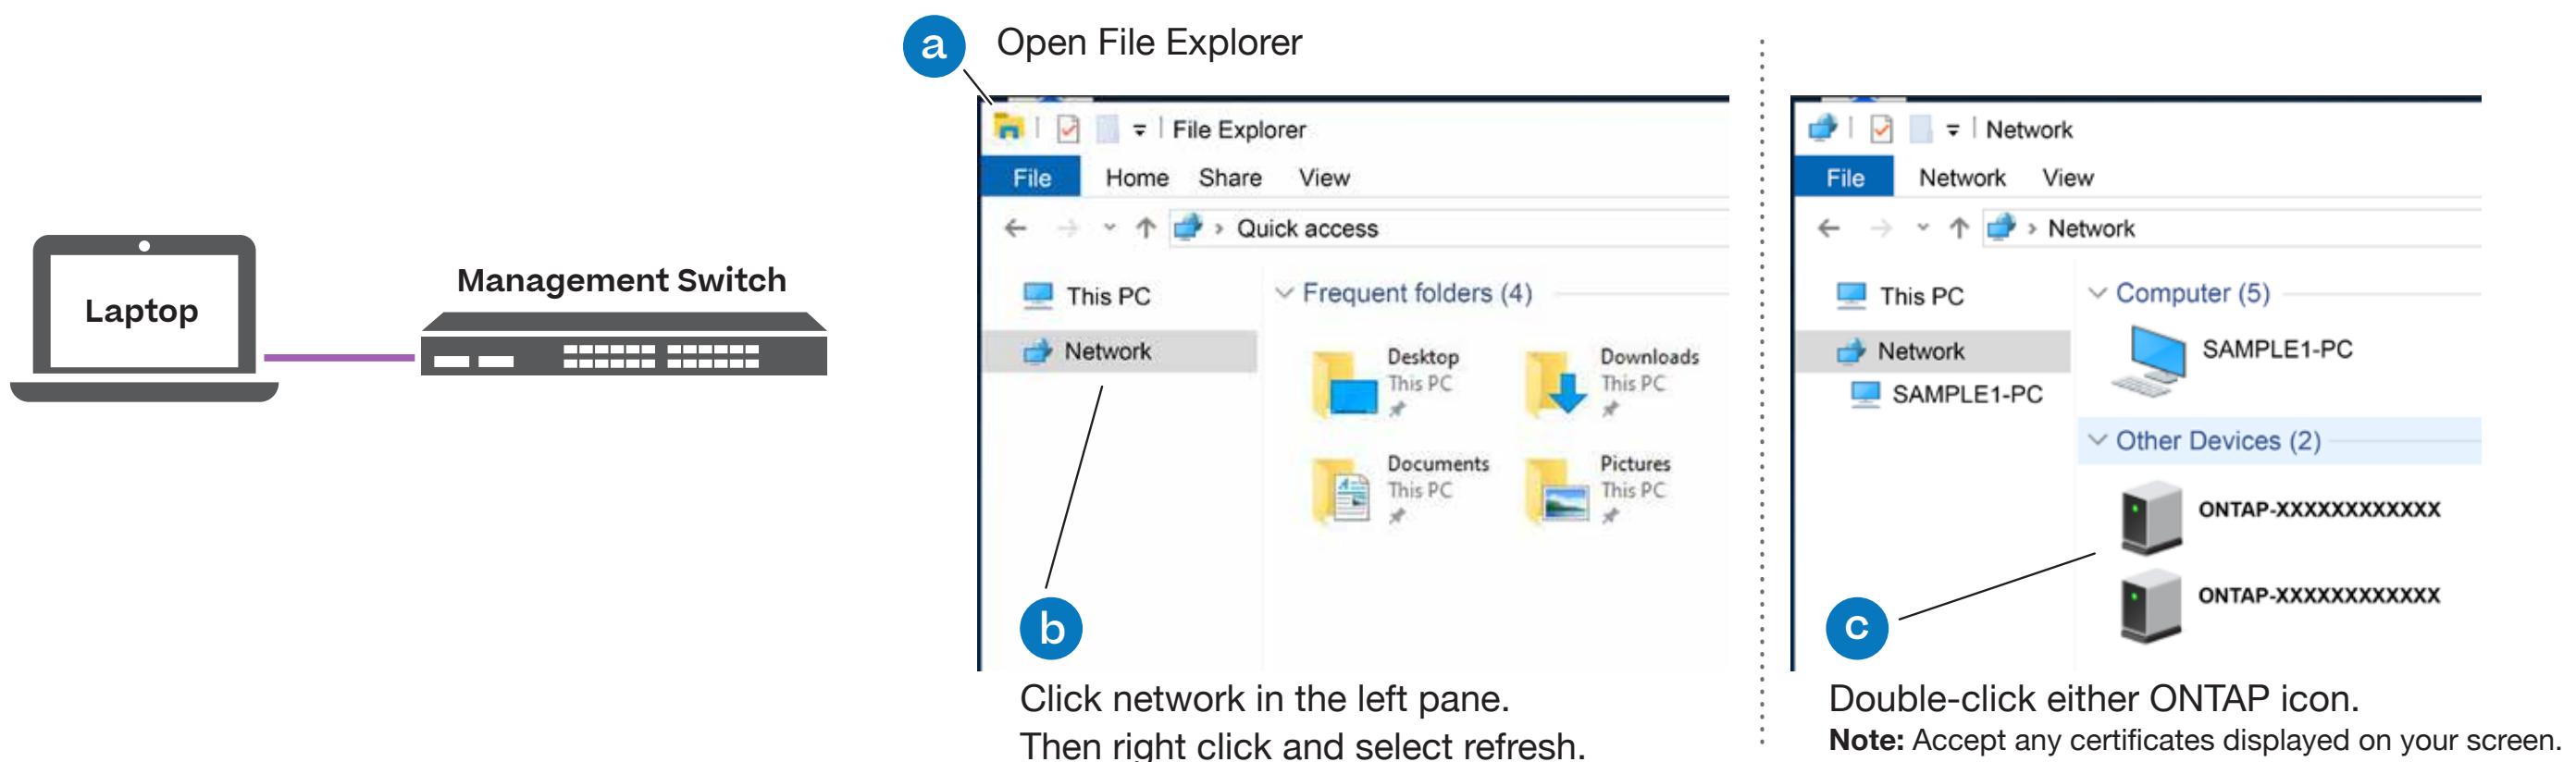

## 3 Use System Manager Guided Setup to configure your cluster.

## 4 Completing setup

1. Click...
  - [mysupport.netapp.com](#)
  - [Create/log in to your account](#)
  - [Download and install Active IQ Config Advisor](#)
  - [Register your system](#)
2. Verify the health of your system by running Config Advisor.
3. After you have completed the initial configuration, go to the [NetApp ONTAP Resources](#) page for information about configuring additional features in ONTAP.