



3. Deploy NetApp HCI with the NetApp Deployment Engine

NetApp Solutions

Kevin Hoke
April 20, 2021

Table of Contents


3. Deploy NetApp HCI with the NetApp Deployment Engine 1

3. Deploy NetApp HCI with the NetApp Deployment Engine

NDE delivers a simple and streamlined deployment experience for the NetApp HCI solution. A detailed guide to using NDE 1.6 to deploy your NetApp HCI system can be found [here](#).

These steps begin after the nodes have been racked, and cabled, and the IPMI port has been configured on each node using the console. To Deploy the NetApp HCI solution using NDE, complete the following steps:

1. Access the out-of-band management console for one of the storage nodes in the cluster and log in with the default credentials ADMIN/ADMIN.

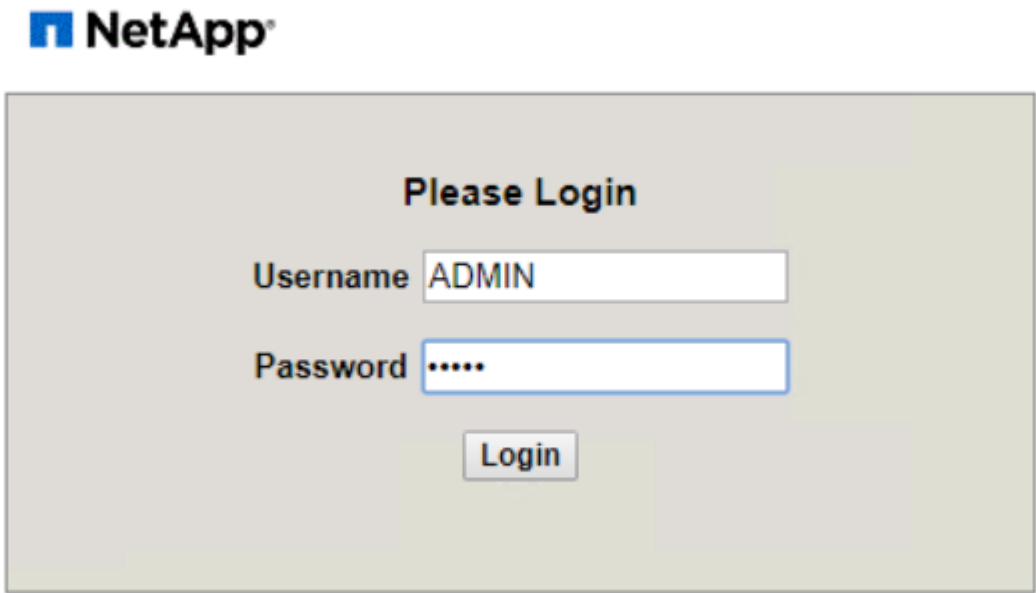

2. Click the Remote Console Preview image in the center of the screen to download a JNLP file launched by Java Web Start, which launches an interactive console to the system.
3. With the virtual console launched, a user can log in to the HCI storage node using the ADMIN/ADMIN username and password combination.
4. The Bond1G interface must have an IP, a netmask, and a gateway set statically; its VLAN set to 3480; and DNS servers defined for the environment.

```

Bond10G
  Method          : static

  Link Speed      : 50000

  IPv4 Address    :

  IPv4 Subnet Mask :
  ---->

  IPv4 Gateway Address :
  ---->

  MTU             : 9000
  ---->

  Bond Mode       : LACP [ActivePassive, ALB, LACP]
  ---->

  LACP Rate       : Fast [Fast, Slow]
  ---->

  Status          : UpAndRunning [Down, Up, UpAndRunning]
  ---->

  Virtual Network Tag :
  ---->

  Routes          : Number of routes: 0.
  ---->

```



Select an IP that is within the subnet you intend to use for in-band management but not an IP you would like to use in production. NDE reconfigures the node with a production IP after initial access.



This task must only be performed on the first storage node. Afterward, the other nodes in the infrastructure are discovered by the Automatic Private IP Address (APIPA) addresses assigned to each storage interface when left unconfigured.

- The Bond 10G interface must have its MTU setting changed to enable jumbo frames and its bond mode changed to LACP.

```

Bond10G
Method          : static

Link Speed      : 50000

IPv4 Address     :

IPv4 Subnet Mask :
---->

IPv4 Gateway Address :
---->

MTU             : 9000
---->

Bond Mode       : LACP [ActivePassive, ALB, LACP]
---->

LACP Rate       : Fast [Fast, Slow]
---->

Status          : UpAndRunning [Down, Up, UpAndRunning]
---->

Virtual Network Tag :
---->

Routes          : Number of routes: 0.
---->

```



Configure each of the four storage nodes in the NetApp HCI solution this way. The NDE process is then able to discover all the nodes in the solution and configure them. You do not need to modify the Bond10g interfaces on the two compute nodes.

6. After completion, open a web browser and visit the IP address you configured for the management port to start NetApp HCI configuration with NDE.
7. On the Welcome to NetApp HCI page, click the Get Started button.
8. Check each associated box on the Prerequisites page and click Continue.
9. The next page presents End User Licenses for NetApp HCI and VMware vSphere. If you accept the terms, click I Accept at the end of each agreement and then click Continue.
10. Click Configure a New vSphere Deployment, select vSphere 6.5U2, and enter the Fully Qualified Domain Name (FQDN) of your vCenter Server. Then click Continue.

vSphere Configuration

You may elect to configure a new vSphere deployment or to join an existing vSphere deployment.

- Configure a new vSphere deployment
 - Configure Using vSphere Version 6.7 Update 1
 - Configure Using vSphere Version 6.5 Update 2
 - Join and extend an existing vSphere deployment

If you have set up a DNS record for your new vCenter server, then configure your server using its fully qualified domain name and DNS server IP address:

- Configure Using a Fully Qualified Domain Name  *Best Practice!*

vCenter Server Fully Qualified Domain Name

anthos-vc.cie.netapp.com 

Note: The domain name must resolve to an unused IP address.

DNS Server IP Address

10.61.184.251 

If you have not set up a DNS record for your new vCenter server, you may configure using an IP address that we define:

- Configure Using an IP Address 

Note: Once defined, the IP address cannot be changed.

Back

Continue

11. NDE asks for the credentials to be used in the environment. This is used for VMware vSphere, the NetApp Element storage cluster, and the NetApp Mnode, which provides management functionality for the cluster. When you are finished, click Continue.

Credentials

Define the user name and password that will be used for the storage cluster, vCenter, and the management node.

User Name

Password

Password must contain:

- ✓ At least 8 characters
- ✓ No more than 20 characters
- ✓ 1 uppercase letter that is not the first character ?
- ✓ 1 lowercase letter
- ✓ 1 of the following special characters: !@\$
- ✓ Allowed characters: A-Z a-z 0-9 !@\$
- ✓ 1 number that is not the last character ?

Re-enter Password

Back

Continue

12. NDE then prompts for the network topology used to cable the NetApp HCI environment. The validated solution in this document has been deployed using the two-cable option for the compute nodes, and the four-cable option for the storage nodes. Click Continue.

Network Topology

Select a compute node topology and a storage node topology appropriate for your hardware installation.

Compute Node Topology

6 Cable Option

The 6 cable option provides dedicated ports for management (2 x 1/10 GbE), virtual machines (2 x 10/25 GbE) and storage (2 x 10/25 GbE).


Use vSphere Distributed Switch? [?](#)



(H300E,H410C,H500E,H700E)

2 Cable Option

The 2 cable option provides shared management with ports for virtual machines and storage (2 x 10/25 GbE). The 2 cable option uses vSphere Distributed Switch. [?](#)

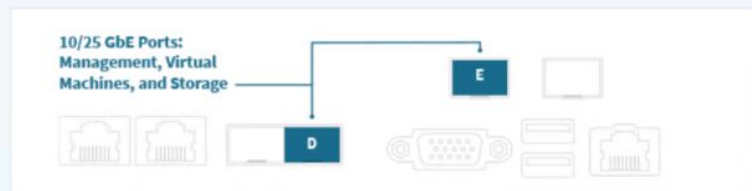

(H300E,H410C,H500E,H700E)

Storage Node Topology

4 Cable Option

The 4 cable option provides dedicated ports for management (2 x 1/10 GbE) and storage (2 x 10/25 GbE).



(H300S,H410S,H500S,H700S)

Back

Continue

- The next page presented by NDE is the inventory of the environment as discovered by the APIPA addressed on the storage network. The storage node that is currently running NDE is already selected with a green check mark. Select the corresponding boxes to add additional nodes to the NetApp HCI environment. Click Continue.

Inventory

Verify the available nodes and select **at least 2 compute nodes and 4 storage nodes** to include in your installation.

Refresh Inventory

Compute Nodes

<input checked="" type="checkbox"/>	Serial Number ↕	Chassis Serial Number / Slot ↕	Node Type ↕	Software Version ↕	Physical CPU Cores ↕	Memory ↕	1 GbE Ports ↕	10 GbE Ports ↕
<input checked="" type="checkbox"/>	HM17CS002729	002170990158 / B	H410C	1.6	8	384 GB	0 of 2 detected	2 of 4 detected
<input checked="" type="checkbox"/>	HM181S002024	002170990158 / A	H410C	1.6	8	384 GB	0 of 2 detected	2 of 4 detected

1 - 2 of 2 results 20 ▾

2 compute nodes selected

Storage Nodes

<input checked="" type="checkbox"/>	Serial Number ↕	Chassis Serial Number / Slot ↕	Node Type ↕	Raw Capacity ↕	Element Version ↕	Drive Count ↕	1 GbE Ports ↕	10 GbE Ports ↕
<input checked="" type="checkbox"/>	221814003506	221814003436 / C	H500S	5.76 TB	11.3.1.5	6 of 6 detected	2 of 2 detected	2 of 2 detected
<input checked="" type="checkbox"/>	221818004613	221814003436 / D	H500S	5.76 TB	11.3.1.5	6 of 6 detected	2 of 2 detected	2 of 2 detected
<input checked="" type="checkbox"/>	221826005865	002170990158 / C	H500S	5.76 TB	11.3.1.5	6 of 6 detected	2 of 2 detected	2 of 2 detected
<input checked="" type="checkbox"/>	221826005866	002170990158 / D	H500S	5.76 TB	11.3.1.5	6 of 6 detected	2 of 2 detected	2 of 2 detected

1 - 4 of 4 results 20 ▾

4 storage nodes selected

Back

Continue



If there are any nodes missing from the inventory screen, wait a few minutes and click Refresh Inventory. If the node still fails to appear, additional investigation of environment networking might be required.

14. You must next configure the permanent network settings for the NetApp HCI deployment. The first page configures infrastructure services (DNS and NTP), vCenter networking, and Mnode networking.

Network Settings

Provide the network settings that will be used for your installation.

Live network validation is: **On** ?

Infrastructure Services

DNS Server IP Address 1

10.61.184.251 ✓

DNS Server IP Address 2 (Optional)

10.61.184.252 ✓

NTP Server Address 1 ?

10.61.184.251 ✓

NTP Server Address 2 (Optional)

10.61.184.252 ✓

To save time, launch the easy form to enter fewer network settings. > ?

vCenter Networking

VLAN ID	Subnet ?	Default Gateway	FQDN	IP Address
3480 ✓	172.21.224.0/24 ✓	172.21.224.1 ✓	anthos-vc.cie.netapp.com	172.21.224.10 ✓

Management Node Networking ?

Management Network		iSCSI Network	
VLAN ID	3480 ✓	VLAN ID	3481 ✓
Subnet ?	172.21.224.0/24 ✓	Subnet ?	172.21.225.0/24 ✓
Default Gateway	172.21.224.1 ✓		
Hostname	Management IP Address	Storage (iSCSI) IP Address	
anthos-mnode ✓	172.21.224.50 ✓	172.21.225.50 ✓	

15. The next page allows you to configure each node in the environment. For the compute nodes, it allows you to configure the host name, management network, vMotion network, and storage network. For the storage nodes, name the storage cluster and configure the management and storage networks being used for each node. Click Continue.

Compute Node Networking

		Management Network	vMotion Network	iSCSI A Network	iSCSI B Network
VLAN ID		3480 ✓	3482 ✓	3481 ✓	3481 ✓
Subnet ?		172.21.224.0/24 ✓	172.21.226.0/24 ✓	172.21.225.0/24 ✓	172.21.225.0/24 ✓
Default Gateway		172.21.224.1 ✓	Default Gateway (Optional)	Default Gateway (Optional)	Default Gateway (Optional)
Serial Number	Hostname	Management IP Address	vMotion IP Address	iSCSI A - IP Address	iSCSI B - IP Address
HM17CS002729	Anthos-ESXi-01 ✓	172.21.224.11 ✓	172.21.226.11 ✓	172.21.225.11 ✓	172.21.225.111 ✓
HM181S002024	Anthos-ESXi-02 ✓	172.21.224.12 ✓	172.21.226.12 ✓	172.21.225.12 ✓	172.21.225.112 ✓

Storage Node Networking

Storage Cluster Name

Anthos-Store ✓

Note: The storage cluster name cannot be changed after deployment.

		Management Network	iSCSI Network
VLAN ID		3480 ✓	3481 ✓
Subnet ?		172.21.224.0/24 ✓	172.21.225.0/24 ✓
Default Gateway		172.21.224.1 ✓	Default Gateway (Optional)
Management Virtual IP (MVIP) ?		172.21.224.20 ✓	Storage Virtual IP (SVIP) ?
			172.21.225.20 ✓
Serial Number	Hostname	Management IP Address	Storage (iSCSI) IP Address
221814003506	Anthos-Store-01 ✓	172.21.224.21 ✓	172.21.225.21 ✓
221818004613	Anthos-Store-02 ✓	172.21.224.22 ✓	172.21.225.22 ✓
221826005865	Anthos-Store-03 ✓	172.21.224.23 ✓	172.21.225.23 ✓
221826005866	Anthos-Store-04 ✓	172.21.224.24 ✓	172.21.225.24 ✓

Back

Live network validation is: **On** ?

Continue

- On the next page, review all the settings that have been defined for the environment by expanding each section, and, if necessary, click Edit to make corrections. There is also a check box on this page that enables or disables the Mnode from sending real-time health and diagnostics information to NetApp Active IQ. If all the information is correct, click Start Deployment.









If you want to enable Active IQ, verify that your management network can reach the internet. If NDE is unable to reach Active IQ, the deployment can fail.

- A summary page appears along with a progress bar for each component of the NetApp HCI solution, as well as the overall solution. When complete, you are presented with an option to launch the vSphere client and begin working with your environment.

Your setup is complete.

[Launch vSphere Client](#)

Configure Network	Complete 
Set up NetApp Cluster	Complete 
Set up ESXi	Complete 
Set up vCenter	Complete 
Configure Management Node	Complete 
Finalize Configuration	Complete 

Overall Progress



[Export all setup information to CSV file](#)

Next: [Configure the vCenter Server](#)

Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.