



TR-4882: Install a StorageGRID bare metal grid

How to enable StorageGRID in your environment

NetApp
July 05, 2024

Table of Contents

- TR-4882: Install a StorageGRID bare metal grid 1
 - Introduction to installing StorageGRID 1
 - Prerequisites to install StorageGRID 1
 - Install Docker for StorageGRID 11
 - Prepare node configuration files for StorageGRID 12
 - Install StorageGRID dependencies and packages 16
 - Validate the StorageGRID configuration files 16
 - Start the StorageGRID host service 18
 - Configure the Grid Manager in StorageGRID 18
 - Add StorageGRID license details 20
 - Add sites to StorageGRID 21
 - Specify grid network subnets for StorageGRID 22
 - Approve grid nodes for StorageGRID 23
 - Specify NTP Server details for StorageGRID 28
 - Specify DNS server details for StorageGRID 29
 - Specify the system passwords for StorageGRID 30
 - Review configuration and complete StorageGRID install 31
 - Upgrade bare-metal nodes in StorageGRID 33

TR-4882: Install a StorageGRID bare metal grid

Introduction to installing StorageGRID

Learn how to install StorageGRID on bare metal hosts.

TR-4882 provides a practical, step-by-step set of instructions that produces a working installation of NetApp StorageGRID. The installation could be either on bare metal or on virtual machines (VMs) running on Red Hat Enterprise Linux (RHEL). The approach is to perform an “opinionated” installation of six StorageGRID containerized services onto three physical (or virtual) machines in a suggested layout and storage configuration. Some customers might find it easier to understand the deployment process by following the example deployment in this TR.

For a more in-depth understanding about StorageGRID and the installation process, see <https://docs.netapp.com/us-en/storagegrid-118/landing-install-upgrade/index.html> [Install, upgrade, and hotfix StorageGRID] in the product documentation.

Before you start your deployment, let’s examine the compute, storage, and networking requirements for NetApp StorageGRID software. StorageGRID runs as a containerized service within Podman or Docker. In this model, some requirements refer to the host operating system (the OS that hosts Docker, which is running the StorageGRID software). And some of the resources are allocated directly to the Docker containers running within each host. In this deployment, in order to maximize hardware usage, we are deploying two services per physical host. For more information, continue on to the next section, [Prerequisites to install StorageGRID](#).

The steps outlined in this TR result in a working StorageGRID installation on six bare metal hosts. You now have a working grid and client network, which are useful in most testing scenarios.

Where to find additional information

To learn more about the information that is described in this TR, review the following documentation resources:

- NetApp StorageGRID Documentation Center
<https://docs.netapp.com/us-en/storagegrid-118/>
- NetApp StorageGRID Enablement
<https://docs.netapp.com/us-en/storagegrid-enable/>
- StorageGRID Documentation Resources page
<https://www.netapp.com/data-storage/storagegrid/documentation/>
- NetApp Product Documentation
<https://www.netapp.com/support-and-training/documentation/>

Prerequisites to install StorageGRID

Learn about the compute, storage, network, docker, and node requirements to deploy StorageGRID.

Compute requirements

The table below lists the supported minimum resource requirements for each type of StorageGRID node. These are the minimum resources required for StorageGRID nodes.

Type of node	CPU cores	RAM
Admin	8	24GB
Storage	8	24GB
Gateway	8	24GB

In addition, each physical Docker host should have a minimum of 16GB of RAM allocated to it for proper operation. So, for example, to host any two of the services described in the table together on one physical Docker host, you would do the following calculation:

$$24 + 24 + 16 = 64\text{GB RAM}$$

and

$$8 + 8 = 16 \text{ cores}$$

Because many modern servers exceed these requirements, we combine six services (StorageGRID containers) onto three physical servers.

Networking requirements

The three types of StorageGRID traffic include:

- **Grid traffic (required).** The internal StorageGRID traffic that travels between all nodes in the grid.
- **Admin traffic (optional).** The traffic used for system administration and maintenance.
- **Client traffic (optional).** The traffic that travels between external client applications and the grid, including all object storage requests from S3 and Swift clients.

You can configure up to three networks for use with the StorageGRID system. Each network type must be on a separate subnet with no overlap. If all nodes are on the same subnet, a gateway address is not required.

For this evaluation, we will deploy on two networks, which contain the grid and client traffic. It is possible to add an admin network later to serve that additional function.

It is very important to map the networks consistently to the interfaces throughout all of the hosts. For example, if there are two interfaces on each node, ens192 and ens224, they should all be mapped to the same network or VLAN on all hosts. In this installation, the installer maps these into the Docker containers as eth0@if2 and eth2@if3 (because the loopback is if1 inside the container), and therefore a consistent model is very important.

Note on Docker networking

StorageGRID uses networking differently from some Docker container implementations. It does not use the Docker (or Kubernetes or Swarm) provided networking. Instead, StorageGRID actually spawns the container as `--net=none` so that Docker doesn't do anything to network the container. After the container has been spawned by the StorageGRID service, a new macvlan device is created from the interface defined in the node configuration file. That device has a new MAC address and acts as a separate network device that can receive packets from the physical interface. The macvlan device is then moved into the container namespace and renamed to be one of either eth0, eth1, or eth2 inside the container. At that point the network device is no longer visible in the host OS. In our example, the grid network device is eth0 inside the Docker containers and the Client Network is eth2. If we had an admin network, the device would be eth1 in the container.

The new MAC address of the container network device might require promiscuous mode to be enabled in some network and virtual environments. This mode allows the physical device to receive and send packets for MAC addresses that differ from the known physical MAC address.



If running in VMWare vSphere, you must accept promiscuous mode, MAC address changes, and forged transmits in the port groups that will serve StorageGRID traffic when running RHEL. Ubuntu or Debian works without these changes in most circumstances.

Storage requirements

The nodes each require either SAN-based or local disk devices of the sizes shown in the following table.

The numbers in the table are for each StorageGRID service type, not for the entire grid or each physical host. Based on the deployment choices, we will calculate numbers for each physical host in [Physical host layout and requirements](#), later in this document.



The paths or file systems marked with an asterisk will be created in the StorageGRID container itself by the installer. No manual configuration or file system creation is required by the administrator, but the hosts need block devices to satisfy these requirements. In other words, the block device should appear by using the command `lsblk` but not be formatted or mounted within the host OS.

Node type	LUN purpose	Number of LUNs	Minimum size of LUN	Manual file system required	Suggested node config entry
All	Admin Node system space <code>/var/local</code> (SSD helpful here)	One for each Admin Node	90GB	No	<code>BLOCK_DEVICE_VAR_LOCAL = /dev/mapper/ADM- -VAR-LOCAL</code>
All nodes	Docker storage pool at <code>/var/lib/docker</code> for container pool	One for each host (physical or VM)	100GB per container	Yes – <code>etx4</code>	NA – format and mount as host file system (not mapped into the container)
Admin	Admin Node audit logs (system data in Admin container) <code>/var/local/audit/export</code>	One for each Admin Node	200GB	No	<code>BLOCK_DEVICE_AUDIT_LOGS = /dev/mapper/ADM- M-OS</code>
Admin	Admin Node tables (system data in Admin container) <code>/var/local/mysql_ibdata</code>	One for each Admin Node	200GB	No	<code>BLOCK_DEVICE_TABLES = /dev/mapper/ADM- -MySQL</code>

Node type	LUN purpose	Number of LUNs	Minimum size of LUN	Manual file system required	Suggested node config entry
Storage nodes	Object storage (block devices) /var/local/rangedb0 (SSD helpful here) /var/local/rangedb1 /var/local/rangedb2	Three for each storage container	4000GB	No	BLOCK_DEVICE_RANGEDB_000 = /dev/mapper/SN-Db00 BLOCK_DEVICE_RANGEDB_001 = /dev/mapper/SN-Db01 BLOCK_DEVICE_RANGEDB_002 = /dev/mapper/SN-Db02

In this example, the disk sizes shown in the following table are needed per container type. The requirements per physical host are described in [Physical host layout and requirements](#), later in this document.

Disk sizes per container type

Admin container

Name	Size (GiB)
Docker-Store	100 (per container)
Adm-OS	90
Adm-Audit	200
Adm-MySQL	200

Storage container

Name	Size (GiB)
Docker-Store	100 (per container)
SN-OS	90
Rangedb-0	4096
Rangedb-1	4096
Rangedb-2	4096


Gateway container

Name	Size (GiB)
Docker-Store	100 (per container)
/var/local	90

Physical host layout and requirements

By combining the compute and network requirements shown in table above, you can get a basic set of hardware required for this installation of three physical (or virtual) servers with 16 cores, 64GB of RAM, and two network interfaces. If higher throughput is desired, it is possible to bond two or more interfaces on the grid or Client Network and use a VLAN-tagged interface such as bond0.520 in the node config file. If you expect more intense workloads, more memory for both the host and the containers is better.

As shown in the following figure, these servers will host six Docker containers, two per host. The RAM is calculated by providing 24GB per container and 16GB for the host OS itself.

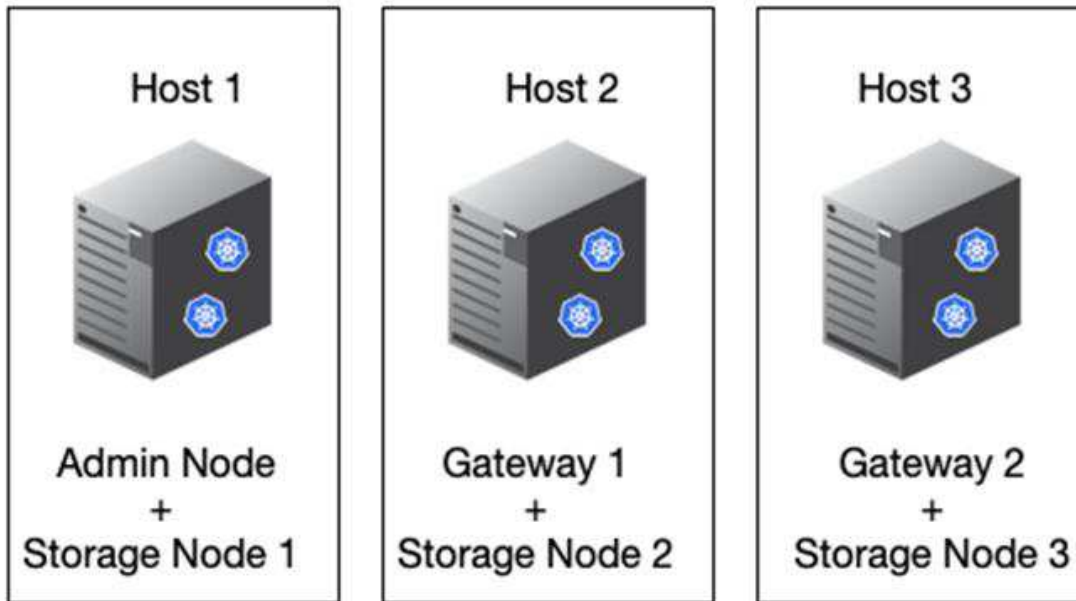

Total RAM required per physical host (or VM) is $24 \times 2 + 16 = 64$ GB. The following tables list the required disk storage for hosts 1, 2, and 3.

Host 1	Size (GiB)
Docker Store	
/var/lib/docker (File system)	200 (100 x 2)
Admin container	
BLOCK_DEVICE_VAR_LOCAL	90
BLOCK_DEVICE_AUDIT_LOGS	200
BLOCK_DEVICE_TABLES	200
Storage container	

Host 1	Size (GiB)
SN-OS /var/local (Device)	90
Rangedb-0 (Device)	4096
Rangedb-1 (Device)	4096
Rangedb-2 (Device)	4096

Host 2	Size (GiB)
Docker Store	
/var/lib/docker (Shared)	200 (100 x 2)
Gateway container	
GW-OS */var/local	100
Storage container	
*/var/local	100
Rangedb-0	4096
Rangedb-1	4096
Rangedb-2	4096

Host 3	Size (GiB)
Docker Store	
/var/lib/docker (Shared)	200 (100 x 2)
Gateway container	
*/var/local	100
Storage container	
*/var/local	100
Rangedb-0	4096
Rangedb-1	4096
Rangedb-2	4096

The Docker Store was calculated by allowing 100GB per /var/local (per container) x two containers = 200GB.

Preparing the nodes

To prepare for the initial installation of StorageGRID, first install RHEL version 9.2 and enable SSH. Set up network interfaces, Network Time Protocol (NTP), DNS, and the host name according to best practices. You need at least one enabled network interface on the grid network and another for the Client Network. If you are using a VLAN-tagged interface, configure it as per the examples below. Otherwise, a simple standard network interface configuration will suffice.

If you need to use a VLAN tag on the grid network interface, your configuration should have two files in `/etc/sysconfig/network-scripts/` in the following format:

```
# cat /etc/sysconfig/network-scripts/ifcfg-enp67s0
# This is the parent physical device
TYPE=Ethernet
BOOTPROTO=none
DEVICE=enp67s0
ONBOOT=yes
# cat /etc/sysconfig/network-scripts/ifcfg-enp67s0.520
# The actual device that will be used by the storage node file
DEVICE=enp67s0.520
BOOTPROTO=none
NAME=enp67s0.520
IPADDR=10.10.200.31
PREFIX=24
VLAN=yes
ONBOOT=yes
```

This example assumes that your physical network device for the grid network is `enp67s0`. It could also be a bonded device such as `bond0`. Whether you are using bonding or a standard network interface, you must use the VLAN-tagged interface in your node configuration file if your network port does not have a default VLAN or if the default VLAN is not associated with the grid network. The StorageGRID container itself does not untag Ethernet frames, so it must be handled by the parent OS.

Optional storage setup with iSCSI

If you are not using iSCSI storage, you must ensure that `host1`, `host2`, and `host3` contain block devices of sufficient size to meet their requirements. See [Disk sizes per container type](#) for `host1`, `host2`, and `host3` storage requirements.

To set up storage with iSCSI, complete the following steps:

Steps

1. If you are using external iSCSI storage such as NetApp E-Series or NetApp ONTAP® data management software, install the following packages:

```
sudo yum install iscsi-initiator-utils
sudo yum install device-mapper-multipath
```

2. Find the initiator ID on each host.

```
# cat /etc/iscsi/initiatorname.iscsi
InitiatorName=iqn.2006-04.com.example.node1
```

3. Using the initiator name from step 2, map LUNs on your storage device (of the number and size shown in the [Storage requirements](#) table) to each storage node.
4. Discover the newly created LUNs with `iscsiadm` and log in to them.

```
# iscsiadm -m discovery -t st -p target-ip-address
# iscsiadm -m node -T iqn.2006-04.com.example:3260 -l
Logging in to [iface: default, target: iqn.2006-04.com.example:3260,
portal: 10.64.24.179,3260] (multiple)
Login to [iface: default, target: iqn.2006-04.com.example:3260, portal:
10.64.24.179,3260] successful.
```



For details, see [Creating an iSCSI Initiator](#) on the Red Hat Customer Portal.

5. To show the multipath devices and their associated LUN WWIDs, run the following command:

```
# multipath -ll
```

If you are not using iSCSI with multipath devices, simply mount your device by a unique path name that will persist device changes and reboots alike.

```
/dev/disk/by-path/pci-0000:03:00.0-scsi-0:0:1:0
```



Simply using `/dev/sdx` device names could cause issues later if devices are removed or added.

If you are using multipath devices, modify the `/etc/multipath.conf` file to use aliases as follows.



These devices might or might not be present on all nodes, depending on layout.

```

multipaths {
multipath {
wwid 36d039ea00005f06a000003c45fa8f3dc
alias Docker-Store
}
multipath {
wwid 36d039ea00006891b000004025fa8f597
alias Adm-Audit
}
multipath {
wwid 36d039ea00005f06a000003c65fa8f3f0
alias Adm-MySQL
}
multipath {
wwid 36d039ea00006891b000004015fa8f58c
alias Adm-OS
}
multipath {
wwid 36d039ea00005f06a000003c55fa8f3e4
alias SN-OS
}
multipath {
wwid 36d039ea00006891b000004035fa8f5a2
alias SN-Db00
}
multipath {
wwid 36d039ea00005f06a000003c75fa8f3fc
alias SN-Db01
}
multipath {
    wwid 36d039ea00006891b000004045fa8f5af
alias SN-Db02
}
multipath {
wwid 36d039ea00005f06a000003c85fa8f40a
alias GW-OS
}
}

```

Before installing Docker in your host OS, format and mount the LUN or disk backing `/var/lib/docker`. The other LUNs are defined in the node config file and are used directly by the StorageGRID containers. That is, they do not show up in the host OS; they appear in the containers themselves, and those file systems are handled by the installer.

If you are using an iSCSI-backed LUN, place something similar to the following line in your `fstab` file. As noted,

the other LUNs do not need to be mounted in the host OS but must show up as available block devices.

```
/dev/disk/by-path/pci-0000:03:00.0-scsi-0:0:1:0 /var/lib/docker ext4
defaults 0 0
```

Preparing for Docker installation

To prepare for Docker installation, complete the following steps:

Steps

1. Create a file system on the Docker storage volume on all three hosts.

```
# sudo mkfs.ext4 /dev/sd?
```

If you are using iSCSI devices with multipath, use `/dev/mapper/Docker-Store`.

2. Create the Docker storage volume mount point:

```
# sudo mkdir -p /var/lib/docker
```

3. Add a similar entry for the docker-storage-volume-device to `/etc/fstab`.

```
/dev/disk/by-path/pci-0000:03:00.0-scsi-0:0:1:0 /var/lib/docker ext4
defaults 0 0
```

The following `_netdev` option is recommended only if you are using an iSCSI device. If you are using a local block device `_netdev` is not necessary and `defaults` is recommended.

```
/dev/mapper/Docker-Store /var/lib/docker ext4 _netdev 0 0
```

4. Mount the new file system and view disk usage.

```
# sudo mount /var/lib/docker
[root@host1]# df -h | grep docker
/dev/sdb 200G 33M 200G 1% /var/lib/docker
```

5. Turn off swap and disable it for performance reasons.

```
$ sudo swapoff --all
```

6. To persist the settings, remove all swap entries from `/etc/fstab` such as:

```
/dev/mapper/rhel-swap swap defaults 0 0
```



Failing to disable swap entirely can severely lower performance.

7. Perform a test reboot of your node to ensure that the `/var/lib/docker` volume is persistent and that all disk devices return.

Install Docker for StorageGRID

Learn how to to install Docker for StorageGRID.

To install Docker, complete the following steps:

Steps

1. Configure the yum repo for Docker.

```
sudo yum install -y yum-utils
sudo yum-config-manager --add-repo \
https://download.docker.com/linux/rhel/docker-ce.repo
```

2. Install the needed packages.

```
sudo yum install docker-ce docker-ce-cli containerd.io
```

3. Start Docker.

```
sudo systemctl start docker
```

4. Test Docker.

```
sudo docker run hello-world
```

5. Make sure that Docker runs on system start.

```
sudo systemctl enable docker
```

Prepare node configuration files for StorageGRID

Learn how to prepare the node configuration files for StorageGRID.

At a high level, the node configuration process includes the following steps:

Steps

1. Create the `/etc/storagegrid/nodes` directory on all hosts.

```
sudo [root@host1 ~]# mkdir -p /etc/storagegrid/nodes
```

2. Create the needed files per physical host to match the container/node type layout. In this example, we created two files per physical host on each host machine.



The name of the file defines the actual node name for installation. For example, `dc1-adm1.conf` becomes a node named `dc1-adm1`.

— Host1:

```
dc1-adm1.conf  
dc1-sn1.conf
```

— Host2:

```
dc1-gw1.conf  
dc1-sn2.conf
```

— Host3:

```
dc1-gw2.conf  
dc1-sn3.conf
```

Preparing the node config files

The following examples use the `/dev/disk/by-path` format. You can verify the correct paths by running the following commands:

```
[root@host1 ~]# lsblk
NAME MAJ:MIN RM SIZE RO TYPE MOUNTPOINT
sda 8:0 0 90G 0 disk
├─sda1 8:1 0 1G 0 part /boot
└─sda2 8:2 0 89G 0 part
   ├─rhel-root 253:0 0 50G 0 lvm /
   ├─rhel-swap 253:1 0 9G 0 lvm
   └─rhel-home 253:2 0 30G 0 lvm /home
sdb 8:16 0 200G 0 disk /var/lib/docker
sdc 8:32 0 90G 0 disk
sdd 8:48 0 200G 0 disk
sde 8:64 0 200G 0 disk
sdf 8:80 0 4T 0 disk
sdg 8:96 0 4T 0 disk
sdh 8:112 0 4T 0 disk
sdi 8:128 0 90G 0 disk
sr0 11:0 1 1024M 0 rom
```

And these commands:

```
[root@host1 ~]# ls -l /dev/disk/by-path/
total 0
lrwxrwxrwx 1 root root 9 Dec 21 16:42 pci-0000:02:01.0-ata-1.0 ->
../..../sr0
lrwxrwxrwx 1 root root 9 Dec 21 16:42 pci-0000:03:00.0-scsi-0:0:0:0 ->
../..../sda
lrwxrwxrwx 1 root root 10 Dec 21 16:42 pci-0000:03:00.0-scsi-0:0:0:0-part1
-> ../..../sda1
lrwxrwxrwx 1 root root 10 Dec 21 16:42 pci-0000:03:00.0-scsi-0:0:0:0-part2
-> ../..../sda2
lrwxrwxrwx 1 root root 9 Dec 21 16:42 pci-0000:03:00.0-scsi-0:0:1:0 ->
../..../sdb
lrwxrwxrwx 1 root root 9 Dec 21 16:42 pci-0000:03:00.0-scsi-0:0:2:0 ->
../..../sdc
lrwxrwxrwx 1 root root 9 Dec 21 16:42 pci-0000:03:00.0-scsi-0:0:3:0 ->
../..../sdd
lrwxrwxrwx 1 root root 9 Dec 21 16:42 pci-0000:03:00.0-scsi-0:0:4:0 ->
../..../sde
lrwxrwxrwx 1 root root 9 Dec 21 16:42 pci-0000:03:00.0-scsi-0:0:5:0 ->
../..../sdf
lrwxrwxrwx 1 root root 9 Dec 21 16:42 pci-0000:03:00.0-scsi-0:0:6:0 ->
../..../sdg
lrwxrwxrwx 1 root root 9 Dec 21 16:42 pci-0000:03:00.0-scsi-0:0:8:0 ->
../..../sdh
lrwxrwxrwx 1 root root 9 Dec 21 16:42 pci-0000:03:00.0-scsi-0:0:9:0 ->
../..../sdi
```

Example for primary Admin node

Example file name:

```
/etc/storagegrid/nodes/dc1-adm1.conf
```

Example file contents:



Disk paths can follow the examples below or use `/dev/mapper/alias` style naming. Do not use block device names such as `/dev/sdb` because they can change on reboot and cause great damage to your grid.


```
NODE_TYPE = VM_Admin_Node
ADMIN_ROLE = Primary
MAXIMUM_RAM = 24g
BLOCK_DEVICE_VAR_LOCAL = /dev/disk/by-path/pci-0000:03:00.0-scsi-0:0:2:0
BLOCK_DEVICE_AUDIT_LOGS = /dev/disk/by-path/pci-0000:03:00.0-scsi-0:0:3:0
BLOCK_DEVICE_TABLES = /dev/disk/by-path/pci-0000:03:00.0-scsi-0:0:4:0
GRID_NETWORK_TARGET = ens192
CLIENT_NETWORK_TARGET = ens224
GRID_NETWORK_IP = 10.193.204.43
GRID_NETWORK_MASK = 255.255.255.0
GRID_NETWORK_GATEWAY = 10.193.204.1
CLIENT_NETWORK_CONFIG = STATIC
CLIENT_NETWORK_IP = 10.193.205.43
CLIENT_NETWORK_MASK = 255.255.255.0
CLIENT_NETWORK_GATEWAY = 10.193.205.1
```

Example for a storage node

Example file name:

```
/etc/storagegrid/nodes/dc1-sn1.conf
```

Example file contents:

```
NODE_TYPE = VM_Storage_Node
MAXIMUM_RAM = 24g
ADMIN_IP = 10.193.174.43
BLOCK_DEVICE_VAR_LOCAL = /dev/disk/by-path/pci-0000:03:00.0-scsi-0:0:9:0
BLOCK_DEVICE_RANGEDB_00 = /dev/disk/by-path/pci-0000:03:00.0-scsi-0:0:5:0
BLOCK_DEVICE_RANGEDB_01 = /dev/disk/by-path/pci-0000:03:00.0-scsi-0:0:6:0
BLOCK_DEVICE_RANGEDB_02 = /dev/disk/by-path/pci-0000:03:00.0-scsi-0:0:8:0
GRID_NETWORK_TARGET = ens192
CLIENT_NETWORK_TARGET = ens224
GRID_NETWORK_IP = 10.193.204.44
GRID_NETWORK_MASK = 255.255.255.0
GRID_NETWORK_GATEWAY = 10.193.204.1
```

Example for gateway node

Example file name:

```
/etc/storagegrid/nodes/dc1-gw1.conf
```

Example file contents:

```
NODE_TYPE = VM_API_Gateway
MAXIMUM_RAM = 24g
ADMIN_IP = 10.193.204.43
BLOCK_DEVICE_VAR_LOCAL = /dev/disk/by-path/pci-0000:03:00.0-scsi-0:0:1:0
GRID_NETWORK_TARGET = ens192
CLIENT_NETWORK_TARGET = ens224
GRID_NETWORK_IP = 10.193.204.47
GRID_NETWORK_MASK = 255.255.255.0
GRID_NETWORK_GATEWAY = 10.193.204.1
CLIENT_NETWORK_IP = 10.193.205.47
CLIENT_NETWORK_MASK = 255.255.255.0
CLIENT_NETWORK_GATEWAY = 10.193.205.1
```

Install StorageGRID dependencies and packages

Learn how to install StorageGRID dependencies and packages.

To install the StorageGRID dependencies and packages, run the following commands:

```
[root@host1 rpms]# yum install -y python-netaddr
[root@host1 rpms]# rpm -ivh StorageGRID-Webscale-Images-*.rpm
[root@host1 rpms]# rpm -ivh StorageGRID-Webscale-Service-*.rpm
```

Validate the StorageGRID configuration files

Learn how to validate the content of the configuration files for StorageGRID.

After you create the configuration files in `/etc/storagegrid/nodes` for each of your StorageGRID nodes, you must validate the contents of those files.

To validate the contents of the configuration files, run the following command on each host:

```
sudo storagegrid node validate all
```

If the files are correct, the output shows PASSED for each configuration file:

```
Checking for misnamed node configuration files... PASSED
Checking configuration file for node dcl-adml... PASSED
Checking configuration file for node dcl-gw1... PASSED
Checking configuration file for node dcl-sn1... PASSED
Checking configuration file for node dcl-sn2... PASSED
Checking configuration file for node dcl-sn3... PASSED
Checking for duplication of unique values between nodes... PASSED
```

If the configuration files are incorrect, the issues are shown as WARNING and ERROR. If any configuration errors are found, you must correct them before you continue with the installation.

```
Checking for misnamed node configuration files...
WARNING: ignoring /etc/storagegrid/nodes/dcl-adml
WARNING: ignoring /etc/storagegrid/nodes/dcl-sn2.conf.keep
WARNING: ignoring /etc/storagegrid/nodes/my-file.txt
Checking configuration file for node dcl-adml...
ERROR: NODE_TYPE = VM_Foo_Node
      VM_Foo_Node is not a valid node type.  See *.conf.sample
ERROR: ADMIN_ROLE = Foo
      Foo is not a valid admin role.  See *.conf.sample
ERROR: BLOCK_DEVICE_VAR_LOCAL = /dev/mapper/sgws-gw1-var-local
      /dev/mapper/sgws-gw1-var-local is not a valid block device
Checking configuration file for node dcl-gw1...
ERROR: GRID_NETWORK_TARGET = bond0.1001
      bond0.1001 is not a valid interface.  See `ip link show`
ERROR: GRID_NETWORK_IP = 10.1.3
      10.1.3 is not a valid IPv4 address
ERROR: GRID_NETWORK_MASK = 255.248.255.0
      255.248.255.0 is not a valid IPv4 subnet mask
Checking configuration file for node dcl-sn1...
ERROR: GRID_NETWORK_GATEWAY = 10.2.0.1
      10.2.0.1 is not on the local subnet
ERROR: ADMIN_NETWORK_ESL = 192.168.100.0/21,172.16.0foo
      Could not parse subnet list
Checking configuration file for node dcl-sn2... PASSED
Checking configuration file for node dcl-sn3... PASSED
Checking for duplication of unique values between nodes...
ERROR: GRID_NETWORK_IP = 10.1.0.4
      dcl-sn2 and dcl-sn3 have the same GRID_NETWORK_IP
ERROR: BLOCK_DEVICE_VAR_LOCAL = /dev/mapper/sgws-sn2-var-local
      dcl-sn2 and dcl-sn3 have the same BLOCK_DEVICE_VAR_LOCAL
ERROR: BLOCK_DEVICE_RANGEDB_00 = /dev/mapper/sgws-sn2-rangedb-0
      dcl-sn2 and dcl-sn3 have the same BLOCK_DEVICE_RANGEDB_00
```

Start the StorageGRID host service

Learn how to start the StorageGRID host service.

To start the StorageGRID nodes and ensure that they restart after a host reboot, you must enable and start the StorageGRID host service.

To start the StorageGRID host service, complete the following steps.

Steps

1. Run the following commands on each host:

```
sudo systemctl enable storagegrid
sudo systemctl start storagegrid
```



The start process might take some time on the initial run.

2. Run the following command to ensure the deployment is proceeding:

```
sudo storagegrid node status node-name
```

3. For any node that returns a status of `Not-Running` or `Stopped`, run the following command:

```
sudo storagegrid node start node-name
```

For example, given the following output you would start the `dc1-adm1` node:

```
[user@host1]# sudo storagegrid node status
Name Config-State Run-State
dc1-adm1 Configured Not-Running
dc1-sn1 Configured Running
```

4. If you have previously enabled and started the StorageGRID host service (or if you aren't sure whether the service has been enabled and started), also run the following command:

```
sudo systemctl reload-or-restart storagegrid
```

Configure the Grid Manager in StorageGRID

Learn how to configure the Grid Manager in StorageGRID on the primary admin node.

Complete the installation by configuring the StorageGRID system from the Grid Manager user interface on the

primary Admin Node.

High-level steps

Configuring the grid and completing the installation involves the following tasks:

Steps

1. [Navigate to Grid Manager](#)
2. [Specify the StorageGRID license information](#)
3. [Add sites to StorageGRID](#)
4. [Specify grid network subnets](#)
5. [Approve pending grid nodes](#)
6. [Specify NTP server information](#)
7. [Specify domain name system server information](#)
8. [Specify the StorageGRID system passwords](#)
9. [Review your configuration and complete installation](#)

Navigate to Grid Manager

Use Grid Manager to define all of the information required to configure your StorageGRID system.

Before you begin, the primary Admin Node must be deployed and have completed the initial startup sequence.

To use Grid Manager to define information, complete the following steps.

Steps

1. Access Grid Manager at the following address:

```
https://primary_admin_node_grid_ip
```

Alternatively, you can access Grid Manager on port 8443.

```
https://primary_admin_node_ip:8443
```

2. Click **Install a StorageGRID System**.
The page used to configure a StorageGRID grid is displayed.

Install



License

Enter a grid name and upload the license file provided by NetApp for your StorageGRID system.

Grid Name

License File

Browse

Add StorageGRID license details

Learn how to upload the StorageGRID license file.

You must specify the name for your StorageGRID system and upload the license file provided by NetApp.

To specify the StorageGRID license information, complete the following steps:


Steps

1. On the License page, in the Grid Name field, enter a name for your StorageGRID system. After installation, the name is displayed as the top level in the grid topology tree.
2. Click Browse, locate the NetApp License File (*NLF-unique-id.txt*), and click Open. The license file is validated, and the serial number and licensed storage capacity are displayed.



The StorageGRID installation archive includes a free license that does not provide any support entitlement for the product. You can update to a license that offers support after installation.

Install

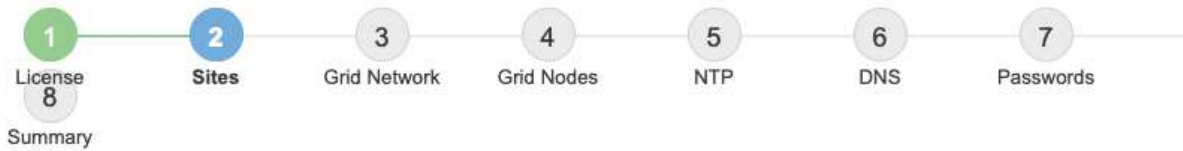

Sites

In a single-site deployment, infrastructure and operations are centralized in one site.

In a multi-site deployment, infrastructure can be distributed asymmetrically across sites, and proportional to the needs of each site. Typically, sites are located in geographically different locations. Having multiple sites also allows the use of distributed replication and erasure coding for increased availability and resiliency.

Site Name 1



Cancel

Back

Next

3. Click Next.

Add sites to StorageGRID


Learn how to add sites to StorageGRID to increase reliability and storage capacity.

When you are installing StorageGRID, you must create at least one site. You can create additional sites to increase the reliability and storage capacity of your StorageGRID system.

To add sites, complete the following steps:

Steps

1. On the Sites page, enter the site name.
2. To add additional sites, click the plus sign next to the last site entry and enter the name in the new Site Name text box.
Add as many additional sites as required for your grid topology. You can add up to 16 sites.

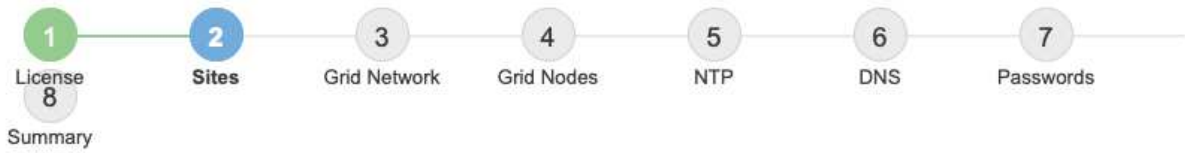

Sites

In a single-site deployment, infrastructure and operations are centralized in one site.

In a multi-site deployment, infrastructure can be distributed asymmetrically across sites, and proportional to the needs of each site. Typically, sites are located in geographically different locations. Having multiple sites also allows the use of distributed replication and erasure coding for increased availability and resiliency.

Site Name 1 +

3. Click Next.

Specify grid network subnets for StorageGRID

Learn how to configure the grid network subnets for StorageGRID.

You must specify the subnets that are used on the grid network.

The subnet entries include the subnets for the grid network for each site in your StorageGRID system, in addition to any subnets that must be reachable through the grid network (for example, the subnets hosting your NTP servers).

If you have multiple grid subnets, the grid network gateway is required. All grid subnets specified must be reachable through this gateway.

To specify grid network subnets, complete the following steps:

Steps

1. In the Subnet 1 text box, specify the CIDR network address for at least one grid network.
2. Click the plus sign next to the last entry to add an additional network entry.
If you have already deployed at least one node, click Discover Grid Networks Subnets to automatically populate the grid network subnet list with the subnets reported by grid nodes that have registered with Grid Manager.



3. Click Next.

Approve grid nodes for StorageGRID

Learn how to review and approve any pending grid nodes that join the StorageGRID system.

You must approve each grid node before it joins the StorageGRID system.

 Before you begin, all virtual and StorageGRID appliance grid nodes must be deployed.

To approve pending grid nodes, complete the following steps:

Steps

1. Review the Pending Nodes list and confirm that it shows all of the grid nodes you deployed.

 If a grid node is missing, confirm that it was deployed successfully.

2. Click the radio button next to a pending node that you want to approve.

Install



Grid Nodes

Approve and configure grid nodes, so that they are added correctly to your StorageGRID system.

Pending Nodes

Grid nodes are listed as pending until they are assigned to a site, configured, and approved.

Search

	Grid Network MAC Address <small>↑↓</small>	Name <small>↑↓</small>	Type <small>↑↓</small>	Platform <small>↑↓</small>	Grid Network IPv4 Address <small>▾</small>
<input checked="" type="radio"/>	f6:8a:36:44:c4:80	dc1-adm1	Admin Node	CentOS Container	10.193.204.43/24
<input type="radio"/>	46:5a:b6:7a:6d:97	dc1-sn1	Storage Node	CentOS Container	10.193.204.44/24
<input type="radio"/>	ba:e5:f7:6e:ec:0b	dc1-sn3	Storage Node	CentOS Container	10.193.204.46/24
<input type="radio"/>	c6:89:e5:bf:8a:47	dc1-gw1	API Gateway Node	CentOS Container	10.193.204.47/24
<input type="radio"/>	fe:91:ad:e1:46:c0	dc1-gw2	API Gateway Node	CentOS Container	10.193.204.98/24

3. Click Approve.

4. In General Settings, modify the settings for the following properties, as necessary.

Admin Node Configuration

General Settings

Site	<input type="text" value="New York"/>
Name	<input type="text" value="dc1-adm1"/>
NTP Role	<input type="text" value="Automatic"/>

Grid Network

Configuration	STATIC
IPv4 Address (CIDR)	<input type="text" value="10.193.204.43/24"/>
Gateway	<input type="text" value="10.193.204.1"/>

Admin Network

Configuration DISABLED

This network interface is not present. Add the network interface before configuring network settings.

IPv4 Address (CIDR)	<input type="text"/>
Gateway	<input type="text"/>
Subnets (CIDR)	<input type="text"/>

Client Network

Configuration	STATIC
IPv4 Address (CIDR)	<input type="text" value="10.193.205.43/24"/>
Gateway	<input type="text" value="10.193.205.1"/>

Cancel

Save

— **Site:** The system name of the site for this grid node.

— **Name:** The host name that will be assigned to the node, and the name that will be displayed in Grid Manager. The name defaults to the name you specified during node deployment, but you can change the name as needed.

— **NTP role:** The NTP role of the grid node. The options are Automatic, Primary, and Client. Selecting the Automatic option assigns the Primary role to Admin Nodes, Storage nodes with Administrative Domain Controller (ADC) services, Gateway Nodes, and any grid nodes that have nonstatic IP addresses. All other grid nodes are assigned the client role.



Make sure that at least two nodes at each site can access at least four external NTP sources. If only one node at a site can reach the NTP sources, timing issues will occur if that node goes down. In addition, designating two nodes per site as primary NTP sources ensures accurate timing if a site is isolated from the rest of the grid.

— **ADC service (storage nodes only)**: Select Automatic to let the system determine whether the node requires the ADC service. The ADC service keeps track of the location and availability of grid services. At least three storage nodes at each site must include the ADC service. You cannot add the ADC service to a node after it is deployed.

5. In Grid Network, modify the settings for the following properties as necessary:

— **IPv4 address (CIDR)**: The CIDR network address for the grid network interface (eth0 inside the container). For example, 192.168.1.234/24.

— **Gateway**: The grid network gateway. For example, 192.168.0.1.



If there are multiple grid subnets, the gateway is required.



If you selected DHCP for the grid network configuration, and you change the value here, the new value is configured as a static address on the node. Make sure that the resulting IP address is not in a DHCP address pool.

6. To configure the admin network for the grid node, add or update the settings in the Admin Network section as necessary.

Enter the destination subnets of the routes out of this interface in the subnets (CIDR) text box. If there are multiple admin subnets, the admin gateway is required.



If you selected DHCP for the admin network configuration, and you change the value here, the new value is configured as a static address on the node. Make sure that the resulting IP address is not in a DHCP address pool.

Appliances: For a StorageGRID appliance, if the admin network was not configured during the initial installation using the StorageGRID Appliance Installer, it cannot be configured in this Grid Manager dialog box. Instead, you must follow these steps:

- a. Reboot the appliance: In the Appliance Installer, select **Advanced** > **Reboot**. Rebooting can take several minutes.
- b. Select **Configure Networking** > **Link Configuration** and enable the appropriate networks.
- c. Select **Configure Networking** > **IP Configuration** and configure the enabled networks.
- d. Return to the Home page and click Start Installation.
- e. In Grid Manager: If the node is listed in the Approved Nodes table, reset the node.
- f. Remove the node from the Pending Nodes table.
- g. Wait for the node to reappear in the Pending Nodes list.
- h. Confirm that you can configure the appropriate networks. They should already be populated with the information you provided on the IP Configuration page. For additional information, see the installation and maintenance instructions for your appliance model.

- If you want to configure the Client Network for the grid node, add or update the settings in the Client Network section as necessary. If the Client Network is configured, the gateway is required, and it becomes the default gateway for the node after installation.

Appliances: For a StorageGRID appliance, if the Client Network was not configured during the initial installation using the StorageGRID Appliance Installer, it cannot be configured in this Grid Manager dialog box. Instead, you must follow these steps:

- Reboot the appliance: In the Appliance Installer, select **Advanced > Reboot**. Rebooting can take several minutes.
 - Select **Configure Networking > Link Configuration** and enable the appropriate networks.
 - Select **Configure Networking > IP Configuration** and configure the enabled networks.
 - Return to the Home page and click Start Installation.
 - In Grid Manager: If the node is listed in the Approved Nodes table, reset the node.
 - Remove the node from the Pending Nodes table.
 - Wait for the node to reappear in the Pending Nodes list.
 - Confirm that you can configure the appropriate networks. They should already be populated with the information you provided on the IP Configuration page. For additional information, see the installation and maintenance instructions for your appliance.
- Click Save.
The grid node entry moves to the Approved Nodes list.

The screenshot shows the NetApp StorageGRID Grid Manager interface. At the top, there is a blue header with the NetApp StorageGRID logo and a Help menu. Below the header is a progress bar with eight steps: 1. License Summary, 2. Sites, 3. Grid Network, 4. Grid Nodes (highlighted in blue), 5. NTP, 6. DNS, and 7. Passwords. Below the progress bar, the 'Grid Nodes' section is active, displaying a table of pending nodes. The table has columns for Grid Network MAC Address, Name, Type, Platform, and Grid Network IPv4 Address. The first row is selected, showing a node named 'dc1-adm1' of type 'Admin Node' on a 'CentOS Container' with IP address '10.193.204.43/24'. Other nodes include 'dc1-sn1', 'dc1-sn3', 'dc1-gw1', and 'dc1-gw2'. There are 'Approve' and 'Remove' buttons at the top left of the table, and a search box at the top right.

Grid Nodes
Approve and configure grid nodes, so that they are added correctly to your StorageGRID system.

Pending Nodes
Grid nodes are listed as pending until they are assigned to a site, configured, and approved.

Grid Network MAC Address	Name	Type	Platform	Grid Network IPv4 Address
<input checked="" type="radio"/> f6:8a:36:44:c4:80	dc1-adm1	Admin Node	CentOS Container	10.193.204.43/24
<input type="radio"/> 46:5a:b6:7a:6d:97	dc1-sn1	Storage Node	CentOS Container	10.193.204.44/24
<input type="radio"/> ba:e5:f7:6e:ec:0b	dc1-sn3	Storage Node	CentOS Container	10.193.204.46/24
<input type="radio"/> c6:89:e5:bf:8a:47	dc1-gw1	API Gateway Node	CentOS Container	10.193.204.47/24
<input type="radio"/> fe:91:ad:e1:46:c0	dc1-gw2	API Gateway Node	CentOS Container	10.193.204.98/24

9. Repeat steps 1–8 for each pending grid node you want to approve.

You must approve all nodes that you want in the grid. However, you can return to this page at any time before you click Install on the Summary page. To modify the properties of an approved grid node, click its radio button and then click Edit.

10. When you have finished approving grid nodes, click Next.

Specify NTP Server details for StorageGRID

Learn how to specify the NTP configuration information for your StorageGRID system so that operations performed on separate servers can be kept synchronized.

To prevent issues with time drift, you must specify four external NTP server references of Stratum 3 or higher.



When specifying the external NTP source for a production-level StorageGRID installation, do not use the Windows Time (W32Time) service on a version of Windows earlier than Windows Server 2016. The time service on earlier versions of Windows is not sufficiently accurate and is not supported by Microsoft for use in demanding environments like StorageGRID.

The external NTP servers are used by the nodes to which you previously assigned the primary NTP roles.



The Client Network is not enabled early enough in the installation process to be the only source of NTP servers. Make sure that at least one NTP server can be reached over the grid network or admin network.

To specify NTP server information, complete the following steps:

Steps

1. In the Server 1 to Server 4 text boxes, specify the IP addresses for at least four NTP servers.
2. If necessary, click the plus sign next the last entry to add more server entries.

NetApp® StorageGRID® Help ▾

Install

1 License 2 Sites 3 Grid Network 4 Grid Nodes 5 **NTP** 6 DNS 7 Passwords 8 Summary

Network Time Protocol

Enter the IP addresses for at least four Network Time Protocol (NTP) servers, so that operations performed on separate servers are kept in sync.

Server 1	<input type="text" value="10.193.204.1"/>
Server 2	<input type="text" value="10.193.204.1"/>
Server 3	<input type="text" value="10.193.174.249"/>
Server 4	<input type="text" value="10.193.174.250"/> +

3. Click Next.

Specify DNS server details for StorageGRID

Learn how to configure the DNS server for StorageGRID.

You must specify the DNS information for your StorageGRID system so that you can access external servers using host names instead of IP addresses.

Specifying DNS server information allows you to use fully qualified domain name (FQDN) host names rather than IP addresses for email notifications and NetApp AutoSupport® messages. NetApp recommends specifying at least two DNS servers.



You should select DNS servers that each site can access locally in the event of network islanding.

To specify DNS server information, complete the following steps:

Steps

1. In the Server 1 text box, specify the IP address for a DNS server.
2. If necessary, click the plus sign next to the last entry to add more servers.

Install



Domain Name Service

Enter the IP address for at least one Domain Name System (DNS) server, so that server hostnames can be used instead of IP addresses. Specifying at least two DNS servers is recommended. Configuring DNS enables server connectivity, email notifications, and NetApp AutoSupport.

Server 1	<input type="text" value="10.193.204.101"/>	✘
Server 2	<input type="text" value="10.193.204.102"/>	+ ✘

Cancel Back Next

3. Click Next.

Specify the system passwords for StorageGRID

Learn how to secure your StorageGRID system by setting the provisioning passphrase and the Grid Management root user password.

To enter the passwords to use to secure your StorageGRID system, follow these steps:

Steps

1. In Provisioning Passphrase, enter the provisioning passphrase that will be required to make changes to the grid topology of your StorageGRID system. You should record this password in a secure place.
2. In Confirm Provisioning Passphrase, reenter the provisioning passphrase.
3. In Grid Management Root User Password, enter the password to use to access Grid Manager as the root user.
4. In Confirm Root User Password, reenter the Grid Manager password.

NetApp® StorageGRID® Help ▾

Install

1 License 2 Sites 3 Grid Network 4 Grid Nodes 5 NTP 6 DNS 7 **Passwords** 8 Summary

Passwords

Enter secure passwords that meet your organization's security policies. A text file containing the command line passwords must be downloaded during the final installation step.

Provisioning Passphrase

Confirm Provisioning Passphrase

Grid Management Root User Password

Confirm Root User Password

Create random command line passwords.

- If you are installing a grid for proof of concept or demo purposes, deselect the Create Random Command Line Passwords option.

For production deployments, random passwords should always be used for security reasons. Deselect the Create Random Command Line Passwords option only for demo grids if you want to use default passwords to access grid nodes from the command line using the root or admin account.



When you click Install on the Summary page, you are prompted to download the Recovery Package file (`sgws-recovery-packageid-revision.zip`). You must download this file to complete the installation. The passwords to access the system are stored in the `Passwords.txt` file, contained in the Recovery Package file.

- Click Next.

Review configuration and complete StorageGRID install

Learn how to validate the grid configuration information and complete the StorageGRID install process.

To make sure that the installation completes successfully, carefully review the configuration information you have entered. Follow these steps.

Steps

- View the Summary page.

Install



Summary

Verify that all of the grid configuration information is correct, and then click Install. You can view the status of each grid node as it installs. Click the Modify links to go back and change the associated information.

General Settings

This is an unsupported license and does not provide any support entitlement for this product.

Grid Name	North America	Modify License
Passwords	StorageGRID demo grid passwords.	Modify Passwords

Networking

NTP	10.193.204.101 10.193.204.102 10.193.174.249 10.54.17.30	Modify NTP
DNS	10.193.204.101 10.193.204.102	Modify DNS
Grid Network	10.193.204.0/24	Modify Grid Network

Topology

Topology	New York	Modify Sites	Modify Grid Nodes
	dc1-adm1 dc1-gw1 dc1-gw2 dc1-sn1 dc1-sn2 dc1-sn3		

[Cancel](#) [Back](#) [Install](#)

- Verify that all of the grid configuration information is correct. Use the Modify links on the Summary page to go back and correct any errors.
- Click Install.



If a node is configured to use the Client Network, the default gateway for that node switches from the grid network to the Client Network when you click Install. If you lose connectivity, make sure that you are accessing the primary Admin Node through an accessible subnet. For more information, see "Network Installation and Provisioning."

- Click Download Recovery Package.

When the installation progresses to the point where the grid topology is defined, you are prompted to download the Recovery Package file (.zip) and confirm that you can access the contents of this file. You must download the Recovery Package file so that you can recover the StorageGRID system in case one or more grid nodes fail.

Verify that you can extract the contents of the .zip file and then save it in two safe, secure, and separate locations.



The Recovery Package file must be secured because it contains encryption keys and passwords that can be used to obtain data from the StorageGRID system.

5. Select the I Have Successfully Downloaded and Verified the Recovery Package File option and then click Next.

Download Recovery Package

Before proceeding, you must download the Recovery Package file. This file is necessary to recover the StorageGRID system if a failure occurs.

When the download completes, open the .zip file and confirm it includes a "gpt-backup" directory and a second .zip file. Then, extract this inner .zip file and confirm you can open the passwords.txt file.

After you have verified the contents, copy the Recovery Package file to two safe, secure, and separate locations. The Recovery Package file must be secured because it contains encryption keys and passwords that can be used to obtain data from the StorageGRID system.

 The Recovery Package is required for recovery procedures and must be stored in a secure location.


[Download Recovery Package](#)

I have successfully downloaded and verified the Recovery Package file.

If the installation is still in progress, the Installation Status page opens. This page indicates the progress of the installation for each grid node.

Installation Status

If necessary, you may [Download the Recovery Package file again](#).

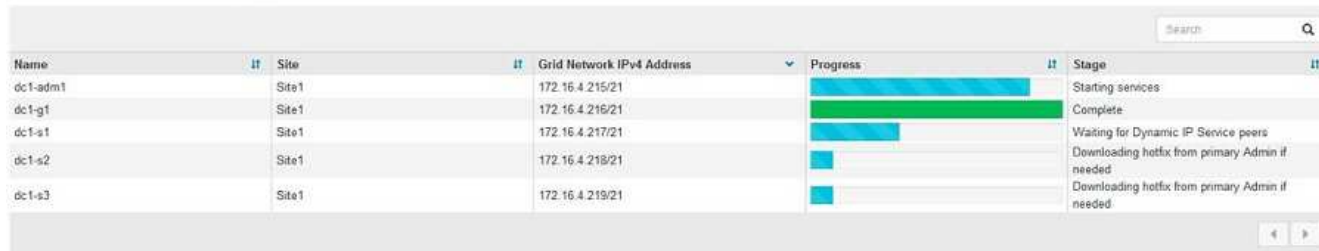

Name	IT	Site	IT	Grid Network IPv4 Address	Progress	IT	Stage	IT
dc1-adm1		Site1		172.16.4.215/21	<div style="width: 100%;"></div>		Starting services	
dc1-g1		Site1		172.16.4.216/21	<div style="width: 100%;"></div>		Complete	
dc1-s1		Site1		172.16.4.217/21	<div style="width: 75%;"></div>		Waiting for Dynamic IP Service peers	
dc1-s2		Site1		172.16.4.218/21	<div style="width: 25%;"></div>		Downloading hotfix from primary Admin if needed	
dc1-s3		Site1		172.16.4.219/21	<div style="width: 25%;"></div>		Downloading hotfix from primary Admin if needed	

When the Complete stage is reached for all grid nodes, the sign-in page for Grid Manager opens.

6. Sign in to Grid Manager as the root user with the password that you specified during the installation.

Upgrade bare-metal nodes in StorageGRID

Learn about the upgrade process for bare-metal nodes in StorageGRID.

The upgrade process for bare-metal nodes is different than that for appliances or VMware nodes. Before performing an upgrade of a bare-metal node, you must first upgrade the RPM files on all hosts before running the upgrade through the GUI.

```
[root@host1 rpms]# rpm -Uvh StorageGRID-Webscale-Images-*.rpm
[root@host1 rpms]# rpm -Uvh StorageGRID-Webscale-Service-*.rpm
```

Now you can proceed to the software upgrade through the GUI.

Copyright information

Copyright © 2024 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.